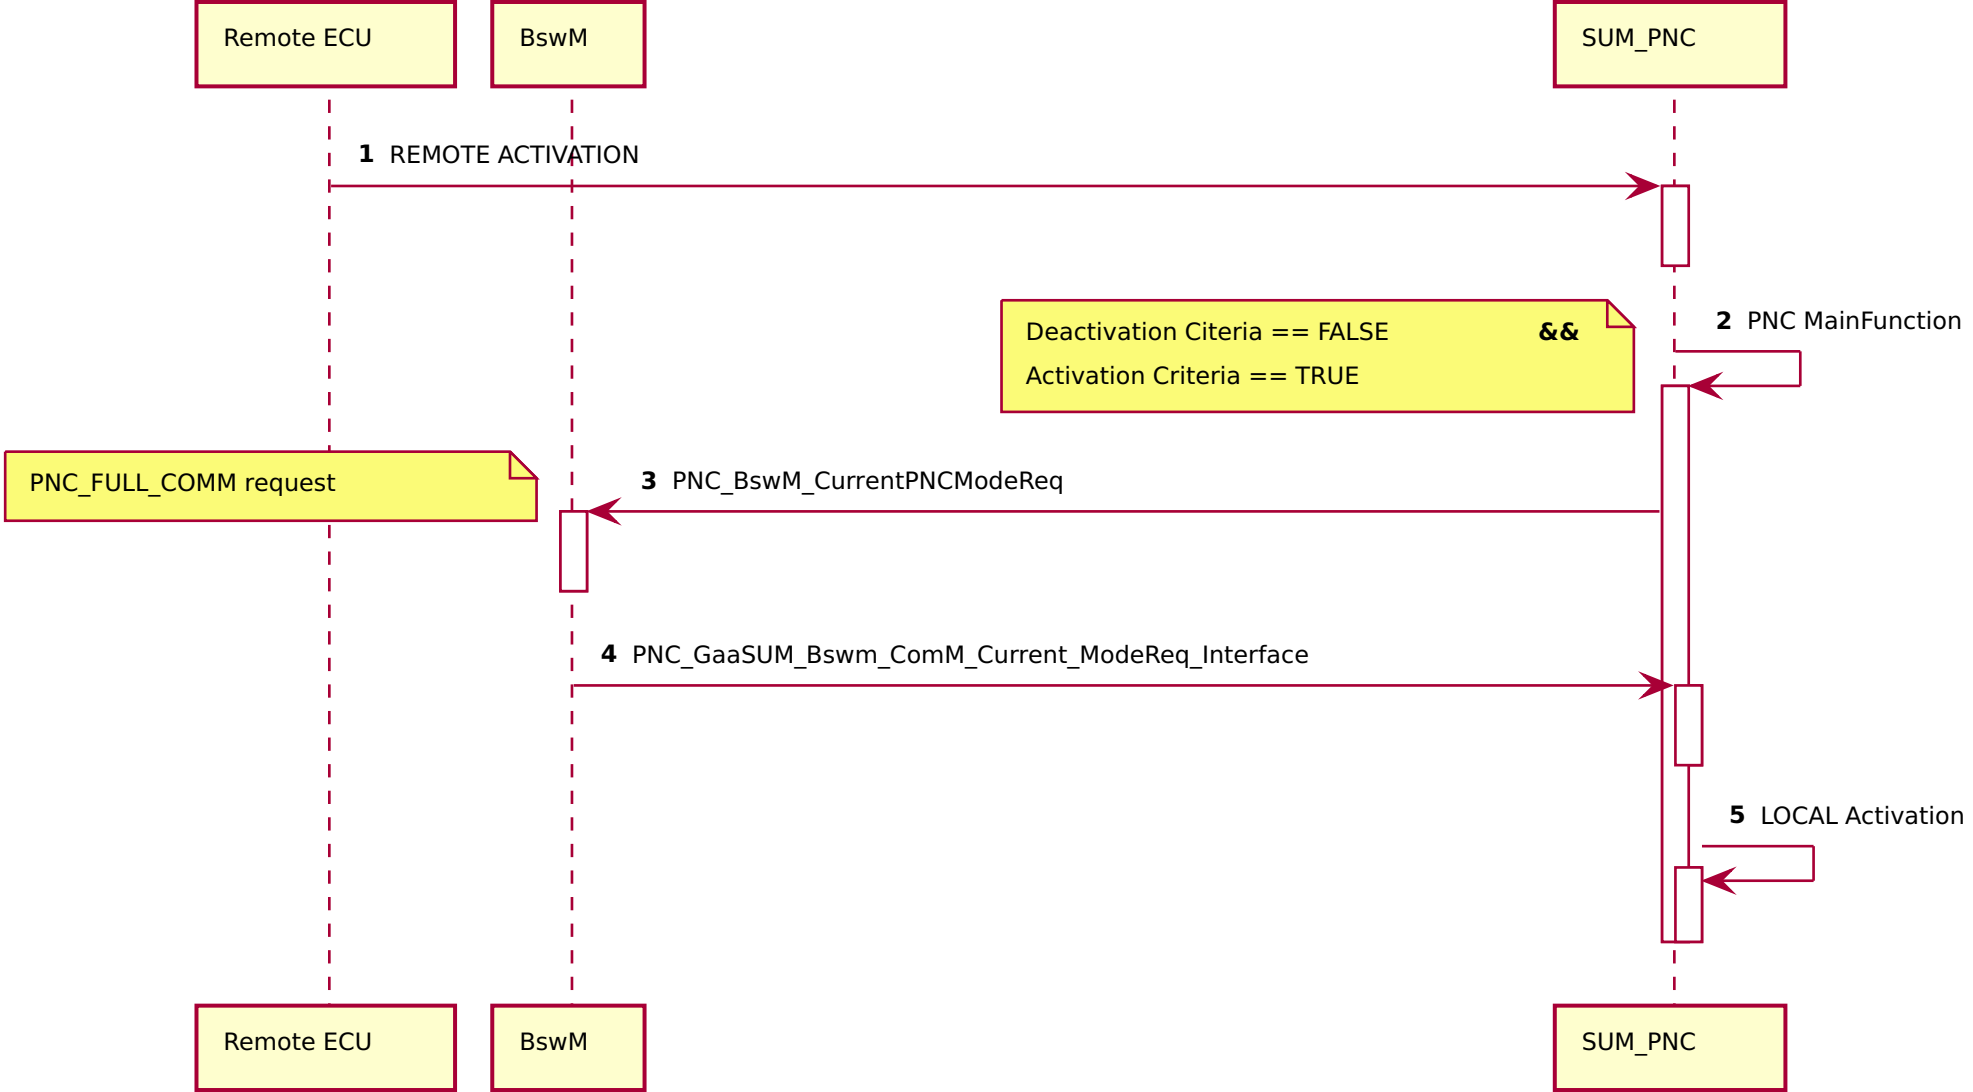
Remote ECU
BswM
SUM_PNC
1 REMOTE ACTIVATION
2 PNC MainFunction
Deactivation Citeria == FALSE &&
Activation Criteria == TRUE
PNC_FULL_COMM request
3 PNC_BswM_CurrentPNCModeReq
4 PNC_GaaSUM_Bswm_ComM_Current_ModeReq_Interface
5 LOCAL Activation
Remote ECU
BswM
SUM_PNC