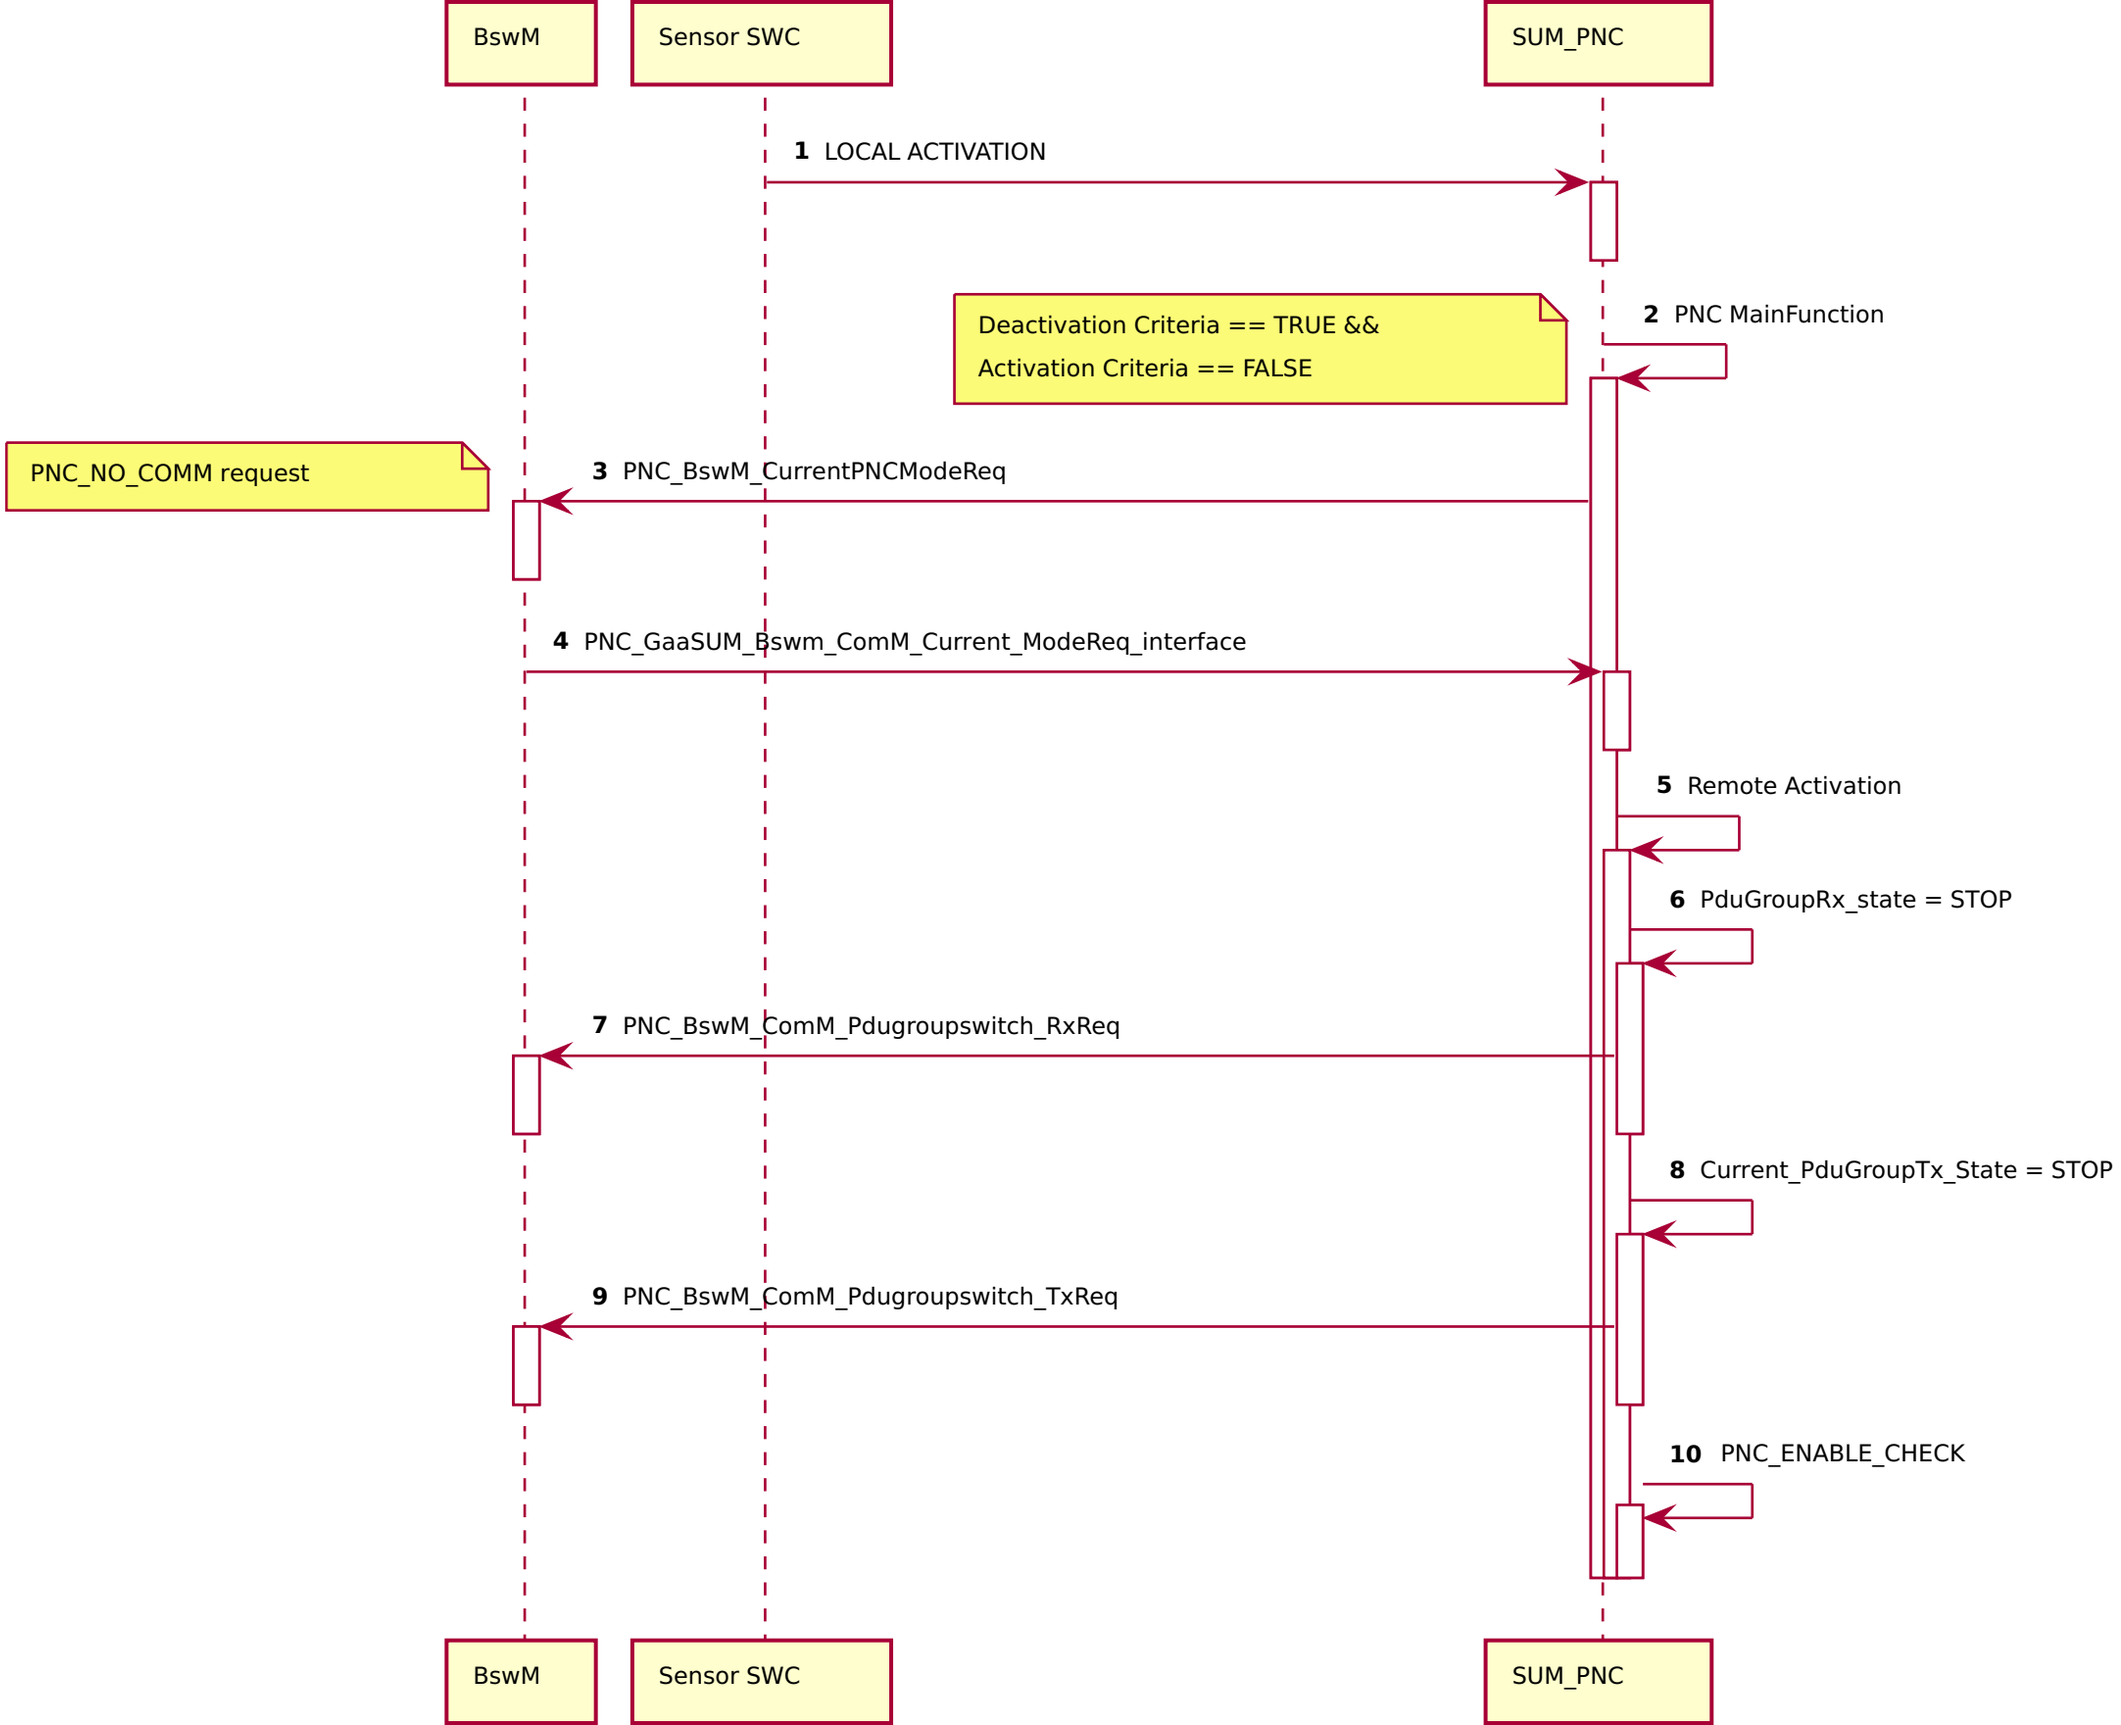
BswM
Sensor SWC
SUM_PNC
1 LOCAL ACTIVATION
2 PNC MainFunction
Deactivation Criteria == TRUE &&
Activation Criteria == FALSE
PNC_NO_COMM request
3 PNC_BswM_CurrentPNCModeReq
4 PNC_GaaSUM_Bswm_ComM_Current_ModeReq_interface
5 Remote Activation
6 PduGroupRx_state = STOP
7 PNC_BswM_ComM_Pdugroupswitch_RxReq
8 Current_PduGroupTx_State = STOP
9 PNC_BswM_ComM_Pdugroupswitch_TxReq
10 PNC_ENABLE_CHECK
BswM
Sensor SWC
SUM_PNC