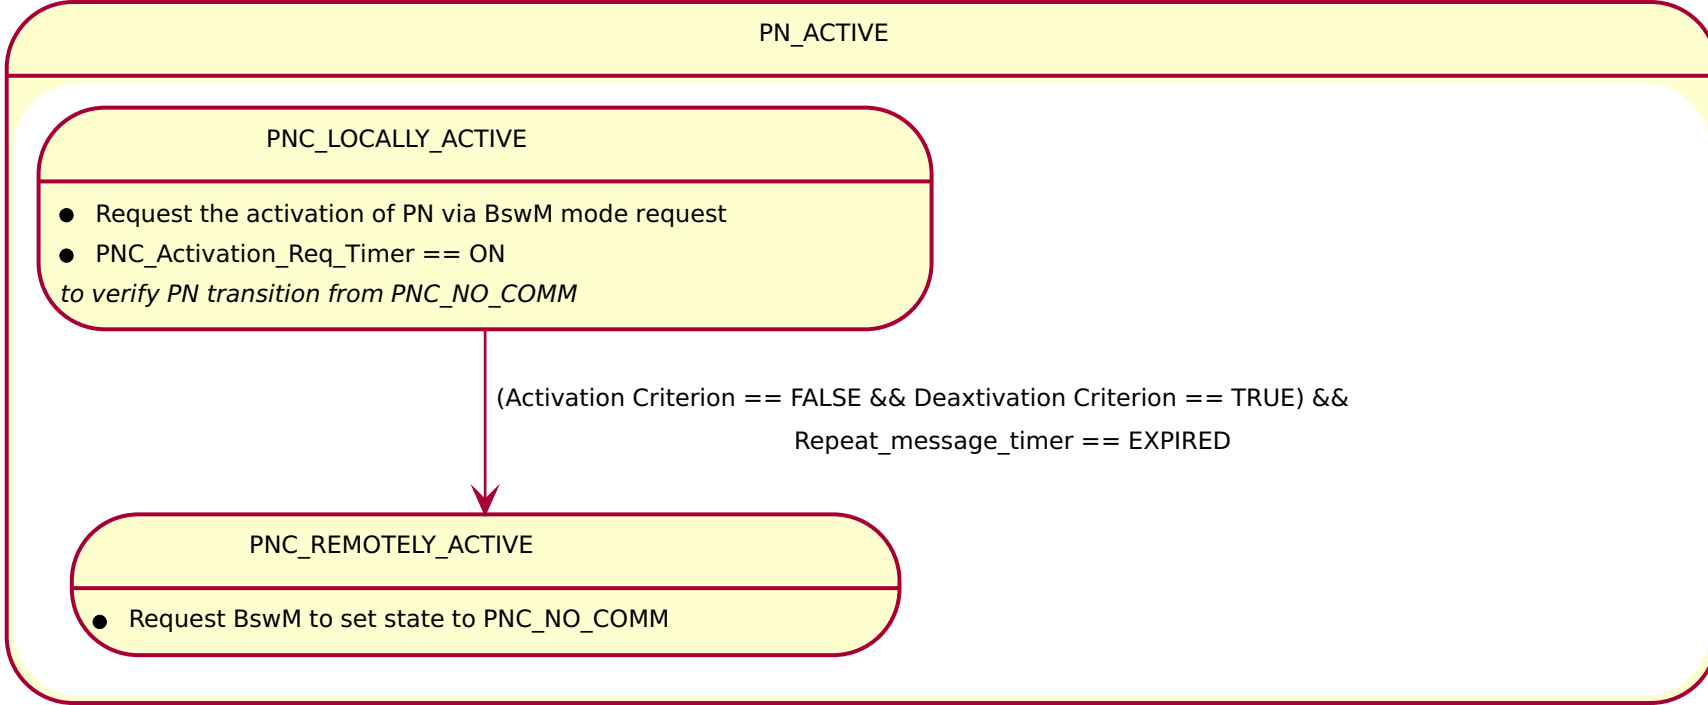
PN_ACTIVE
PNC_LOCALLY_ACTIVE
Request the activation of PN via BswM mode request
PNC_Activation_Req_Timer == ON
to verify PN transition from PNC_NO_COMM
(Activation Criterion == FALSE && Deaxtivation Criterion == TRUE) &&
Repeat_message_timer == EXPIRED
PNC_REMOTELY_ACTIVE
Request BswM to set state to PNC_NO_COMM