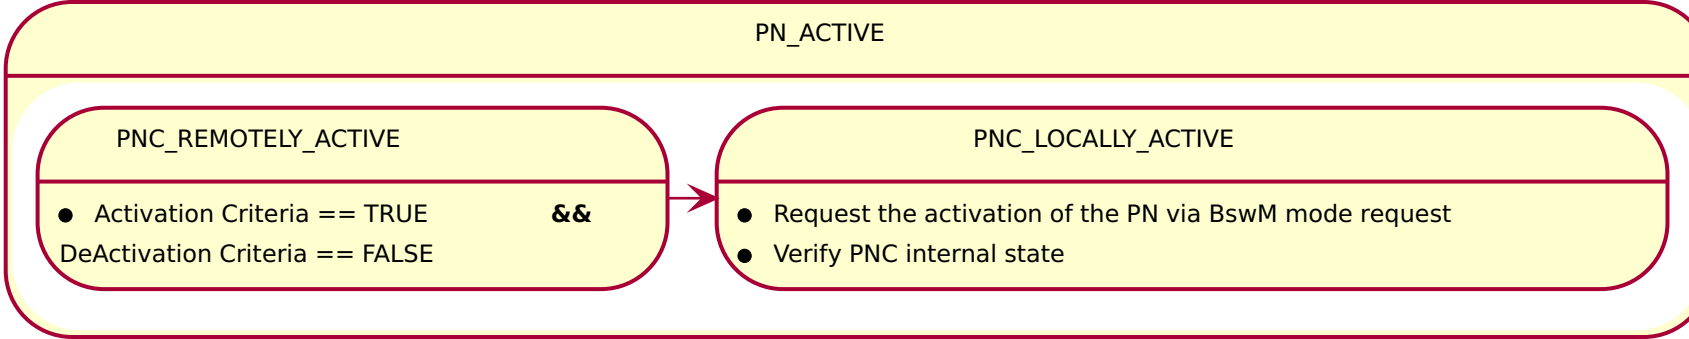
PN_ACTIVE
PNC_REMOTELY_ACTIVE
Activation Criteria == TRUE &&
DeActivation Criteria == FALSE
PNC_LOCALLY_ACTIVE
Request the activation of the PN via BswM mode request
Verify PNC internal state