# Morserino-32

## User Manual

Version 10.x

November 2026

**for all Morserino-32 models**



**M32 — User Manual**

Edition V 10.x, November 2026 — for all Morserino-32 models

© Copyright 2016-2026 by Willi Kraml, OE1WKL

This work is licensed under a CC BY 4.0 license. To view a copy of this license, visit http://creativecommons.org/licenses/by/4.0/

This document has been revised for firmware version 10.x. The font family used is Lato.

**1 Preface ..... 6**

**2 Connectors and Controls ..... 10**

2.1 M32Pocket ..... 10
2.2 Morserino-32 2nd edition ..... 12
2.3 Morserino-32 1st edition ..... 14

**3 Quick Guide to Using the M32 ..... 17**

3.1 Making the M32 Pocket Speak: Installing the Accessibility Edition ..... 17
3.2 If the Morserino Stops Speaking ..... 18
3.3 The Basics ..... 19

**4 Using the M32, Step by Step ..... 22**

4.1 Powering On and Off / Charging the Battery ..... 22
4.2 Using the ENCODER Knob and FN Button ..... 24
4.3 The Display ..... 25
4.4 Hardware settings ..... 27

**5 Top Menu and Morserino Modes ..... 28**

5.1 CW Keyer ..... 28
5.1.1 CW Memory Keyer ..... 30
5.2 CW Generator ..... 31
5.2.1 What can be generated? ..... 32
5.3 Echo Trainer ..... 36
5.4 Koch Trainer ..... 39
5.4.1 Koch: Select Lesson ..... 39
5.4.2 Koch: Learn New Chr ..... 44
5.4.3 Koch: Preview Char ..... 44
5.4.4 Koch: CW Generator and Echo Trainer ..... 45
5.4.5 Koch Echo Trainer: Adaptive Random ..... 45
5.5 Transceiver ..... 46
5.5.1 LoRa Trx ..... 47
5.5.2 Wifi Trx ..... 48
5.5.3 iCW/Ext Trx ..... 49
5.5.4 WinKeyer ..... 49
5.5.5 Keying a remote transceiver ..... 52
5.5.6 QSO Bot ..... 58
5.6 CW Decoder ..... 60
5.7 Games ..... 61
5.7.1 Morse Invaders ..... 61
5.7.2 Fight the Pileup ..... 64

5.7.3 Radio Cave ..... 67
5.7.4 Morsel ..... 71
5.7.5 Trailblazer ..... 76
5.7.6 Fox Hunt ..... 79
5.7.7 Memory Chain ..... 81
5.8 WiFi Functions ..... 83
5.8.1 Displaying the MAC Address ..... 84
5.8.2 Network Configuration ..... 84
5.8.3 Checking your network connectivity ..... 85
5.8.4 Uploading a Text File ..... 86
5.8.5 Updating the Morserino-32 Firmware through WiFi ..... 87
5.8.6 WiFi Select ..... 88
5.8.7 Practice Stats ..... 89
5.9 Go To Sleep ..... 90
**6 Preferences ..... 91**
6.1 Snapshots ..... 92
6.1.1 Storing a snapshot ..... 92
6.1.2 Recalling a snapshot ..... 93
6.1.3 Deleting a snapshot ..... 93
6.1.4 Snapshot bundles ..... 93
6.2 Player identity and game scores ..... 94
6.3 List of All Morserino-32 preferences ..... 94
6.3.1 General Preferences ..... 94
6.3.2 Preferences regarding Key, Paddles and Keyer ..... 98
6.3.3 Preferences regarding Koch Character Sequence ..... 99
6.3.4 Preferences regarding CW Generation ..... 100
6.3.5 Preferences regarding Echo Trainer ..... 103
6.3.6 Preferences regarding Transmitting, Decoding and QSO Bot ..... 104
6.3.7 Preferences regarding Remote Keying ..... 106
6.3.8 Preferences regarding Player Identity and Scores ..... 107
**7 Appendices ..... 109**
7.1 Hardware Configuration Menu ..... 109
7.1.1 CN3 Connector: touch or mechanical paddle (M32 Pocket only) ..... 109
7.1.2 Flipping the display screen for left-hand use ..... 110
7.1.3 Calibration of Battery Measurement ..... 110
7.1.4 Configuring LoRa Band, Frequency and Output Power ..... 111
7.1.5 Resetting Preferences to their Factory Defaults ..... 112
7.2 More information about LoRa ..... 112
7.3 Adjusting Audio Level ..... 113
7.4 Updating the Firmware via WiFi for Versions < 2.0 ..... 114

7.5 Updating the Firmware via USB and an update program ..... 115
7.6 Updating the Firmware via USB and a Browser (Webserial) ..... 117
7.6.1 If the Morserino Does Not Respond: Recovery Boot Mode ..... 118
7.7 Using a Browser to set up M32 Preferences, and upload Text Files ..... 119
7.8 Using the Serial Output of the M32 ..... 121
7.8.1 The M32 Trainer: Copy Practice in Your Browser ..... 122
7.8.2 Using the M32 Serial Protocol over Bluetooth (BLE Serial) ..... 123
7.9 Using the Bluetooth Keyboard functionality ..... 125
7.10 Using USB Keying: vBand and MIDI over the USB cable ..... 126
7.11 List of common CW abbreviations used by Morserino-32 ..... 128
7.12 Glossary ..... 138

# 1 Preface

🌈

*"Morserino-32 – A multi-functional Morse Code Device, ideal for learning and training, and having fun."*

This manual reflects the features of firmware Version 10.x of the Morserino-32. This edition of the manual describes the **Morserino-32 1st and 2nd edition**; the newer Morserino Pocket has its own edition of this manual.This edition of the manual describes the **Morserino-32 Pocket**; the earlier 1st and 2nd edition Morserinos have their own edition of this manual. The functionality provided by this version is basically the same for all three Morserino editions, with the exception that the M32Pocket does not have LoRa transceiver capabilities, but offers new features such as a colour display, games, and a battery status icon.

**If your M32 Pocket does not speak yet.** A new Pocket is delivered with the Standard edition, which is silent. The firmware this manual describes is installed from a computer over USB, and takes a few minutes: see **Making the M32 Pocket Speak: Installing the Accessibility Edition**, the first section of the chapter **Quick Guide to Using the M32**.

I would like to thank all those who contributed–through code, comments, suggestions, criticism, reviews, blog entries, Youtube videos and other means–to making the Morserino-32 a successful and outstanding product. Among the many contributors, one deserves special mention: Hari, OE6HKE — without him the M32 Pocket wouldn't exist!

What is new in Version 10?

- Two Morserinos can now form a **remote keying link** over the network. You key one of them at your operating position — the new mode **Remote Keyer** — and the other one, at the station, keys the transmitter through its „to Tx" connector: the new mode **Remote Rig**. The station may be in the next room or in another country. What comes out of the transmitter is what you keyed, with your own timing, whether it came from the paddles, from a straight key or from a bug. It is a keying link, not an audio link: you hear your own sidetone locally and immediately, so nothing on the network can disturb your sending rhythm, while what you hear *from* the station comes over whatever remote-control and audio path you already use. The link runs over UDP port 7374, and the address of the rig goes into the **TRX Peer** field of **Config WiFi** — the same field the WiFi transceiver uses. Both ends are described in the manual, including what to do about routers and firewalls.

- The serial protocol used by the Configuration Tool and other programs is now at **version 1.6**: it can read and set the remote-keying settings (the shared secret and the port) as well as the Remote Rig and Remote Keyer preferences, and reports the new commands through its capability list. It also has events and a practice mode for practice programs on a computer. Everything from version 1.4 keeps working unchanged.
- New mode **Transceiver → WinKeyer**: the Morserino behaves like a K1EL WinKeyer (WK2), so logging and contest programs (N1MM Logger+, Win-Test, DXLog, Logger32, RUMlog, CQRLOG, fldigi/flwkey, …) can send CW through it over USB. It keys a transmitter connected to "to Tx" (unless **Key ext TX** is Never), you can break in with the paddle at any time, the ENCODER works as the WinKeyer's speed control, and a click on the ENCODER stops what the program is sending. Keyer mode, paddle polarity, ACS, latency and the side tone pitch stay the Morserino's own settings – the corresponding settings in the program have no effect; everything else about the program's sending (speed, weighting, ratio, compensation, Farnsworth, contest spacing, …) comes from the program, and nothing it sets is stored. The WinKeyer's messages 1 to 6 play the Morserino's keyer memories 1 to 6. There is no PTT output. On the 1st and 2nd edition, start the mode before the program (the USB port then runs at the WinKeyer's 1200 baud); on the M32 Pocket a program can also open the WinKeyer while the Morserino is in the main menu, and the mode starts by itself.
- New mode **Transceiver → Remote WinKeyer** (on the 1st and 2nd edition **Remote WinK**, to fit the display): **WinKeyer** and **Remote Keyer** in one. A logging or contest program drives the Morserino over USB exactly as in **WinKeyer** mode, and its CW – and whatever you key with the paddle – goes to a distant transmitter over the remote keying link, while your own "to Tx" connector stays quiet. Because the transmitter is far away, a few things differ from **WinKeyer**: when the link drops, the program's sending stops and the program is told, as when you break in with the paddle (a repeating CQ stops), and what it sends while the link is down is dropped, so nothing goes on the air late; the program is told the Morserino is busy until the rig has played the CW out, so a program switching PTT over CAT does not cut off the end; and a tune is treated at the rig like a held straight key (**Rig Limit SK** applies). The rig's settings can be changed with a double click while the link is up, as in **Remote Keyer**. On the M32 Pocket the new preference **WinKeyer Tx** decides which of the two WinKeyer modes starts when a program opens the WinKeyer while the Morserino is in the main menu: **Local** (the default, as before) or **Remote**.
- **CW Generator** and **Echo Trainer** have a new entry, **Prefixes**: call sign prefixes – the beginning of a call sign up to and including its call-area digit, like OE3, DL1, KD9, VE3, UA9 or 3B8 – to train the part of a call that tells you where a station is. **Calls Region** and **Call Prefixes** apply as for call signs; **Length Calls** does not.
- New: the **M32 Trainer**, a copy trainer in your browser (`https://www.morserino.info/m32_trainer.html`). The Morserino plays groups, words, phrases, call signs or prefixes made of your Koch lesson, your Practice Set or all characters; you copy them typed on

the computer or keyed back on the paddle. The page keeps a record of every character, chooses what comes next by what you still miss, and offers the next Koch lesson when you are ready. It also logs the **Echo Trainer**'s results, with the reaction and keying times the Morserino measures. It needs this firmware (serial protocol 1.6) and Chrome, Edge or Firefox on a computer. Nothing is stored on the Morserino except the Koch sequence and lesson, and only when you change them on the page. See "The M32 Trainer" in the manual.

- M32 Configuration Tool: **snapshot bundles**. A CW course or club can hand out its practice presets as one file, and **Import Snapshot Bundle…** on the Snapshots tab stores them all in one go, each in the slot the course gives it. The tool checks the file against your Morserino before it changes anything, lets you leave out single presets and, where a course offers both, choose wide spacing (for writing down) or Koch spacing (for head copy). Each preset changes only the settings it lists - everything else comes from your own settings - and afterwards your own settings are back as they were. Your CW school points you to the bundle file for its course; how to write one for your own course is described, with an example, in `Documentation/Snapshot Bundles`.
- M32 Pocket: **CW Keyer** can send your keying to a computer over the USB cable, without Bluetooth. The new preference **USB Keying** chooses what goes out: **VBand** makes the Morserino a USB keyboard for vBand (Left Ctrl follows the keyer – nothing to pair, and the battery charges meanwhile), **MIDI Keyer** makes it a USB MIDI device that sends your finished keying, for Vail's web tools such as *learncw.vailmorse.com* and for programs with a straight-key input, and **MIDI Paddles** sends what a CTR2-MIDI interface sends (channel 1: note 20 for the dit paddle, 21 for the dah paddle, 30 for a straight key), for programs such as SmartSDR for macOS that have their own keyer. The default, **Off**, sends nothing extra. While CW Keyer sends to USB there is no serial port, so the Configuration Tool cannot connect; leaving CW Keyer brings it back at once. Thanks to Ian Gilchrist, VK1HF, who wrote it.
- M32 Pocket, Accessibility Edition only: the device now says the new speed whenever you change it - the number spoken as you turn the encoder, so a blind operator can pace their practice without asking anyone. Sweeping the encoder fast speaks only the settled value: any announcement already playing is cut when the newer value comes in, so you never hear both the initial and the final speed with everything between swallowed. The CW generator holds silent while the announcement plays (the shared audio path would otherwise turn CW into clicks) and picks the next element up at the new speed. If you start keying during an announcement, the announcement stops at once, so whatever you key is always heard as side tone - also when it goes out to a transmitter. This works in the training modes, including the Echo Trainer's automatic speed step after each word, and in the QSO Bot, whose CW pauses for the announcement in the same way.
- M32 Pocket, Accessibility Edition only: whenever you leave a training mode and land back in the top menu, the device tells you how the battery is doing — **high**, **medium**,

**low**, or **charging** (plus **on USB power** with no battery, and **battery fault** for the rare fault state). This matters specifically here, because the audio codec is the first thing to give up on this build when the cell sags: a blind operator can be left with a working device that says nothing at all, and this warning fires far enough above the codec's cliff to give time to plug in. The message is announced once per mode-to-menu return, not repeated while navigating the menu itself.

- When you open the preferences from inside a mode (double click), the settings of that mode now come first – in the Echo Trainer its echo settings before those for the keyer, in the QSO Bot **QSO Difficulty** and **Contest Type** – and the general settings that every mode offers (tone, time-out, display, decoded characters, serial and Bluetooth output, paddle polarity) follow after them – the ones you are most likely looking for are no longer at the end of the list. When you have not used the preferences yet, the list opens at the top.
- The **Practice Set** picker now offers every character the Morserino can generate, whichever **Decoder Chars** set is chosen: after the letters, digits, punctuation and the prosigns <as> <ka> <kn> <sk> <ve> <bk> come ä ö ü and ch, the round brackets and é è à ç ñ å æ ø – so anything a Koch sequence (**Custom Chars** included) may contain can also go into a Practice Set. Until now only the letters of the chosen **Decoder Chars** set were offered. The Accessibility Edition keeps offering ä ö ü and ch only, the characters it can speak.
- **Bluetooth Use** is now one of the general preferences, since it also switches on the serial protocol over Bluetooth, and so is **Decoder Chars**, which matters wherever characters are decoded; **BLT <AR>**, which only concerns the Bluetooth keyboard, is now offered only in **CW Keyer**, the one mode that types over Bluetooth.
- Some modes offered preferences that had no effect there, and missed some that did: **CW Generator** now offers **Headphone Output**, **iCW/Ext Trx** offers **Key ext TX** (which decides there whether your transmitter is keyed), and the **File Player** offers **Tone Shift** (used by its tone marker). **Tone Shift** is no longer offered in **iCW/Ext Trx** and the **QSO Bot**, and **Bandwidth** no longer in the **QSO Bot** – they did nothing there.
- Generated call signs are more realistic: their prefixes are rebuilt from call signs heard in contests (Super Check Partial) and the AD1C country file. Prefixes the generator could never make before now come up (KD9, WA2, R3, UA9, IK2, IZ3, TI2, …), the call-area digit follows real use (OE3 often, OE0 never), Asiatic Russia counts as Asia and European Russia as Europe under **Calls Region**, and prefixes no longer in use are gone. This applies wherever call signs are generated: CW Generator, Echo Trainer, the QSO Bot and the games.

# 2 Connectors and Controls

## 2.1 M32Pocket




The M32 Pocket: a black 3D-printed case, seen from above at an angle. Its top face is mostly taken up by the display window; the rotary knob sits at the far end. Numbered labels 1 to 8 mark the connectors and controls listed in the table below.

**Finding your way around the M32 Pocket by touch.** The case is a flat rectangle, about twice as long as it is wide, with the recessed display taking up most of one large face. Hold it with that face up and the rotary knob at the right side.


- The **short edge to the left of you** carries four openings in a row. Starting from the top corner: the flat, wide **USB-C** slot (1), then three round 3.5 mm sockets — **external paddle or key** (2), **to TX** (3), and **headphones / audio** (4) closest to the bottom corner.
- The **top long edge** has a small recess with the **power slide switch** (5), roughly two thirds of the way towards the right end. Pushed to the right (towards the touch paddles) is ON.
- The **right short end** carries the **rotary ENCODER** (6) — the knurled knob, which also presses in — with the **FN button** (8) below it (between the round recess which is the opening of the loudspeaker, and the protrusion which holds the touch paddles), integrated into the case, and the oval **touch paddles** (7) on both sides of the protrusion on the right.

Everything below is described in the same order as the numbers in the table.

| # | Connector / Control | Usage |
|---|---|---|
| 1 | USB-C | Use a normal 5V USB Charger to power the device and charge its LiIon Battery. The microcontroller firmware can also be reprogrammed through USB; another method to update the Morserino-32 firmware is through a WiFi connection. You can also output keyed or decoded characters on the USB serial device to use this information in a computer program – see the preference **Serial Output** for further information. |
| 2 | 3.5 mm Phone Jack (3 poles): External Paddle | Use this to connect either an external (mechanical) paddle (tip is left paddle, ring is right paddle, sleeve is ground), or a straight key (tip is the key). |
| 3 | 3.5mm Phone Jack (3 poles): to TX | Connect this to your transmitter or transceiver if you would like to key them with this device. Only the tip and sleeve are being used. |
| 4 | 3.5mm Phone Jack (4 poles): Headphones / Audio In / Line Out | Connect your headphones (with 3-pol or 4-pole plug) here. Audio input for the CW decoder; connect the audio output of a receiver for decoding CW signals. Audio output (for external amplifiers or PC etc.). The assignments to the jack are as follows: Tip and 1st ring – audio or headphones out; 2nd ring: ground; sleeve: audio in. See also section **General Preferences** for available settings regarding this connector! **Do not connect this to a transceiver with a simple 3- or 4-pole audio cable - high voltages form the audio output of the transceiver might destroy your M32Pocket! See FAQ on morserino.info how to feed audio into the M32Pocket!** |
| 5 | Power Switch | Connect / disconnect the LiIon battery from the device. For frequent use of the Morserino-32 you can leave the battery connected. The ON position is towards the touch paddles, and marked with a small notch on the case. If you will not use the device for several days, disconnect the battery (through the Power Switch), as otherwise it will be slowly discharged.<br>For charging, the battery needs to be connected, i.e. the switch must be in the ON position! |
| 6 | ENCODER – Encoder and its Pushbutton switch | Can be rotated and is also a push-button switch. Used to make your selection within menus, to adjust speed, volume, or scroll the display, and to set various preferences and options. |
| 7 | Touch paddles | These are capacitive touch paddles. Please note that for left-handed use, the display can be flipped 180°! |

| # | Connector / Control | Usage |
|---|---|---|
| 8 | FN Button switch (integrated into the case) | When the device has gone into deep sleep, this wakes up and restarts your Morserino. When the device is up and running (performing one of the operation modes), a short press of the FN button toggles the rotary encoder between adjusting the keyer speed and volume control. A long press of the FN button allows you to scroll the display with the rotary encoder, pressing the button again changes the function back to speed control. See the section **Using the ENCODER Knob and FN Button** for further details.<br>A double click of this button reduces display brightness in several steps. |

## 2.2 Morserino-32 2nd edition

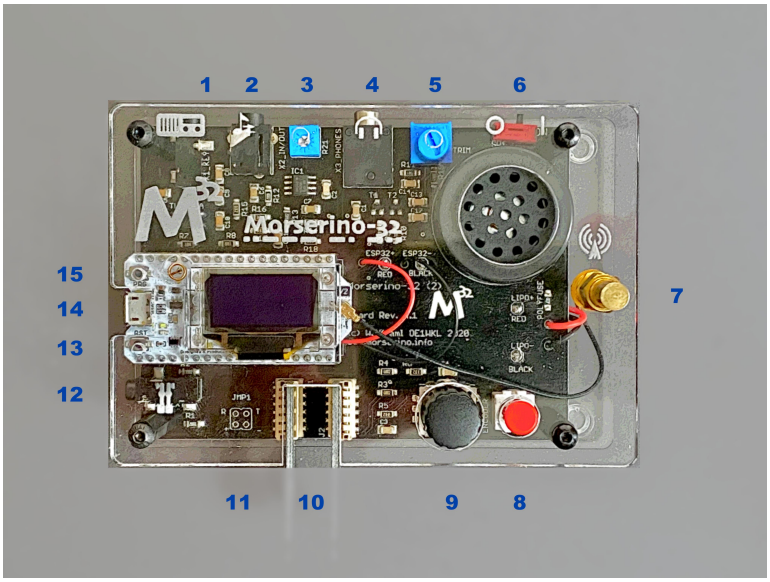



The Morserino-32 2nd edition: the circuit board in a clear acrylic case, seen from above. The loudspeaker is the round grille on the right, the display the small panel on the left. Numbered labels 1 to 15 mark the connectors and controls listed in the table below.

| # | Connector / Control | Usage |
|---|---|---|
| 1 | 3.5mm Phone Jack (3 poles): to TX | Connect this to your transmitter or transceiver if you would like to key them with this device. Only the tip and sleeve are being used. |

| # | Connector / Control | Usage |
|---|---|---|
| 2 | 3.5mm Phone Jack (4 poles): Audio In / Line Out | Audio input for the CW decoder; connect the audio output of a receiver for decoding CW signals. Audio output (pretty close to a pure sine wave) that is not influenced by setting the loudspeaker volume. The assignments to the jack are as follows: Tip and 1st ring – audio in; 2nd ring: ground; sleeve: audio out. |
| 3 | Audio Input Level Trimmer | Adjust audio input level with the help of this potentiometer; there is a special function to help with level adjustment, see the appendix **Adjusting Audio Level**. |
| 4 | 3.5 mm Phone Jack (3 poles): Headphones | Connect your headphones here (any stereo headphones with standard phone jacks from mobile phones should work) to listen through headphones and switch off the speaker. You cannot attach a loudspeaker directly to this jack without providing some interface (headphone out needs a DC connection to ground through 50 – 300 Ohms). |
| 5 | Phones Level Trimmer | Used to adjust the headphone level for maximum comfort. 1st edition M32 does not have this. |
| 6 | Power Switch | Connect / disconnect the LiPo battery from the device. For frequent use of the Morserino-32 you can leave the battery connected. The ON position is towards the side of the antenna connector. If you will not use the device for several days, disconnect the battery (through the Power Switch), as otherwise it will be slowly discharged.<br>For charging, the battery needs to be connected, i.e. the switch must be in the ON position! |
| 7 | SMA female Antenna Connector | Connect an antenna suitable for the operating frequency (standard is around 433 MHz) for LoRa operation. Do not transmit LoRa without an antenna or a dummy load! |
| 8 | FN Button (RED button) | When the device has gone into deep sleep, this wakes up and restarts your Morserino. When the device is up and running (performing one of the operation modes), a short press of the FN button toggles the rotary encoder between adjusting the keyer speed and volume control. A long press of the FN button allows you to scroll the display with the rotary encoder, pressing the button again changes the function back to speed control. While in the menu, a long press starts the mode to adjust audio input level. See the section **Using the ENCODER Knob and FN Button** for further details.<br>A double click of this button reduces display brightness in several steps. |
| 9 | ENCODER – Encoder and its Pushbutton Switch | Can be rotated and is also a push-button switch. Used to make your selection within menus, to adjust speed, volume, or scroll the display, and to set various preferences and options. |

| # | Connector / Control | Usage |
|---|---|---|
| 10 | Connectors for Touch Paddles | These PCB connectors accept the capacitive touch paddles. If you are only using an external paddle (or for transport), you may remove the touch paddles. |
| 11 | Serial Interface | You can connect a cable (directly or through a 4-pole pinhead connector) to an external serial device, e.g. a GPS receiver module (**this is currently not supported by the firmware**). The 4 poles are T (Transmit), R (Receive), + and - (3.3V power from the Heltec module). |
| 12 | 3.5 mm Phone Jack (3 poles): External Paddle | Use this to connect either an external (mechanical) paddle (tip is left paddle, ring is right paddle, sleeve is ground), or a straight key (tip is the key). |
| 13 | Reset Button | Through a small hole you can reach the Reset button of the Heltec module (not needed for normal operation). |
| 14 | USB – Micro USB Connector | Use a normal 5V USB Charger to power the device and charge its LiPo Battery. The microcontroller firmware can also be reprogrammed through USB. You can also output keyed or decoded characters on the USB serial device to use this information in a computer program – see the preference **Serial Output** for further information. |
| 15 | PRG Button | Through a small hole you can reach the Programming Button of the Heltec module (not needed for normal operation). |

## 2.3 Morserino-32 1st edition

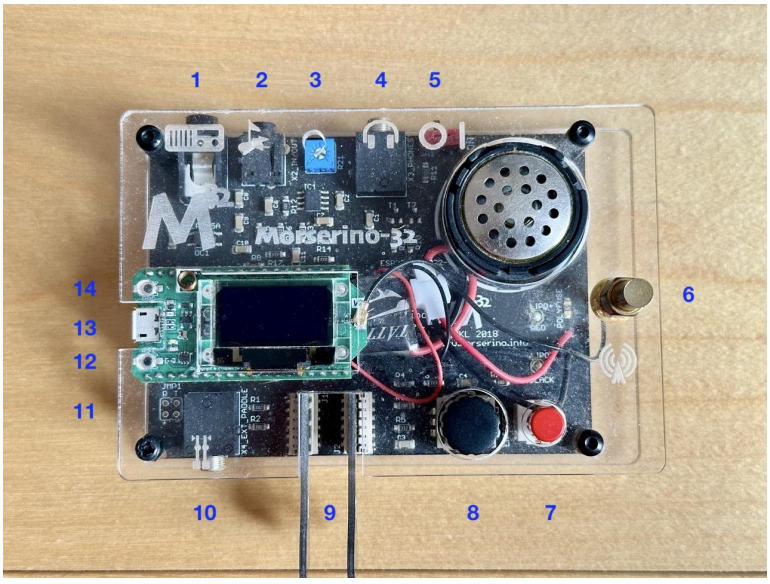


The Morserino-32 1st edition: the circuit board in a clear acrylic case, seen from above. The loudspeaker is the round grille on the right, the display the

small panel on the left. Numbered labels 1 to 14 mark the connectors and controls listed in the table below.

| # | Connector / Control | Usage |
|---|---|---|
| 1 | 3.5mm Phone Jack (3 poles): to TX | Connect this to your transmitter or transceiver if you would like to key them with this device. Only the tip and sleeve are being used. |
| 2 | 3.5mm Phone Jack (4 poles): Audio In / Line Out | Audio input for the CW decoder; connect the audio output of a receiver for decoding CW signals. Audio output (pretty close to a pure sine wave) that is not influenced by setting the loudspeaker volume. The assignments to the jack are as follows: Tip and 1st ring – audio in; 2nd ring: ground; sleeve: audio out. |
| 3 | Audio Input Level Trimmer | Adjust audio input level with the help of this potentiometer; there is a special function to help with level adjustment, see the appendix **Adjusting Audio Level**. |
| 4 | 3.5 mm Phone Jack (3 poles): Headphones | Connect your headphones here (any stereo headphones with standard phone jacks from mobile phones should work) to listen through headphones and switch off the speaker. You cannot attach a loudspeaker directly to this jack without providing some interface (headphone out needs a DC connection to ground through 50 – 300 Ohms). |
| 5 | Power Switch | Connect / disconnect the LiPo battery from the device. For frequent use of the Morserino-32 you can leave the battery connected. The ON position is towards the side of the antenna connector.<br>If you will not use the device for several days, disconnect the battery (through the Power Switch), as otherwise it will be slowly discharged.<br>For charging, the battery needs to be connected, i.e. the switch must be in the ON position! |
| 6 | SMA female Antenna Connector | Connect an antenna suitable for the operating frequency (standard is around 433 MHz) for LoRa operation. Do not transmit LoRa without an antenna or a dummy load! |

| # | Connector / Control | Usage |
|---|---|---|
| 7 | FN Button (RED button) | When the device has gone into deep sleep, this wakes up and restarts your Morserino. When the device is up and running (performing one of the operation modes), a short press of the FN button toggles the rotary encoder between adjusting the keyer speed and volume control. A long press of the FN button allows you to scroll the display with the rotary encoder, pressing the button again changes the function back to speed control.<br>While in the menu, a long press starts the mode to adjust audio input level. See the section **Using the ENCODER Knob and FN Button** for further details.<br>A double click of this button reduces display brightness in several steps. |
| 8 | ENCODER – Encoder and its Pushbutton Switch | Can be rotated and is also a push-button switch. Used to make your selection within menus, to adjust speed, volume, or scroll the display, and to set various preferences and options. |
| 9 | Connectors for Touch Paddles | These PCB connectors accept the capacitive touch paddles. If you are only using an external paddle (or for transport), you may remove the touch paddles. |
| 10 | 3.5 mm Phone Jack (3 poles): External Paddle | Use this to connect either an external (mechanical) paddle (tip is left paddle, ring is right paddle, sleeve is ground), or a straight key (tip is the key). |
| 11 | Serial Interface | You can connect a cable (directly or through a 4-pole pinhead connector) to an external serial device, e.g. a GPS receiver module (**this is not supported by current firmware**). The 4 poles are T (Transmit), R (Receive), + and - (3.3V power from the Heltec module). |
| 12 | Reset Button | Through a small hole you can reach the Reset button of the Heltec module (not needed for normal operation). |
| 13 | USB – Micro USB Connector | Use a normal 5V USB Charger to power the device and charge its LiPo Battery. The microcontroller firmware can also be reprogrammed through USB . You can also output keyed or decoded characters on the USB serial device to use this information in a computer program – see the preference **Serial Output** for further information. |
| 14 | PRG Button | Through a small hole you can reach the Programming Button of the Heltec module (not needed for normal operation). |

# 3 Quick Guide to Using the M32

⚠

**This is for the impatient, but is not a replacement for reading the whole manual!**

⚠

Make sure you have a suitable battery for your Morserino. The M32 1st and 2nd edition use a 3.7 V LiPo battery.The M32Pocket uses a 14500 type Li-Ion cell of 3.7 V.

## 3.1 Making the M32 Pocket Speak: Installing the Accessibility Edition

If your M32 Pocket already speaks when you switch it on, you are running the Accessibility Edition and can skip this section.

A new M32 Pocket is delivered with the **Standard** edition, and that edition is silent: it shows the menus on the display but does not read them out. The **Accessibility Edition** speaks instead — it announces itself and the battery status when you switch it on, it speaks menu entries, preferences and their values as you move through them, it says the new speed whenever you change it, and every time you return to the menu from a training mode it tells you how the battery is doing — **high**, **medium**, **low**, or **charging**. It costs nothing, it is installed over USB, and you can go back to the Standard edition at any time.

The two are **alternatives, not one edition with speech added on top**: you run one or the other, and the speaking one does without three things.

- **The seven games** — Morse Invaders, Fight the Pileup, Radio Cave, Morsel, Trailblazer, Fox Hunt and Memory Chain. They are played by watching the screen, and speech cannot stand in for that.
- **The File Player.** Its storage is exactly where the voice clips live, so there is no room left for text files to play.
- **Upload File** and **Update Firmw** in the WiFi menu. Both only hand you over to a browser on another computer, so this edition drops them and has you use that computer directly.

Everything else is unchanged: all the training modes, the Koch trainer, the CW decoder, the transceiver modes, the QSO Bot, and every preference that is not a game setting.

The installation is done from a computer; there is no way to do it on the device itself. If you are looking at the Standard edition's menu right now, its **Update Firmw** function will **not** get you there: that one only replaces the program, while this edition also needs its voice clips and a different layout of the internal memory. Use the installer web page described here.

**What you need**

- A desktop or laptop computer. Web Serial, the technique the installer uses to talk to the Morserino, does not exist on phones or tablets.
- **Google Chrome**, **Microsoft Edge**, **Firefox** version 151 or newer, or **Opera**. Safari cannot do this.
- A USB-C cable that carries data, not one that only charges.

**Installing it**

1. Switch the M32 Pocket **on**, and leave it on. It has to be awake — not in sleep mode — before you plug the USB cable in.
2. Connect it to the computer with the USB cable.
3. Go to `https://www.morserino.info/install.html`.
4. Choose **Connect**. Your browser then asks which serial port to use: pick the one your Morserino is on, and confirm.
5. Under **Edition**, choose **Accessibility Edition**. Leave the choice about your data at **Keep my settings**.
6. Choose **Install** and wait. Do not unplug the device while it is working. When it has finished, the Morserino restarts by itself — and this time it speaks.

Your preferences, your snapshots and your stored speed survive the change, and survive changing back — only the File Player's text does not, since that is the storage the voice clips take over.

The same installer is also how you return to the Standard edition later: the steps are identical, you simply choose the other edition. It is described in full in the appendix **Updating the Firmware via USB and a Browser (Webserial)**.

## 3.2 If the Morserino Stops Speaking

The voice clips are not part of the program. They live in a separate area of the device's internal storage, which means the two can come apart: re-install the program on its own, or let an installation be interrupted part-way, and the Morserino ends up running perfectly well — keyer, generator, decoder, CW and all — with nothing left to speak with, or with the clips of an older version.

A Morserino in that state would simply say nothing at all, and silence is exactly what broken speech and a dead device have in common. So this edition tells you. When you switch it on you hear, in place of or ahead of the usual announcement, **four pairs of alternating high and low tones** — a short two-tone alarm of about two seconds.

The alarm means one of two things, and the start-up screen says which, under the version number, for anyone able to look:

- **"No voice clips!"** — there are no clips at all. The Morserino stays silent apart from the alarm.
- **"Wrong voice pack!"** — the clips belong to a different version of the program. Most of them still fit, so the Morserino goes on speaking normally after the alarm; what it cannot say are the entries that were added or reworded since those clips were made, and those simply stay silent.

The alarm is deliberately neither speech nor Morse code: it has to work when speech is precisely what is missing, and it must not assume that you can already read Morse. It is the same signal in both cases — one sound to learn, meaning "my speech is not right".

Nothing on the device needs repairing, and nothing is harmed by carrying on: everything except the spoken menus still works. To put it right, run the installer again exactly as described in **Making the M32 Pocket Speak: Installing the Accessibility Edition**, choosing the **Accessibility Edition** and **Keep my settings**. That installs the program and the matching voice clips together, and your settings and snapshots survive it.

## 3.3 The Basics

**Controls** to be used:

• ON/OFF (Battery): Sliding switch located on the back near the loudspeaker. Connects/disconnects battery.

• ENCODER: The knob that you can rotate and press (the black one on the first and second edition Morserinos).

• FN: The other push-button switch (the red one on the first and second edition Morserinos).(integrated into the case on the M32Pocket).

**How To Turn On** the M32

Either connect a USB power supply, or, if you have a battery installed, turn the battery switch to ON (I).

A start-up screen will briefly appear, showing the firmware version and battery status. Then you will be in the Main Menu ("Select Mode:"), unless you selected the quick start preference; in that case the last operational mode you had chosen will start automatically.

If there is no change in the display for a long time after turning on the M32, it will go into sleep mode. You can wake it up by pressing the FN button.

**How To Select a Mode** (Menu):

Rotate the ENCODER to find the desired mode. Click the ENCODER to select it or to enter the next lower menu level. Press and hold the ENCODER to exit or go up one level.

**How to Change Speed or Volume, and Scroll** the Display

This is done with FN and the ENCODER when you are in one of the operational modes. These do not work while you are in the menu.

- Change speed: rotate ENCODER.
- Change volume: click FN, then rotate ENCODER to adjust volume, click FN again to revert to speed setting.
- Scroll display: Press and hold FN. Scroll back and forth with the ENCODER. Exit by clicking FN.

The speed setting is written to permanent memory after 12 characters are keyed at the same speed. The volume setting is written as soon as you toggle back from the volume setting mode to the speed setting mode with the FN button.



The volume steps are not the same for the built-in loudspeaker as for headphones. A small loudspeaker needs considerably more drive before it produces anything audible, so its steps are spaced more closely and cover a narrower range – every setting from 1 upwards can be heard. Headphones keep a wider range, and their lowest setting is almost silent. The same number can therefore sound quite different depending on whether headphones are plugged in.

**How To Change the Brightness** of the Display

There are five levels of brightness. Each double-click of the FN button reduces the brightness slightly. When the lowest level is reached, a double-click resets the display to full brightness.

**How To Change Preferences** (Settings):

Double-click the ENCODER, then rotate the ENCODER to select the preference you want to change. Press and hold the ENCODER to exit the preference menu.

When a mode is active, only the relevant preferences for that mode are shown. When called from a menu, all preferences are shown.

There are numerous preferences, see the chapter **Preferences** to find out what they are for.

You can also store and recall preferences in so called “snapshots”, see section **Snapshots**.

**How to Use External Paddles and Keys**

You can connect external paddles (dual lever or single lever), or a straight key (normal, or sideswiper) to your M32, by using the 3.5 mm connector for external keys.

To use a straight key, you can use the CW decoder mode without changing any preferences. This mode decodes Morse either through the audio I/O connector or from your key. To use the Echo Trainer or Transceiver modes with a straight key, change the **Keyer Mode** preference to **Straight Key**.

Note that the **CW Keyer** mode works differently with a straight key: it behaves the same way as in Decoder mode; with a straight key, you are the keyer, not the Morserino!

You can use the built-in capacitive touch paddles like a sideswiper / cootie key when the Keyer Mode is Straight Key (but not an external paddle, unless it is wired as a sideswiper)!

**How To Charge the Battery**

Connect USB power, switch battery switch to ON (I).

With the M32 1st or 2nd edition, an orange LED will light up very brightly. When the orange LED is dark, the battery is fully charged. When the orange LED is lit or flickering dimly, the battery is not connected or switched on.

The M32Pocket will display the battery status as an icon whenever you are in a menu.

# 4 Using the M32, Step by Step

## 4.1 Powering On and Off / Charging the Battery

If you want to use the device with USB power, just plug a USB cable in from virtually any USB charger — it consumes a max of 200 mA when charging the battery,it consumes a max of 500 mA when charging the battery, so any 5 V charger will do.

If you run it from battery power, slide the sliding switch to the ON position.

> ⚠
>
> Make sure you install the battery with the correct polarity before turning the switch to the ON position. Reversing the polarity could destroy your Morserino! For the M32Pocket, it is advisable to use a 14500 LiIon cell (3.7 V) with protection against deep discharge.

When the device is off but with the battery connected (sliding power switch is on), it is in deep sleep – in reality: almost all functions of the microcontroller are turned off, and power consumption is minimal (less than 5% of normal operationaround 1% of normal operation).

**To turn the device on from deep sleep**, press the FN button briefly.

When the Morserino-32 boots up, a startup screen will appear for a few seconds. The top line shows the LoRa frequency that the M32 is configured to use, as a five-digit number.It opens with the Morserino logo. Below the version number you will see the battery voltage, and a symbol showing how much battery power is left. If the battery is low, connect your device to a USB power source. The battery will drain even if you never turn the device on. Although the drain is minimal in deep sleep mode, the battery will be empty after a few days. Therefore, if you intend not to use the Morserino for a longer period of time, disconnect the battery from the device using the power switch at the back.

If the battery voltage is dangerously low when you try to turn on the device, an empty battery symbol will appear on the screen, and the device will not boot up. If you see this symbol, begin charging your battery as soon as possible.

First edition of M32 only: After using any of the WiFi functions, battery measurement does not work correctly until the Morserino-32 is powered down and up again (or a reset with the Reset button has been performed). This is due to a hardware problem on the Heltec

board V2.0. In such cases the Morserino-32 displays “Unknown” instead of the battery voltage, and the battery symbol is shown with an inscribed question mark. After a power cycle everything should work OK again.

If the display shows the empty battery symbol although sufficient power should still be available, it is advisable to perform a battery measurement calibration. This is not necessary and hence not available on the M32Pocket. See the section **Calibration of Battery Measurement**.

To disconnect the device from the battery (turning it off, unless you are USB powered), slide the sliding switch to the OFF position.

To put the device into deep sleep, you have two options:

- In the main menu, select the option **Go To Sleep**
- If a **Time Out** value has been set in the preference menu, do nothing. If there is no display update, the device will power itself off and enter deep sleep mode after the set time has passed.

**To charge the battery**, connect the device to a reliable USB 5V power source with a USB cable, such as your computer or a USB charger like your phone charger.



Make sure the hardware switch of the device is ON while charging – if you disconnect the battery through the switch, the battery cannot be charged.

When charging a 1st or 2nd edition M32, the orange LED on the ESP32 module is lit brightly, and when the battery is disconnected, this LED will not be lit brightly, but rather be blinking nervously or half lit. Once the battery has been fully charged, the orange LED will not be lit anymore.

You can of course always use the device when it is powered by USB, if the battery is charging or not.



To prevent deep discharge of the battery, always turn off the Morserino-32 via the main slide switch. Do not leave it in sleep mode for extended periods of time. A couple of days is okay if the battery is fully charged.

There is circuitry on board for charging the battery, and it prevents overcharging quite well. But it has no prevention of deep discharge!It also prevents deep discharge.



**Deep discharge leads to diminished battery capacity and eventually early death of the battery!**

## 4.2 Using the ENCODER Knob and FN Button

Selecting the various modes and setting preferences is done using the **rotary ENCODER** and its **push-button** function.

**Rotating** the ENCODER leads you through the options or values, **clicking** the ENCODER knob once selects an option or value, or brings you to the next level of the menu (there are up to three levels in the menu).

A **double click** of the ENCODER brings you to the preference setting menu. If you do this from the menu, you can change all preferences. If you do this from an active operational mode, only the relevant preferences for the current mode are shown and can be changed.

A **long press** brings you back to the menu from any of the modes, and within the menu promotes you a level up.

A **double click of the FN button** reduces display brightness; there are five levels of brightness. Once the lowest level is reached, a double-click resets the display to full brightness.

For *M32 1st and 2nd* edition only, while you are selecting a menu (e.g. immediately after power-on), a **long press of the FN button** starts a function to adjust the audio input level (and possibly the output level on a device you connected to the Morserino-32's line-out port).
On the **M32Pocket**, a long press of the FN button just keys the transmitter (if you have one connected) and produces a sidetone (this might be useful for setting audio levels on a connected computer, for example).

A click of the FN button turns this function off again. See **Adjusting Audio Level**.

While one of the operational modes (keyer, generator, echo trainer etc.) is executed the FN Button allows you to **quickly toggle between speed control and volume control** with a single click.

A **long click of the FN button while a mode is active** changes the display and encoder to scroll mode (the display has a buffer of 1518 lines, and normally only the bottom threefour lines can be seen; in scroll mode you can scroll back to the previous lines; while you are in scroll mode, a scroll bar is shown at the far right side of the display, indicating roughly where you are within the text buffer). Clicking FN again in scroll mode changes the screen to its normal operating mode and brings the encoder back to speed control.

When you are **in the preference setting menu**, a **short click of the FN button** recalls a preference snapshot, and a **long press of the FN button** stores a preference snapshot. See the section **Snapshots** for further details.


## 4.3 The Display

The display is divided into two main sections: on top is the **status line**, that gives important information according to the current state of the device, and below that is an area of **three scrolling linesfour scrolling lines** where the generated Morse code characters are shown in clear text. All characters from Morse code are shown in *lower* case, for better readability (but there is a preference to change it to *UPPER* case); Procedural ("pro") signs are shown as letters in brackets, like *<ka>* or *<sk>*. In addition, when in Echo Trainer mode (see below), the result of your attempt to enter the correct Morse code is shown as *ERR* or *OK* (together with some audible signals).

Although only threefour lines of scrolling text are shown, an internal buffer of 1518 lines is available. After pressing and holding the FN button, you can use the encoder to scroll back and make previous lines visible. This works while you are in any mode with screen output. Nothing is lost, and the display reverts to normal behavior once you exit scroll mode.

**The Status Line**

While a menu is presented to you (either the start menu, or a menu to select preferences), the status line tells you what to do (**Select Mode:** or **Set Preferences:**).

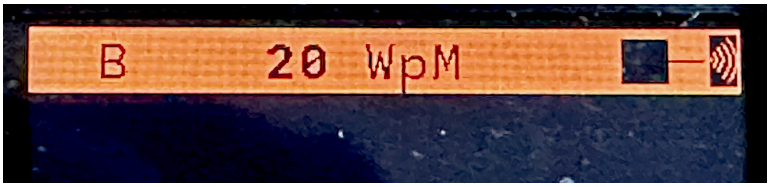


Close-up of the status line across the top of the display: the keyer-mode letter B on the left, the speed 20 WpM in the middle, and on the right the volume bar followed by the wireless-transmission symbol.



This image shows the status line of the older Morserinos. The M32 Pocket is similar, but might display additional information under certain circumstances.

When in Keyer Mode, CW Generator Mode or Echo Trainer Mode, the status line shows the following, from left to right:

- **A, B, U, N** or **S**, indicating the automatic keyer mode: Iambic **A**, Iambic **B**, **U**ltimatic, **N**on-Squeeze or **S**traight Key (for details on these modes see below in section **CW Keyer**).



In CW Decoder mode, the letter **d** appears in that position, and whenever a signal is detected, a small square shows to the left of it.

- The currently set **speed** in words per minute (the reference word is the word PARIS, which also means that 1 wpm equals 5 characters per minute). In CW Keyer mode as **nnWpM**, in CW Generator or Echo Trainer mode as **(nn) nnWpM**. The *value in brackets* shows the effective speed, which differs when inter-word spacing or inter-character spacing are set to other values than those defined by the norm (length of 3 dits for inter-character spacing, and length of 7 dits for inter-word spacing). See the notes in section **CW Keyer** regarding the preferences you can set in CW Keyer mode.



When in a transceiver mode, you also see two values for speed – the one in brackets is the speed of the signal received, and the other the speed of your keyer.

When using a straight key, the speed shows how fast your keying actually is.

When the digits indicating the speed are shown as **bold**, turning the rotary encoder will change the speed. When they are shown in normal characters, turning the rotary encoder changes the volume.

- A horizontal “progress” bar that extends from left to right indicates the **volume** of the side tone generated by the device (full length of the bar means top volume). This normally shows a white frame around the black progress bar (an extension of the rest of the status line); if this is reversed (white progress bar within black surroundings – and the WpM digits are not bold), turning the rotary encoder will change the volume and not the speed.
- An indicator symbolizing radio transmission will appear on the far right end of the status line whenever a wireless mode is active (if the device is in LoRa or Wi-Fi transceiver mode or if you have set a preference to transmit LoRa or Wi-Fi while in one of the CW generator modes). The WiFi symbol looks similar to the usual WiFi logo (a 90-degree sector of concentric circles), and the LoRa symbol consists of concentric half circles.

## 4.4 Hardware settings

You might need to change certain hardware settings, e.g. the screen orientation, or the calibration of the battery measurement. Or you might want to reset (almost) all preferences to their factory value. All these settings are covered in **Hardware Configuration Menu**.

# 5 Top Menu and Morserino Modes

You select the operational mode of your Morserino-32 by rotating the ENCODER knob, and quickly pressing ("clicking") that knob to select that mode (or, in several cases, a sub-menu for a more detailed selection), when you see the menu on the display.

## 5.1 CW Keyer

This is an automatic keyer that supports Iambic A, Iambic B (these are sometimes also called Curtis A and Curtis B), and Ultimatic mode, as well as Non-squeeze mode (emulating a single lever key with a dual lever paddle). You can either use the built-in capacitive paddle, or connect an external paddle (dual or single lever paddle). Internal and external paddles work in parallel, so there is no need to configure this.



There are a number of **preferences** that determine how the automatic keyer works. See the section **Preferences regarding Key, Paddles and Keyer** for the details. The following are particularly important here:

**External Pol.**: If your external key is wired "the wrong way around", you can correct this here.

**Paddle Polarity**: On which side do you want the dits and on which the dahs?

**Keyer Mode**: Select Iambic A or B, Ultimatic mode, Non-Squeeze mode or Straight Key mode.

What are these **Iambic Modes**? When both paddles of an iambic keyer are pressed, dashes and dots will be generated alternately. They start with the paddle that was hit first. The name "iambic" comes from the fact that in an iambic verse, there are alternating short and long syllables. The name "Curtis," on the other hand, also used for "Iambic" sometimes, comes from the developer of the groundbreaking Curtis Morse keyer chip, John G. "Jack" Curtis, K6KU (ex W3NSJ).

The difference between modes A and B is how they behave when both paddles are released while the current element is being generated. In Mode A, the keyer stops after the current element. In Mode B, the keyer adds another element opposite the one during which you released the paddles.

In other words, in Curtis B (iambic B) mode, the opposite paddle is checked while the current element (dit or dah) is output. If a paddle is pressed during that time, an additional element opposite the current one is added. This is not the case in Mode A. Since Mode B is tricky to use, it was later changed so that the paddles are checked only after a certain percentage of the element's duration has elapsed. You can set this percentage with the preferences **CurtisB DahT%** and **CurtisB DitT%**.

If you set them to 0, the lowest value, the Mode is identical with the original Curtis B Mode; the later developed "enhanced" Curtis B mode uses a percentage of roughly 35%-40%. If you set the percentage to 100, the highest value, the behavior is the same as in Curtis A mode.

This preference allows you to set any behavior between Curtis A and original Curtis B modes on a continuous scale, and you can set the percentage for dits and dahs separately (this makes sense, as the timing for dits is just a third of that for dahs, and so you might find that you want a higher percentage for dits to feel comfortable).

**Ultimatic Mode**: In Ultimatic mode, pressing both paddles generates a dit or dah. The type of sound generated depends on which paddle is hit first. Afterwards, the opposite sound is generated continuously. This is advantageous for characters like J, B, 1, 2, 6, and 7. Control always belongs to the paddle that was closed *last*: with both paddles held down, briefly releasing one of them and closing it again — just a flick — hands control back to that paddle, which then keeps sending its own element type until you release it again or flick the other one. This works for either paddle, including the one that started the character.

Every closure of a paddle is remembered, and is guaranteed to produce at least one element of its type — however briefly you touch it, and wherever in the current element it falls. Ultimatic therefore has no use for the timing preferences of the Iambic modes: **CurtisB DahT%**, **CurtisB DitT%** and **Latency** all have no effect in Ultimatic mode. Contact bounce is taken care of instead by a short fixed guard, so a chattering contact — or a touch pad that loses contact for an instant — does not add an element you did not ask for.

**Non-Squeeze Mode:** This simulates the behavior of a single-lever paddle when using a dual-lever paddle. Operators who are accustomed to single-lever paddles may have difficulty using dual-lever paddles because they sometimes squeeze the paddles inadvertently, especially at higher speeds. Non-squeeze mode ignores squeezing, which makes it easier for these operators to use a dual-lever paddle.



The Iambic and Ultimatic modes can only be used with the built-in touch paddle or an external dual-lever paddle. The selection of these modes is irrelevant when using an external single-lever paddle.

The preference **Latency** defines how long the paddles will be "deaf" after generating the current element (dot or dash). In earlier firmware versions, this was set to 0. This resulted in generating more dots than intended, especially at higher speeds. This was because you had to release the paddle while the last dot was still "on." Now, you can set this value between 0 and 7. This means 0/8 to 7/8 of a dot's length. The default is 4, or half a dot's length. If you still generate unwanted dits, increase this value.

For the preference **AutoChar Spc** (defining a minimum length for the space between characters) see the section **Preferences regarding Key, Paddles and Keyer** for details.

**Straight Key Mode**: This is not really an automatic keyer mode, but it enables the Morserino-32 to be used with a simple straight key.

If you have connected a simple straight key, and have set the Keyer Mode to **Straight Key**, you can use all Morserino modes (like Echo Trainer, e.g.), but the mode CW Keyer works differently (it works like the Decoder mode); with a straight key, YOU are the keyer, not the Morserino!

## 5.1.1 CW Memory Keyer

Starting with version 5.1, the Morserino incorporates a memory keyer. There are eight memories available, and each can contain up to 47 characters. In addition to standard Morse code characters (letters, numbers, and punctuation), it can also contain pro-signs and a pause marker. For the textual representations of pro-signs and the pause marker, see **Encoding of text files** in section **What can be generated?** below.

Memories can be *recalled* in the **CW Keyer**, **iCW/Ext Trx** and **Remote Keyer** modes (but **not** in the **WiFi Trx** or **LoRa Trx** modes for technical reasons). **To recall a memory, quickly press the ENCODER knob once.** If any memories have been defined, the top line will allow you to scroll through them with the encoder. There is also an EXIT option if you change your mind. An error message will appear if no memories have been defined.

Memories 1 and 2 play repeatedly until stopped by keying something manually; all other memories play once.

Memories are sent at the keyer's speed with standard spacing, just like your own keying: 3 dits between characters, and **Interword Spc** (at least 7 dits) between words. **Interchar Spc**, which the CW Generator and the other training modes use to stretch the spaces between characters (Farnsworth spacing), does not apply to memories.

### Definition of Memories

The memories can only be defined through the serial protocol, either though some computer software that implements this protocol, or manually through a terminal program. (The serial protocol has been specified in a separate document.)

The command to define a memory is the following:

```
PUT cw/store/<n>/<content>
```

This stores <content> in permanent memory number <n> (n is 1 .. 8); if <content> is an empty string, this memory is deleted. <content> can be normal Morse code characters, pro signs, e.g. “<bk>”, and also “[p]” or “\p” for a pause.

If you are using the manual method through a **terminal**, you need to initiate the serial protocol through the command `PUT device/protocol/on` before you can enter further commands, and you should also terminate the use of the protocol with the command `PUT device/protocol/off`.



A much simpler way to store memory content is by connecting your Morserino with a USB cable to a computer, and follow the instructions in **Using a Browser to set up M32 Preferences**.

## 5.2 CW Generator

This either generates randomized groups of characters and words for CW training purposes, or plays the contents of a text file in Morse code. You can set a number of options by choosing appropriate preferences (see the section **Preferences regarding CW Generation** below).

You can **start** and **stop** the CW Generator by **quickly pressing a paddle** (either one side or both), or by **clicking the ENCODER knob** (when using a straight key, you can also press that key to start and stop the session).

When it starts, it will first alert you by generating *vvv<ka>* (..._ ..._ ..._ _._._) in Morse code, before it actually begins generating groups or words. On the display, this opening *vvv<ka>* — and, if **Max # of Words** is set, the closing “+” that marks the end of the sequence (see **Preferences regarding CW Generation**) — are shown in **bold**, so you can immediately see where a sequence begins and ends.

Enabling the preference **Stop/Next/Rep** will cause the Morserino to play only one word or group of characters, after which it will stop and wait for paddle input. Pressing the left paddle repeats the current word, and pressing the right paddle generates the next word. This is useful for training your head-copy proficiency. Let it play a word without looking at the screen, and try to decode it in your head. If you are not sure, press the left paddle to repeat the word. If you think you have it right, compare it with the display. You can then either repeat the word (by pressing the left paddle) or look away and press the right paddle for the next word. (You can remember the functions of the left and right paddles by thinking of typical music player buttons – left is back and right is forward.)



Please note that the **Each Word 2x** and **Stop/Next/Repeat** options (see section **Preferences regarding CW Generation**) are incompatible with each other. If you set one to ON, the other will automatically be set to OFF.

Once you touch a paddle, it shows what it just had played, so you can check if you decoded it correctly. When you touch a paddle again, it will play the next word. This is useful for learning to decode in your head.

Normally the Morserino-32 just continues to generate until you pause it manually, but there is a preference that can be set which makes the device pause after a certain number of words (or letter groups). See **Max # of Words** in section **Preferences regarding CW Generation**.

### 5.2.1 What can be generated?

You can choose between the following at the second level of the menu:

- **Random**: Generates groups of random characters. The length of the groups as well as the choice of characters can be selected in the preferences, by double clicking the ENCODER knob (see the description of preferences for details).
- **CW Abbrevs:** Random abbreviations and Q-codes that are very common in CW transmissions (through a preference setting you can choose the maximum length of the abbreviations you want to train). See **List of common CW abbreviations used by Morserino-32** for the abbreviations that can be generated, and their meaning.
- **English Words**: Random words from a list of the 5.000 most common words in the English language (again you can set a maximum length of a word through a preference). The word frequencies come from the FrequencyWords lists by Hermit Dave (*https://github.com/hermitdave/FrequencyWords*), licensed under CC BY-SA 4.0; we filtered and shortened them.
- **Call Signs**: Generates amateur radio call signs (these are not always real call signs, and there will be some generated that would not exist in the real world, as certain suffixes might not have been assigned to anyone). The maximum length can be selected through a preference, as well as (if you like it so) the continent of the call signs generated, and if it should not generate call signs with extremely rare prefixes. The prefixes, and their call-area digits, follow call signs actually heard on the air.
- **Prefixes**: Generates call sign prefixes – the beginning of a call sign up to and including its call-area digit, like OE3, DL1, KD9, VE3, UA9 or 3B8 – to train the part of a call that tells you where a station is. Which prefixes come up, and how often each call-area digit, follows call signs actually heard on the air: OE3 is frequent, OE0 never appears. The

preferences **Calls Region** and **Call Prefixes** apply here as well; **Length Calls** does not – prefixes are short anyway.

- **Mixed**: Selects randomly from the previous possibilities (random character groups, abbreviations, English words and call signs – but not prefixes).
- **File Player**: Plays in Morse code the content of a file that has been uploaded to the Morserino-32. Currently it can hold just one file, as soon as you upload a new one, the old one will be overwritten. But your file can have **up to 16 parts** (see below about encoding and creating multi-part files), and you can choose which of the parts you are going to use!
  **Upload of files** works through WiFi from your PC (or Mac or tablet or smartphone or whatever – see the section **Uploading a Text File** for instructions how to do this), or by using the method described in **Using a Browser to set up M32 Preferences**.
- **Practice Set**: Generates random characters from a pool you pick yourself, right on the device – e.g. just the few characters you personally find difficult. Build (and change) the pool with the **Practice Set** entry in the preferences menu (see **Practice Set** under **Preferences regarding CW Generation** below); it is saved on the device and stays in effect until you change it again. This is unrelated to the Koch Trainer's own **Custom Chars** lesson (see the section **Koch: Select Lesson**, last paragraph) – the two character sets are stored and edited separately.



The file player mode remembers where you stopped. (Exit this mode by pressing and holding the encoder. **Do not just switch it off** or wait for time-out; if you do, the Morserino will not be able to remember where you were.) It will then resume playing from that point the next time you restart the file player. Once the end of the file (or the file part) is reached, it will start at the beginning again.

## Encoding of text files for file player

The file should be plain text, saved as UTF-8 (upper or lower case does not matter) - characters that cannot be represented in Morse code are just ignored. Letters with umlauts or accents are sent with their own Morse code wherever there is one: ä ö ü, é è à ç ñ and å æ ø (how they are decoded and shown is set with the preference **Decoder Chars**). Other accented letters (á, ê, õ, ...) are sent as the plain letter, and ß as "ss". Round brackets are sent as `-.--.` for „(“ and `-.--.-` for „)“. Pro-signs can be in the file, they need to be written as 2 character representations with either [] or <> around them, e.g. <sk> or [ka], or prepended with a backslash, e.g. \kn.

**Pro Signs**

The following pro signs are recognized (see further down in **Koch: Select Lesson** about the meaning of pro signs):

- <ar>: will be shown on display as + (plus sign) -
- <bt>: will be shown on display as = (equal sign)
- <as>
- <ka>
- <kn>
- <sk>
- <ve>
- <bk>

There are three more “special characters”, formed in the same way like pro signs, that are recognized while playing a file:

**Pauses**

It is possible to introduce pauses (useful e.g., when you play a QSO text – you can have longer pauses between phrases or when switching from station A to station B). Do this by using <p> or \p (with a space before and after): each <p> (or [p] or \p) introduces a pause of three regular inter-word spaces. Use several pause markers (e.g. like \p \p \p) if you want longer pauses.

Be careful to have the pause marker separated with spaces from each other and from the rest of the text – if not, the whole word (e.g. cq<p>) will be replaced by a pause!

**Tone Changes**

With the second special character you can introduce tone changes in the file (useful, when you play QSO text, e.g.to distinguish station A from station B) Do this by inserting <t> or \t or [t] (as a separate word, i.e. with at least a blank space before and after!) as a tone marker. At this point, the tone will change (unless you have set the preference **Tone Shift** to **No Tone Shift**), and at the next occurrence of the tone marker it will change back to the original tone.

Be careful to have the tone marker separated with spaces from the rest of the text – if not, the whole word (e.g. cq<t>) will be considered as the tone marker, and the rest of the word (in our case “cq”) will be lost!

In Echo Trainer Mode, the tone marker is ignored.

**Comments**

The third special character within text files serves the purpose of inserting comments. <c> or \c in a word or by itself make this word and the rest of the line a comment that will not be played by file player.

**Part separators & Multi-part Files**

A part separator is a special form of a comment: If a line starts with a comment indicator and is followed by a dollar sign ($) and some text, this is treated as a part separator. The text after the dollar sign should be short and is treated as a name for the part that starts here. An example for a part separator line would be:

```
<c>$ Chapter One
```

If the file starts with a part separator as its first line, the file will be treated as a multi-part file, and when you start file player, it lets you select which part of the file to use (it will display the text after the dollar sign to show you the part name). It then treats this part exactly in the same way as if it were a file by itself (remembers where it stopped playing it, and wraps around to the beginning of the part when it reaches the end of the part).

**Randomizing file content**

There is also a file player preference called **Randomize File**. If it is set to “On” (the default is “Off”), the device will skip a random number of words (between 0 and 255) after each word sent. As the file reads wrap around at the end of the file (or file part), you will eventually see all the words in the file (but it could take a while). If your file is an alphabetical list of words, for example, the words generated will still be in alphabetical order during one pass of the file. To get more unpredictable results, it is best to start with a random list of words.

What can this be used for? For example, you could take a list of call signs and upload the file to the Morserino-32. (Check the Morserino-32 GitHub repository for a file containing active HF contest call signs). File Player now lets you practice with these call signs in a random fashion. Visit the Morserino-32 GitHub repository to find more suitable files for training.

## Important preferences for CW Generator are:

**Intercharacter Space**. This describes the amount of space inserted between characters. The “norm” is a space that is three dits long. To facilitate copying code sent at high speeds and to help learn Morse code, this space can be extended. The code should be sent at a high speed (>18 wpm) to make it difficult to count dits and dahs and to encourage learning the rhythm of each character. In general, it is better to increase the space between words rather than the space between characters. Therefore, it is recommended that this value be set between 3 and 6. See below.

**Interword Space**. This is normally defined as the length of seven dits. In CW Keyer mode, a new word is determined after a 6-dit pause to avoid text appearing on the display without spaces between words. In CW Trainer mode, you can set the interword space to values between six and 45 dits (more than six times the normal space) to make copying code easier at high speeds. Similar to Farnsworth spacing (see below), this is called Wordsworth spacing. It’s an even better way to learn to copy high-speed code word by word in your head. You can, of course, combine both interword and intercharacter spacing methods.

Since character spacing can be set independently, you can set it higher than the interword spacing, which could cause confusion. To avoid this, the interword spacing will always be at least four dit lengths longer than the character spacing, even if a smaller interword spacing has been set.

The ARRL and some Morse code training programs use a technique called “Farnsworth spacing”, where the spaces between characters and words are lengthened proportionally by a certain factor. You can emulate Farnsworth spacing by increasing both the intercharacter and interword spaces. For example, set the intercharacter space to 6 and the interword space to 14, which effectively doubles all spaces between characters and words. If you do this at a character speed of 20 wpm, the resulting effective speed will be 14 wpm. This will be shown on the status line as (14)20 WpM.

**Random Groups**: Defines which characters should be contained in the random character groups. You can choose between Alpha / Numerals / Interpunct. / Pro Signs / Alpha + Num / Num+Interp. / Interp+ProSn / Alpha+Num+Int / Num+Int+ProS / All Chars.

**Length Rnd Gr**: Defines how many characters there should be in a random group. You can either select a fixed length ( 1 to 6), or a randomly chosen length between 2 to 3 and 2 to 6 (length chosen randomly within these limits).

**Length Calls**: The length of call signs that will be generated. Choose a value between 3 and 6 or Unlimited. It does not apply to **Prefixes**.

**Length Abbrev**: The maximum length of common CW abbreviations that will be generated. Choose between 2 and 6, or Unlimited.

**Word Length**: The length of common English words that will be generated: **Unlimited**, a maximum (**up to 2** … **up to 6**), or **4 or more** to train longer words. In the Koch Trainer, if no word of 4 or more letters can be built from the characters of your lesson yet, words of any length are used instead.

**Each Word 2x:** Each “word” (characters between spaces) will be output twice, as a help to learn to copy by ear (ON). This is also called word doubler. If an increased space between the characters has been selected (“Farnsworth Spacing”), the repetition can also be generated with a smaller space (**ON less ICS**) or without Farnsworth Spacing (**ON true WpM**).

For the less frequently used preferences **Key ext TX**, **CW Gen Displ** and Generator Tx see the section **Preferences regarding CW Generation**.

## 5.3 Echo Trainer

In this mode the Morserino-32 generates a word or group of characters as a prompt. You have the same selection options as with the CW Generator. Then, it waits for you to repeat these characters using the paddle (or a straight key). If you wait too long or your response is not identical to what was generated, an error is indicated on the display and by sound (a

signal that falls in pitch, while the acknowledgement rises), and the prompt word is repeated. If you enter the correct characters, this is indicated acoustically and on the screen. Then, you are prompted for the next word.



The two sounds that confirm a correct or a faulty response can be replaced by your own: upload an MP3 file as */sounds/success.mp3* or */sounds/error.mp3* with the Configuration Tool, and it will be played instead of the built-in beeps. If no such file is present, the built-in beeps are used.

From version 9.0 on, the audio path no longer overdrives the sound chip, so your own sounds are reproduced cleanly – but they will also be quieter than they were on earlier firmware, where they were being distorted. If that bothers you, prepare them a little louder. Keep their peak level at or just below –1 dBFS: a file normalised to the full 0 dBFS will still distort, because the MP3 decoder runs out of headroom before the sound chip does. Note that this is a ceiling and not a target: a file mastered right up against it comes out louder than the Morse code you are practising, which gets tiring in a long session.

A ready-made set of six pairs – a fanfare, handbells, a marimba, a soft chime, a minimal "soft & simple" pair and an arcade-style pair – comes with the Configuration Tool, already at a suitable level. You do not have to download anything: under **Files**, the **Sound Packs** section plays each sound in your browser so you can hear it before deciding, installs the pair you pick with a single click, and can remove both files again to bring the built-in signals back. The same packs are also in the repository, at Sound Packs, if you want them as a starting point for making your own.

In this mode, the prompt word will not normally be displayed; only your response will be shown.

The sub-menus are the same as for the CW Generator: Random, CW Abbrevs, English Words, Call Signs, Prefixes, Mixed, File Player and Practice Set.

Like in CW Generator mode, you **start** this mode **by pressing a paddle** (or the ENCODER, or – if you are using one – the straight key), and then the sequence "vvv<ka>" will be generated as an alert before the echo training starts. You cannot stop or interrupt this mode by pressing the paddle or the straight key – after all, you use the paddle (or straight key) to generate your responses! **So the only way to stop this mode is a click of the ENCODER button.**

During your response, if you realize you made an error, you can "reset" your response by entering the character for "ERROR", i.e. a series of 8 dots (sometimes also represented as pro-Sign <HH>; the Morserino accepts any series of dots equal or longer than 7 dots). <err> will show on the display, and you can restart your entry from the beginning.
The M32 also accepts a series of four times the letter e ("eeee") as a way to reset the response.

Again, like with the CW Generator, you can set a huge range of preferences to fine tune the generation of things. Of particular interest for the Echo Trainer are the ones described below.

### Important preferences for Echo Trainer are:

**Echo Repeats**: how often the same word is repeated when the response is either too late or erroneous, before a new word is being generated.

**Echo Prompt**: This defines how you are prompted in Echo Trainer mode. The possible settings are: **Sound only** (default; best for learning to copy in your head), **Display only** (the word you are supposed to enter is shown on the screen, no audible code is generated; good for training paddle input), and **Sound & Display**, i.e you hear the prompt AND you can see it on the display.

**Confrm. Tone**: Normally an audible confirmation tone is sounded in Echo Trainer mode. If you turn it off, the device just repeats the prompt when the response was wrong, or sends a new prompt. The visual indication of “OK” or “ERR” will still be visible when the tone is turned off.

**Max # of Words**: As with CW generator, you can make the M32 pause after a specified number of words.

If this preference is set to a value between 5 and 250 (and not to “Unlimited”), the M32, when pausing after that number of words, will show (for 5 seconds) how many incorrect entries you made (and the number of words) on the top line of the display. *Be aware that you can make repeated errors regarding one word, and all of them will be counted!*

**Adaptv. Speed**: This should help you to train for maximum speed. Whenever your response was correct, the speed will be increased by 1 wpm (word per minute); whenever you make a mistake, it will decrease by 1 wpm. Thus you will eventually always train at your limit, which certainly is the best way to push your limits…

**Echo Speed Max:** Set this to the maximum speed you would like to use for keying in Echo Trainer mode. If you set the speed faster than this value with the Encoder, or if it is getting faster as a result of adaptive speed, the speed for keying your input stays at that maximum (so you can train your copying at faster speeds than you are comfortable to use when keying).

**Echo Think T.**: Adds a fixed pause of 0–20 seconds after the prompt, before the Echo Trainer expects your response. This is particularly useful for head-copy practice with call signs, where you need time to mentally reconstruct what you heard before keying it back, without having to reduce the prompt speed or change the dot/dash ratio or word spacing — which would affect the whole device, not just the Echo Trainer.

**Intercharacter Space** and **Interword Space**: The first preference defines the pause between characters in the prompt the M32 is generating (the same as in the Generator modes, see there); both preferences also have an influence on the "grace time" you have when responding to the prompt. If that grace time is exceeded, the M32 concludes that you finished your input.

## 5.4 Koch Trainer

In the 1930s, the German engineer Ludwig Koch developed a method for learning Morse code, in which each lesson introduces an additional character. The order is not alphabetical or sorted by the length of the Morse codes, but rather follows a rhythmic pattern. This way, the individual characters are learned as a rhythm rather than a succession of dits and dahs.

Should you want to use the Koch method for learning Morse code (learning and training one character after the other), **you will find everything you need in the Menu item "Koch Trainer"**.

It has a submenu to enter the lesson you want to set (defining the character you want to add), one to practice just this one new letter (using the mechanism of echo trainer mode, so you are encouraged – but not required – to repeat what you hear), and the modes **CW Generator** and **Echo Trainer**, each of the last two with the submenus for **Random** (groups of random characters out of the so far encountered characters), **CW Abbrevs** (the abbreviations usually used in CW QSOs), **English words** (the most common English words) and **Mixed** (random groups, abbreviations and words mixed randomly). Of course, **only the already learned characters will be used** –s which means, that while you are still struggling with your first characters, the number of abbreviations and words will be quite limited.

In order to prevent counting dits and dahs, or thinking of and reconstructing what you heard, the speed should be sufficiently high (min. 18 wpm), pauses between characters and words should not be lengthened enormously (and it is always better to just lengthen the pauses between words, and keep the inter-character spaces to more or less the normal space). The M32 allows you set interword space independently from intercharacter space, so you can find a setting that perfectly fits your needs.

### 5.4.1 Koch: Select Lesson

Select a "Koch lesson" (with the default M32 sequence, you will learn 51 characters in total through the Koch method; other sequences have a different number of lessons — see **Koch Sequence** in the section **Preferences regarding Koch Character Sequence**). The menu shows the number of the lesson, the total number of lessons in the currently selected Koch sequence, and the character associated with that lesson — for example `21–39: y` for lesson 21 of 39, which teaches the character "y".

The order of the characters learned has not been strictly defined by Koch, and therefore different learning courses use slightly different orders. Here we use the same order of characters as defined by the program “Just Lean Morse Code” as default, which again is almost identical to the order used by the “SuperMorse” software package (see *http://www.qsl.net/kb5wck/super.html*).

This order is as follows:

| Lesson | Character | Lesson | Character | Lesson | Character / Pro Sign |
|---|---|---|---|---|---|
| 1 | m | 18 | 0 (zero) | 35 | 7 |
| 2 | k | 19 | y | 36 | c |
| 3 | r | 20 | v | 37 | 1 |
| 4 | s | 21 | , (comma) | 38 | d |
| 5 | u | 22 | g | 39 | 6 |
| 6 | a | 23 | 5 | 40 | x |
| 7 | p | 24 | / | 41 | – (minus) |
| 8 | t | 25 | q | 42 | = (also used as Pro Sign BT indicating white space or a paragraph / new section of message) |
| 9 | l | 26 | 9 | 43 | SK (Pro Sign: OUT / end of contact / end of work) |
| 10 | o | 27 | z | 44 | AR (+, also Pro Sign: OUT / end of message) |
| 11 | w | 28 | h | 45 | AS (Pro Sign: WAIT) |
| 12 | i | 29 | 3 | 46 | KN (Pro Sign: OVER / go ahead, specific named station) |
| 13 | . (dot) | 30 | 8 | 47 | KA (Pro Sign: ATTENTION / new message) |
| 14 | n | 31 | b | 48 | VE (Pro Sign: VERIFIED / understood) |
| 15 | j | 32 | ? | 49 | BK (Pro Sign: BREAK-IN / let me interrupt) |
| 16 | e | 33 | 4 | 50 | @ |
| 17 | f | 34 | 2 | 51 | : (Colon) |



There is another Pro Sign, not covered in the Koch lessons as such:
this is the sign <HH> (eight consecutive dits), which indicates an error (the receiver should disregard the previous character(s)).

## Different character sequence order

There is also an option to select the sequence of characters. In addition to the native sequence of characters, you can choose the sequence that is used by the popular on-line training tool **Learn CW On-line** (LCWO), or the sequence the **CW Ops CW Academy** courses are using, or the order of the "Carousel" curriculum of the **Long Island CW Club (LICW)**. This can be set in the preferences menu of the Morserino-32, under **Koch Sequence**.

In the case of attending a course with **LICW**, you should also set the preference **LICW Carousel** according to your entry point into their curriculum (eg. if you start a course within BC1 – Basic Course 1 – with the characters **p**, **g** and **s**, set this to "BC1: p g s". All further characters you are going to learn in BC1 will be reflected in the same order as your Koch lessons in the Morserino.
Once you have finished BC1, you will enroll in BC2, say beginning with characters **7**, **3** and **?**, and so you should now set this preference to "BC2: 7 3 ?".)

The sequence of characters when "**LCWO**" is chosen is as follows:

| Lesson | Character | Lesson | Character | Lesson | Character |
|---|---|---|---|---|---|
| 1 | k | 18 | f | 35 | 7 |
| 2 | m | 19 | o | 36 | c |
| 3 | u | 20 | y | 37 | 1 |
| 4 | r | 21 | , (comma) | 38 | d |
| 5 | e | 22 | v | 39 | 6 |
| 6 | s | 23 | g | 40 | 0 |
| 7 | n | 24 | 5 | 41 | x |
| 8 | a | 25 | / | 42 | - |
| 9 | p | 26 | q | 43 | SK |
| 10 | t | 27 | 9 | 44 | AR |
| 11 | l | 28 | 2 | 45 | KA |
| 12 | w | 29 | h | 46 | AS |

| Lesson | Character | Lesson | Character | Lesson | Character |
|---|---|---|---|---|---|
| 13 | i | 30 | 3 | 47 | KN |
| 14 | . | 31 | 8 | 48 | VE |
| 15 | j | 32 | b | 49 | BK |
| 16 | z | 33 | ? | 50 | @ |
| 17 | = | 34 | 4 | 51 | : |

And the **CW Academy** sequence of characters is this:

| Lesson | Character | Lesson | Character | Lesson | Character |
|---|---|---|---|---|---|
| 1 | t | 18 | m | 35 | k |
| 2 | e | 19 | w | 36 | j |
| 3 | a | 20 | 3 | 37 | 8 |
| 4 | n | 21 | 6 | 38 | 0 |
| 5 | o | 22 | ? | 39 | = |
| 6 | i | 23 | f | 40 | x |
| 7 | s | 24 | y | 41 | z |
| 8 | 1 | 25 | , | 42 | BK |
| 9 | 4 | 26 | p | 43 | SK |
| 10 | r | 27 | g | 44 | . |
| 11 | h | 28 | q | 45 | - |
| 12 | d | 29 | 7 | 46 | KA |
| 13 | l | 30 | 9 | 47 | AS |
| 14 | 2 | 31 | / | 48 | KN |
| 15 | 5 | 32 | b | 49 | VE |
| 16 | u | 33 | v | 50 | @ |
| 17 | c | 34 | AR | 51 | : |

The sequence of the **LICW** courses is as follows:

| Lesson # | Character | Lesson # | Character Pro Sign | Lesson # | Character / Pro Sign |
|---|---|---|---|---|---|
| 1 | r | 18 | b | 35 | 6 |

| Lesson # | Character | Lesson # | Character Pro Sign | Lesson # | Character / Pro Sign |
|---|---|---|---|---|---|
| 2 | e | 19 | k | 36 | . |
| 3 | a | 20 | m | 37 | z |
| 4 | t | 21 | y | 38 | j |
| 5 | i | 22 | 5 | 39 | / |
| 6 | n | 23 | 9 | 40 | 2 |
| 7 | p | 24 | , | 41 | 8 |
| 8 | s | 25 | q | 42 | BK |
| 9 | g | 26 | x | 43 | 4 |
| 10 | l | 27 | v | 44 | 0 |
| 11 | c | 28 | 7 | 45 | |
| 12 | d | 29 | 3 | 46 | |
| 13 | h | 30 | ? | 47 | |
| 14 | o | 31 | + | 48 | |
| 15 | f | 32 | SK | 49 | |
| 16 | u | 33 | = | 50 | |
| 17 | w | 34 | 1 | 51 | |



The LICW curriculum teaches just 44 characters – if you want to learn the remaining characters ( - <*KA*> <*AS*> <*KN*> <*VE*> @ : ), you have to set the character sequence to **CW Academy** and continue there with lesson 45.

## Koch: Train with a customized set of characters

You can also use the Koch Trainer to practice with a specific set of characters. First, upload a text file to the file player that contains the characters you want to train. They can be one "word" or several words on one line or more. Then, set the preference **Koch Sequence** to the new option **Custom Chars.** The Koch Trainer will then read the characters from the file.

Now, you can use the Koch Trainer (CW Generator or Echo Trainer), and it will use those characters for your training. The **Koch Lesson** setting acts as an index into your custom character set: at lesson *N*, only the first *N* characters of the set are used as the active training pool (capped at the actual length of the set, so a lesson number larger than your

character set simply uses all of it). The lesson maximum adjusts automatically to the length of your custom character set (up to 51 characters; characters beyond the 51st are not reachable). The set may also contain the letters with umlauts and accents described under **Encoding of text files for file player** (on this edition, letters other than ä ö ü are not spoken).

To change the character set, upload a new text file and select **Custom Chars** again. Even if it had been selected before, you must select **Custom Chars** again to prepare the new character set. If you just upload a new text file, the custom character set will not change. You must go into preferences and select **Custom Chars** again.
*This is a feature, not a bug!*
It means you can switch between training your characters and using a different text file for the file player. Setting **Koch Sequence** to M32, LCWO, LICW, or CW Academy reverts to the "normal" Koch Trainer option.



Looking for a quicker way to just drill a handful of characters you find difficult, without going through a text file or the Koch lesson mechanism? See **Practice Set**, a separate feature reachable directly under **CW Generator** and **Echo Trainer** (not under Koch Trainer) – described where those modes are introduced, and in **Preferences regarding CW Generation**. It uses its own, separately stored character set and does not affect or get affected by **Custom Chars** here.

## 5.4.2 Koch: Learn New Chr

By selecting this menu item a new character will be introduced (according to the Koch lesson selected – see the previous menu entry) – you will hear the sound, and see the sequence of dots and dashes quickly on the screen, as well as the character displayed on the screen. This will be repeated until you stop by pressing the ENCODER knob. After each occurrence you have the opportunity (but no obligation) to repeat with the paddles what you have heard, and the device will let you know if this was correct or not.

Once you have mastered the new character, you can progress to either **CW Generator** or **Echo Trainer** within the Koch Trainer, in order to practice the newly learned character in combination with all the characters you have learned so far.

## 5.4.3 Koch: Preview Char

Sometimes you don't want the newest character, but an earlier one you'd like to hear again on its own — or you're curious what a character further ahead in the course sounds like. Selecting this menu item shows a small picker listing every character of the whole course, in

the same learning order as your Koch lessons (or, if **Koch Sequence** is set to **Custom Chars**, in the order of your custom character set) — turn the ENCODER to move through the list and click it to pick a character.

The picked character then plays continuously, exactly like **Learn New Chr**: you see and hear it repeat, and you can still adjust the speed by turning the ENCODER, same as everywhere else.

In this mode, the FN button's usual speed/volume toggle click gets a third stop: clicking it cycles the ENCODER between **speed**, **volume**, and **character**. While the ENCODER owns character, turning it steps live through the whole course, one lesson at a time — no need to open the picker again. Playback follows a moment after you stop turning, so spinning through several lessons stays quiet and only the character you settle on is sent. While the ENCODER owns the character, the status line shows the lesson number and the character itself in bold where the speed is normally displayed — a prosign appears as its tag, e.g. `<ka>`, not as a bare letter — the same "the ENCODER owns this" convention the WpM figure and the volume bar already follow. Press the ENCODER knob for longer to leave and return to the menu.

While the picker itself is open, the usual FN double-click (display brightness) and ENCODER double-click (preferences menu) both still work, same as everywhere else.

### 5.4.4 Koch: CW Generator and Echo Trainer

The functionality is the same as described above for these two functions, with the following small differences:

- Only the characters up to the selected Koch lesson will be generated (or the characters defined through your specific character set, see above)
- The preference **Random Groups** will be ignored.
- There is no sub-menu **File Player**.
- In Koch Echo Trainer there is also a sub-menu **Adapt. Rand.**, see below.

### 5.4.5 Koch Echo Trainer: Adaptive Random

The **Adaptive Random** mode modifies the random selection of characters with feedback from the keyed responses. A wrong character will increase its probability to be selected. A correctly keyed character will reduce its probability.

To start the adaptive mode select: **Koch Trainer** > **Echo Trainer** > **Adapt. Rand.**

**Remarks:**

- Probabilities will be reset to its default every time you start **Adaptive Random** mode.
- The last koch lessons / characters have a higher probability at the beginning of the session.

- At the beginning of the session, every character will be selected once (in random order).
- After every character was selected once, the next characters are selected randomly, characters that have been keyed wrong will have a higher probability to be selected.
- A wrong keyed character will also increase the probability of the character before and after. E.g., when "**z/?**" is asked and you reply with "**g/?**". Then the probability of z will be increased and the probability of / will also be increased a little.
- Only the first wrong character will be analyzed. Subsequent input will not be analyzed. E.g., if "**z/?**" is asked and you reply with "**gz/?**", the probabilities will be increased the same way as in previous example.
- Do not expect to have any fun in this mode (but use it nevertheless!). The adaptive mode will tease you with the characters that you cannot key 100% correctly every time. Once you have keyed a character wrong, that will give you the chance to key the character wrong again and thus increasing its probability to be selected again. Once you have reached a total level of frustration, switch back to normal Koch random mode and relax a bit before using the **Adaptive Random** mode again ;-).

## 5.5 Transceiver

The Morserino-32 has these transceiver modes:

- **LoRa Trx** is a self contained transceiver for communication with Morse code, using LoRa spread spectrum radio technology (in the standard version on the 433 MHz band).
- **WiFi Trx** uses the Internet Protocol (specifically UDP on port

1. for communicating across an IP network, using WiFi connected to an access point.

There is now also an alternative WiFi mode (**EspNow**), that allows peer-to-peer communication between Morserinos in close vicinity without the use of an access point.

- **iCW/Ext Trx** is a transceiver mode that can be used either with an external transceiver (e.g. a shortwave amateur radio transceiver) or with a protocol like iCW (CW over Internet) or VBand. In all transceiver cases the CW keyer and a receiver or CW decoder are active at the same time.
- **WinKeyer** lets a logging or contest program on a computer send CW through the Morserino, as it would through a K1EL WinKeyer.
- **Remote Keyer** and **Remote Rig** turn two Morserinos into a remote keying link over the network, and **Remote WinKeyerRemote WinK** sends a logging program's CW over that link (see **Keying a remote transceiver**).

### 5.5.1 LoRa Trx



This is only available if your Morserino includes a hardware LoRa transceiver (as was the case with 1st and 2nd edition Morserinos, but is not the case with the M32Pocket in its default configuration)!

As mentioned earlier, this is a Morse code transceiver that uses LoRa to transmit Morse code to other Morserino-32s. In addition to the CW keyer functionality, it sends whatever you key through the LoRa transceiver. This uses a special data format that encodes the dots and dashes you key, regardless of whether they are legal Morse code characters. It also listens on the band when you are not keying, so you can have interactive conversations in Morse code between two or more Morserino-32 devices! Please be aware that characters are transmitted word by word. Therefore, there is a slight delay on the receiving end, so QSK is not possible. This encourages you to use proper handover procedures.

#### More Information about the LoRa transceiver mode

Basically, the LoRa transceiver mode uses the same interface as the CW Keyer. But as soon as you receive something, the status line also shows the speed of the sending station in addition to your own speed – you see something like *18r20sWpM*, which indicates you are receiving a station with a speed of 18 Wpm, and you are sending at 20 WpM. In addition, the volume bar on the right of the status line changes its function: instead of indicating the current volume level, it gives you an indication of the signal strength – a crude form of an S-Meter, if you like. the full bar indicates an RSSI level of roughly -20dB, and the bar begins to show at a level of roughly -150dB.

Pressing the FN Button still enables you to set the audio output level.

Morse characters received by the transceiver are shown in bold in the (scrollable) text area on the display, while everything you are sending is shown in regular characters.

Another feature is worth mentioning here: The frequency of the tone you are hearing when you are receiving the other station is adjusted through the “Pitch” preference, as in the other modes. When you are transmitting, the pitch of the tone can be the same, or a half tone higher or lower then the receiving tone – this is being set through the **Tone Shift** preference, in the same way as in Echo Trainer mode.

One other thing you might want to know: the LoRa CW Transceiver does not work like a CW transceiver on shortwave, where an unmodulated carrier is being keyed, and the delay between sender and receiver is just defined by the delay in the path of the electromagnetic waves carrying the signals. LoRa uses a spread spectrum technology to send **data packets** – in a way a bit similar to WiFi that you use on your phone or PC. Therefore all you are keying in is being encoded into data first – essentially the speed and all the dots, dashes and

pauses between characters. As soon as the pause is long enough to be recognized as a pause between words (as a blank space, as it were), the whole data packet assembled so far is being transmitted and in due course being played back at the indicated speed by the receiving Morserino-32.

More information about LoRa can be found in **More information about LoRa**.

## 5.5.2 Wifi Trx

You can use this transceiver mode to communicate with your CW buddy using WiFi, either on your local area network, or across the Internet, or even peer-to-peer without an access point – this method is called *EspNow*, and the Morserino uses its broadcast functionality – this is then very similar to using LoRa, and obviously the range is limited (depending on the environment, from a few meters up to maybe 50 meters if there is a clear line of sight). See further down in section **WiFi Select** how to select either an access point or EspNow for the WiFi Trx mode.

### Using two different EspNow Channels

Morserino-32 can make use of two channels when operating in EspNow mode. This can be used, for example, in a class room situation, to create two independent groups that do not interfere with each other, or in environments suffering from very high WiFi “noise” - when the primary channel does not work properly, try the secondary channel.

The channels are selected through the preference **Trx Channel**, see section **Preferences regarding Transmitting, Decoding and QSO Bot**.

### Using standard WiFi with an access point (WiFi router)

To use traditional Wi-Fi, you must be connected to a Wi-Fi access point. This means you must have performed the **Wi-Fi Config** function beforehand. It is very easy to use transceiver mode on your local network: select it from the menu to communicate without configuring a peer address. It will send to the broadcast address 255.255.255.255, which can be received by all devices on the network. The Morserino-32 uses UDP port 7373 for asynchronous communication.

When you start WiFi Trx, the IP address of your peer (or “IP Broadcast”) will briefly appear on the display. If you are using EspNow, EspNow will be indicated.

To communicate with a specific Morserino-32 over the internet, configure the IP address of your peer. This is done through the **Config WiFi** menu item, which has a third field in addition to SSID and Password. Enter the IP address or DNS host name of your peer in this field, and the Wi-Fi transceiver will send packets to that IP address.

There are some services on public Internet servers that can communicate over the protocol used by the Morserino, e.g. a “chat bot” on *cq.morserino.info* – these can normally be used without further set-up, unless your Internet router does not allow all port numbers to go through; the situation is more complicated, if your peer is also behind a firewall or NAT router:

If the IP address is not on your local network and you are behind a firewall or router that treats your network as private, the Morserino can send packets to the internet (unless specific firewall rules block most UDP ports), but packets from your peer behind another firewall will be blocked by the router. In this case, you need to configure “port forwarding” to tell the router to send all UDP packets on port 7373 to your Morserino. At the same time, you need to give your buddy your outside IP address (i.e., the IP address of your router’s interface with your internet provider), and he or she must do the same by giving you his or her internet-facing IP address, which you will enter into your Morserino. It sounds complicated at first, but it isn’t really that bad.

Another option, perhaps a bit more complicated, would be to set up a VPN (Virtual Private Network), so that both your Morserinos are on the same “virtual network” and hence can talk to each other without any firewall rules blocking the traffic. How to do this goes clearly beyond the scope of this manual – ask an Internet guru for further details!

### 5.5.3 iCW/Ext Trx

In this mode a transceiver connected to the Morserino-32 is being keyed, or you can use the line-out audio to either key for example an FM transceiver, or use CW over the Internet (iCW – this uses Mumble as an audio exchange protocol). Using Bluetooth, you can also connect to a computer and through that computer to VBand, another Internet-based CW facility (see the section **Preferences regarding Key, Paddles and Keyer** for choosing the VBand bluetooth setting).

Any CW signals coming in as audio through the audio-in port are being decoded and displayed on the screen. An external transceiver connected through the connector “to Tx” will be keyed by the keyer, or you can use the audio output on the Line-Out connector to feed it into a computer, or into an FM transceiver.

### 5.5.4 WinKeyer

In this mode the Morserino-32 behaves like a **WinKeyer** – the CW keyer by K1EL that most logging and contest programs know how to drive (for example N1MM Logger+, Win-Test, DXLog, Logger32, RUMlog, CQRLOG, or fldigi with flwkey). The program sends its text and commands over USB; the Morserino turns them into Morse code, keys a transmitter connected to “to Tx”, and plays the side tone. You can break in with the paddle at any time.

**Setting up the program:** choose a WinKeyer (WK2) as the CW keyer, and the Morserino’s USB serial port as its port (the same port the Configuration Tool uses).

**flwkey on a Mac with the M32 Pocket:** flwkey leaves every port whose name contains "modem" out of its list, and on a Mac the M32 Pocket's port is called `/dev/cu.usbmodem…`. Enter the port by hand instead: quit flwkey (⌘Q), open the file `.flwkey/flwkey.prefs` in your home folder with a text editor, change the line `serial_port_name:NONE` to the Pocket's port (for example `serial_port_name:/dev/cu.usbmodem12301` – the Terminal command `ls /dev/cu.usbmodem*` shows the name), save, and start flwkey again. Do not open flwkey's port dialog afterwards; it would set the port back.

On the 1st and 2nd edition Morserino, first start **Transceiver → WinKeyer** on the Morserino, then start the program (or tell it to connect). While the mode runs, the USB port works at 1200 baud, as a WinKeyer does (or 9600, if the program asks for it); when you leave the mode it goes back to its normal speed.

On the M32 Pocket you can do the same – or simply leave the Morserino in the main menu: when the program opens the WinKeyer, the Morserino switches to WinKeyer mode by itself, and returns to the menu when the program closes it again. This only happens in the main menu, never in a running mode, so a program cannot take over while you are using the Morserino. (On the 1st and 2nd edition this is not possible: there the USB port has to be switched to the WinKeyer's speed first.) The preference **WinKeyer Tx** decides which mode starts: **Local** (the default) starts this one, **Remote** starts **Remote WinKeyer**, which sends the program's CW to a remote transceiver instead (see **Keying a remote transceiver**).

While the mode runs, the USB port belongs to the logging program: the Configuration Tool and the other utilities cannot use it until you leave the mode.

The preference **Key ext TX** must not be **Never**; any other value lets WinKeyer mode key the transmitter (the same as in CW Keyer).

**While the mode runs:**

- The top line shows **Host** while a program has the WinKeyer open.The Morserino says "Waiting for host" when the mode starts, "Host connected" when a program opens the WinKeyer and "Host closed" when it closes it. The text the program sends is shown as it is being sent.
- **ENCODER (turn):** the speed – the ENCODER is the WinKeyer's speed control. The program is told when you turn it. As with a real WinKeyer, a speed set by the program wins until the program switches back to the speed control (most programs have a setting for that).
- **ENCODER (click):** stops whatever the program is sending, also a tune (key down) the program has started.
- **Paddle:** breaks in. The program's sending stops at once, what was still waiting to be sent is dropped, and the program is told – so you can, for example, stop a repeating CQ with the paddle. One word space after you stop keying, the Morserino accepts text from the program again. If the program asks for it, what you key is passed on to it as text, with a space after each word gap.

- FN, the double click (preferences) and the long press (leave the mode) work as in every other mode. Leaving the mode ends the program's connection; most programs then report that the WinKeyer is gone.
- While a program has the WinKeyer open, the Morserino does not switch itself off (see **Time Out**).

**What the Morserino keeps for itself:** the keyer mode (Iambic A or B, Ultimatic, Non-Squeeze), **Paddle Polarity**, **ACS**, **Latency** and the side tone pitch are always the Morserino's own preferences. The corresponding settings in the program – for example N1MM's "Reverse paddles", "Keying mode" and "Sidetone frequency" on its Winkey tab – have **no effect** on the Morserino; set them on the Morserino instead. Everything to do with the program's own sending comes from the program: speed, weighting, dit/dah ratio, keying compensation, first extension, Farnsworth spacing, letter spacing, contest spacing, "paddle only side tone" and whether the transmitter is keyed at all. Nothing the program sets is stored on the Morserino; when the program closes the WinKeyer, or you leave the mode, everything is as before.

The program can also switch the side tone off, or limit it to the paddle, for operators who listen to their transceiver's own side tone. **If the Morserino keys but stays silent, look at the program's side tone setting**: set it to any frequency (the Morserino uses its own pitch regardless), and switch off "paddle only side tone" if you want to hear the program's CW too.

**What is not supported:** the Morserino has no PTT output, so the program's PTT settings (lead-in, tail, PTT on/off) are ignored – use your transceiver's QSK or VOX, or let the program switch PTT over CAT. There is also no second key output and there are no WinKeyer pushbuttons; high-speed CW (HSCW), RTTY and the "pointer" commands are not supported either. The WinKeyer's messages 1 to 6 play the Morserino's keyer memories 1 to 6 (see **CW Memory Keyer**).

**DTR and RTS:** some programs let you choose how they set these two lines of the serial port. Never use "RTS on, DTR off" – that holds the Morserino in reset. On the 1st and 2nd edition, set **both on**: some programs only receive the Morserino's answers with DTR on (N1MM on Windows got no answer at all with both off). Some programs also hold the FN button down for as long as they have the port open – N1MM, and CQRLOG and flwkey, which always use "DTR on, RTS off". The Morserino recognises this and ignores FN until the program lets go, so it does no harm (it never starts **Audio In Adj.** or scroll mode by itself), but FN cannot be used meanwhile: **set the volume before the program connects.** When a program connects, the ENCODER is put back to setting the speed. For the same reason, a long press of FN in WinKeyer mode and in the main menu only takes effect when you release it. One thing the Morserino cannot protect against: if you switch it on while such a program has the port open, it starts in its programming mode instead and the screen stays dark. Close the program (or unplug the USB cable), then switch the Morserino off and on again.On the M32 Pocket, **DTR must be on**: its USB port only exchanges data with a

program that switches DTR on, so with both lines off the program gets no answer at all. “DTR on, RTS off” is the best choice. The first time a program switches the lines over, the Pocket may restart once; that is harmless.

### Example: setting up N1MM Logger+

N1MM Logger+ (Windows) has a few settings that are easy to get wrong. They are all in the Configurer (**Config → Configure Ports, Mode Control, Winkey, etc.**):

- **Hardware tab:** in a free row, choose the Morserino’s port (for example COM7) and tick **CW/Other**. Click **Set** in that row, tick **WinKey**, and set **DTR (pin 4)** to **Always On** and **RTS (pin 7)** to **Always OffDTR (pin 4)** and **RTS (pin 7)** both to **Always On**. Confirm with **OK**. While N1MM is connected it holds the Morserino’s FN button down, so FN cannot be used: set the volume before you start N1MM (see **DTR and RTS** above).
- **Leave the Configurer with its OK button.** Closing the window any other way throws the settings away. On a small screen the buttons at the bottom of the window can be out of sight; move the window up to reach them.
- **Restart N1MM after changing DTR or RTS.** N1MM sets these lines only when it opens the port, at start-up.
- **Winkey tab:** keep **Sidetone** ticked and **untick “Paddle only sidetone”** (ticked by default), otherwise the Morserino sends N1MM’s CW without a sound. N1MM sends these settings only when it connects, so restart N1MM after changing them as well. **Keying Mode**, **Autospace**, **Reverse Paddles** and **Sidetone Frequency** have no effect on the Morserino (see above); **Lead Time**, **Tail Time**, **Hang Time** and **Pin 5 Function** concern PTT, which the Morserino does not have. With **Use Winkeyer Speed Pot**, N1MM takes its sending speed from the Morserino’s ENCODER.

## 5.5.5 Keying a remote transceiver

These two modes turn a pair of Morserinos into a remote keying link: you key one of them at your operating position, and the other one — at the station, which may be in the next room or in another country — keys the transmitter. What comes out of the transmitter is what you keyed, with your own timing: dits, dahs and spaces are reproduced as you made them, whether they came from the paddles, from a straight key or from a bug.

The mode is a keying link, not an audio link. You hear your own sidetone locally and immediately, so nothing on the network can disturb your sending rhythm. What you hear *from* the station — the band, your own signal, the other operator — is not carried by the Morserino; use whatever remote-control or audio path your station already has for that.

The Morserino at your position runs **Remote Keyer**. The one at the station runs **Remote Rig** and keys the transmitter through its “to Tx” connector, exactly like the other transmitting modes. The link uses UDP port 7374. If that port is taken on your network, it can be changed over the serial protocol (`PUT kip/port`, see the protocol description) — on both Morserinos, since they must use the same one.

### What you need

- **Both Morserinos on a network.** A local network is enough for a test; for real remote operation the rig end must be reachable from the keyer end over the Internet. The same considerations as for **WiFi Trx** apply: if the rig is behind a router doing NAT, you need port forwarding for UDP port 7374 to the rig's Morserino, or a VPN that puts both on one virtual network.
- **The address of the rig**, entered at the keyer end as the **TRX Peer** field of **Config WiFi** — the same field the WiFi transceiver uses. An IP address or a DNS host name.
- **A pass phrase, the same on both devices**, at least 12 characters. There are three ways to enter it: on the Morserino itself with the preference **Pass Phrase** (section **Preferences regarding Remote Keying**); on the **WiFi** tab of the Configuration Tool, in the card **Remote Keying**; or in the **Config WiFi** web form, in the field *Remote Keying pass phrase?*. Whichever you use, it is never shown back to you, exactly like the WiFi passwords — the preference only tells you whether one is set. Use 12 to 32 lower-case letters, digits and the characters . , : - / = ? @ + — all three ways accept only these, so a phrase set one way can always be entered another way too.

The pass phrase is not a nicety. Every packet of the link is authenticated with it, and a Morserino in Remote Rig ignores anything that does not carry the right signature — which is what stops a stranger on the Internet from keying your transmitter. Choose something long, and give it to your remote partner by a channel you trust. Neither device will start the mode without it.

### At the station: Remote Rig

Select **Remote Rig** from the menu. The device briefly shows *Unattended — keep on power*, then its own IP address on the top line, and waits, showing **Listening**.

This mode is meant to be left alone: it never goes to sleep, whatever **Time Out** is set to. Nothing at the device itself can key the transmitter — the paddles, the touch pads and the key jack are deliberately dead here, so that a cat, a visitor or a knocked table cannot put a carrier on the air.

While a session is running, the display shows whether the key is down, how many edges arrived late, how many times the key line ran dry, and the speed the rig is seeing. When a session ends, the reason stays on the screen until the next one starts:

| Shown | What happened |
|---|---|
| End: BYE | the keyer end left the mode normally |
| End: timeout | nothing was heard from the keyer: after one second the rig lifted the key, and after five more seconds without word it ended the session |
| End: errors | too many damaged packets — a bad path, or something on the network is not what it claims to be |

| Shown | What happened |
|---|---|
| End: overflow | edges arrived faster than they could be played out |
| End: reset | you pressed the encoder at the rig |

Two controls: a **click of the ENCODER knob** ends the current session (the keyer end notices and calls again within a second — this is the way to recover a link that has gone strange), and a **long press** leaves the mode, as everywhere else on the Morserino.

Whatever ends a session, the key line is released first. A mark that was on the air when the link died does not stay there.

## At your position: Remote Keyer

Select **Remote Keyer**. It calls the rig, and once the rig answers you can key. In every other respect the mode behaves like **CW Keyer**: what you key appears on the display, a quick click of the ENCODER knob recalls the keyer memories, and speed and volume are where they always are. The WiFi symbol on the top line means the rig is answering; if it disappears, the link is down, and the Morserino goes on calling once a second until the rig comes back. You can go on keying while it does — you will simply not be transmitting.

Your own “to Tx” connector stays quiet in this mode. The Morserino in front of you keys nothing locally, whatever **Key ext TX** is set to; the transmitter that gets keyed is the distant one.

## From a logging program: Remote WinKeyer

**Remote WinKeyer** (in the menu **Remote WinK**, to fit the display) is **WinKeyer** and **Remote Keyer** in one: a logging or contest program on your computer drives the Morserino over USB exactly as in **WinKeyer** mode, and its CW — and whatever you key with the paddle — goes to the distant transmitter over the link, as in **Remote Keyer**. Everything said in the section **WinKeyer** applies: how to set up the program, DTR and RTS, what the Morserino keeps for itself, what is not supported. Everything said above about the link applies too: the rig runs **Remote Rig**, the address goes into **TRX Peer**, the pass phrase must match, and the rig’s settings can be changed with a double click while the link is up.

Select **Transceiver → Remote WinK**, then start the program.Select **Transceiver → Remote WinKeyer**. Or set the preference **WinKeyer Tx** to **Remote** and leave the Morserino in the main menu: when the program opens the WinKeyer, the Morserino starts this mode by itself, and returns to the menu when the program closes it again. Starting takes a few seconds, while WiFi connects and the rig answers. The program is answered meanwhile, but CW it sends before the link is up is not sent late: it is dropped, and the program is told, as when you break in with the paddle. Send it again once the WiFi symbol shows.

The top line shows **Host** while a program has the WinKeyer open, and the WiFi symbol while the rig answers. The Morserino says “Linked to rig” when the link is up, then “Waiting for host” or “Host connected”, and “Link lost” and “Link restored” when the link changes. Your own “to Tx” connector stays quiet, so **Key ext TX** is not among this mode’s preferences.

What is different from **WinKeyer**, because the transmitter is far away:

- **When the link drops,** what the program was sending stops, and the program is told, just as when you break in with the paddle — a program repeating a CQ stops repeating it. While the link is down, what the program sends is dropped, and the paddle only sounds the side tone. Nothing goes on the air late: once the link is back, the next thing the program sends goes out whole.
- **The program is told the Morserino is busy until the rig has finished,** one **Rig Delay** after the side tone. A program that switches the transmitter to receive over CAT when the WinKeyer is no longer busy would otherwise cut off the end of every message.
- **Tune** (and a key-down the program asks for) is treated at the rig like holding a straight key down, so **Rig Limit SK** applies (10 seconds by default) rather than the tight **Rig Limit Kyr**. When the limit is reached, the rig lifts the key, and the Morserino ends the tune as well.

If the rig cannot be reached, a start from the menu goes back to the menu, as in **Remote Keyer**. When the program opened the session from the main menu, the mode stays: it shows why the link did not start, keeps calling the rig if it can, and drops the program’s CW until the link is up. A long press leaves the mode as always.

## The delay, and why there is one

A network does not deliver packets evenly. If the rig keyed the transmitter the moment each edge arrived, the jitter of the path would land directly on your CW and deform it. So the rig holds every edge for a fixed time — the **Rig Delay** — and then plays it out on its own clock. The delay is the same for every edge, so the CW that leaves the transmitter has exactly the timing you gave it; only the whole transmission is shifted by that delay.

The default, **Adaptive**, lets the rig find a delay that suits the path and raise it when edges start arriving late. A fixed value is the more predictable choice on a path you know: pick one comfortably larger than the worst delay variation you see. On a good local network 50–100 ms is plenty; across a continent, 200–300 ms is more realistic. A chosen value is also a floor — the rig may raise it when the path gets worse, and will come back down to your choice afterwards.

One caution about **Adaptive**: on a path that now and then loses several packets in a row — some mobile and satellite links do — it can be caught out once, and a single mark may come out short before the rig has raised its delay. If your path does that, give the rig a fixed value of 250 ms or more.

The delay does not affect your sidetone, which is local and immediate. It affects only how long after your key movement the distant transmitter follows, and it is the price of clean CW at the far end.

## Break-in compensation

If your transceiver is keyed without a PTT line, it works in semi break-in ("VOX" for CW): the first key-down switches it from receive to transmit, and the time it takes to change over is clipped off the beginning of that first element. The ARRL bench tests call this the transceiver's **first dit on delay**; on many rigs it is a few milliseconds, on some considerably more. After a pause — between words, or when you come back after listening — the rig has dropped back to receive, so the next first element is clipped again.

The Morserino can compensate for this better than a real-time keyer can, because it knows every edge one **Rig Delay** in advance: it **starts the first element early and leaves its end where it is**. The element that goes on the air is the one you keyed; everything after it is untouched, and the spacing of your CW is not disturbed.

Two settings at the rig end:

- **Rig 1st Ext** — how much earlier that first element starts, in milliseconds. Set it to the transceiver's own changeover time. If you do not know it, start at 5–10 ms, which suits a rig with a relay, and listen: too little leaves the first dit of a word short, too much makes it long. 0 switches the compensation off.
- **Rig Hang** — the transceiver's own break-in delay, in milliseconds, as its manual states it (the setting is in 50 ms steps). This is how the Morserino knows when the transceiver has dropped back to receive and the next element will be clipped. Set it too short and elements get lengthened that did not need it; set it too long and a genuine changeover is missed. In either case the error is at most the extension, on one element after a pause.

If your transceiver is keyed through a PTT line, or you run it in full break-in with no changeover time worth mentioning, leave **Rig 1st Ext** at 0.

## Changing the rig's settings from where you sit

The settings above belong to the rig, and have to be tuned against the transmitter — which is exactly where you are not. So while the link is up, they can be reached from the operating position: in **Remote Keyer**, a **double click** of the ENCODER opens the preferences as always, and the menu opens directly on the rig's own settings, which come first in the list. Each one carries a **Rig:** prefix, so it cannot be mistaken for a setting of the Morserino in front of you:

**Rig: Delay**, **Rig: Lim Kyr**, **Rig: Lim SK**, **Rig: 1st Ext**, **Rig: Hang**.

The Accessibility Edition speaks these items by their full names — “Remote rig playout delay”, “Remote rig key down limit, keyer”, and so on — rather than reading out the short labels.

They behave like any other preference. A change takes effect at the far end immediately and is stored there, so it survives a power cut at the station. The values you see are the rig’s own, read back over the link when the menu opens.

These items appear only while the link is up. If the link drops while you have the preferences open, the menu closes by itself and the display returns to the keying screen — rather than leaving you editing settings that no longer reach anything.

## Safety

A key that sticks down at a remote station is a transmitter that stays on the air. Two limits at the rig end guard against it: **Rig Limit Kyr** for a paddle keyer and **Rig Limit SK** for a straight key or a bug. If a single mark lasts longer than the limit, the rig lifts the key. The straight-key limit is the more generous of the two, because holding the key down to tune is a normal thing to do — the default of 10 seconds is enough for that and short enough to matter.

The rig also lifts the key when the link goes quiet, when the session is ended from either end, and when it is told to stop. There is no state of the link in which a mark is left on the air.

## If it does not start

The keying end shows these in **Remote Keyer** and in **Remote WinKeyer** alike.

| On the display | What to do |
|---|---|
| No key set — Set a pass-phrase first | Shown by either device, Remote Keyer or Remote Rig: enter the pass phrase at both ends — preference **Pass Phrase**, the Configuration Tool, or the **Config WiFi** web form |
| No rig host — Set TRX Peer in Config WiFi | The keyer end has no address for the rig; enter it in the **TRX Peer** field |
| Host not found | The name or address does not resolve; check it, and check that this Morserino is on the network |
| No answer — Check rig and pass phrase | The rig did not reply: it is not in **Remote Rig**, or it is not reachable (port forwarding?), or the two pass phrases differ |
| Out of memory | The keyer end could not set up the link; switch the Morserino off and on, and start **Remote Keyer** again |

## 5.5.6 QSO Bot

The QSO Bot is a simulated CW QSO partner that lets you practise complete, realistic radio contacts off-air. The bot sends in Morse code and copies what you key back, reacting in character — so you can rehearse the give and take of a real contact at your own pace, without going on the air. It is a training partner only: it **never transmits over LoRa, WiFi or the external transmitter** — it only sounds on the local sidetone, so it is safe to use at any time.

There are three QSO types, selectable from the menu under **Transceiver → QSO Bot**:

- **SOTA/POTA** — a Summits-On-The-Air or Parks-On-The-Air contact (callsign, signal report, summit/park reference). The bot picks SOTA or POTA at random and tells you which in its CQ.
- **Standard** — a classic "rubber-stamp" QSO: signal report, name and QTH, then station details (rig, antenna, weather, age), then a sign-off.
- **Contest** — a continuous run of very short contest QSOs. The exchange format is set with the **Contest Type** preference (see **Preferences regarding Transmitting, Decoding and QSO Bot**): **CQ WW** (RST + CQ zone) or **WPX/Sprint** (RST + serial number).

### Display and controls

The QSO Bot uses the same screen layout and controls as the CW Keyer and transceiver modes. What the bot sends appears in **bold**; what you key is shown as it is decoded. The top status line shows the keyer mode and your speed. Turning the ENCODER changes speed (or volume, after a short press of the FN button); a long press of FN switches to scroll mode so you can read back the transcript; a double-click of the ENCODER button opens the preferences; a long press of the ENCODER button leaves the QSO Bot.

### Who calls CQ

When you start a QSO type, the bot listens for a few seconds. **If you call CQ**, the bot answers you — you are the activator (SOTA/POTA) or the running station (contest). **If you stay silent**, the bot calls CQ and you answer it. There is no preference to set for this; just as on the air, whoever calls CQ takes the lead. The bot uses a fresh callsign for every contact, so you get plenty of different calls to copy.

### Keying to the bot

The bot is deliberately forgiving, so practice feels natural rather than like a spelling test:

- It recognises your information inside the usual conversational padding — `de oe1wkl k`, `r ur 599 599 bk`, `qth vienna vienna` all work; the filler words are ignored.
- Signal reports may be sent as full numbers or as **cut numbers** (`5nn` for 599, `t` for 0, `a` for 1, `n` for 9).

- **The bot waits for you to finish.** It only answers once you send an end-of-over signal (`k`, `<sk>`, `<ar>`, `bk`, `73`) or pause for a couple of seconds — it will not key over you while you are still sending.
- **To correct a mistake**, send `<err>` (a run of dits) or `eeee`, then send the corrected information; the bot discards what you retracted and takes the new version. For a single value such as an RST or a callsign you can also just send the corrected version again later in the same over (for example `599 = 579`) — the most recent one counts.
- **To ask for a repeat**, send `agn`, `rpt`, or simply `?`; the bot repeats its last over. You can also ask for one item — `rpt rst`, `rpt call`, `rpt qth` — and the bot repeats just that.
- **To change the bot's speed**, send `qrs` (slower) or `qrq` (faster); the bot adjusts its sending and you hear the new speed on its next over. Send it again to keep nudging. This changes only the bot's speed, not your own keyer/sidetone speed (which you set with the encoder as usual).

If you key something the bot cannot make sense of, or you go quiet partway through, it reacts the way a real operator would — asking for a repeat with a varying prompt such as `agn agn`, `agn?`, `pse rpt`, or `qrz?`, or by repeating its last over — rather than simply stopping.

How forgiving and how chatty the bot is can be set with the **QSO Difficulty** preference (**Beginner** / **Intermediate** / **Advanced**). On **Beginner** the bot gives you more time, allows an extra retry, spells signal reports out in full (599 instead of 5nn), uses clear, calm prompts, and always sends at your own speed. On **Intermediate** and **Advanced** the bot sometimes calls at a speed a few WpM away from yours, so you get to practise asking for `qrs` / `qrq`; **Advanced** also keeps a tighter rhythm and answers more tersely. This applies to all QSO Bot modes.

In a **Standard** QSO the bot also mirrors your formality: once the contact is under way, if you drop the `<call> de <call>` framing between overs, the bot drops it too. **Beginner** always keeps the full framing; **Advanced** drops it readily once the QSO is established. The opening and the final sign-off always use the full callsign framing.

## SOTA / POTA

The bot plays a summit or park activation. If it calls CQ, it is the activator and sends a summit/park reference chosen to match the country of its callsign (`oe/st-002` for an Austrian call, `w6/ss-001` for a US call, and so on); you call in as the chaser and exchange signal reports. If **you** call CQ, you are the activator and the bot chases you. Occasionally the bot that answers your CQ turns out to be an activator too, and sends its own reference — a Summit-to-Summit / Park-to-Park contact (it can even be SOTA-to-POTA). A SOTA/POTA session is a single contact; the bot signs off when it is done.

### Standard

This is a full “rag-chew”-style rubber-stamp QSO in three rounds: first signal report, name and QTH; then station details (rig, antenna, weather, age); then the sign-off. The bot sends realistic details of its own and copies yours. It parses your information from the **field keywords** — `name`, `qth`, `rig`, `ant`, `wx`, `age` — so it does not matter whether you separate them with `=`, with `es`, or with nothing at all, and values may be more than one word (`rig icom 7300`). It picks up your name and uses it when it comes back to you (`fb dr willi`). A valid contact needs a signal report, so if your first over has a name and QTH but no RST, the bot asks `pse ur rst?` before going on.

### Contest

Contest practice is a continuous session of very short QSOs. Set **Contest Type** first: **CQ WW** exchanges a signal report plus CQ zone (the bot uses the real zone for its callsign’s country), **WPX/Sprint** exchanges a signal report plus a serial number. As soon as one QSO finishes, the running station calls CQ again — if the bot is running it calls CQ with a new callsign; if you are running, a new station answers your next CQ. The session keeps going as long as you keep working stations, and ends automatically after about fifteen seconds with no reply (nobody answering the bot’s CQ, or you not calling CQ again). Press a button to return to the menu when the session ends.

## 5.6 CW Decoder

In this mode, Morse code characters are being decoded and shown on the screen. The Morse code can either be entered via a Morse key (“straight key” - connected to the jack where you would normally connect an external paddle; you can also use one or both of the touch paddles to manually key the decoder). Using the decoder in this way, you can control and improve your keying with a straight key, by checking, if the decoder decodes correctly what you tried to send.

You can also decode a tone input (at the audio input port) taken for example from a receiver. The tone should be at around 700 Hz. Optionally there is a pretty sharp filter (implemented in software) that detects just tones in a very narrow range around 700 Hz, and disregards all others. This is being used by selecting the preference “Narrow” (see the section **Preferences regarding Transmitting, Decoding and QSO Bot**).

The status line is slightly different from the other modes. First of all, the rotary encoder is always in the volume setting mode – speed is determined from the decoded Morse code and cannot be set manually. Pressing the ENCODER button will end the decoder mode and bring you back to the Start Menu.

On the left of the status display at the top, you will see a small square or rectangle whenever the key is pressed (or a 700 Hz tone is detected), and to the right of it the letter **d** – this replaces the indicator for the keyer mode that is visible in the other Morserino modes.

The current speed as detected by the decoder is displayed as WpM on the status line.

This mode does not have many preferences (see the section **Preferences regarding Transmitting, Decoding and QSO Bot**); maybe the most important is the ability to switch the filter bandwidth of the audio decoder between narrow (ca 150 Hz) and wide (ca 600 Hz). For decoding signals from a transceiver (where there might be other signals in the vicinity), it is usually best to set the bandwidth to **Narrow** and tune the signal to 700 Hz (± 5%). For decoding signals from an FM transceiver, or from iCW or other environments with little interference, it is better to use the **Wide** setting – in that case the audio frequency does not need to be very close to 700 Hz.

# 5.7 Games

The Morserino Pocket features now CW-based games that make learning and practicing Morse code more engaging. Games are found under the “Games” menu entry. Seven games are currently available: **Morse Invaders**, **Fight the Pileup**, **Radio Cave**, **Morsel**, **Trailblazer**, **Fox Hunt**, and **Memory Chain**. Trailblazer and Fox Hunt are a pair of grid-maze games that share the same playing field — Trailblazer trains sending, Fox Hunt trains receiving. Memory Chain is a memory game: key an ever-growing chain of characters without losing track.

## 5.7.1 Morse Invaders

Morse Invaders is a game where characters fall down the color display, and you must key the correct Morse code to destroy them before they reach the bottom. It combines the fun of a classic arcade game with effective CW training.

The character pool is determined by your current Koch lesson setting – the game uses exactly the characters you have been learning. This means the game adapts to your level automatically. Each Koch lesson forms a “stratum” within which sub-levels of increasing difficulty are formed by raising the speed at which characters fall and how often new ones appear.

Morse Invaders is only available on the M32Pocket.

### Starting the Game

Navigate to Games > Morse Invaders in the main menu. The game menu screen shows your current Koch lesson, the characters in your pool, your speed setting, and a high score table (if any scores have been recorded).

On the game menu screen:

Rotate the ENCODER to change the starting sub-level. Press the FN button to toggle the encoder between changing the sub-level and changing the speed (a “<” marker indicates which value the encoder currently controls). Touch a paddle to start the game. A long press of the ENCODER exits back to the Morserino menu.

After touching a paddle, a short countdown (“3… 2… 1… GO!”) leads into the game.

## Playing the Game

Characters appear at the top of the screen and fall downward in one of six lanes. Each character is shown as a coloured rectangle: green for letters, yellow for numbers, orange for punctuation, and magenta for pro signs. Pro signs are displayed as their two-letter abbreviation with a bar above.



The default for the game is portrait orientation, with the touch paddles at the bottom. You can change this to landscape with the Preference “Invader Orient.”, and the landscape orientation will acknowledge your setting of “left-handed” (see **Hardware Configuration Menu**).

To destroy a falling character, key its Morse code using the paddles (or an external key). The game automatically targets the lowest – and therefore most urgent – character that matches what you keyed. A correct match destroys the character with a brief animation and awards points. If no falling character matches the character you keyed, this counts as a miss and your streak is reset, but you do not lose a life.

If a character reaches the bottom of the screen without being destroyed, you lose one of your three lives. The game ends when all lives are lost.

## Display Layout

The screen is divided into three zones:

The top bar (HUD) shows your remaining lives as coloured dots on the left, the current level (displayed as Koch lesson – sub-level, e.g. “12-3”) in the centre, and your score on the right.

The main area shows the six lanes with falling characters.

The bottom bar (keying zone) shows your current speed in WPM on the left, a streak counter when you reach five or more consecutive hits, and the last character you keyed in the centre.

## Controls During the Game

ENCODER: Change your keying speed (WPM). The speed is adjusted immediately and is also stored when you exit the game.

ENCODER click (short press): Pause the game. Click again to resume.

ENCODER long press: Exit the game and return to the Morserino menu.

FN short press: Toggle between speed and volume control.

### Scoring

Base points per destroyed character are 10, multiplied by several factors:

- Speed multiplier: your current WPM divided by 10. At 20 WPM you score double; at 30 WPM, triple.
- Urgency bonus: destroying a character that is in the bottom 30% of the screen earns double points.
- Streak bonus: consecutive hits without a miss increase the multiplier – ×1.5 at 5 hits, ×2 at 10, and ×3 at 20.

An extra life is awarded every 1000 points, up to a maximum of 5 lives.

### Levels

Every 10 destroyed characters advances you to the next sub-level within your Koch lesson. Each sub-level increases the falling speed, the spawn rate, and the maximum number of simultaneous characters on screen.

When you advance, a brief “LEVEL” screen appears and any remaining characters are cleared for a small bonus.

### High Scores

The game stores the top five high scores. Each entry records the score, Koch lesson, sub-level reached, and speed. High scores are shown on both the game menu screen and the game over screen. A new high score is highlighted.

### Game Over

When all lives are lost, the game over screen shows your final score, the level reached, your speed, and statistics including the number of hits, misses, and dropped characters, as well as your accuracy percentage.

From the game over screen, click the ENCODER to play again (starting from the same sub-level you chose at the beginning), or long press the ENCODER to exit to the Morserino menu.

### Tips for Beginners

Start with a lower Koch lesson (fewer characters) and a comfortable speed. The game is most effective as a training tool when you are challenged but not overwhelmed. If characters reach the bottom too quickly, reduce your starting sub-level or lower the WPM. As your recognition improves, increase the Koch lesson to add more characters to the pool.

## 5.7.2 Fight the Pileup

**Fight the Pileup** is a CW training game where you practise copying and keying callsigns under time pressure — just like working a real pileup on the bands. Callsigns arrive as CW audio; you decode them by ear and key them back before they give up. It can be played solo against the device, or as a multiplayer "last station standing" match against other M32 Pockets in the same room.

Fight the Pileup is only available on the M32 Pocket.

### Starting the Game

From the main menu, navigate to **Games → Fight Pileup**. The first time you play, you are asked to enter your callsign and name with the encoder and buttons:

- **Encoder:** Select a character
- **Click:** Add the character
- **FN (short click):** Delete last character
- **Long press:** Confirm (minimum 2 characters required)

Your callsign and name are saved and remembered for future sessions.

### The Lobby

The lobby is where you set up a game before entering the pileup:

- **Encoder:** Select difficulty level (EASY, NORMAL, HARD, EXPERT)
- **Click:** Toggle between Single Player and Multiplayer mode
- **FN (short click):** Toggle between callsign and name display (if both are set)
- **Paddles:** Enter the pileup (starts the code challenge)
- **Long press:** Exit to menu

The difficulty level controls how long each caller waits for you, how many drops cost a life, how fast new callers arrive, and how soon the callsign hint is revealed:

| Level | Caller timeout | Drops per life | Plays before hint |
|---|---|---|---|
| EASY | 45 sec | 5 | 3 |
| NORMAL | 30 sec | 4 | 3 |

| Level | Caller timeout | Drops per life | Plays before hint |
|---|---|---|---|
| HARD | 20 sec | 3 | 2 |
| EXPERT | 12 sec | 2 | 1 |

In **Multiplayer** the lobby additionally shows the ESP-NOW **Channel** (Standard or Secondary) and a live list of the other players it has found. All devices must be set to the **same channel** to see each other — this is the **Trx Channel** preference.

## Code Challenge (Entry Gate)

Before the pileup starts you key a short random code (4 characters) on your paddles — a warm-up that also confirms your paddles work. Each correct character lights up green; a mistake resets the sequence, just try again. You can already set your keying **speed** here: the **encoder** changes WPM, **FN** toggles it to volume, and the current value is shown on screen. Long press to cancel back to the lobby.

## Gameplay

Callsigns ("callers") arrive and queue up. You always work the **oldest** one first — that is the active caller, shown under **DEFEND!**

1. **Listen.** The active caller is played as CW audio at a slightly lower pitch than your sidetone, so you can tell it apart from your own keying. It repeats automatically.
2. **Decode.** Identify the callsign by ear. After a few plays (3 on Easy and Normal, 2 on Hard, 1 on Expert) the text is revealed on screen as a hint — but try to beat it.
3. **Key it back.** Key the callsign on your paddles; your decoded characters appear as you go. A word-length pause (about a second) submits automatically, or click the encoder to submit at once.
4. **Result.**
    - **Correct** — the caller is cleared, you score, and you immediately **earn an attack** (see below).
    - **Wrong** — the CW replays so you can try the same caller again; there is no limit on retries within its time window.

Each caller has its own time window, shown by the progress bar (green → yellow → red). The window starts when the caller becomes the *active* one, so every caller gets a fair, full chance. If the active caller's window runs out it is **dropped**. And if callers pile up faster than you clear them, the ones waiting at the back eventually **give up** ("MISSED!") — that counts as a drop too. Keeping the pile short is the real challenge.

### Earning and Keying Attacks

Every caller you copy correctly earns you one **attack**. The pileup pauses and a magenta prompt — **YOUR ATTACK — SEND:** followed by a callsign — appears. Key that callsign on your paddles to "send" it. In **single player** this simply scores a bonus; in **multiplayer** the callsign is fired at another player and lands in *their* pile as a caller they must defend (see *Multiplayer* below). While you are keying an attack the pileup is frozen — callers neither arrive nor time out — so you can take your time. Send the attack to return to defending.

### Lives and Game Over (solo)

You start with **3 lives**. Every *N* drops (the "drops per life" for your difficulty) costs one life; both timed-out callers and "MISSED" give-ups count. When your last life is gone the game ends, and the game-over screen shows your score, callsigns defended vs. dropped, accuracy, best streak, and the settings you played with. Press **Click** to play again (back to the lobby) or **Long press** to exit to the main menu.

### Scoring

| Event | Points |
|---|---|
| Correct caller | +100 base + 10 × streak |
| Attack sent | +50 |
| Wrong answer | −50 |
| Timed-out caller | −25 |

Your **streak** grows with each correct copy and resets on a wrong answer or a timed-out caller; a higher streak adds more bonus per copy — and makes new callers arrive faster.

### Controls During Play

| Control | Action |
|---|---|
| **Paddles** | Key your response (or the attack callsign) |
| **Encoder** | Adjust WPM speed, or volume (see FN) |
| **Click** (encoder) | Submit your response immediately |
| **FN (short click)** | Toggle the encoder between **speed** and **volume** |
| **Long press** (encoder) | Exit the game |

The bottom status line shows the value the encoder currently controls — `15 wpm` or `Vol 12` — and pressing **FN** swaps between them.

### Multiplayer

In multiplayer, two or more M32 Pockets in the same room play at the same time and attack each other; the **last player still in the game wins**.

**Set-up.** On every device open Fight the Pileup and, in the lobby, press **Click** to switch to **Multiplayer**. Make sure all devices show the **same Channel** (Standard or Secondary). Within a few seconds each device lists the others under MULTIPLAYER. When everyone is ready, each player keys in on the paddles to start — players need not start at exactly the same moment.

**Attacks.** Whenever you correctly copy a caller and key your earned attack, that callsign is sent to one of the other players at random. On their device it appears as a caller marked **FROM** plus your callsign, shown in magenta, to be defended like any other; likewise, callsigns the others send land in *your* pile. Bot callers keep coming as well, so the pressure never lets up.

**Opponents.** During the pileup a compact strip near the top of the screen lists the other players and their remaining lives, updating live as they take damage; a player who has been knocked out is shown dimmed.

**Winning.** When you lose your last life you are out; your screen shows the game-over stats and waits for the result. The last player still alive wins: that device shows **YOU WIN!**, and every other device shows **WINNER:** followed by the winning callsign. From there, **Click** returns to the lobby for another match and **Long press** exits.

### Tips for Beginners

- **Start on EASY.** The 45-second window lets you hear each caller several times before you commit.
- **Use the hint.** If you are unsure, wait for the callsign to be revealed — there is no penalty for taking your time, only for letting callers drop.
- **Slow down.** Lower the WPM with the encoder; callers are played at your own keying speed.
- **Learn the shapes.** Callsigns follow patterns: a 1–3 letter prefix, a digit, then a 1–3 letter suffix (DL1ABC, W3XY, VK2GR).
- **Keep the pile short.** Especially in multiplayer, clear callers quickly — if the queue grows, the oldest callers give up and cost you lives.

## 5.7.3 Radio Cave

**Radio Cave** is a text-based adventure game inspired by the classic *Colossal Cave Adventure*. You play as a ham radio operator who discovers an abandoned Cold War-era radio station hidden inside a mountain cave. Your mission: explore the station, repair the equipment, and complete a QSO with a remote station that has been calling for over 50 years.

Unlike the other games, Radio Cave does not use scoring or time pressure. Instead, it is a puzzle-based exploration game where you navigate rooms, collect items, and solve challenges — all by keying commands as Morse code. CW clues are woven into the game world: some information is only revealed as Morse audio, and the final challenge requires you to key a real QSO exchange on your paddles.

Radio Cave is only available on the M32Pocket.

## Starting the Game

From the main menu, navigate to **Games → Radio Cave**. After a brief lobby screen, key any letter on the paddles to enter the game. If a saved game exists, it loads automatically and you continue where you left off; otherwise a new game begins.

## How to Play

The game displays text descriptions on the TFT screen. You explore by keying short commands as Morse code using the paddles. The game understands full words, abbreviations, and even single-letter shortcuts — whatever is fastest on the key. There is no time pressure, so take whatever speed feels comfortable.

## Display Layout

The screen is divided into four zones:

The **top bar** shows the current room name (and a small icon placeholder showing the room number).

The **main area** shows the room description, action results, examined-object text, and the help screen. Use the encoder in scroll mode (FN long-press) to scroll if the text exceeds the visible area.

The **input line** shows what you are currently keying or, after a command dispatches, the result message.

The **bottom bar** shows the available exits (e.g. `N E W`), your inventory count and step counter (e.g. `1/2 • 12`), and the current encoder mode along with its live value (e.g. `17 wpm` or `vol 7` or `scroll`).

## Commands

All commands are keyed as Morse code. You can use full words or abbreviations — the shortest unambiguous prefix is always sufficient (e.g. `T F` instead of `TAKE FUEL`). When the prefix is unique in the current context, the command dispatches without asking for clarification; only genuinely ambiguous prefixes prompt “Which one?”.

| Command | Action |
|---|---|
| `N`, `S`, `E`, `W` | Move north, south, east, or west |

| Command | Action |
|---|---|
| `L` / `LOOK` | Redisplay the full room description |
| `LOOK [object]` | Examine an item or feature in the current room |
| `I` / `INV` | Show your inventory |
| `T [item]` / `TAKE` | Pick up an item |
| `D [item]` / `DROP` | Drop a carried item |
| `U [item]` / `USE` | Use an item or interact with something (e.g. `U FUEL`, `U SWITCH`, `U TX`, `U RX`) |
| `FIX [item]` / `SOLDER` | Repair an item — synonym for USE in repair contexts |
| `R [item]` / `READ` | Read a document or inscription |
| `KEY [phrase]` | Key a CW phrase at a puzzle lock |
| `QRS` | Replay the most recent CW clue at half speed |
| `H` / `HELP` | Show a command summary in the main area |
| `NEW` | Start a new game (asks `Y` to confirm) |

CW phrases that are ecognized in teh game can also be keyed bare, without the `KEY` prefix — just key the phrase on its own and the game will treat it as if you keyed at the appropriate target.

## Error Conventions

Two real CW conventions are accepted to clear the input buffer mid-command:

- **`<hh>`** — eight dits keyed as one letter (the standard “error, please resend” prosign).
- **`eeee`** — four consecutive E’s keyed as separate letters.

Either clears the buffer so you can start your command over.

## Inventory

You can carry up to **two items** at a time. If your hands are full, you must drop something before picking up a new item. The inventory is tight on purpose — you will need to plan which items go where. Choose carefully: not everything you find is useful for every situation.

## CW Clues

Some information in the game is delivered as CW audio rather than screen text. These clues play at various speeds, just as different operators would send at different speeds in real life. The game ignores your Koch lesson settings — all characters and prosigns may appear, including `<sk>`.

If a CW clue is too fast, key `QRS` (or `PSE QRS`) to request a slower repetition — just as you would on the air. There is no limit on how many times you can use QRS.

## Controls

| Control | Action |
|---|---|
| **Paddles** | Key your Morse commands |
| **Encoder** | In default mode, adjusts your keying WPM. After FN short press, adjusts volume. After FN long press, scrolls the main text area. |
| **FN short press** | Toggle encoder between speed (WPM) and volume |
| **FN long press** | Toggle scroll mode on/off |
| **Encoder click** | (In the lobby only) Enter the game without keying |
| **Encoder long press** | Exit Radio Cave back to the main menu |

Your keying speed (WPM) remains adjustable during the game and is independent of the CW clue speeds.

*Scroll mode is important, as some descriptions do not fit the screen and you need to scroll inorder to read everything!*

## Save and Resume

The game saves your progress automatically after every command. You can turn off the Morserino at any time and resume exactly where you left off — including the case where the device's idle timeout shuts the unit down mid-game.

The save is cleared automatically when you complete the game (victory) or die. The next time you enter Radio Cave you will start fresh.

To start a completely new game while a save exists, key `NEW` and confirm with `Y`. Any other response cancels.

### The Step Counter

Every command you enter adds to a step counter, displayed in the bottom bar. The step counter persists across save and resume. When you complete the game, your total step count is shown — a personal benchmark if you want to try for a more efficient run next time.

### A Few Hints

- Explore thoroughly. Look at things. Read things. Not everything is obvious at first glance.
- Pay attention to CW clues — they contain information you may not get any other way.
- If something doesn't work, there may be a step you haven't completed yet. Think about what a real radio operator would need to do.
- There is one fatal mistake possible in this game. The station has a warning about it. Read the manual — the one in the game, that is.
- The game can be completed, and every puzzle has a logical solution rooted in real radio practice and CW conventions.

### Game Over

There is exactly one fatal mistake in Radio Cave. If it happens, a death screen appears; key any letter or click the encoder to restart from the beginning. Your save is wiped and your step counter resets.

There is also one situation where the game can become unwinnable through repeated mistakes (you will know when it happens). In that case, key `NEW` and confirm with `Y` to start over.

When you successfully complete the game, a victory screen shows your total step count. Congratulations — the message has finally been received.

## 5.7.4 Morsel

**Morsel** is a word-guessing game in which you identify a hidden word from two clues: one randomly chosen letter of the word shown in clear text on the display, and the whole word played in Morse code. The CW clue starts fast — 48 WPM — and slows by 5 WPM each round you don't solve it, down to a floor of 18 WPM. Solving in fewer guesses is rewarded; finishing the 10-word match in the lowest total adjusted time wins.

Morsel is only available on the M32Pocket.

### Starting the Game

From the main menu, navigate to **Games → Morsel**. The lobby shows the current **Koch lesson** and **Word length** settings, along with the controls available. Touch a paddle to begin.

## Lobby Settings

Two settings can be adjusted directly in the lobby:

| Control | Effect |
|---|---|
| **Encoder (knob)** | Change Koch lesson — temporary for this game session; your training setting is restored on exit |
| **FN short press** | Cycle the word length: `3`, `4`, `max 4`, `5`, `max 5`, `6`, `max 6`. Persisted across power cycles. `max N` means any length from 3 to N. |
| **FN long press** | View the persistent high-score table |
| **Encoder click or paddle touch** | Start the game |
| **Encoder long press** | Quit back to the main menu |

Words are drawn from the combined Morserino dictionary and the ham-abbreviation list, filtered by length and by the current Koch lesson (every letter of every candidate word must be within the characters you have learned). If too few candidate words are available, Morsel shows a “Word pool too small” screen with a suggested minimum Koch lesson and returns you to the lobby.

## Display Layout

During play the landscape screen shows:

- **Top left:** the current round number (1, 2, 3 …) for the current word.
- **Top center:** word progress, e.g. `3/10`.
- **Top right:** the current CW clue speed in WPM (highlighted yellow when at the 18 WPM floor).
- **Center:** a row of letter boxes, one per position. The revealed letter is shown in cyan with a cyan border so you can see which position is hinted.
- **Bottom center status line:** the current message (“Listen and key the word”, “Correct!”, “Try again”, “Skipped”…).
- **Bottom hint line:** `click = skip hold = quit`.
- **Bottom HUD:** Koch lesson · your **key** WPM · volume. The active encoder target (key WPM or volume) is highlighted yellow.

## Playing a Word

A new word picks a random letter to reveal and plays the whole word once at the current round’s speed. You then **key the complete word** on your paddles, including the revealed letter. As you key, each decoded character appears in its box. The CW clue is muted as soon as you start keying.

A long inter-word pause — once your entry has reached the full word length — submits the guess. Each box is then colored:

| Color | Meaning |
|---|---|
| **Green** | Right letter, right position |
| **Red** | Wrong letter |
| **Grey** | Revealed slot keyed wrong (the originally revealed letter is shown for reference) |

If you key fewer than the full word length, the pause does **not** submit — this is intentional so you can pause mid-word to think or correct, without an accidental early submit.

If any box is not green, the same word is replayed at the next slower speed (5 WPM less), and you try again. When all boxes are green, the word is solved; the screen briefly shows the solve time and number of tries, then a new word starts at 48 WPM.

### Error Correction

The `<err>` prosign (8 consecutive dits, also written `<hh>`) deletes the last entered character — the same convention used on the air to abort and re-send. Backspacing drops your entry below the full word length and disarms auto-submit, so you can pause and think before re-keying.

### Skipping a Hard Word

If a word genuinely won't yield even at 18 WPM, press the **encoder (mode) button** briefly to skip. The current word ends, a `Skipped (–60s)` notice appears, and the game moves on. The skip adds a fixed **60-second penalty** to your total time plus 5 seconds for every guess you had already submitted.

### Idle Handling

While a clue has finished playing and you have not started keying:

- After about **12 seconds** of no input, Morsel replays the CW clue automatically (same speed — the round does not advance).
- After about **60 seconds** of total inactivity, Morsel returns to its lobby gracefully (the game is abandoned, no score recorded).

Any keying, encoder turn, or button press resets both timers, including the global power-off Time-Out — so an actively playing user is never kicked out mid-game.

### Controls During the Game

| Control | Action |
|---|---|
| **Paddles** | Key your guess |

| Control | Action |
|---|---|
| **Encoder** | Adjust your **keying** WPM (independent of the clue speed) |
| **FN short press** | Toggle the encoder between key WPM and volume |
| **FN long press** | Quit back to the main menu |
| **Mode button short press** | Skip the current word (60 s penalty) |
| **Mode button long press** | Quit back to the main menu |

The CW clue is always played at the round's scheduled speed regardless of your keying speed — the two are independent.

## Scoring

For each word:

- **Time** is measured from the first CW play to the correct guess.
- **+5 seconds penalty per guess submitted** (from the very first guess). Solving in fewer guesses is rewarded.
- A **skipped** word contributes its elapsed time plus the 60-second skip penalty plus 5 s for each guess already made before the skip.

The game total is the sum of all 10 words' adjusted times. Lower is better.

## Game End and High Scores

After 10 words, a **GAME OVER** screen shows:

- Your total adjusted time as `M:SS`.
- Words solved vs. skipped.
- Total number of guesses.
- If your total qualifies for the persistent top-7 list, a `NEW HIGH SCORE — rank N` banner.

Clicking the encoder opens the **high-score table**: the top 7 results, sorted by total adjusted time, persisted in non-volatile storage. Each row shows the rank, time, word-length setting (`max 4`, `5`, …), the Koch lesson played at (e.g. `K12`), and the solved/total count. Your latest qualifying entry is shown in green.

You can also reach the high-score table from the lobby at any time with a long press of the **FN** button.

## Tips

- 48 WPM is fast on purpose — it's there to reward decoders who can copy at speed. If you can't catch it on the first round, just wait for the next replay (it will be 5 WPM slower each round).

- The revealed letter is a strong anchor — once you know its position you have already constrained the word a lot. Pay attention to its cyan position number under the box.
- Solving on the **first try** is worth a lot more than solving fast at slower speeds — the +5 s/guess penalty stacks quickly.
- Raise your Koch lesson if you keep getting the pool-too-small warning: 3-letter words need lesson 8, 4-letter words lesson 10, 5-letter words lesson 14, 6-letter words lesson 16 (using the default Morserino character order).
- Backspace freely (`<err>` = 8 dits) — the timer keeps running, but a wrong submitted guess costs you 5 s, so it's almost always cheaper to fix the mistake than to submit and try again.

## Multiplayer

Morsel can also be played as a synchronised multi-player match against other M32 Pockets in the same room, with one device acting as the **server** and any number of others as **clients**. Every player keys the same 10 words at the same time, and at the end the server broadcasts a ranked score table that every device shows simultaneously.

#### Starting a Multiplayer Game

After choosing **Games → Morsel**, pick **Multiplayer** at the first screen. You can then choose:

| Role | Action |
|---|---|
| **Start as Server** | Opens the server lobby. Adjust the Koch lesson with the encoder and the word length with FN short press; the displayed list shows joined players as they connect. Click the encoder to start the game. |
| **Join a game** | Opens the client lobby. Searches for a server's broadcast and shows its settings (length, Koch lesson, word count) once one is found. Wait for the server operator to start. |

Hold the encoder (long press) to step back one level — from a server or client lobby to the role picker, from the role picker to the Single/Multiplayer chooser, and from there out of Morsel.

Your identity on the network is taken from the **call sign / player name** shared with Fight the Pileup. If neither is set yet, a short MAC-derived tag is used automatically — set your call sign (`playerCall`) once via the M32 Configuration Tool to appear under it in the ranking.

#### Playing

The server picks 10 words from the pool and broadcasts them to all clients; every device then plays each word locally with the normal single-player engine (CW clue, paddle entry, colour-coded result). The clue speed schedule, scoring rules, error correction, idle handling and skip behaviour are all identical to single-player.

When a player finishes the 10-word match, their device sends its final score (adjusted time, guess count, words solved) to the server. The server competes as a regular player — no host advantage — and includes its own score in the ranking.

#### Ranking Screen

Once any player has finished, the server starts broadcasting a sorted **Ranking** screen which all devices render identically:

| Column | Meaning |
|---|---|
| Rank | Position in the standings (1 is best) |
| Player | Call sign or name |
| Time | Total adjusted time in seconds |
| Solved | Words solved out of 10 |
| Guesses | Total guesses across the match |

Your own row is highlighted in yellow. The screen updates live as more players finish; up to six top entries are shown on screen and a `+N more` indicator appears if more players have reported. Click the encoder to return to the multiplayer lobby; a long press exits Morsel.

#### Networking Notes

The protocol is **ESP-NOW broadcast** on a fixed channel — no router, internet, or pairing is needed; all devices in radio range simply hear each other. The soft cap is **20 players** per match. A device that loses contact with the server is dropped from the displayed ranking after about 8 seconds.

## 5.7.5 Trailblazer

**Trailblazer** and **Fox Hunt** (the next section) are a matched pair of grid-maze games. Both put you on the same playing field: a grid of 12 × 4 random characters, drawn from your current Koch lesson, with a **start** cell on the left edge, an **end** cell on the right edge, and a hidden, winding **path** between them. You travel that path one cell at a time, from start to finish. The two games differ only in what you must do to take each step — Trailblazer trains **sending**, Fox Hunt trains **receiving**.

In **Trailblazer**, the next cell on the path is **highlighted** on the display. You simply **key that visible character** in Morse to move into it. Correct keying advances you and lights up the next cell; a wrong character sounds an error tone and you stay put. Because the target letter is always in plain sight, Trailblazer is fundamentally a **sending drill** — the maze gives it a sense of journey and progress, and a natural scoring axis (how quickly and cleanly you send your way to the end).

Trailblazer is only available on the M32 Pocket. It is playable from **Koch lesson 6** upward.

## Starting the Game

From the main menu, navigate to **Games → Trailblazer**. You first see a **Single player / Multiplayer** chooser (turn the encoder to move, click to pick). Choosing **Single player** brings up the ready screen, which shows the game name, your current Koch lesson, and the controls. **Touch a paddle to start.** (Multiplayer is described at the end of this section.)

On the ready screen:

| Control | Action |
|---|---|
| **Paddle / key** | Start a new maze |
| **Encoder (knob)** | Adjust your keying WPM (or volume — see below) |
| **FN short press** | Toggle the encoder between speed and volume |
| **Encoder click** | View the high-score table |
| **Encoder long press** | Quit back to the main menu |

## Playing

The full grid is shown, with your current position marked by a token and the **next** path cell highlighted in yellow. Key the highlighted character on your paddles. Each correct character moves you into the cell, draws the trail behind you in cyan, and highlights the following cell. Keep going until you reach the end marker on the right edge — the screen then shows **Solved!** and your score.

A wrong character just sounds a short error tone and leaves you where you are; every wrong entry counts against your score, so clean sending pays off. Only the trail **behind** you is ever drawn — the path ahead is never shown, so you follow it one lit cell at a time.

Pro signs can appear as grid cells once your Koch lesson has reached them. They are shown as their conventional two-letter abbreviation (`AS`, `KA`, `KN`, `SK`, `VE`, `BK`, `AR`) with a bar above, exactly as in the other modes; key the pro sign itself to enter such a cell.

## Controls During the Game

| Control | Action |
|---|---|
| **Paddles** | Key the highlighted character |
| **Encoder** | Adjust your keying WPM |
| **FN short press** | Toggle the encoder between speed and volume |
| **Encoder long press** | Quit back to the main menu |

## Scoring and High Scores

Your score is an **effective speed in characters per minute (CPM)** — higher is better. It is the number of steps you took (the path length) divided by your **adjusted time**: the raw solve time plus a **5-second penalty for every wrong entry**. Dividing by the path length makes scores fair across mazes of different lengths, and turns the result into a meaningful CW figure: your effective sending speed.

After you solve a maze, a results screen shows the CPM, the number of steps, wrong entries, your time, and the Koch lesson played at; if the result makes the top-7 list a `NEW HIGH SCORE` banner appears. Clicking the encoder opens the **high-score table** (kept separately for each game, persisted in non-volatile storage); a further press starts a fresh maze, and a long press exits. You can also open the high-score table from the ready screen with an encoder click.

## Multiplayer

Trailblazer and Fox Hunt can both be played as a **same-maze race** against other M32 Pockets in the same room. One device acts as the **server**: it picks the Koch lesson, generates the maze, and broadcasts it so that **every device races the identical grid and path** at the same time. The first to reach the end with the best effective speed wins. The multiplayer flow is shared by both games and works exactly the same in each.

At the **Single player / Multiplayer** chooser, pick **Multiplayer**. You then choose a role:

| Role | Action |
|---|---|
| **Start as Server** | Opens the server lobby. The session starts at the full alphabet (Koch 41) so a mixed group has a common character set; adjust it down with the encoder if you like. The list fills with players as they join. Click the encoder to start the race. |
| **Join a game** | Opens the client lobby. It searches for a server's broadcast and shows its Koch lesson once found. Wait for the server operator to start; the maze then arrives and your race begins automatically. |

A long press of the encoder steps back one level — from a server or client lobby to the role picker, from the role picker to the Single/Multiplayer chooser, and from there out of the game.

Your identity on the network is taken from the **call sign / player name** shared with Fight the Pileup and Morsel. If neither is set, a short MAC-derived tag is used automatically.



When you join a game, your device adopts the server's Koch lesson for the race, so the grid — and Fox Hunt's direction keys — are the same for everyone. Your own training lesson is restored when you leave the game.

When you finish, your device reports its time and wrong-entry count; the server ranks everyone (itself included, competing as a regular player) and broadcasts a **Ranking** screen that all devices show identically. Each row lists the rank, player, the effective CPM, the time, and the number of wrong entries; your own row is highlighted in yellow. Click the encoder to return to the multiplayer lobby for another race, or long-press to exit. Multiplayer results are **not** saved to the high-score tables.

The networking is **ESP-NOW broadcast** on a fixed channel — no router, internet, or pairing needed; all devices in range hear each other, with a soft cap of 20 players.

## 5.7.6 Fox Hunt

**Fox Hunt** is the receiving counterpart to Trailblazer, played on the same 12 × 4 grid with a hidden path from the left edge to the right edge (see the Trailblazer section for the shared playing field). The difference is how you take each step: instead of showing you the next cell, the device **plays its character in Morse code**. You must recognise the character by ear, spot which of the neighbouring cells holds it, and **key the direction** toward it. Correct direction → you advance and the next character is played; wrong → an error tone, and you stay put.

This trains **receiving by ear** with a spatial twist — you have to both decode the character and locate it among the neighbours. You could guess one of the four directions blindly, but every wrong key costs your score, so decoding is the efficient route.

Fox Hunt is only available on the M32 Pocket, and is playable from **Koch lesson 6** upward.

### Direction Keys

Directions are keyed as single letters using the **compass** convention — the same one Radio Cave uses:

| Direction | Compass letter |
|---|---|
| Up | **N** (north) |
| Right | **E** (east) |
| Down | **S** (south) |
| Left | **W** (west) |

A four-arrow **legend** is shown on screen at all times, so you never have to remember the mapping. Because the compass letters are not all learned early in the Koch order, any that you have not yet learned are automatically **substituted** by another character from your current lesson; the legend always shows the actual letter to key for each direction (a substituted key is drawn in yellow). You key the **direction**, never the heard character itself — a keyed letter that is not in the legend is treated as a wrong move.

## Starting and Controls

From the main menu, navigate to **Games → Fox Hunt**, then pick **Single player** or **Multiplayer** (multiplayer works exactly as described for Trailblazer above — the two games share one lobby). On the single-player ready screen, touch a paddle to start.

| Control | Action |
|---|---|
| **Paddles** | Key the direction (N/E/S/W or its substitute) toward the heard character |
| **Encoder** | Adjust your keying WPM (or volume) |
| **FN short press** | Toggle the encoder between speed and volume |
| **Encoder click (ready screen)** | View the high-score table |
| **Encoder click (during play)** | Replay the current character |
| **Encoder long press** | Quit back to the main menu |

## Playing

On arrival at each cell, the device plays the next character once, at your current keying speed and shifted slightly in pitch so you can tell it apart from your own sidetone. Decode it, find the neighbouring cell that holds it, and key the direction toward that cell. If you are idle for a few seconds, the character **replays** automatically; you can also replay it on demand at any time with an **encoder click**. As in Trailblazer, only the trail behind you is drawn — the path ahead is never revealed, so you must rely on your ears.

### Scoring, High Scores, and Multiplayer

Scoring, the results and high-score screens, and multiplayer all work exactly as in Trailblazer (effective CPM with a 5-second penalty per wrong entry; a separate high-score table for Fox Hunt; the same server/client same-maze race). See the Trailblazer section above for the details.

## 5.7.7 Memory Chain

**Memory Chain** is a memory game: the device presents a growing chain of characters, **one new character per round**, and you must key the *entire* chain from memory each time. The device never repeats the earlier part of the chain — keying it again each round is what keeps it in your head. There is no time pressure: take as much time as you like between characters.

The game has two content modes:

- **Characters**: the chain grows with random characters from your current Koch lesson (pro signs from the high lessons are skipped — a chain box holds a single character). **One error per round is tolerated**: the box turns red and shows the correct character, and you continue with the next position. The **second error within the same round ends the game**. Your score is the length of the last chain you completed.
- **Call Signs**: one random call sign *is* the chain, revealed letter by letter (`O`, `OE`, `OE1`, … up to something like `OE1WKL/P`). When you have keyed the complete call, a fresh call starts with an empty chain, and the game continues call after call. Here **no error is tolerated** — the first wrong character ends the game. Your score is the number of completed calls. Call signs use the full character set (letters, digits, and the slash) regardless of your Koch lesson, and follow your call-sign preferences (continent, common prefixes). Beware of keying ahead of what has actually been revealed — after `OE1W` your brain may want to complete a familiar call, but the next letter is whatever the generator picked.

The new character of each round is either **shown** on the display (big, until you start keying) or **sounded** in Morse code — your choice in the lobby. Sounded prompts play at your current keying speed and slightly shifted in pitch (like the Echo Trainer), so you can tell them from your own sidetone; they are not repeated. Sound mode is the harder — and the more useful — training.

Memory Chain is only available on the M32 Pocket.

### Starting the Game

From the main menu, navigate to **Games → Memory Chain**. The lobby shows the two game settings and (in Characters mode) the Koch lesson; the setting the encoder currently changes is highlighted in yellow:

| Control | Action |
|---|---|
| **Encoder (knob)** | Change the highlighted setting (Mode / Prompt / Koch lesson) |
| **FN short press** | Highlight the next setting |
| **Encoder click** | View the high-score table (of the selected mode) |
| **Paddle / key** | Start the game |
| **Encoder long press** | Quit back to the main menu |

The Mode and Prompt choices are remembered across sessions; the Koch lesson is your global lesson, the same as everywhere else.

## Playing

A row of small grey boxes shows the chain — one box per character — and the newest character is shown or sounded. Key the whole chain from the beginning. Each correctly keyed character turns its box **green**; the box you are expected to key next has a yellow frame, so you never lose your place. A wrong character turns its box **red and reveals the correct character** in it — in Characters mode you simply continue with the next box (that was your one tolerated error; a red box in the row means it is used up), in Call Signs mode the game is over.

When the whole row is coloured, the chain grows by one, all boxes return to grey, and the next round begins. In Call Signs mode a completed call is first shown in full for a moment, then the next call starts. The green boxes deliberately stay empty — the chain lives in your memory, not on the screen.

There are **no sounds for right or wrong** — feedback is purely visual, so nothing interrupts the flow of your keying.

## Controls During the Game

| Control | Action |
|---|---|
| **Paddles** | Key the chain, one character at a time |
| **Encoder** | Adjust your keying WPM (or volume — see below) |
| **FN short press** | Toggle the encoder between speed and volume |
| **Encoder long press** | Quit back to the main menu |

## Scoring and High Scores

When the game ends, the whole chain is revealed — every box shows its character, with the fatal position in red (in Call Signs mode you also see what the rest of the call would have been). In Characters mode your score is the completed chain length; in Call Signs mode it is

the number of completed calls, with the letters already banked in the failed call as a tiebreak. Each mode keeps its own top-7 high-score table, recording the result, the errors used, the Koch lesson, and whether you played with displayed or sounded prompts. Click the encoder for the high-score table; a further press returns to the lobby, a long press exits.

## 5.8 WiFi Functions

Apart from the functionality of WiFi Transceiver, you can use the WiFi feature of the ESP32 processor used in the Morserino-32 for several other functions of the device, when you are using WiFi through an access point.

Two of them were of high importance in the past:

- Uploading a text file to the Morserino-32 that can then be played in CW Generator mode or Echo Trainer mode.
- Uploading the binary file of a new firmware version to do a firmware update.

For both of these functionalities the file to be uploaded (be it a text file or the compiled binary file for the software update) must be on your computer (even a tablet or smartphone will work, as you only need basic web-browser functionality on that device), and your Morserino must be connected to the same WiFi network as your computer.



Both these functions can now be accomplished much easier by connecting your Morserino to a computer that runs Chrome, Edge, Opera or Firefox - see appendices 6 and 7 of this manual!

In order to connect your Morserino-32 to your local WiFi network, you usually need to know the SSID (the “name”) of the network, and the password to connect to it, known also as the “credentials”. And you must enter these two items into your Morserino-32. As it does not have a keyboard for convenient entry of this information, we use another way of doing it, and for this end another WiFi function has been implemented: **network configuration** (Config WiFi), which is the first you have to use before you can use any of the other WiFi functions.

For home networks that use a list of allowed MAC addresses (for security reasons), you have to configure your router and enter the M32’s MAC address before you can connect your M32 to the network. In order to be able to do so, there is also a function implemented to show the MAC address on the display.

All network related functions can be found under the menu entry **WiFi Functions**.

In software version before 2.0 the WiFi functions were not integrated into the main menu. In case you want to update from version 1.x to version 2.x through WiFi, please read **Updating the Firmware via WiFi for Versions < 2.0**.

If you have selected “EspNow” instead of an access point, the only WiFi Function available is “WiFi Select”, as all other functions require the use of an access point!

### 5.8.1 Displaying the MAC Address

This is the first entry under the menu **Wifi Functions**, and it displays the Morserino’s MAC address in the status line. Each Morserino has a unique MAC address.

You can use this information to allow the Morserino access to your WiFi network, if your router is configured to recognize only certain MAC addresses.

If you press the FN button, the Morserino-32 will return onto the menu normally. If you do nothing, the Morserino will go into deep sleep, depending on the settings you defined for that, as usual.

### 5.8.2 Network Configuration

Select the sub-menu **WiFi Config** to proceed with network configuration.

The device will start WiFi **as an access point**, thus creating its own WiFi Network (with the SSID “**morserino**”). If you check the available networks with your computer or smartphone, you will find it easily; please select this network on your computer (or tablet, or smartphone – you will not need a password to connect).

Once you are connected, enter *http://m32.local* into the browser on your computer. If your computer or smartphone does not support mDNS (Android, for example, is not supporting it, and Windows only rudimentary), you have to enter the IP address **192.168.4.1** into the browser instead of m32.local. You will then see a little form with just 3 times 3 empty fields in your browser: *SSID of WiFi network?*, *WiFi Password?* and *WiFi TRX Peer IP?*.

You only need to fill in one set of fields, but you can use two or three sets if you want to store different network configurations for different usage scenarios (e.g., connection to different WiFi networks). There is a separate entry in the WiFi menu to select which configuration you want to use.

Enter the name of your local WiFi network, and the corresponding password (you can leave the third field empty for now), and click on the “Submit” button. Your Morserino-32 will store these network credentials and then restart itself (so the network “morserino” will disappear).

The third field (*WiFi TRX Peer IP/Host?*) is used, when you want to use the Wifi Transceiver functionality using an access point, i.e. to talk to another Morserino user or other service that supports the Morserino protocol over the Internet. In such a case you have to enter the IP address or the DNS host name, if it has any, of the other Morserino or the service into

this field. See section **Wifi Trx** above. If you communicate with other Morserinos **on your local network**, you don't need an IP address there (it will use the broadcast address by default, so all Morserinos can receive what one of them sends).

Your Morserino cannot make use of a WiFi network with a "captive portal", as they are often used on public networks. These networks require that a browser is available on the device that wants to connect to the network, and the Morserino-32 does not have a browser...

Your Morserino-32 only supports WiFi networks in the 2.4 GHz band, not in the 5 GHz band.



If you previously selected EspNow through the WiFi / Select menu, you need to select an access point before you can perform WiFi configuration!



If you have configured your WiFi before, and perform this step again, the previously entered SSID name will be pre-filled in the form, and you only need to change it if necessary. The password field will be empty, but if you do not enter a new one, the old password will still be used. The TRX Peer IP address field will also be pre-filled with a value if you have entered one before. If you now delete the values in this field, this IP address will be deleted.

You can configure three different network settings; from version 4.5.1 on the network configurations will not be stored in Snapshots, this means you cannot use snapshots to recall different network settings.



An easier way to configure access points is by using your Morserino connected via USB to a Chrome, Edge, Opera or Firefox browser, and using the instructions in **Using a Browser to set up M32 Preferences**.

### 5.8.3 Checking your network connectivity

Use the sub-menu entry **Check WiFi** under **WiFi Functions** to test network connectivity.

This either shows an error message ("No WiFi" and the SSID you had entered), or a success message ("Connected!"), the SSID and the IP address the Morserino got from your WiFi router.

You might have to move your Morserino pretty close to your WiFi router (within the same room is usually OK)! The WiFi antenna of the Esp32 module is rather small and might not pick up very weak WiFi signals.

When you get an error message although you had entered the correct credentials and the Morserino is in direct vicinity of your WiFi router, you should try again – sometimes the first try is not successful, for whatever reasons…

If you press the FN button, this functions returns to the menu. If you do nothing, the Morserino will go into deep sleep, depending on the settings you defined for that, as usual.

### 5.8.4 Uploading a Text File

Once you configured your Morserino-32 with your local WiFi credentials, you are ready to upload a text file to use for your Morse code training. Currently only one file can reside on the Morserino-32, This means, whenever you upload a new file, the old one will be overwritten.

The **file** that you upload should be a plain text file, saved as UTF-8, without any formatting (no Word files, pdf documents etc.). It can contain uppercase and lowercase letters, letters with umlauts and accents, and all the characters that are part of the Koch method set, including pro-signs; see **Encoding of text files for file player** in section **What can be generated?** for how they are sent. Any other characters will just be disregarded when the file is played in Morse code. The file that you upload can be pretty large – you have about 1 MB space available for it (enough to store a copy of Mark Twain's "The Adventures of Huckleberry Finn").



See the information about encoding of text files in section **What can be generated?** – for example, you can separate a file into several parts, each of which will be treated like a separate file by the File Player.

In order to upload the file, select **File Upload** from the **WiFi Functions** menu. After a few seconds (it needs to connect to your Wifi network first) Morserino-32 will indicate that it is waiting for upload. You point the browser of your computer to *http://m32.local* (or, if that does not work, replace "m32.local" with the IP address shown on the display).



For the upload function your Morserino-32 (and of course your PC or tablet etc.) must be on your local WiFi network again!

First you will see a Login screen on your browser. Use **m32** as User ID and **upload** as password. On the next screen in your browser you will find a file selection dialog – select the file you want to upload (its name or extension doesn't matter) and click the button labelled "Begin". Once the upload is completed (it will not take long) the Morserino-32 will return to the menu, and you can now use the uploaded file in CW Generator or Echo Trainer mode.

If for any reason you need to abort the process, you have to restart the device either by completely disconnecting it from power (battery off and USB disconnect), or (for M32 1st or 2nd edition) pressing the Reset button with the help of a tiny screwdriver or a ball point pen (the reset button can be reached through the hole next to the USB connector, towards the external paddle connector).



If it fails: Make sure you use the password **upload** and NOT **update**!

## 5.8.5 Updating the Morserino-32 Firmware through WiFi

Updating the firmware of the Morserino-32 through WiFi is one way of doing it; you can also do this by using the Arduino IDE (or PlatformIO) on your computer (you also need to install a bunch of specific files and libraries for support of the hardware, and then compile the binary from the source code), or, much easier, by using a special update utility (see **Updating the Firmware via USB and an update program**), or – and **this is the easiest way** – by just using a browser and USB (see **Updating the Firmware via USB and a Browser (Webserial)**).

You can update to any version, you can "jump" versions, you can also go back to an older version.

Updating the firmware via WiFi is very similar to uploading a text file. You first need to get the binary file from the Morserino-32 repository on GitHub (*https://github.com/oe1wkl/Morserino-32* - look for a directory under "Software" called "Binaries"). Get the latest version and download it to your computer. The file name probably looks like this:

*m32_Vx.y[...].bin* with x.y being the version number.

Now get the **WiFi Functions** menu again and select the item **Update Firmw**. Similar to file upload, you point the browser of your computer to *http://m32.local* (or, if that does not work, the IP address shown on the display, *http://n1.n2.n3.n4* – replace n1.n2.n3.n4 with that IP address), and you will eventually see a Login screen. This time you use the user name **m32** and the password **update** (not **upload**!).

Again you will see a file selection screen next, you select your binary file and click the button labelled “Begin”. This time the upload will take longer – it can take a few minutes, so be patient. The file is big, needs to be uploaded and written to the Morserino-32 and verified to make sure it is an executable file. Finally, the device will restart itself and you should notice the new version number on the display during start-up.

To sum it up, these are the steps for updating the firmware through WiFi:

1. Do the network configuration as described above (for this the Morserino sets up its own WiFi network, and you use your browser to enter the name and password of your home WiFi network). You do this only once, as the Morserino will remember these credentials for future use. You might want to use the “Check WiFi” function to make sure your Morserino can connect to your network. Remember that your Morserino has to be pretty close to your WiFi router!
2. You download the new binary from GitHub to your computer.
3. You start “Update firmware” on your Morserino. After a while it will show you an IP address (which is on your home network!) and a message, that it is waiting for an update.
4. You leave your computer on your home network, and point your browser either to the IP address shown on the Morserino (*http://ww.xx.yy.zz*), or to *http://m32.local* (this works on Macs and iPhones, usually, it does not work on Windows PCs or Android devices).
5. You will get a login screen on your browser. Enter *m32* as username and *update* as password.
6. You will see a file selection dialogue. You select the binary file in your download folder, and then click „Begin”. You will see a progress bar, and after some time (can take a few minutes – even when the progress bar already shows 100%) the Morserino will restart itself, and show the new version number on the startup screen. Then you know the update was successful.



If it fails: Make sure you use the password **update** and NOT **upload**!

## 5.8.6 WiFi Select

Here you can select which network configurations should be used. SSID and Peer Host are being displayed, and you use the encoder to go through the available network configurations.

The item shown when you start this is the currently selected network configuration. If that is what you want, just go back to the menu with a long press of the ENCODER.

The first entry (numbered 0) lets you choose EspNow (WiFi peer-to-peer communication) instead of using an access point.

## 5.8.7 Practice Stats



M32 Pocket only.

The Morserino quietly keeps a log of your Koch-trainer practice: how long you've spent at each lesson, and how often you get each character right or wrong when the Echo Trainer checks your response. Since the small display isn't a great place to browse a history, you view it in a web browser instead.

Select **Practice Stats** under **WiFi Functions**. As with the other WiFi functions, the Morserino connects to **your own WiFi network** as a client (after doing the network configuration and network selection described above — see **WiFi Select** just above) and shows you its IP address on that network. No internet access is actually required — your phone or computer just needs to be on the *same* WiFi network as the Morserino. Once connected, point a browser at *http://m32.local* (or the IP address shown on the display) to see:

- **Storage** — a labeled bar showing how much of the device's flash your practice log itself takes up, separate from everything else stored on the Morserino.
- **Time spent per Koch lesson**, as a bar for each lesson you've practiced.
- **Error rate per character** — which characters trip you up most often.
- **Session history** — a list of individual practice sessions with their date, lesson, and duration.



The Morserino has no built-in clock. If your WiFi network has internet access, it first tries to fetch the time automatically (NTP); either way, it also gets the current date and time from your browser the moment you open this page (no internet needed for that), and remembers it across ordinary sleep/wake cycles (the **FN** button). Only setting the physical **power switch** to OFF, or fully draining the battery, clears it again — so if you do that between practice sessions, expect some sessions in the history to show up without a date until the next time you sync. Nothing is lost, only the date label is missing for those.

A **Clear Log** button at the bottom of the page erases the whole history — useful if you want to start tracking fresh. This cannot be undone.

You can switch this logging off entirely in the preferences menu — see **Practice Stats** in section **Preferences regarding Player Identity and Scores**.



If you mostly connect via USB rather than WiFi, the same statistics are also available in the **M32 Configuration Tool** ( `Software/Utilities/m32_config_tool.html` ) under the **Koch** tab, below the Custom Character Set section — no WiFi needed there at all.

## 5.9 Go To Sleep

This menu item, when selected, puts the Morserino-32 into a deep sleep mode, where it will consume considerable less power than when operating normally. But it will still drain the battery within a certain number of days, so this is only meant for shorter breaks between your training sessions. See the section **Powering On and Off / Charging the Battery** further up in this manual.

# 6 Preferences

You always reach the preferences menu by **double clicking** the rotary ENCODER button. This provides you with a menu of settings (you will see a > character in front the of the current preference, and the line underneath shows the current value). Rotate the encoder to lead you through the available preferences. If you want to leave the preference setting menu, just press the encoder button a bit longer, and you will be back in the operational mode from which you called the preference setting menu (or back in the menu, if you entered a double click from the menu).

When you have reached the preference you want to change, click once. Now the “>” character will be at the bottom line in front of the preference value, indicating that rotating the encoder will change this value. Once you are satisfied with the value, **click once** to return to the selection of preferences, or **press the button a bit longer** to leave the preference menu.

Obviously the preferences that can be set vary depending on the mode you are in: **When you double click while in a particular mode, you will only get to those preferences that are relevant for the current mode.** Did you double click from the Start Menu, you will be presented the complete range of preferences.

Inside a mode, the preferences of that mode come first, followed by the general ones that every mode offers (tone, time-out, display, serial and Bluetooth output, paddle polarity). The menu opens at the preference you were on when you last left it, as long as the current mode offers it – handy when you adjust the same setting in several modes. So if you last left the menu on a general preference, you start there, among the general ones, and not at the mode’s own settings. After switching on, or when the current mode does not offer that preference, the menu opens at the top of the list.



Almost all preferences can be reset to their factoy value through the Hardware Configuration Menu. See **Hardware Configuration Menu** for further information.

## 6.1 Snapshots

For different types of training you usually need different settings of the preferences – you might want to change the intercharacter- or interword spaces, or the length of character groups or words, etc. So going from one type of training to the next would require you to change various settings every time.

In order to make this easier, you can use "**snapshots**" of the settings: once you have changed everything for your first mode of training, you store all current preferences in one of eight snapshots; then you do the same with your other training modes. You can then quickly recall the settings by recalling a particular snapshot.

The "Koch Lesson" that you selected will be stored in non-volatile storage and hence will be available after a restart, but it will not be stored or overwritten in one of the snapshots. The same is true for WiFi settings, the "Serial Out" preference, the screen timeout, or your setting of speed and speaker volume.

Snapshots contain only settings that are relevant for training. Settings that concern the device itself, its connections, or the games are **not** stored in snapshots, and recalling a snapshot will never change them:

- Hardware settings: **Paddle Polar.**, **External Pol.**
- Transmitter and network settings: **Key ext TX**, **WinKeyer Tx**, **Generator Tx**, the LoRa channel
- Bluetooth keyboard settings: **BLT Kbd Output**, **BLT <AR>**
- Audio routing: **Headphone Output**, **Decoded on IO**
- Device behavior: **Encoder Click**, **Quick Start**, **Decoder Chars**
- Remote keying settings: **Rig Delay**, **Rig Limit Kyr**, **Rig Limit SK**, **Rig 1st Ext**, **Rig Hang**, **Glitch Filter**
- Game settings: **Invader Orient.** and theThe QSO Bot settings (**Contest Type**, **QSO Difficulty**)

(Snapshots stored with older firmware versions may still contain some of these settings; they are ignored when recalling, and cleaned out when you overwrite the snapshot.)

### 6.1.1 Storing a snapshot

First, double click to get into the preference menu. Now a **long press** of the **FN button** gives you an opportunity to select with the ENCODER at which location you want to store the current settings, from **Snapshot 1** to **Snapshot 8**; a further option reads **Cancel Store** and allows you to get out without storing a snapshot. Snapshot locations that are **already in use** are shown in **bold**, but you can overwrite those as well. Clicking on the ENCODER knob stores the snapshot in the desired location, and gives you a quick indication about its success: "Snap N STORED" means the snapshot has been written and verified; if the

settings storage is full, you will see “Snap N FAILED!” instead — in that case free up space by deleting a snapshot you no longer need, or by using **Reset Scores** in the preferences menu.

If the settings storage is running low, the Morserino warns you right after switching it on (“Settings mem. almost full!”), together with the same advice: delete snapshots you no longer need, or reset the game scores.

### 6.1.2 Recalling a snapshot

Again, you double click the ENCODER knob first to get into the preferences menu. Now **a short click on the FN button** lets you select with the ENCODER which of the stored snapshots you want to recall, and you recall it by clicking the ENCODER button; again, there is an option that reads **Cancel Recall**, which allows you to get out without recalling a snapshot. If there are no snapshots stored, you get a message “NO SNAPSHOTS” and you can leave by clicking any of the buttons.

### 6.1.3 Deleting a snapshot

You can also delete a snapshot that is no longer needed, or that was created in error. Proceed as if you wanted to recall a snapshot, select the one you want to delete, and then **click the FN button** for deleting it. There will be a confirmation dialog to make sure you really want to delete that snapshot. If you rotete the ENCODER to “Yes” and click it, that snapshot will be deleted, and, like with storing and recalling snapshots, a short message will indicate that the action was successful.

The easiest way to configure your preferences and snapshots is to connect your Morserino via USB to a computer running Chrome, Edge, Firefox or Opera and using the instructions in the appendix **Using a Browser to set up M32 Preferences, and upload Text Files**.

### 6.1.4 Snapshot bundles

A CW course or club can hand out its practice presets as one file, a **snapshot bundle**. In the M32 Configuration Tool, open the **Snapshots** tab and click **Import Snapshot Bundle…**, then choose the file. The tool first checks the file against your Morserino and shows each preset, the slot it goes into, and which of your stored snapshots it would replace; you can leave out single presets. If the bundle comes in two spacings — wide spacing for writing down what you hear, Koch spacing for head copy — you choose one here.

Each preset changes only the settings the bundle lists; everything else in it — speed, pitch, your colour theme and so on — is taken from your own settings. Afterwards your own settings and menu position are back as they were, and you recall a preset like any other snapshot. The Koch lesson is never part of a snapshot, so the presets work at whatever lesson you have reached.

The bundle file comes from your CW school or course: they point you to the file that goes with their course. If you want to write a bundle for your own course, see Snapshot Bundles in the `Documentation` folder of the Morserino-32 repository on GitHub.

## 6.2 Player identity and game scores

Two preferences let you tell the Morserino who you are. **Call Sign** and **Op Name** are used by the games (**Fight the Pileup**, **Morsel**) and by the **QSO Bot**. Select either item in the preferences menu and an on-screen text editor opens (it works the same on the OLED and the LCD):

- **turn the ENCODER** to choose a character,
- **click the ENCODER** to add it to the text,
- **click the FN button** to delete the last character,
- **long-press** either button when you are done.

Call Sign accepts letters, digits and the slash; Op Name accepts letters and a space. The current value is shown next to the preference.

**Reset Scores** clears the saved high scores and game progress for all games (Morse Invaders, Morsel, Radio Cave, the Trailblazer and Fox Hunt grid-maze games, and Memory Chain). Selecting it shows a confirmation: press **FN** to confirm, or click the ENCODER to cancel.

## 6.3 List of All Morserino-32 preferences

Bold values are default or recommended ones. When called from the start menu, all preferences are available for modification, when called from a running mode, only those that are relevant for this mode are available — the mode's own settings first, then the general ones that every mode offers.

### 6.3.1 General Preferences

A number of preferences are very generic in nature, and therefore apply to all modes of the Morserino-32.

| Preference Name | Description | Values |
|---|---|---|
| Encoder Click | Turning the encoder may generate a short tone burst, or be silent | Off / **On** |

| Preference Name | Description | Values |
|---|---|---|
| Tone Pitch Hz | The frequency of the side tone, in Hz | A series of tones between 233 and 932 Hz, corresponding to the musical notes of the F major scale from Bb3 to Bb5 (2 octaves) |
| Tone Softness | (Only for M32 Pocket) Softens the attack and release edges of the CW side tone, similar to what an RC low-pass filter does to the keying edges in a real transceiver. Reduces harshness, especially on short elements such as a single dit. Takes effect immediately. | 1 – 9 ms, in steps of 1 ms (**5 ms**) |
| Time Out | If the time specified in this preference passes without any display updates, the device will go into deep sleep mode. You can restart it by pressing the FN button. | No timeout / **5 min** / 10 min / 15 min |
| Quick Start | Allows you to bypass the initial menu selection, i.e. at startup the device will immediately begin executing the mode that had been in effect before last shutdown. | ON / **OFF** |
| Output Case | This changes the case of decoded characters on the display (and also on serial output via USB, and on Bluetooth keyboard output!) from lower case to UPPER CASE. | **lower** / UPPER |

| Preference Name | Description | Values |
|---|---|---|
| Decoder Chars | Which characters are shown for the few Morse codes that mean different letters in different languages, or that only the ITU standard (ITU-R M.1677-1) defines. It applies to CW Keyer, Remote Keyer, CW Decoder, the transceiver modes and the Echo Trainer (also in the Koch Trainer). In the Echo Trainer, a code that stands for several characters is always taken as the one in the word you are to repeat: a correctly keyed <kn> stays <kn> with **ITU**, and `.--.-` for the å of a Swedish text is right whatever you set here. The games and the QSO BotThe QSO Bot always use **Standard**.<br>**Standard**: as always – `-.--.` is <kn>, `.-.-` ä, `---.` ö, `..--` ü, `----` ch; codes it does not know show as *.<br>**ITU**: as Standard, but `-.--.` is „(“, and „)“ ( `-.--.-` ) and é ( `..-..` ) are added.<br>**Fr/Es/Pt** (French, Spanish, Portuguese): as Standard, plus à ( `.--.-` ), é ( `..-..` ), è ( `.-..-` ), ç ( `-.-..` ) and ñ ( `--.--` ).<br>**Sv/Fi** (Swedish, Finnish): as Standard, plus å ( `.--.-` ).<br>**Da/No** (Danish, Norwegian): å ( `.--.-` ), and æ and ø where Standard has ä and ö.<br>On Bluetooth keyboard output these letters are typed without their accents (see **Using the Bluetooth Keyboard functionality**). | **Standard** / ITU / *Fr/Es/Pt* / *Sv/Fi* / *Da/No* |
| Headphone Output | (Only for M32 Pocket) This setting determines what happens when headphones or another device are connected to the headphone output. With the default setting, output will be via the headphones and the speaker will be muted. With “*line-out*,” output will be via the headphone output at full volume and via the speaker as normal. With “*l-o: Var. Vol.*” it is similar, but the output via the plug is at the set volume, and with “*l-o: Lsp Muted*” the output via the plug is at full volume and the speaker is muted. | **Phones** / line-out / l-o: Var. Vol. / l-o: Lsp Muted Caution: Never plug in headphones when using the line-out options! As playback may occur at full volume, this could cause damage to your hearing or the headphones! |
| Theme | (For devices with a color screen only, e.g. M32Pocket) You can set a color theme for the display, so you are not confined to white on black. Each theme (Plain included) also shows Morse-code text in its own accent colour — set apart from menu and status text — and renders the Echo Trainer OK/ERR results in green and red. | **Plain** (= white on black) / Blues / ePaper / Mandarin / Darkroom / Veggie / Garnet / Lemonade / Complements |

| Preference Name | Description | Values |
|---|---|---|
| Font Size | Size of the text in the scrolling display area (and in menus and other screens using the same area): Normal, or Small for more characters per line. | **Normal** / Small |
| Invader Orient. | (For M32 Pocket only) You can select your favorite orientation for games like the Morse Invader game, Portrait (default) or Landscape. If you select Landscape, it uses left-handed orientation if you have set this in the Hardware Configuration. | **Portrait** / Landscape |
| Serial Output | Here you control what is being sent to serial port (USB connector); distinction is made between keyed characters (output from the iambic keyer), decoded characters (from CW decoder or using a straight key), and "generated" characters (from CW Generator etc., also from the receiver side of the LoRa or WiFi Transceiver modes). **Nothing** sends out none of these characters (but certain system or error messages might still appear), while **All** send out everything. In addition, other information can be sent and received via the serial port through the M32 Serial protocol, if the connected computer software supports this. See also **Using the Serial Output of the M32**. This setting also applies to the character stream sent to an app connected over Bluetooth (see the **Bluetooth Use** preference below). While **USB Keying** is active in CW Keyer, there is no serial port for these characters. | Nothing / Keyer / Decoded / Keyed+Decoded / Generated / **All** (default since V. 4.3) |

| Preference Name | Description | Values |
|---|---|---|
| Bluetooth Use | Defines what the Bluetooth radio is used for. The first four options (besides **No Bluetooth**) are keyboard modes: The VBand option allows the Morserino to be used as a VBand dongle (for VBand see *https://hamradio.solutions/vband/*), **Decoded output** sends all decoded characters not only to the display, but also out via Bluetooth, and the **Generic Kbd** option does more or less the same as **Decoded output**, but it sends the code for the "**Enter**" Key (New Line) when you key <KA> (new message), and for the "**Backspace**" key when you key <HH> (i.e. 8 dits). The M32 will appear as a US keyboard (QWERTY layout). *Bluetooth keyboard output is only active in CW Keyer mode (see also **Using the Bluetooth Keyboard functionality**).* If you change this setting while in CW Keyer, the keyboard starts or stops as soon as you leave the preferences. The last option, **BLE Serial**, instead makes the M32 Serial Protocol (see **Using the Serial Output of the M32**) available over Bluetooth Low Energy, so apps on phones and tablets can remote-control the Morserino and send text to be keyed as CW — without a USB cable; it takes effect on the next return to the main menu. Note that, like a USB protocol session, an active BLE protocol session prevents the automatic power-off timeout — keep this in mind when running on battery. | **No Bluetooth** / VBand Kbd / Decoded output / VBand+Decoded / Generic Kbd / BLE Serial |
| USB Keying | Acts in **CW Keyer** only. Sends your keying over the USB cable, not characters: as a USB keyboard for vBand, or as MIDI. While one of these is active there is no serial port, so **Serial Output** does not reach the cable. See **Using USB Keying: vBand and MIDI over the USB cable**. | **Off** / VBand / MIDI Paddles / MIDI Keyer |

## 6.3.2 Preferences regarding Key, Paddles and Keyer

These preferences control the behavior of the paddles (built in or external), primarily also the timing preferences relevant for Iambic Keying, or the use of an external straight key (set the **Keyer Mode** to **Straight Key** in order to use a straight key).

| Preference Name | Description | Values |
|---|---|---|
| Paddle Polarity | Defines which paddle side is for dits, and which for dahs | -. dah-dit / **.- di-dah** |
| External Pol. | Allows to reverse the polarity of an external paddle. Use this if your external paddle is wired "the wrong way", so that dots and dashes of internal and external paddle are all on the same side. | **Normal** / Reversed |
| Keyer Mode | Sets the Iambic Mode (A or B), Ultimatic, Non-Squeeze or Straight Key; see the section **CW Keyer** | Curtis A / **Curtis B** / Ultimatic / Non-Squeeze / Straight Key |
| CurtisB DahT% | Timing in Curtis B mode for dahs; see the section **CW Keyer**. Applies to Iambic B only — Ultimatic ignores it. 0 – 100, in steps of 5 | [**35 – 55**] |
| CurtisB DitT% | Timing in Curtis B mode for dits; see the section **CW Keyer**. Applies to Iambic B only — Ultimatic ignores it. 0 – 100, in steps of 5 | [**55 – 95**] |
| AutoChar Spc | Minimum spacing between characters | **Off** / min. 2 / 3 / 4 dots |
| Latency | Defines how long after generating the current element (dot or dash) the paddles will be „deaf". If it is 0%, you have to release the paddle while the last element is still „on". If set to 87.5%, the paddles will only react to a paddle press after 7/8 of a dot length. Has no effect in Ultimatic mode, which handles the paddles its own way. | A value between 0% and 87.5%, meaning 0/8 to 7/8 of a dot length (default is **50%**, i.e. half a dot length). |
| BLT <AR> | Only relevant in **Generic Kbd** mode (see **Bluetooth Use** in the general preferences); offered in **CW Keyer** only, the one mode that types over Bluetooth. Determines how the <AR> prosign is sent over Bluetooth: as the literal character "**+**" or as a soft line break (Shift+Enter). | **+** / Linefeed |

### 6.3.3 Preferences regarding Koch Character Sequence

If you follow courses by various institutions, they will follow a certain order introducing Morse code characters to you. Here you can select which order you want to follow.

| Preference Name | Description | Values |
|---|---|---|
| Koch Sequence | This determines the sequence of characters when you use the Koch method for learning and training. You can also use your customized character set by choosing Custom Chars – see the section **Koch: Select Lesson**, the last paragraph. | **M32** (native order, also used by JLMC – Just Learn Morse Code) / LCWO / CW Academy / LICW Carousel / Custom Chars / |
| LICW Carousel | This defines the "Entry Point" into the LICW Carousel curriculum (only relevant if the preference **Koch Sequence** is set to **LICW Carousel**). When you start a course in BC1, you should set this accordingly, and also set it again when you join the carousel classes for BC2. | **BC1: r e a** / BC1: t i n / BC1: p g s / BC1: l c d / BC1: h o f / BC1: u w b / BC2: k m y / BC2: 5 9 , / BC2: q x v / BC2: 7 3 ? / BC2: <ar> <sk> = / BC2: 1 6 . / BC2: z j / BC2: 2 8 <bk> / BC2: 4 0 |

## 6.3.4 Preferences regarding CW Generation

The following preferences control how characters are generated and played randomly, or how text files are being played as Morse characters. I'd like to draw your attention to **Interchar Spc** and **Interword Spc** primarily, as through those preferences you can achieve what is otherwise known as "Farnsworth Speed" or "Wordsworth Speed", respectively. Of course, these preferences are also relevant for the Echo Trainer!

| Preference Name | Description | Values |
|---|---|---|
| Interchar Spc | The time (in lengths of a dit) that is inserted between characters (see section **CW Generator**). | 3 – 45 [**3**] |
| Interword Spc | The time (in lengths of a dit) that is inserted between words (see section **CW Generator**). This also has some effect in the decoder, as it helps the decoder to decide when to insert a space. | 6 – 105 [**7**] |
| Random Groups | For the output of groups of random characters, determine which character subsets should be included | Alpha / Numerals / Interpunct. / Pro Signs / Alpha+Num / Num+Interp. / Interp+ProSn / Alpha+Num+Int / Num+Int+ProS / **All Chars** |

| Preference Name | Description | Values |
|---|---|---|
| Length Rnd Gr | Here you select how many characters there should be in each group of random characters; traditionally this is 5, but for training it might make sense to start with a smaller number. | Fixed lengths 1 – 6, and 2 to 3 – 2 to 6 (length chosen randomly within these limits) [**5**] |
| Practice Set | Opens an on-device picker to build your own practice character pool: turn the ENCODER to browse every character the Morserino can send — letters, digits, punctuation and the pro signs, which the picker shows as tags such as `<ka>` (followed by ä ö ü and ch, the round brackets and é è à ç ñ å æ ø), click to add the highlighted one (each character can be added only once), the FN button removes the last one added, and a long press finishes and saves the set. Shows as "(not set)" until you have added at least one character. It is unrelated to the Koch Character Sequence: it feeds the **Practice Set** entries under **CW Generator** and **Echo Trainer** (sections **5.2** and **5.3**), not the Koch Trainer's own sequence; the one place it reaches the Koch Trainer is **Boost Practice** below. | *(opens the picker; not an adjustable value)* |
| Boost Practice | Raises the odds that characters from your **Practice Set** (see **Practice Set** above) come up: in Random Characters groups, on top of the **Random Groups** subset selected above; and in the Koch Trainer's character generation (fixed or Adaptive), on top of whichever characters the current Koch Lesson has unlocked. It never overrides Koch's own weighting of newer/adaptive characters – it only asks Koch's scheme again when the draw misses a Practice Set character, so the "learn new characters more" behaviour is preserved exactly. Only affects character generation – Words, Abbreviations and Call Signs are unaffected. Has no effect while Practice Set is empty; a Practice Set character outside the currently active character pool (the **Random Groups** subset, or the current Koch Lesson) is never boosted in on its own. | **Off** / Moderate / Strong |
| Length Calls | Select the maximum length of generated call signs (not used for **Prefixes**) | **Unlimited** / max. 3 – max. 6 |

| Preference Name | Description | Values |
|---|---|---|
| Calls Region | Select if you want to see call signs (and prefixes) from around the world, or just from a certain continent. **VK/ ZL** narrows it further still, to Australian and New Zealand call signs only: the call areas are weighted by population, so VK2 and VK3 come up far more often than VK8 or VK0, and roughly one call in six is a ZL. **This parameter is ignored when the call length has been set to a maximum of 3 characters** — there is no 3-character VK or ZL call either. | **All** / Europe / N America / S America / Africa / Asia / Oceania / VK/ZL |
| Call Prefixes | You can use this setting to filter out very rare prefixes, and get only call signs with more common prefixes. It applies to **Prefixes** too. | **Common only** / All |
| Length Abbrev | Select the maximum length of the randomly generated common CW abbreviations and Q groups | **Unlimited** / max. 2 – max. 6 |
| Word Length | Select the length of the randomly generated common English words: a maximum, or 4 letters or more (called **Length Words** before 9.1) | **Unlimited** / up to 2 – up to 6 / 4 or more |
| Max # of Words | When the specified number of words or letter groups has been generated, the Morserino-32 will generate a final AR ("+") pro sign to indicate that this sequence is over, and then pause and wait – with a touch of a paddle (or clicking the ENCODER knob) it will continue and generate the next sequence of words. This closing "+", like the opening *vvv<ka>*, is shown in bold on the display. *(When "Auto Stop" is active, this preference will be ignored in CW Generator mode.)* | **Unlimited** / 5 to 250 in steps of 5 |
| Stop/ Next/Rep | Stops the generating of morse characters after each word in CW Generator and Koch Generator modes to help with learning head copying. Continue by touching the right paddle to play the next word, or by touching the left paddle to repeat the word. *This option and the option 'Each Word 2x' are not compatible with each other, setting one to ON, will set the other to OFF automatically.* | ON / **OFF** |
| CW Gen Displ | Select, how the CW Generator or the CW Transceivers should display what is generated or received | Display off / **Char by Char** / Word by word |
| Randomize File | If set to „On", file player will skip n words after each word sent (n = random number between 0 and 255) | **Off** / On |

| Preference Name | Description | Values |
|---|---|---|
| Each Word 2x | In the CW Generator mode, each “word” (characters between spaces) will be output twice, as a help to learn to copy by ear. *This option and the option ‘Stop/Next/Rep’ are not compatible with each other, setting one to ON, will set the other to OFF automatically.* There are three ON settings: **ON** (if an increased inter-character space has been set, it will also be honored during the repetition; *ON less ICS*: the additional inter-character space will be reduced during the repetition; *ON true WpM*: the increased inter-character space will be ignored during the repetition. | **OFF** / ON / ON (less ICS) / ON (true WpM) |

## 6.3.5 Preferences regarding Echo Trainer

The following preferences control the essential properties of the Echo Trainer (however, Tone Shift also applies to LoRa Trx and WiFi Trx, and to the tone marker of the File Player).

Increasing the value for “Interword Space” also increases the “grace time” after the prompt before you must begin keying your response!

| Preference Name | Description | Values |
|---|---|---|
| Echo Repeats | Here you can set how often a word is repeated if the answer is either too late or incorrect before the Echo Trainer generates a new word. If the value is 0, then the next word is always a new one, regardless of whether the response was right or wrong. | 0 – 6 / Forever (Default is **3**) |
| Echo Prompt | This defines how you are prompted in Echo Trainer mode. The possible settings are: **Sound only** (default; best for learning to copy in your head), **Display only** (the word you are supposed to enter is shown on the screen, no audible code is generated; good for training paddle input), and **Sound & Displ**, i.e you hear the prompt AND you can see it on the display. | **Sound only** / Display only / Sound&Displ |
| Confrm. Tone | This defines if an audible confirmation tone should be sounded in Echo Trainer mode. If you turn it off, the device just repeats the prompt when the response was wrong, or sends a new prompt. The visual indication of “OK” or “ERR” will still be visible when the tone is turned off. | **ON** / Off |

| Preference Name | Description | Values |
|---|---|---|
| Tone Shift | The pitch of the tone, when you are using the Echo Trainer mode or transmitting in LoRa Trx or WiFi Trx, can either be the same as the one you get from the receiver (or from the prompt in Echo Trainer mode), or can be a half tone lower or a half tone higher. The File Player's tone marker switches to this shifted pitch, too. | **No Tone Shift** / Up 1/2 Tone / Down 1/2 Tone |
| Adaptv. Speed | If this is set to ON, the speed will be increased by 1 WpM whenever you gave a correct response in Echo Trainer mode, and will be decreased by 1 whenever you made a mistake. | ON / **OFF** |
| Echo Speed Max | Set this to the maximum speed you would like to use for keying in Echo Trainer mode. If you set the speed faster than this value with the Encoder, or if it is getting faster as a result of adaptive speed, the speed for keying your input stays at that maximum. | **No limit** / 5 – 50 wpm (in steps of 5 wpm) |
| Echo Think T. | Adds a fixed pause after the prompt before the Echo Trainer expects your response, useful for head-copy practice. | **0 s** – 20 s (in steps of 1 s) |

### 6.3.6 Preferences regarding Transmitting, Decoding and QSO Bot

These preferences control some functions available for transmitting (either directly through LoRa or Wifi, or through keying an external transmitter), for decoding Morse code characters, and for the QSO Bot (see section **QSO Bot**).

| Preference Name | Description | Values |
|---|---|---|
| Key ext TX | Here you determine, if a connected Transmitter will be keyed when you use the device. **Gen** = generator modes, **RX** = LoRa or WiFi Receiver modes. The option **Keyer & Gen.** makes the Morserino key an external transmitter also from generator mode, useful for training transmissions, for example. The option **Keyer&Gen.&RX** is useful if you want to transmit on your transmitter what the Morserino received through LoRa or WiFi (for remote operations). | Never / **CW Keyer only** (and also for Transceiver modes) / Keyer & Gen. / Keyer&Gen.&RX |

| Preference Name | Description | Values |
|---|---|---|
| WinKeyer Tx | (Only for M32 Pocket) Which mode starts when a logging program opens the WinKeyer while the Morserino is in the main menu (section **WinKeyer**): **Local** starts **WinKeyer**, which keys a transmitter connected to “to Tx”; **Remote** starts **Remote WinKeyer**, which keys a distant transmitter over a remote keying link (section **Keying a remote transceiver**). Selecting either mode from the menu is not affected. | **Local** / Remote |
| Generator Tx | This allows the CW Generator to send, what it generates, either via LoRa or via WiFivia WiFi – so you can have one device generating something, and several others receiving the same sequence. This can be used in all CW Generator and Koch / CW Generator modes, including File Player. Could be useful for groups of learners, as you can transmit e.g. contents of a file to a group of people. Obviously this should only be used with caution (and not for extended period of time) on public M32 chat servers, but can be very handy for a group on the same network segment, using broadcast as TrX peer, or a privately set up chat server, or via LoRa (or WiFi Trx using EspNow) when all participants are close enough together. *Be aware that you must have an antenna connected when you transmit via LoRa, otherwise the LoRa transceiver will eventually be destroyed!* | **Tx OFF** (= do not transmit generated CW) / LoRa Tx ON (transmit generated code through LoRa) / WiFi Tx ON (transmit generated code through WiFi).**WiFi Tx OFF** (= do not transmit generated CW) / WiFi Tx ON (transmit generated code through WiFi). |
| Trx Channel | Selects which channel LoRa or EspNow (a peer to peer Wifi mode, not using access points) will be used. For LoRa this is a virtual channel, for EspNow itIt actually changes the QRG between WiFi channel 6 (**Standard Ch**) and 1 (**Secondary Ch**). More infos on EspNow can be found in the section **Wifi Trx.** | **Standard Ch** / Secondary Ch |
| Bandwidth | Defines the bandwidth the CW decoder is using (this is implemented in software using a so called Goertzel filter).<br>**Wide** = ca. 600 Hz, **Narrow** = ca. 150 Hz; center frequency = ca 700 Hz. | **Wide** / Narrow |

| Preference Name | Description | Values |
|---|---|---|
| Decoded on I/O | Normally, decoded CW that comes from an external source (when using any of the transceiver modes, or using the decoder to decode audio input) is played on the speaker (or headphones), but not sent to the external audio I/O port. With this preference set to „ON", the audio is also sent to the external audio I/O port.<br>**On the M32Pocket, this setting is ignored!** | On / **Off** |
| QSO Difficulty | How forgiving and how chatty the QSO Bot partner is (all QSO Bot modes, section **QSO Bot**). **Beginner** is patient (more time to reply, an extra retry), spells signal reports out in full (599 rather than 5nn), and uses clear, calm prompts. **Advanced** keeps a tighter rhythm and uses curt, seasoned-operator prompts. **Intermediate** sits in between. | Beginner / **Intermediate** / Advanced |
| Contest Type | Only relevant in the QSO Bot's **Contest** mode (section **QSO Bot**): which contest exchange the bot uses. **CQ WW** sends 5NN + the CQ zone of the bot's callsign; **WPX/Sprint** sends 5NN + a serial number. | **CQ WW** / WPX/Sprint |

## 6.3.7 Preferences regarding Remote Keying

These preferences configure the two remote keying modes (section **Keying a remote transceiver**). The five **Rig** items are read by the Morserino that keys the transmitter, so set them on that device — or, more conveniently, from the operating position while the link is up, as described in that section. **Glitch Filter** belongs to the Morserino you key. **Pass Phrase** must be set, identically, on both.

| Preference Name | Description | Values |
|---|---|---|
| Rig Delay | How long the rig holds each key edge before it plays it out, so that network jitter cannot deform your CW. **Adaptive** lets the rig find and adjust the delay by itself. A fixed value is the start value and the lower limit: the rig may raise it when edges arrive late, and returns to your choice when the path recovers. A larger value is safer on a poor path and delays the distant transmitter accordingly; it never affects your local sidetone. | **Adaptive** / 50 / 100 / 150 / 200 / 250 / 300 / 400 / 500 / 600 ms |

| Preference Name | Description | Values |
|---|---|---|
| Rig Limit Kyr | Safety limit at the rig: the longest single mark accepted from a paddle keyer before the rig lifts the key. A keyer cannot legitimately produce a mark of several seconds, so this can be tight. | 1 … 30 s (**3**) |
| Rig Limit SK | The same limit for a straight key or a bug, where holding the key down — to tune, for instance — is normal. Hence the more generous default. | 1 … 30 s (**10**) |
| Rig 1st Ext | Break-in compensation: how much earlier the rig starts the first element after a pause, to make up for the transceiver's changeover time (the ARRL bench tests call it the *first dit on delay*). The end of the element is not moved, so what goes on the air is what you keyed. 0 switches the compensation off — the right setting when the transceiver is keyed through a PTT line or runs full break-in. | 0 … 30 ms (**0**) |
| Rig Hang | The transceiver's own break-in delay, as given in its manual, so that the Morserino knows when the transceiver has dropped back to receive and the next element will be clipped. Only relevant when **Rig 1st Ext** is not 0. | 0 … 3000 ms in 50 ms steps (**250 ms**) |
| Glitch Filter | At the keying end: how long a contact must hold before it is taken as a real key edge. Contact bounce from a straight key or a bug is discarded; a genuine edge keeps the time at which the contact was first made, so the filter costs no timing accuracy. It is not applied to the internal keyer, whose edges are clean by construction. | 1 … 5 ms (**3**) |
| Pass Phrase | The remote keying pass phrase, the same on both Morserinos. Entered with the encoder like **Call Sign**: turn to choose a character, click to add it, FN deletes the last one, a long press finishes. It is never shown — the value reads *(set)* or *(not set)* — and an entry that is empty or shorter than 12 characters leaves the stored pass phrase unchanged. Only lower-case letters, digits and . , : - / = ? @ + can be entered — the same rule as in the Configuration Tool and the **Config WiFi** web form. | 12 … 32 characters |

## 6.3.8 Preferences regarding Player Identity and Scores

These items appear at the very end of the preferences list. The first two set your personal identity, which is used by the **Fight the Pileup** game and by the **QSO Bot** (section **QSO Bot**); **Reset Scores** clears the stored game scores, and **Practice Stats** switches the logging described below on or off. Call Sign and Op Name can also be set over USB through the M32 Serial protocol (for example with a browser configuration tool).

| Preference Name | Description | Values |
|---|---|---|
| Call Sign | Your own amateur radio call sign. Enter it with the encoder and buttons. It is stored in upper case and used as your station call in **Fight the Pileup** and the **QSO Bot**. | up to 8 characters (stored as UPPER CASE) |
| Op Name | Your operator name (for example your first name). Enter it with the encoder and buttons. It is stored in upper case and used together with your call sign in **Fight the Pileup**. | up to 8 characters (stored as UPPER CASE) |
| Reset Scores | This is an action, not a setting: it clears the stored high scores and saved progress of the games — the **Morse Invaders** high-score table, the **Morsel** high scores, the **Radio Cave** saved progress, and the **Trailblazer**, **Fox Hunt**, and **Memory Chain** high-score tables. You are asked to confirm by pressing the **FN** button. (Fight the Pileup keeps no persistent high score and is not affected.) | press FN to confirm |
| Practice Stats | **M32 Pocket only.** Switches the Koch-lesson-time and per-character error-rate logging described under **Practice Stats** (section **WiFi Functions**) on or off. Turning it off does not erase what was already logged — use the Clear Log button on the Practice Stats web page for that. | **On** / Off |

# 7 Appendices

## 7.1 Hardware Configuration Menu

There is a hardware configuration menu that can be reached by **pressing a paddle (or external paddle or straight key) while switching the M32 on**. You can then select the configuration you want to perform by rotating the encoder knob, and pressing it once the right option shows up.

The selectable options are **Calibr. Batt.** (calibration of battery measurement), **Flip Screen**, **Reset Defaults** (reset all preferences to their factory values), **LoRa Config.** and **CancelFlip Screen**, **Reset Defaults** (reset all preferences to their factory values), **CN3: Touch / CN3: Mechan.** (the paddle type on the CN3 connector) and **Cancel** (which just leaves this menu and continues with regular start-up of the M32).

### 7.1.1 CN3 Connector: touch or mechanical paddle (M32 Pocket only)

The M32 Pocket has two paddle inputs: the 3.5 mm jack (for a mechanical paddle or key), and the small **CN3** connector, which is normally used for the capacitive **touch** paddles. If you prefer, you can instead connect a **mechanical** paddle or key to CN3 — no hardware modification is needed, only this setting.

The menu item shows the current setting: **CN3: Touch** (the default) or **CN3: Mechan.** To change it:

1. Start your M32 while holding a paddle (touch paddle, the paddle on the 3.5 mm jack, or a straight key) pressed, to enter the Hardware Configuration menu.
2. Rotate the ENCODER until the CN3 item shows, and press the ENCODER knob.
3. Rotate the ENCODER to choose **Touch** or **Mechanical**, then press the ENCODER knob to confirm.

If you changed the setting, the M32 re-boots so the CN3 pins come up in the chosen mode. In **Mechanical** mode the touch paddles on CN3 no longer work (the two pins are read as an ordinary paddle instead); the 3.5 mm jack keeps working in both modes. Note that a mechanical paddle plugged into CN3 will also let you into this menu while the setting is still on Touch, so you can always switch modes.

### 7.1.2 Flipping the display screen for left-hand use

This is probably only relevant for the M32Pocket! With the M32Pocket, if you want to key with your left hand, the normal display would be upside down; with this configuration option the display is rotated by 180° to allow left-hand use.

1. Start your M32 while holding the touch paddles (or external paddles, or straight key) pressed.
2. Select the Option **Flip Screen** with the rotary encoder, and pressing the ENCODER knob.

The M32 will re-boot, with the display now rotated 180°.

### 7.1.3 Calibration of Battery Measurement



For the M32Pocket, calibrating battery measurement is not necessary, and therefore this item is only available on 1st and 2nd edition Morserinos.

The built-in capability of Heltec modules to measure battery voltage unfortunately is not very reliable. Various factors apparently contribute to the problem: a measurement error within the ESP32 processor due to a slight variation of the reference voltage for each chip (leading to a relatively small error), and problems with the voltage divider circuit on the Heltec module (leading to pretty big variations among the modules). Although measuring the battery is not very crucial for the operation of the Morserino-32, it is nevertheless a nuisance, and can also lead to the situation that the M32 cannot be switched on, as the firmware thinks that the voltage is too low, when in reality it would still be sufficient.

In order to calibrate the voltage measurement, you have to measure the actual battery voltage of your Morserino-32 with the help of a multimeter. Once you know this value, you perform the following steps:

1. Start your M32 while holding the touch paddles (or external paddles, or straight key) pressed.
2. Select the Option **Calibr. Batt.** with the ENCODER, and pressing the ENCODER knob.
3. You will see a voltage value (in Millivolts) on the display. Now rotate the ENCODER until the displayed value is as close as possible to the measured battery voltage.
4. Press the ENCODER knob to store the calibration value, and to continue with a new boot-up of the M32.



If your battery is reasonably new, and you know for sure that it is fully charged, as it has been in charging mode long enough (>10 hours for 1st & 2nd edition Morserinos, >3 hours for M32 Pocket), you can assume a battery voltage of 4.2V and use that value instead of measuring the battery.

### 7.1.4 Configuring LoRa Band, Frequency and Output Power

Obviously this section is only applicable if you have a Morserino with LoRa capability (like a 1st or 2nd edition Morserino).

If you have a standard 433 MHz Heltec module in your Morserino-32 (1st or 2nd edition), which is practically always the case, it has been already preconfigured for the right band and a default frequency within that band.

If you have to change either the LoRa frequency within the standard band, or you use a Heltec module for the 868 and 920 MHz bands, you have to configure your Morserino-32 before you use the LoRa capabilities.

The following bands and frequency ranges can be configured in the Morserino-32 for Heltec modules supporting the upper UHF LoRa modules:

- 868 MHz band: 866.25 to 869.45 MHz in steps of 100 kHz (default: 869.15 MHz)
- 920 MHz band: 920.25 to 923.15 MHz in steps of 100 kHz (default: 920.55 MHz)

The default Heltec modules supports the 433 MHz band only, and the Morserino-32 can be configured to use 433.65 to 434.55 MHz in steps of 100 kHz (default: 434.15 MHz).

In order to configure the Morserino-32 for non-standard frequencies and bands, or to configure the output power, please proceed as follows:

1. Start your M32 while holding the touch paddles (or external paddles, or straight key) pressed.
2. Select the Option **LoRa Config.** with the rotary ENCODER.
3. First you will be asked to select the desired band (select 433 for the default LoRa module, and either 868 or 920 for the upper UHF LoRa module); rotate the encoder to the desired band, and click the ENCODER knob once. **The band selection has to fit the Heltec module you are using!**
4. Now your are being asked to select a frequency within your selected band. The first frequency shown is the default for that band – if that is OK, just click the ENCODER knob once, otherwise select a frequency by rotating the ENCODER and clicking the knob once you have found the correct frequency.

5. In a further step you can configure the output power of the LoRa transceiver. The default is 14 dBm (= 25 mW), and you can set it in several steps between 10 dBm (=10 mW) and 20 dBm (=100 mW).



*Be aware of applicable regulations in your jurisdiction, there might be a legal limit regarding output power! Be also aware that the higher the output power, the higher the risk of destroying the LoRa transceiver when used without proper termination (a suitable antenna or a dummy load).*

Immediately after that the Morserino-32 will start normally, with the now selected LoRa settings in effect. On the top line of the Startup Screen you will see the configured QRG for LoRa as a 5-digit number (e.g. 43415 for the default in the 433 MHz band).

### 7.1.5 Resetting Preferences to their Factory Defaults

This item — **Reset Defaults** in the Hardware Configuration menu — resets all preferences to their factory default, but it does not change any hardware configuration settings, nor does it delete or modify any settings stored in snapshots.

## 7.2 More information about LoRa

When morse code is packed into a LoRa data packet, dots, dashes and pauses are encoded; it is not so that the clear text would be sent as ASCII characters. Therefore it is possible to send “illegal” morse code characters, or characters that might only be used in certain languages. They will be transmitted correctly (but shown on the display as non-decodable).

Sending the code word by word means there is a significant delay between sender and receiver, and the delay depends to a large degree on the length of the words being sent, and on the speed that is being used. As most words in a typical CW conversation are rather short (7 characters or more already constitutes a very long word), this is nothing to worry about (unless you are sitting both in the same room using no headphones – then it will be really confusing). But try sending really long words, say 10 or more character long, at really low speed (5 WpM), and you will see what I am talking about!

#### Using two different LoRa “Channels”

LoRa data packets are addressed with a so called “Sync Word” – receivers discard packets that do not show the sync word they are expecting.

Morserino-32 can make use of two different sync words, thus effectively creating two different “channels” over which it can communicate. This can be used, for example, in a class room situation, to create two independent groups that do not interfere with each other.

Normally M32 LoRa works with sync word 0x27 (we call it the “Standard” channel), but through the setting LoRa Channel in the preferences menu can be switched to 0x66 (called “Secondary” channel).

The channels are selected through the preference **Trx Channel**, see section **Preferences regarding Transmitting, Decoding and QSO Bot**.

### Using different LoRa frequency bands and/or frequencies

By default the Morserino-32 kits are being shipped with a LoRa module that works in the 70 cm band, and as standard frequency within that band on 434.150 MHz (within the 70 cm Amateur band and within a region 1 ISM band).

If for whatever reason you cannot use this frequency (maybe because of band plans, regulatory reasons etc.), you can change the frequency on the standard LoRa Module between 433.65 and 434.55 MHz in steps of 100 kHz.

Should you require a LoRa frequency either around 868 MHz or around 920 MHz, you need to get a Heltec module that support this higher frequency range (which might be difficult now as Heltec has discontinued the versions of these modules used in Morserinos 1st and 2nd edition.). For these bands, you MUST configure your Morserino to use the correct band and frequency.

See **Hardware Configuration Menu** to learn how you can configure LoRa for modules that support the 868 and 920 MHz bands, and how to change the LoRa frequency settings.

### Technical Details of LoRa Trx

- Frequency: Default is 434.150 MHz – but see the notes above for choosing other frequencies
- LoRa Spreading Factor: 7
- LoRa Bandwidth: 250 kHz
- LoRa CRC: no CRC
- LoRa Sync Word: 0x27 (= decimal 39) for standard channel, and 0x66 (= decimal 102) for secondary channel
- HF Output: by default 14 dBm (= 25 mW), can be increased to 20 dBm (100 mW)

## 7.3 Adjusting Audio Level

You can also reach **one other function** while you are positioned within the Start Menu – not through a menu selection, but through **a long press on the FN button**:



This function behaves differently on the M32Pocket than on the 1st and 2nd edition M32!

**1st and 2nd edition M32 only:** This starts a function to adjust the **audio input level:** make sure a tone signal is available on the input, for example from your shortwave receiver, and a bar graph will indicate the voltage of the input signal. Adjust it with the blue trimmer potentiometer, so that the left and right ends of the solid bar are within the two outer rectangles.

**All Morserinos**: When this function is active, a sinus signal is output on line-out, and the transceiver output is shortened (keying a transmitter, should you have one connected – disconnect your transceiver first if this is not what you want!). You can now, for example, adjust the level of the output signal on a connected computer, or check whether a transmitter is being keyed.

**1st and 2nd edition only**: A simple test or demo for the audio-in adjustment is to connect line-out with audio in (connect tip with sleeve), feeding the output sine wave into the audio input. When you turn the potentiometer, at one end of the potentiometer range you can see the solid bar graph changing leaving just a tiny solid bar in the middle and exposing the two rectangles on both ends of the graph (essentially you are just measuring the noise on the operation amplifiers input), and on the other end of the potentiometer sweep you see the solid bar graph extending beyond the rectangles on both ends. Now you can set the potentiometer so that the solid bar is almost touching the outer bounds of the rectangles. This is the optimal setting for the audio in level. Obviously you have to perform this for the audio source you are planning to use, e.g. for your radio receiver.



Only while you are in the **menu** will the **FN button long press** activate the level adjustment function.
While you are executing one of the Morserino modes (Keyer, Generator, Echo Trainer, Transceiver etc.) a long press of the FN button activates the **scroll mode of the display** to enable you to read text that has already scrolled away…

## 7.4 Updating the Firmware via WiFi for Versions < 2.0

With firmware versions **1.x** the WiFi functions were not accessible directly from the main menu, but **by quickly pressing the FN button three times**. Once you are in the WiFi menu, the process is the same for the various WiFi functions as described in section **WiFi Functions**!

Of course you can also **update through USB** when you are still on an older software version (see next 2 appendices).



If you are still on version 1.x, you really should update to a newer firmware - otherwise you are missing out on many new features (and bug fixes, too).

## 7.5 Updating the Firmware via USB and an update program

This simple update procedure for Morserinos has become possible through work by Matthias Jordan and Joe Wittmer.

For an M32 1st or 2nd edition make sure you have a **driver** for the Silicon Labs CP210x USB to serial device, used by the Heltec module for its USB interface. Current versions of Windows 10 install this automatically; if yours doesn't, you can get the driver from here: *https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers*

To check if you have the correct driver installed in Windows, and to see to which port it connects, open the Device Manager on your computer (in the search field in the lower left of the screen start typing "settings: device" and it will come up for selection). OSX or Linux users can use command line tools to find out which serial ports are available.

Connect your Morserino with a USB cable to your computer. On Windows the device manager should update its screen and show an entry "Ports" - open it and it should indicate something like Silicon Labs CP210x ... (COM3)USB Serial Device (COM3). Could be another COM port in your case, so please remember your correct port name.



Make sure you have a cable that is a "proper" USB cable, not just a cable for a charger!

Now download the update utility from Joe's GitHub repository, making sure you get the correct zip File for your operating system: *https://github.com/joewittmer/Morserino-32-Firmware-Updater/releases*

Unzip that file. You will find a program (in the case of the Windows OS) *update_m32.exe* (without a filename extension for other operating systems) - copy that to a folder of your choice (I usually prefer the folder Downloads). Then get the binary Morserino firmware file for the version you want to install from the Morserino GitHub, ideally into the same directory.



Be aware that from V.7.0 onwards there are two different binaries for each version, one for Morserinos 1st and 2nd edition and one for the M32Pocket — make sure you take the one for the 1st and 2nd edition.for the M32Pocket.

Now open a command box on your computer (for Windows: in the search field in the lower left of the screen start typing “cmd” and it will come up for selection). First “cd” (change directory) to the directory where the utility and the binary file are located; e.g., if you used the Downloads directory:

```
cd Downloads
```

Then enter the following command line:

```
update_m32 -p <COMx> -f <binaryfilename>
```

replacing <COMx> with your COM port name, and <binaryfilename> with the correct name of the Morserino binary file.



For the M32Pocket, you need to add the parameter `-d M32Pocket` to the command line.

In my case that was (on a Windows machine):

```
update_m32 -p COM3 -f m32_V10.0.bin update_m32 -p COM3 -d M32Pocket -f m32_V10.0.bin
```

or on OSX or Linux:

```
./update_m32 -p /dev/tty[...] -f m32_V10.0.bin ./update_m32 -p /dev/tty[...] -d M32Pocket -f m32_V10.0.bin
```

After a short while your Morserino should restart, showing the updated version number.

There is also an option to fully erase the M32’s permanent memory before installing the firmware again; this can be useful if your device’s permanent memory has been corrupted. To do this add the optional erase parameter `-e`. As an example (here for OSX or Linux):

```
./update_m32 -p /dev/tty[...] -f m32_V10.0.bin -e
```

# 7.6 Updating the Firmware via USB and a Browser (Webserial)

Some browsers support the Webserial extension, which allows to access a serial port directly from the browser; currently these are **Google Chrome**, **Microsoft Edge**, **Firefox** (from version 151), and at least on some platforms also **Opera**. By using such a browser, updating the firmware to the latest release becomes really very easy (no firmware download necessary, and no command lines...).

Make sure you have a USB cable that allows data transfer.



If you are using a M32Pocket, the device must be turned on and must not be in sleep mode when you are connecting the USB cable!

For M32 1st and 2nd edition, make sure you have a driver for the SiLab CP210x chip.

This method does NOT work with the Safari browser, nor with versions of Firefox before 151. On a computer managed by a company or a school, Webserial may also be switched off by policy.

For updating your firmware, connect your Morserino-32 to your computer via USB and go to `https://www.morserino.info/install.html`.

**One page installs every Morserino.** You no longer have to know whether you own a classic Morserino-32 or an M32 Pocket: the installer asks the processor in your device which one it is, and offers only the firmware that fits it.

The installer takes you through three steps:

1. **Connect** — click *Connect* and pick the port your Morserino is connected to from the pop-up your browser shows.

   ::: note The Morserino's screen goes **dark** the moment the browser connects to it. That is normal: talking to the flash chip means putting the device into its ROM update mode, and the firmware — and its display — are not running while that mode is on. If you decide not to install after all, press *Cancel* on the page: the Morserino restarts and the screen comes back on its own. :::

2. **Choose what to install** — the page tells you what it found and, where it can, which firmware version is on the device at the moment. Then you pick the version you want. If you own an M32 Pocket you also choose the **edition** here (see below). Finally you decide what happens to your settings:

   - *Keep my settings* (the normal choice) — your preferences, snapshots and high scores survive the update.

- *Erase everything* — wipes preferences, snapshots, high scores and any text you uploaded for the File Player. Only use this if your device's permanent memory has been corrupted.

::: note After *Erase everything*, the Morserino has to build a new file system the next time it starts. This happens **before** the start screen appears, so the display stays dark for a while — considerably longer than a normal start. That is normal and not a fault: let it finish, and do **not** switch the device off while it is dark. :::

3. **Installing** — wait for the progress bar. Do not disconnect the device. When it finishes, the Morserino restarts by itself.



**Editions (M32 Pocket only).** The *Standard* edition is the normal firmware described by this manual. The *Accessibility Edition* speaks the menus and settings aloud, for blind and partially sighted operators: it announces itself and the battery voltage when you switch it on, and it names the whole menu path — "CW Generator, Call Signs" — whenever the branch you are in may not be obvious, for instance right after switching on. The games are not included in it, and neither are the Standard edition's two browser-driven WiFi entries, *Upload File* and *Update Firmw* — both only open a web page that you would have to operate from another device, so use the USB installer described in this appendix instead. Both editions are offered for the same device and you can move between them at any time — your settings are kept, but the Accessibility Edition uses the space that holds the File Player's text for its voice clips.

Older bookmarks pointing at the previous two separate installer pages still work; they now forward to this one page.

## 7.6.1 If the Morserino Does Not Respond: Recovery Boot Mode

If an update has gone wrong, the Morserino may seem dead: the screen stays dark or frozen, it ignores all controls, and the installer cannot find it on USB. It is almost certainly not broken. Every Morserino can be forced into the processor's built-in update mode (the same ROM update mode the installer uses), which does not depend on the firmware at all:

1. **Switch the power off completely.** Unplug the USB cable. If your Morserino has a battery, also set the power switch to off.
2. With the device off, **press and hold the FN button**.
3. Keep holding it and **plug the USB cable back in**. If you have a battery, leave the power switch off - USB supplies the power for the recovery.
4. Once the device has power, **release the FN button**. The Morserino is now in recovery boot mode and the installer can reach it again.

On the M32 Pocket, the FN button is the cut-out in the case, to the lower right of the ENCODER knob.

On the Morserino-32 1st and 2nd edition, the FN button is the red button.



**The screen stays dark the whole time** the device is in recovery boot mode. That is expected: the firmware is not running.

Now run the installer as described above and choose *Erase everything*, which also removes any corrupted settings that might stop the new firmware from starting. Your preferences, snapshots and high scores are lost in the process.

On the 1st and 2nd edition, USB is handled by a separate chip (the CP210x), so the device normally appears on USB even when the firmware is broken. If it does not show up at all, suspect the cable or the CP210x driver first. The recovery boot mode is still the right thing to try if the installer finds the port but cannot connect.

Thanks to Brian, N6UGP, for describing this procedure.

## 7.7 Using a Browser to set up M32 Preferences, and upload Text Files

There are currently three sites that enable you to set up M32 preferences through a browser on your computer, and another one that implements an M32 File Manager.

- There is the “official” morserino.info website which hosts a comprehensive configuration tool at `https://www.morserino.info/m32_config_tool.html`. It allows to view and set all preferences, and also to set, delete, view, compare, export and import snapshots, including whole snapshot bundles (see **Snapshot bundles**). In addition it contains file utilities, see below.
- Christof, **OE6CHD**, wrote a Javascript program that makes it very easy to set preferences, WiFi access point credentials, and keyer memories, as well as to upload text file for the File Player.
- Similar functionality has been integrated by Oliver, **OM0RX**, into his *Morse Trainer Pro* application.

The quickest way to do all that is to connect your Morserino via USB to a computer running Chrome, Edge, Opera or Firefox (or any other browser that supports the Webserial protocol), and going to either

- `https://www.morserino.info/m32_config_tool.html` (for the “official” configuration tool),

- `https://tegmento.org/` (for the application by OE6CHD), or
- `https://morsetrainerpro.com/morserino-config.html` (for the application by OM0RX) .



- The “official” tool is a simple html/javascript program that can also run locally. The source is also available at the Morserino GitHub site. There you will also find a help file in JSON format which enables tool tips within the application (explainign the purpose of the various preferences).
- This tool also contains a **file manager** for uploading text and sound files, and for viewing the standard text file, as well as a **file builder**, which allows to combine several files into a multi-part file that can be used with the M32 file player; **this file builder accepts not only text files, but also pdf, epub and word processing formats and converts them into simple text suitable for the file player**. Letters with umlauts and accents are kept, as the file player plays them since firmware 9.1; for older firmware, tick **Convert accented letters to plain ASCII** (ä→ae, ö→oe, ü→ue, ß→ss, å→aa, æ→ae, ø→oe, é→e and so on). The option is set for you when the connected Morserino runs firmware older than 9.1.
- You can also run Christof’s javascript program locally, the source code is available at *https://github.com/cdaller/morserino32-trainer*.



If you are using a M32Pocket, the device must be turned on and must not be in sleep mode when you are connecting the USB cable!

On these websites, you need to click a “Connect” button (in a pop-up window, you need to tell the browser which port to use); otherwise, these websites explain everything you need to know to use their functionality.

In addition to the setup functionality, Christof also implemented a few nice training features, a QSO bot, and voice output for all menu items and preferences settings, to assist vision-impaired operators, all to be found on https://tegmento.org.

Also, Oliver implemented a lot of additional training features on his site, to be found at https://morsetrainerpro.com/index.html.

This utility also gives information about free space for files, and you can also delete files on the M32.

These feature were made possible by implementing a serial protocol into the Morserino; see the next appendix for more information.

# 7.8 Using the Serial Output of the M32

The Morserino-32 is able to output data via the serial USB interface. This can be used, for example, to show the characters that are shown on the display in a computer terminal window. This way you can show the Morserino output on a big screen or projector; this could be useful for presentations or classroom use.

In version 5, a full two-way protocol called “M32 Serial Protocol” was implemented. This allows (via software on a computer connected via USB) screen or voice output of menus and settings (e.g. to make the M32 usable for blind or partially sighted people), and also allows remote control of all Morserino functions from the computer (e.g. settings, preferences, changing speed and volume, exiting and entering menus and even automatic CW generation). The protocol is described in a separate document available on GitHub.



If you are using a M32Pocket, the device must be turned on and must not be in sleep mode when you are connecting the USB cable!

A baud rate of 115200 must be selected for the serial port used on the connected computer.

One can use serial communications in conjunction with computer software written specifically for the Morserino-32 to enhance one’s training skills. There are currently five software products available for this purpose:

- The **M32 Trainer**, a copy trainer in your browser that is part of the Morserino software itself — see the next section.
- **Morserino-32 CW training** by Christof, OE6CHD (see *https://tegmento.org/*) using the serial protocol functions, see also the previous appendix.
- **Morse Trainer Pro** by Oliver, OM0RX (very comprehensive functionality, some functionalities require a paid membership, Morserino setup functionality is free; see **https://morsetrainerpro.com/index.html,** and the previous appendix.
- **CW Trainer for Morserino** by Enzo, IW7DMH (see https://iw7dmh.jimdofree.com/other-projects/cw-trainer-for-morserino-32/), *and*
- **Morserino Phrases Trainer** by Tommy, OZ1THC (see *https://github.com/Tommy-de-oz1thc/Morserino-32-Phrases-trainer*).
- See also the description of the **Serial Output** preference in section **General Preferences**.

### 7.8.1 The M32 Trainer: Copy Practice in Your Browser

The **M32 Trainer** is a web page that turns your Morserino and a computer into a copy trainer. The Morserino sends the Morse code — through its own speaker or headphones, at its own speed — and you copy what you hear, either typed on the computer's keyboard or keyed back on the paddle. The page checks every character, keeps a record of how well you know each one, and chooses what comes next: characters you still miss come up more often, characters you know well less often.

You need firmware version 10 or newer (serial protocol 1.6) and a desktop browser that can talk to a serial port: Chrome, Edge or Firefox. Connect the Morserino with its USB cable, open `https://www.morserino.info/m32_trainer.html` and click **Connect**. The page starts the **CW Keyer** on the Morserino and plays through it; press **Enter** (or **Start**) to begin. A section *How the trainer works* at the top of the page sums up everything below.

**What is played.** Under **Characters** you choose the set:

- **Koch lesson** — the characters of your current Koch lesson, exactly as set on the Morserino (also when **Koch Sequence** is **Custom Chars**). Next to it you can change the **Koch sequence** and the **Lesson** without leaving the CW Keyer. These two are stored on the Morserino, as if you had changed them in its menu.
- **Practice Set** — the characters you chose on the Morserino under **CW Generator → Practice Set**.
- **All characters** — the Morserino's full standard set (letters, digits, punctuation and prosigns).

Under **Practise** you choose what is made of them: **Groups** of random characters, real **Words**, **Phrases** of 2 to 8 words (word chains, plain-language sentences, QSO lines, or phrases you paste in yourself), and — with **All characters** only — **Call signs** and **Prefixes**. Call signs and prefixes come from the same generator as on the Morserino, with the settings **Length Calls**, **Calls Region** and **Call Prefixes** shown on the page: they are taken from your Morserino the first time you connect and are then kept by the page, so changing them there does not change your Morserino. Words and phrases use only characters from your set, so their choice grows with your lessons.

**Answering.** With **Answer: Typed**, type what you heard and press **Enter**. With **Keyed on the paddle**, key it back; the page reads your keying as the Morserino decodes it, and you choose how long a pause inside a word may be (**Strict** up to 6 dits, **Lenient** up to 12) and how long a silence ends your answer. An error sign (eight dits) erases the last word. A miss shows what it was, plays it again, and brings it back a few items later. **Ctrl+Enter** (**Cmd+Enter** on a Mac) plays the item again (this counts as help), **Esc** pauses.

**How the page decides.** Each character climbs five boxes as you copy it right; a miss sends it two boxes down. Characters in low boxes are chosen more often. When every character of your lesson has reached box 3, the page *offers* the next lesson — it never moves on by itself. Keyed answers, call signs and prefixes are counted separately and move no box: a keyed miss may be the ear, the memory or the fingers.

**Speed.** The characters always sound at the speed set on the Morserino; turn its knob and the page follows. **Effective speed** stretches the gaps between characters and words (Farnsworth timing) for as long as the page is connected. **M32 screen** decides whether the Morserino's display shows what is played (by default it does not, so you copy by ear).

**Echo Trainer log.** While the page is connected you can also run the Morserino's **Echo Trainer** (or one of the **Koch Trainer**'s echo modes) as usual. Every word it checks is logged on the page, with your reaction time and keying time as the Morserino measured them, and a summary of your most missed characters. If the Echo Trainer is already running when you connect, the page leaves it alone; press **Enter** on the page to go back to copy practice.

**Your history** is stored in the browser on your computer, nowhere else. Use **Export…** now and then to keep a copy, and **Import…** to take it to another computer or browser.

**What the trainer changes on your Morserino.** Only the Koch sequence and lesson, and only when you change them on the page or accept the next lesson. Speed, spacing and the screen setting apply to the session only: leaving the CW Keyer or disconnecting ends them, and your preferences are as before. The transmitter is never keyed while the page practises with you.

The page can be used with the keyboard alone, and a screen reader announces prompts and results without talking over the Morse code.

## 7.8.2 Using the M32 Serial Protocol over Bluetooth (BLE Serial)

The M32 Serial Protocol is not tied to the USB cable: when the preference **Bluetooth Use** (see section **Preferences regarding Key, Paddles and Keyer**) is set to **BLE Serial**, the very same protocol is also available over Bluetooth Low Energy. This is particularly useful for phones and tablets — on iOS, for example, apps cannot open a classic serial connection over Bluetooth at all, while BLE works fine. An app can remote-control the Morserino exactly like a program connected via USB, including sending text that the Morserino keys as CW ( `PUT cw/play/...` ).

After selecting this option (it takes effect on the next return to the main menu), the Morserino advertises itself as "**Morserino-32**" whenever it is at the main menu or in one of the training modes and no client is connected. No pairing is necessary, but connecting is not quite like plugging in a USB cable: nobody can plug in a cable without standing next to your Morserino, whereas anything within radio range can connect. The Morserino therefore asks you before it hands over control.

When an app starts a session with the usual `PUT device/protocol/on` command, the Morserino shows

```
Allow connect?
FN = yes
click = no
```

Press **FN** to allow the connection. A click on the encoder knob refuses it, and so does simply doing nothing for about 20 seconds — the connection is never granted by accident. The app will tell you that it is waiting for this.

Three things are worth knowing:

- You are only asked at the **main menu**. If you are in a training mode the request is refused immediately, without interrupting you: the app reports “DEVICE BUSY”, and you return to the main menu and try again.
- Once you have allowed a connection, an app that reconnects within the next minute is admitted without asking you again. That is what lets an app which was briefly in the background, or a link that dropped, pick up where it left off — including while you are in a training mode.
- An app written before this feature existed may report a failed connection the first time. Press **FN** anyway, then connect again: the second attempt succeeds.

While a session is open, a small Bluetooth symbol appears at the right of the top line, both in the main menu and in the training modes, so you can always see that something is connected. It disappears as soon as the app disconnects.

A few things to be aware of:

- USB and BLE sessions are independent and can even be active at the same time; each is started and ended with its own `PUT device/protocol/on` / `off`.
- Any function that needs the WiFi radio (WiFi transceiver modes, multiplayer games, file upload, firmware update, WiFi configuration) suspends the Bluetooth connection for the remainder of that activity — a short notice (“BLE Ser. susp.”) appears on the display; it becomes available again when you return to the main menu.
- The **Bluetooth Use** selector assigns the Bluetooth radio either to the keyboard output (**Using the Bluetooth Keyboard functionality**) or to the serial protocol, so BLE Serial and the Bluetooth keyboard can never be active at the same time.
- An active protocol session prevents the automatic power-off timeout, just like a USB session does — remember this when running on battery.

For developers: the technical details (service UUIDs, framing, transport behavior) are described in the *M32 Protocol* description in the `Documentation/Protocol Description` folder on GitHub; a ready-made test and demo script (`ble_m32_test.py`, using Python and *bleak*) can be found in the `devdocs/ble-serial` folder.

# 7.9 Using the Bluetooth Keyboard functionality

In “CW Keyer” mode, the M32 can send the keyed Morse code as keyboard codes via Bluetooth to a computer (including cell phones and tablets).

To do this, the “**Bluetooth Use**” setting must be set to one of the keyboard options (for more information, see section **Preferences regarding Key, Paddles and Keyer**).



This feature is only active in CW Keyer mode! The keyboard will only become visible on your PC, tablet, etc. once CW Keyer has been launched!

While a computer, phone or tablet is connected to the keyboard, a small Bluetooth symbol appears at the right of the top line in CW Keyer. If it is missing, nothing is connected (yet), and nothing you key reaches the other device; it reappears as soon as the device has connected again. The Morserino also reports its battery level to the connected device, which usually shows it next to the keyboard (the M32 Pocket updates it every minutea Morserino-32 of the 1st or 2nd edition reports the level measured when it was switched on).



The Morserino works like a keyboard with a US key layout – this may need to be set accordingly on the computer you are using.



Letters with umlauts or accents cannot be typed reliably by a keyboard (what a key types depends on the computer’s keyboard layout), so the Morserino types them without: ä, ö and ü as ae, oe and ue, and the letters of the **Decoder Chars** preference as å → aa, æ → ae, ø → oe, à → a, é and è → e, ç → c, ñ → n.

# 7.10 Using USB Keying: vBand and MIDI over the USB cable

In “CW Keyer” mode, the M32 Pocket can also send your keying to a computer **over its USB cable**, without Bluetooth. The preference **USB Keying** in the CW Keyer preferences chooses what goes out. It is separate from **Serial Output**, which sends characters as text over the serial port; USB Keying sends the keying itself, and only in CW Keyer:

| USB Keying | What the computer sees | Made for |
|---|---|---|
| **Off** | Nothing extra. The cable carries the serial port, as usual. This is the default | The M32 serial protocol, the M32 Config Tool, **Serial Output**, or just charging |
| **VBand** | A USB keyboard. Left Ctrl is held down while the Morserino keys | **vBand** (*https://hamradio.solutions/vband/*), with the straight-key input selected there |
| **MIDI Paddles** | A USB MIDI device, channel 1: note 20 = dit paddle, note 21 = dah paddle. The program is the keyer | Programs that take MIDI CW paddles, built around the **CTR2-MIDI** interface by Lynovation; for example **SmartSDR for macOS** by DL8MRE with a FlexRadio |
| **MIDI Keyer** | A USB MIDI device, channel 1: notes 0 and 30 follow your keying. The Morserino is the keyer, and the program only follows key-down and key-up | **Vail**’s web tools (for example *https://learncw.vailmorse.com*), and programs with a straight-key input over MIDI |

On the computer, the Morserino appears as **“Morserino-32 Pocket (USB kbd+MIDI)”**.



**While CW Keyer sends to USB, there is no serial port.** The cable can only be one or the other, so as soon as CW Keyer starts with **USB Keying** set to anything but **Off**, the M32 serial protocol, the File Manager, the M32 Config Tool and flashing tools cannot reach the Morserino; a program connected at that moment is told the session has ended. When you leave CW Keyer, the Morserino restarts by itself (about a second, with no start-up screens) and is back at the main menu with its serial port. The battery charges all the time.



USB Keying is only active in CW Keyer mode, like the Bluetooth keyboard. Everything CW Keyer keys goes out: the paddles, a straight key and the keyer memories. It does not depend on **Key ext TX**, which only concerns the transmitter connector. When you leave CW Keyer, any key or note still held down is released.

If **Quick Start** takes you straight into CW Keyer, USB Keying is active from the moment you switch on. The restart when you leave CW Keyer does not go through Quick Start again, so you stay at the main menu.

**VBand.** The Morserino's own keyer forms the dits and dahs, and holds Left Ctrl down while each one sounds, which vBand reads as a straight key. This does the same job as **Bluetooth Use → VBand Kbd**, but over the cable: nothing to pair, no radio delay, and the battery charges meanwhile. So that vBand never receives every element twice, the Bluetooth keyboard does not start while **USB Keying** is set to **VBand**, whatever **Bluetooth Use** says.

**MIDI Keyer.** Here too the Morserino's own keyer forms the dits and dahs: what you hear is exactly what the program gets, in every keyer mode, memories included, so no speed or keyer mode has to match on the other side. Notes 0 and 30 go on and off together with each element; note 0 is the straight key on Vail's web tools, note 30 the straight key of a CTR2-MIDI.

On a Vail site, two settings matter:

- Set its keyer to **Straight Key**. With any other keyer, the site's own keyer takes note 0 for a dit paddle.
- Set **Decoder Tolerance** to **Standard**. Its automatic setting expects the looser spacing of a hand key and misreads the Morserino's tight character and word spacing.

**MIDI Paddles.** The Morserino sends what a CTR2-MIDI sends, so software already set up for one works without remapping:

| Keying | MIDI message (channel 1) |
|---|---|
| Dit paddle | Note **20** on / off |
| Dah paddle | Note **21** on / off |
| Straight key (**Keyer Mode** set to **Straight Key**) | Note **30** on / off; notes 20 and 21 are not sent |

**Paddle Polarity** is applied first, so note 20 is always your dit paddle. A keyer memory goes out the way a person would send it: in the paddle modes it taps the paddles (each dit a short press of note 20, each dah one of note 21), and in Straight Key mode it works the key (note 30). In the paddle modes the program's own keyer forms the CW that is transmitted, so **set the Morserino and the program to the same speed and keyer mode**; otherwise the Morserino's side tone is not what goes on the air, and memories can come out garbled.

# 7.11 List of common CW abbreviations used by Morserino-32

The list contains definitions in English and German, separated by a slash. Not all abbreviations are very common in all languages; abbreviations uncommon in English are in square brackets [].

**A**

| Abbr | Meaning |
|---|---|
| aa | all after / alles nach |
| ab | all before / alles vor |
| abt | about / ungefähr, um |
| ac | alternating current / Wechselstrom |
| adr | address / Adresse |
| af | audio frequency / Niederfrequenz |
| agc | automatic gain control / automatische Verstärkungsregelung |
| agn | again / wieder |
| alc | automatic level control / automatische Pegelanpassung |
| am | amplitude modulation / Amplitudenmodulation |
| am | ante meridiem / vormittags |
| ans | answer / Antwort |
| ant | antenna (aerial) / Antenne |
| atv | amateur TV |
| avc | automatic volume control / automatische Lautstärkeregelung |
| award | Award / Amateurfunkdiplom |
| awdh | [good bye] / auf Wiederhören |
| awds | [good bye] / auf Wiedersehen |

**B**

| Abbr | Meaning |
|---|---|
| b4 | before / bevor |
| bc | broadcast / Rundfunk |

| Abbr | Meaning |
|---|---|
| bci | broadcast interference / Rundfunkstörung(en) |
| bcnu | be seeing you / hoffe dich wieder zu treffen |
| bd | bad / schlecht |
| bfo | beat frequency oscillator / Überlagerungsoszillator |
| bk | break / Aufforderung zur Unterbrechung |
| bpm | [characters per minute] / Buchstaben pro Minute |
| btr | better / besser |
| btw | by the way / nebenbei bemerkt |
| bug | Bug / mechanisch-automatische Taste |
| buro | (QSL) bureau / QSL Büro |

**C**

| Abbr | Meaning |
|---|---|
| call | call sign / Rufzeichen |
| cfm | confirm / bestätige |
| cl | closing / schließe meine Station |
| conds | conditions / (Ausbreitungs-)Bedingungen |
| condx | conditions for dx / Bedingungen für DX |
| congrats | congratulations / gratuliere |
| cq | cq (calling anybody) / allgemeiner Anruf |
| cu | see you / hoffe auf ein weiteres Treffen |
| cuagn | see you again / hoffe auf ein weiteres Treffen |
| cul | call you later / rufe dich später |
| cw | continuous wave (=Morse code) / Morsetelegrafie |

**D**

| Abbr | Meaning |
|---|---|
| db | deziBel |
| dc | direct current / Gleichstrom |

| Abbr | Meaning |
|---|---|
| de | from (call sign) / von (Rufzeichen) |
| diff | difference / Unterschied |
| dr | dear / liebe(r) |
| dwn | down / abwärts, hinab |
| dx | (great) distance / große Entfernung |

**E**

| Abbr | Meaning |
|---|---|
| ee | end / Ende |
| el | (antenna) element(s) / (Antennen) Element(e) |
| elbug | Elbug (= electronic bug) / Elbug (elektronische autom. Taste) |
| es | and / und |
| excus | excuse me / Entschuldigung |

**F**

| Abbr | Meaning |
|---|---|
| fb | fine business / ausgezeichnet |
| fer | for / für |
| fm | frequency modulation / Frequenzmodulation |
| fone | telephony / Telefonie |
| fr | for / für |
| frd | friend / Friend |
| freq | frequency / Frequenz |
| fwd | forward / vorwärts |

**G**

| Abbr | Meaning |
|---|---|
| ga | [good evening] / Guten Abend |
| gb | good bye / Auf Wiedersehen |
| gd | good / gut |

| Abbr | Meaning |
|---|---|
| gd | good day / guten Tag |
| ge | good evening / guten Abend |
| gl | good luck / viel Glück |
| gm | good morning / guten Morgen |
| gn | good night / gute Nacht |
| gnd | ground / Erde (Erdpotenzial) |
| gp | ground plane / Groundplane-Antenne |
| gs | greenstamp / 1-Dollar-Note |
| gt | [good day] / guten Tag |
| gud | good / gut |

**H**

| Abbr | Meaning |
|---|---|
| ham | ham (radio amateur) / Funkamateur |
| hf | high frequency / Hochfrequenz |
| hi | hi(larious) – laughing / ich lache |
| hpe | hope / ich hoffe |
| hr | here / hier |
| hrd | heard / gehört |
| hrs | hours / Stunden |
| hv | have / habe |
| hvy | heavy / schwer |
| hw | how (copy) / wie werde ich gehört? |

**I**

| Abbr | Meaning |
|---|---|
| i | I / ich |
| iaru | International Amateur Radio Union |
| if | intermediate frequency / Zwischenfrequenz |

| Abbr | Meaning |
|---|---|
| ii | I repeat / ich wiederhole |
| info | information / Information |
| inpt | input / Eingangsleistung |
| irc | international return coupon / internationaler Antwortschein |
| itu | International Telecommunications Union / internationale Fernmeldeunion |

**K**

| Abbr | Meaning |
|---|---|
| k | come (please answer) / bitte kommen (bitte antworten) |
| khz | kiloHertz |
| km | kiloMeter |
| kw | kiloWatt |
| ky | key / Morsetaste |

**L**

| Abbr | Meaning |
|---|---|
| lbr | [dear] / lieber |
| lf | low frequency / Niederfrequenz |
| lid | bad operator / Funker mit schlechter Betriebstechnik |
| lis | licensed / lizenziert |
| lng | long / lang |
| loc | locator / Standort(kenner) |
| log | log book / Stationstagebuch |
| lp | long path / langer Ausbreitungsweg |
| lsb | lower sideband / unteres Seitenband |
| luf | lowest usable frequency / niedrigste brauchbare Frequenz |
| lw | long wire (antenna) / Langdrahtantenne |

**M**

| Abbr | Meaning |
|---|---|
| ma | milliAmpere |
| mesz | [middle European summer time] / mitteleuropäische Sommerzeit |
| mez | [middle European time] / mitteleuropäische Zeit(zone) |
| mgr | (QSL) manager / (QSL-)Manager |
| mhz | megaHertz |
| min | minute / Minute |
| mins | minutes / Minuten |
| mm | maritime mobile / Station auf einem Schiff zur See |
| mni | many / viele |
| mod | modulation / Modulation |
| msg | message / Nachricht |
| mtr | meter / Messinstrument |
| muf | maximum usable frequency / höchste brauchbare Frequenz |
| my | my / mein |

**N**

| Abbr | Meaning |
|---|---|
| n | no / nein, kein |
| net | network / (Funk-)Netzwerk |
| nf | [low frequency] / Niederfrequenz |
| nil | nothing / nichts |
| no | no / nein, kein |
| nr | near / nahe |
| nr | number / Nummer |
| nw | now / jetzt |

**O**

| Abbr | Meaning |
|---|---|
| ok | ok / in Ordnung |

| Abbr | Meaning |
|---|---|
| om | old man, ham / Anrede f. Funkamateur |
| op | operator / Funker |
| osc | oscillator / Oszillator |
| oscar | OSCAR (satellite) / OSCAR Amateurfunksatellit |
| output | output / Ausgangsleistung |
| ow | old woman / Funkamateurin |

**P**

| Abbr | Meaning |
|---|---|
| pa | power amplifier / Endstufe, Leistungsverstärker |
| pep | peak envelop power / Hüllkurvenspitzenleistung |
| pm | post meridiem, afternoon / Nachmittag |
| pse | please / bitte |
| psed | pleased / erfreut |
| pwr | power / Leistung |
| px | prefix / Präfix, Landeskenner |

**Q**

| Abbr | Meaning |
|---|---|
| qaz | closing because of thunderstorm / ich beende wegen Gewitter |
| qra | name of my station is... / der Name meiner Funkstelle ist |
| qrb | distance between stations is ... / Entfernung zwischen den Stationen ist... |
| qrg | exact frequency is ... / genaue Frequenz ist ... |
| qrl | I am busy, don't interfere / bin beschäftigt, bitte nicht stören |
| qrm | interference / Störung |
| qrn | atmosperic noise (static) / atmosphärische Störungen |
| qro | increase power / erhöhe die Senderleistung |
| qrp | decrease power / vermindere die Senderleistung |
| qrq | send faster / gib schneller |

| Abbr | Meaning |
|---|---|
| qrs | send slower / gib langsamer |
| qrt | suspending operation / Einstellen des Sendebetriebs |
| qru | I have nothing (more)  for you / ich habe nichts (weiteres) für dich |
| qrv | I am ready / ich bin betriebsbereit |
| qrx | will call you again (on frequ. ...) / werde dich wieder anrufen (auf Frequ. ...) |
| qrz | you are called by ... / du wirst von ... gerufen |
| qsb | your signals are fading / die Stärke deiner Zeichen schwankt |
| qsk | I can hear between my signals / ich kann zwischen meinen Zeichen hören |
| qsl | I acknowledge receipt / ich gebe Empfangsbestätigung |
| qso | I can communicate (with ...) directly / ich kann direkt (mit ...) verkehren |
| qsp | I will relay (to ...) / ich werde (an ...) vermitteln |
| qst | broadcasting to all / Nachricht an alle |
| qsy | change (transmit) frequency to ... / ändere (Sende-)frequenz auf... |
| qsz | send each word twice / jedes Wort zweimal senden |
| qtc | I have messages for you / ich habe Nachrichten für dich |
| qth | my position is ... / mein Standort ist ... |
| qtr | correct time UTC is ... / genaue Zeit UTC ist ... |

**R**

| Abbr | Meaning |
|---|---|
| r | right, received, “roger” / richtig, (korrekt) empfangen |
| rcvd | received / empfangen |
| re | regarding / bezüglich |
| ref | reference /  Bezug, Referenz |
| rf | radio frequency / Hochfrequenz |
| rfi | radio frequency interference / Hochfrquenzstörung |
| rig | rig, equipment / Stationseinrichtung, -ausstattung |
| rprt | report / Rapport (Empfangsbericht) |
| rpt | repeat / wiederhole |

| Abbr | Meaning |
|---|---|
| rst | RST (readability, signal strength, tone) / Lesbarkeit, Lautstärke, Ton |
| rtty | radio teletype / (Funk-)Fernschreiben |
| rx | receiver / Empfänger |

**S**

| Abbr | Meaning |
|---|---|
| sase | self addressed stamped envelope / frankiertes Kuvert mit eigener Adresse |
| shf | super high frequency / Zentimeterwellenbereich |
| sigs | signs / Zeichen |
| sked | schedule / Verabredung |
| sn | soon / bald |
| sp | short path / kurzer Ausbreitungsweg |
| sri | sorry / tut mir leid |
| ssb | single sideband / Einseitenbandmodulation |
| sstv | slow scan tv / Schmalbandfernsehen |
| stn | station / Station |
| sure | sure / sicher |
| swl | short wave listener / Kurzwellenhörer |
| swr | standin wave ratio / Stehwellenverhältnis |

**T**

| Abbr | Meaning |
|---|---|
| t | turns, tera-, abbr. f. 0 / Windungen, tera-, Abk. f. 0 |
| temp | temperature / Temperatur |
| test | test, contest / Versuch, Kontest |
| tia | thanks in advance / danke vorab |
| tks | thanks / danke |
| tnx | thanks / danke |
| trx | transceiver / Sendeempfänger |

| Abbr | Meaning |
|---|---|
| tu | thank you / danke dir |
| tvi | TV interference / Fernsehstörungen |
| tx | transmitter / Sender |

## U

| Abbr | Meaning |
|---|---|
| u | you / du (Sie) |
| ufb | ultra fine business / ganz ausgezeichnet |
| uhf | ultra high frequency / Ultrakurzwelle, Dezimeterwellenbereich |
| ukw | (very high frequency, vhf) / Ultrakurzwelle |
| unlis | unlicensed / unlizensiert (Pirat) |
| up | up / nach oben |
| ur | your / dein |
| usb | upper sideband / oberes Seitenband |
| utc | universal time coordinated / Koordinierte Weltzeit |

## V

| Abbr | Meaning |
|---|---|
| v | variable (frequency), voice / variable (Frequenz), Telefonie |
| vert | vertical (antenna) / Vertikalantenne |
| vfo | variable frequency oscillator / Oszillator mit einstellbarer Frequenz |
| vhf | very high frequency / UKW-Bereich, Meterwellenbereich |
| vl | [many] / viel |
| vln | [many] / vielen |
| vy | very / sehr |

## W

| Abbr | Meaning |
|---|---|
| w | Watt |
| watts | watts / Watt (plural) |

| Abbr | Meaning |
|---|---|
| wid | with / mit |
| wkd | worked / gearbeitet |
| wkg | working / arbeite gerade |
| wl | will / werde |
| wpm | words per minute / Wörter pro Minute |
| wtts | watts / Watt (plural) |
| wx | weather / Wetter |

**X**

| Abbr | Meaning |
|---|---|
| xcus | excuse me / Entschuldigung |
| xcvr | transceiver / Sendeempfänger |
| xmas | christmas / Weihnachten |
| xtal | crystal / Qua |

**0 – 9**

| Abbr | Meaning |
|---|---|
| 33 | female ham greeting / Gruß unter Funkerinnen |
| 44 | WFF greetings |
| 55 | [I wish you success] / Viel Erfolg! |
| 72 | QRP greeting / Gruß unter QRP Stationen |
| 73 | best wishes / viele Grüße |
| 88 | love and kisses / Alles Liebe |
| 99 | get lost / verschwinde! |

# 7.12 Glossary

| Term | Definition |
|---|---|
| Access Point | A WiFi router or base station that wireless devices connect to in order to communicate over a network. |

| Term | Definition |
|---|---|
| BLE | Bluetooth Low Energy — a power-efficient variant of Bluetooth used for wireless keyboard output and for the M32 Serial Protocol over Bluetooth (see the Bluetooth Use preference). |
| CW | Continuous Wave — the traditional term for Morse code communication, where a radio carrier is keyed on and off. |
| CW Keyer | A device (or mode) that automatically generates properly timed dits and dahs from paddle input. |
| Deep Sleep | A very low power state where the microcontroller is mostly shut off. The device can be woken up by pressing the FN button. |
| Dit / Dah | The two basic elements of Morse code. A dit is a short tone (one unit), a dah is a long tone (three units). Also called dot and dash. |
| Dual-lever Paddle | A Morse key with two separate levers — one for dits, one for dahs. Used with iambic keyers. |
| ENCODER | The rotary knob on the Morserino that can be turned and clicked. Used for navigation, speed/volume adjustment, and character selection. |
| ESP32 | The microcontroller (by Espressif Systems) at the heart of the Morserino-32. It provides WiFi, Bluetooth, and processing power. |
| ESPNow | A peer-to-peer WiFi protocol by Espressif that allows direct communication between ESP32 devices without an access point. Range is typically up to 50 metres. |
| Farnsworth Spacing | A training technique where Morse characters are sent at full speed, but the pauses between characters are lengthened. This encourages learning character rhythms rather than counting dits and dahs. |
| FN Button | The secondary push-button on the Morserino (red on the 1st and 2nd editionintegrated into the case on the M32Pocket). Used for toggling speed/volume, scrolling, brightness, and other functions. |
| Goertzel Filter | A digital signal processing algorithm used in the CW decoder to detect tones at a specific frequency (around 700 Hz). |
| Iambic Keying | A keying mode where squeezing both paddles simultaneously produces alternating dits and dahs. Named after the poetic metre with alternating short and long syllables. |
| iCW | Internet CW — a method of sending Morse code over the Internet using audio protocols such as Mumble. |
| Koch Method | A learning method developed by Ludwig Koch in the 1930s. Characters are introduced one at a time in a specific order based on rhythmic similarity, rather than alphabetically. |

| Term | Definition |
|---|---|
| LoRa | Long Range — a spread-spectrum radio technology used for low-power, long-range communication. Used in 1st and 2nd edition Morserinos for wireless CW transceiver mode. |
| M32Pocket | The third-generation Morserino, featuring a colour TFT display, USB-C, and a compact 3D-printed case. |
| MAC Address | Media Access Control address — a unique hardware identifier assigned to every network interface. Used to identify your Morserino on a WiFi network. |
| mDNS | Multicast DNS — a protocol that allows devices to be found by name (e.g., *m32.local*) on a local network, without a dedicated DNS server. Supported on macOS and most Linux systems; limited support on Windows and Android. |
| MOPP | Morserino Packet Protocol — the data format used to encode Morse code elements (dits, dahs, pauses) into compact binary packets for transmission via LoRa or WiFi/ESPNow. |
| NVS | Non-Volatile Storage — persistent memory on the ESP32 that retains data across power cycles. Used to store preferences, snapshots, Koch lesson progress, and player identity. |
| Pro Sign | Procedural signal — a special Morse code character formed by running two letters together without the normal inter-character pause. Examples: <SK> (end of contact), <AR> (end of message), <KN> (go ahead, named station only). |
| QSK | Full break-in — the ability to hear between transmitted elements. Not possible in LoRa/WiFi transceiver modes due to packet-based transmission. |
| RSSI | Received Signal Strength Indicator — a measurement of the power level of a received radio signal. Displayed as an S-meter bar in LoRa transceiver mode. |
| Single-lever Paddle | A Morse key with one lever that swings between two contacts — one for dits, one for dahs. Only one contact can be made at a time (no squeezing). |
| Sideswiper | A Morse key (also called a cootie key) where the operator moves a lever side to side. Both sides produce the same output — the operator manually times dits and dahs. The Morserino's touch paddles can emulate a sideswiper in Straight Key mode. |
| Snapshot | A saved set of all Morserino preferences. Up to eight snapshots can be stored and recalled, allowing quick switching between different training configurations. |
| Spread Spectrum | A radio transmission technique where the signal is spread across a wider bandwidth than necessary for the data. LoRa uses this to achieve long range at low power. |
| Straight Key | The simplest type of Morse key — a single lever that makes contact when pressed down. The operator manually times all dits, dahs, and pauses. |

| Term | Definition |
|---|---|
| Tone Shift | A preference that changes the pitch of the sidetone when transmitting or responding, making it a half tone higher or lower than the received tone. Useful for distinguishing sent and received signals. |
| UDP | User Datagram Protocol — a lightweight network protocol used by the Morserino for WiFi transceiver communication on port 7373. |
| VBand | An Internet-based CW practice platform (hamradio.solutions/vband). The Morserino can connect to VBand via Bluetooth. |
| Webserial | A browser API (supported in Chrome, Edge, Opera, and Firefox from version 151) that allows web pages to communicate directly with serial devices via USB. Used for firmware updates and preference configuration. |
| Wordsworth Spacing | A training technique (similar to Farnsworth) where only the pauses between words are lengthened, while inter-character spacing remains normal. Encourages head-copying word by word. |
| WPM | Words Per Minute — the standard measure of Morse code speed. The reference word is PARIS (each occurrence equals 50 dit-lengths), so 1 WPM = 5 characters per minute. |