

Burning instructions

1. Hardware part

as the picture shows:

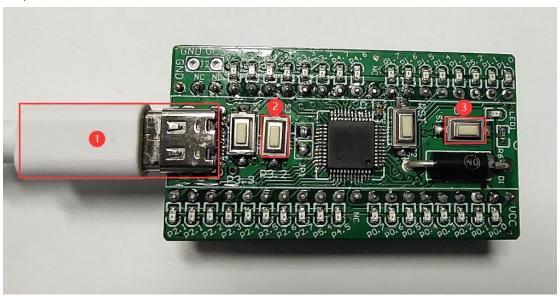


- 1) Use TYPE-C data to connect the core board to the computer;
- 2) Press and hold the P3.2 port button;
- 3) Press the power OFF button (press-release), and then release the P3.2 port button; under normal circumstances, the "STC USB Writer (HID1)" device can be recognized on the STC-ISP software:

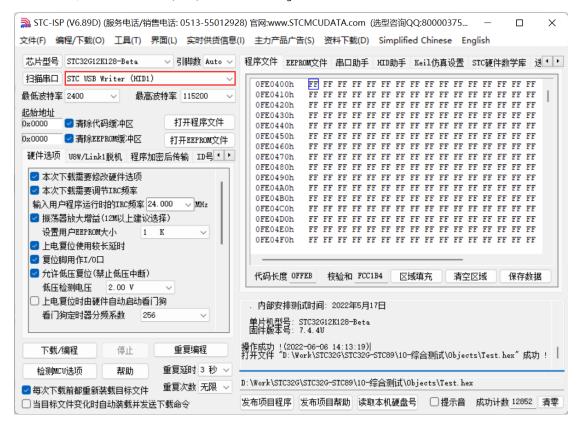

2. Software part

as the picture shows:

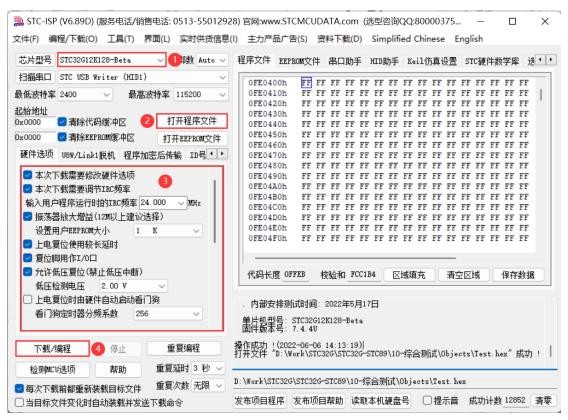

- 1) Select the chip model;
- 2) Open the program file to be burned;
- 3) Set hardware options;

4) Then you can click the "Download/Program" button to start the download. After the download is

complete, the information box in the lower right corner will prompt "Operation successful!".

内部参考电压: 1189 mV (参考范围: 1100~1300mV) 内部安排测试时间: 2022年5月17日

单片机型号: STC32G12K128-Beta 固件版本号: 7.4.4V

操作成功 !(2022-06-06 18:00:46)