MODE-S Wind on a phone

The mobile view `/app`: Skew-T, time–height section, ILS approach and approach conditions in your pocket

Otso Laakso (OH2GAX)
Tuusula, Finland · near Helsinki-Vantaa airport (EFHK)

In short. The full MODE-S Wind pages are made for a computer screen. The mobile view is a light page for phones: open the address of MODE-S Wind with `/app` at the end. It shows *one product at a time*, filling the screen:

- **Skew-T · Area now** — the temperature and wind profile measured by the aircraft over the last 30 minutes to 3 hours, with the radiosonde and the MEPS model if you like;
- **Skew-T · Area hour** — any stored hourly profile;
- **Time–height** — the hourly profiles side by side: fronts, inversions and jet streams as they pass;
- **ILS approach** — the aircraft on final on the 3° glideslope and on a map, live, with the wind measured along the approach, any windshear alert and, if you like, the ACI + windshear chart;
- **ACI · WS · ST** — the approach conditions index and windshear of every landing and departure (also with the turbulence, EDR), the space–time diagram of the wind changes, or the boundary layer (low-level jet, inversion; also flight by flight), with the flights of the period as a list;
- **History** — the landings or the departures of 1 hour to a day, or of any date, as cards with their winds per height band and their reports, with a search; and the METARs and pilot reports;
- **Statistics** — what the receiver hears: message rate, downlink formats, meteo yield, range rings and more, the sections of your choice;
- **Weather** — the MEPS weather maps of the newest model run, hour by hour from 6 hours back to 24 or 48 hours ahead, with an animation slider, the FMI radar at the present hour and, if you like, the live air traffic on the map.

Everything is chosen from the ≡ menu at the top left. Tap a diagram for its values. *Add to Home Screen* gives MODE-S Wind its own icon, and it opens full screen like an app. The diagrams are the same as on the full site, so the other user guides explain how to read them; this guide explains how to use them on a phone.

Contents

1 Getting started **1**

2 The menu **2**

3 Touch, rotation and updates **4**

4 Skew-T: Area now and Area hour **5**

5 Time–height **7**

6 ILS approach **9**

7 ACI · WS · ST **19**

8 History **25**

9 Statistics **30**

10 Weather **31**

11 When something looks wrong **37**

12 Quick reference **38**

1 Getting started

1.1 Opening the mobile view

Open the phone's browser and go to the address you use for MODE-S Wind on a computer, with `/app` added at the end — for example `http://your-address/app`. The phone has to reach MODE-S Wind the same way a computer does (your own network, or the connection set up for it). The browser asks for the same user name and password as the other pages and normally remembers them.

The mobile view opens the product you looked at last. All choices — the view, its options, the theme — are remembered on the phone. The Skew-T options and a chosen Light or Dark theme are the same settings as on the Live Map and the Sounding page *of the same browser*: if you also open the full site on the phone, it starts with the same choices (the full site has no Auto).

1.2 Add to Home Screen

Android (Chrome): open `/app`, tap the browser menu ⋮ and choose Add to Home screen (on some phones Install app), then Add.

iPhone and iPad (Safari): open `/app`, tap the Share button (the square with an arrow) and choose Add to Home Screen, then Add.

The MODE-S Wind icon (right) appears among your apps. It opens the mobile view full screen, without the browser's address bar, and can be switched to like any other app. The first time it is opened the phone may ask for the user name and password once more. From 28 October 2026 the login is then **remembered for 30 days** (renewed while you use MODE-S Wind) — also after the phone's screen has been off or the browser has been closed.



the icon

1.3 The screen

A slim bar at the top holds five things (Fig. 1):

- ≡ at the left opens the menu (Section 2);
- the **name of the view** and under it a short line: what is shown and when it was updated — e.g. `last 60 min · 15:55 UTC`, `24.10.2026 15–16 UTC`, or on the ILS view the number of aircraft on the approach, the QNH and any active windshear alert;
- the **current time in UTC** (from 28 October 2026), hours and minutes — all times of MODE-S Wind are UTC, two hours behind Finnish winter time and three behind summer time;
- the **theme button** (from 28 October 2026): *moon* — dark theme, *sun* — light theme, *half-filled circle* — **Auto**: the theme follows the phone's own dark / light setting, and changes with it while the page is open (e.g. when the phone turns dark in the evening). Each tap steps *Dark* → *Light* → *Auto* → *Dark*; a short note under the button names the new setting. Auto is the setting until you choose one; your choice is remembered on the phone;
- a **dot** at the right: the system health of MODE-S Wind, the same indicators as on the Statistics page. *Green*: all parts work. *Amber*: something is late, retrying or using a fallback (e.g. no new MEPS model data). *Red*: a part has stopped. The menu's General section says which part; the Statistics page on the full site has the details.

Below the bar is the product. All times are UTC.

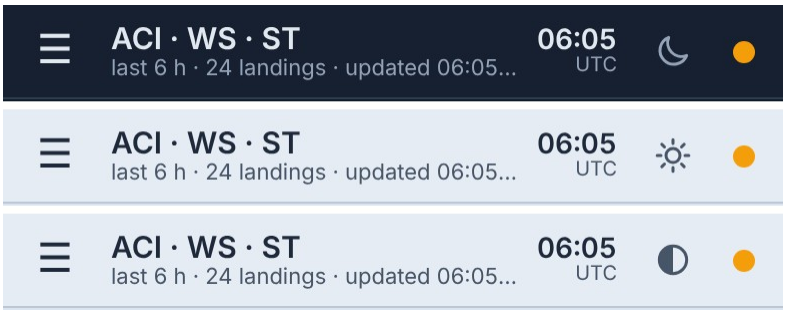


Figure 1. The top bar with the theme set to Dark (moon), Light (sun) and Auto (half circle; here the phone is set to light): the view and its status line, the current UTC time, the theme button and the system-health dot.

2 The menu

Tap ≡. The menu slides in from the left (Fig. 2); × or a tap beside it closes it.

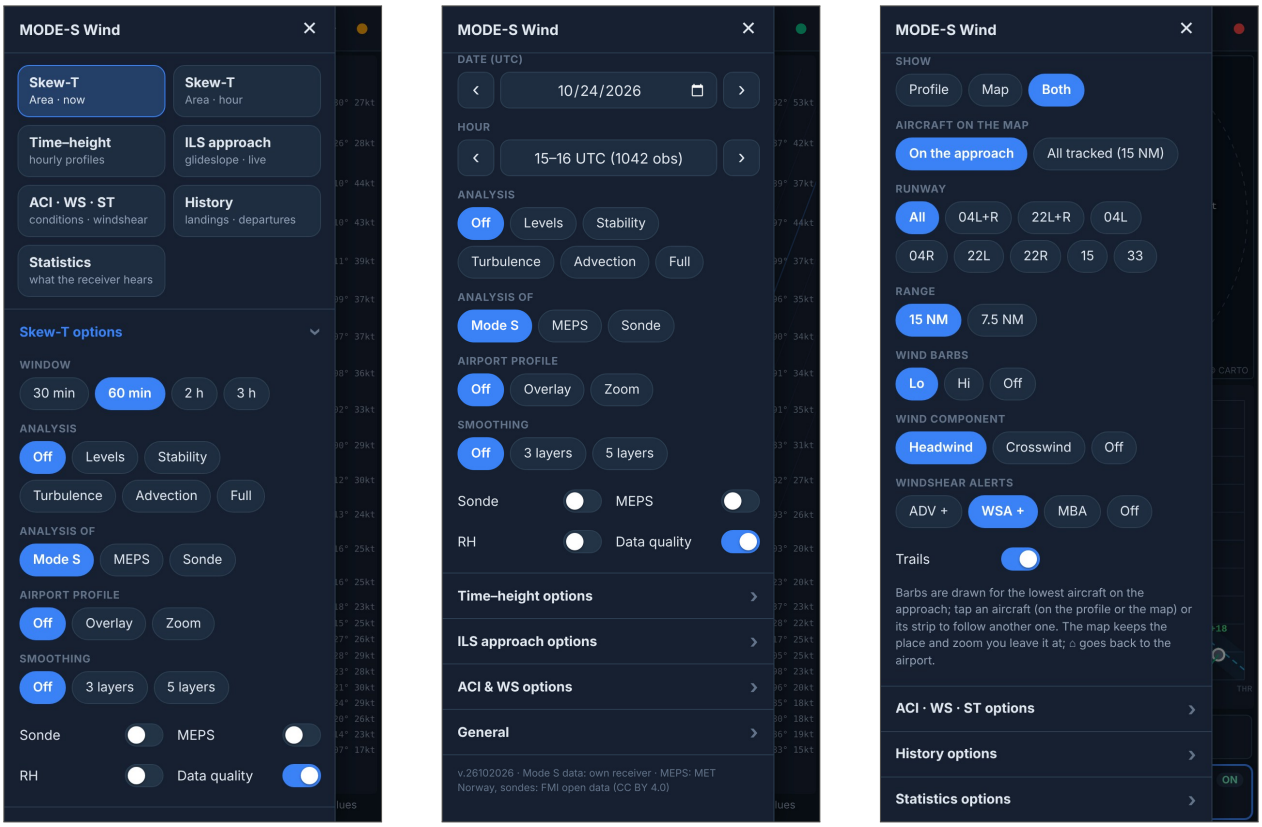


Figure 2. The menu. Left: the views as tiles (the shown one highlighted) and the options of the shown view, here Skew-T, opened below them. Middle: Area · hour with its date and hour steppers and the switches. Right: the ILS approach options (from 28 October 2026 with Show and Aircraft on the map); the other products' options are folded but one tap away.

Views. The eight tiles (Weather from 30 October 2026) at the top choose the product. A tap switches to it and closes the menu.

Options. Below the tiles each product has a folding section: Skew-T options, Time–height options, ILS approach options, ACI · WS · ST options, Weather options, History options and Statistics options. The shown view's section opens by itself (its title in blue); the others stay folded and open with a tap, so you can, for example, set the Skew-T options while the History is shown. The menu scrolls on its own.

Controls. Choices are buttons: the highlighted one is in use, a tap on another changes it at once. On / off settings are switches. Dates have a calendar field and, for stored hours, ⟨ ⟩ buttons that step one day or one hour back and forward (over midnight to the next or previous day). Changes take effect immediately; there is no *Apply* button.

General. The system health in words, What's new, About and User guides (from 28 October 2026, Fig. 3), a link to the full site and to this guide. What's new shows the same short notes of each new version as the full site's *What's new* window — the newest one open, the older ones folded (tap to open). What's new is also at the top of the menu, next to the *MODE-S Wind* title (from 30 October 2026), so it is easy to find when there is something new. At the top of What's new there are User guides and About buttons, at the top of User guides What's new and About, and at the top of About the other two (About from 31 October 2026), so you can move between the three directly. A small **red dot** on ≡ and on both buttons tells that there is a version you have not read yet; it goes away when you open What's new (also when you have read it on the full site in the same browser). About shows the same text as the About window of the full site: who made MODE-S Wind and how to reach him, the receiver site, how the observations are made, the products, the windshear detection and the credits. User guides lists all the guides of the full site — e.g. the Windshear guide or the windshear study log — with their version, date, size and contents (Contents); Open PDF opens one in the phone's PDF viewer, Download saves it. Both open over the view; × or the phone's *Back* closes them.

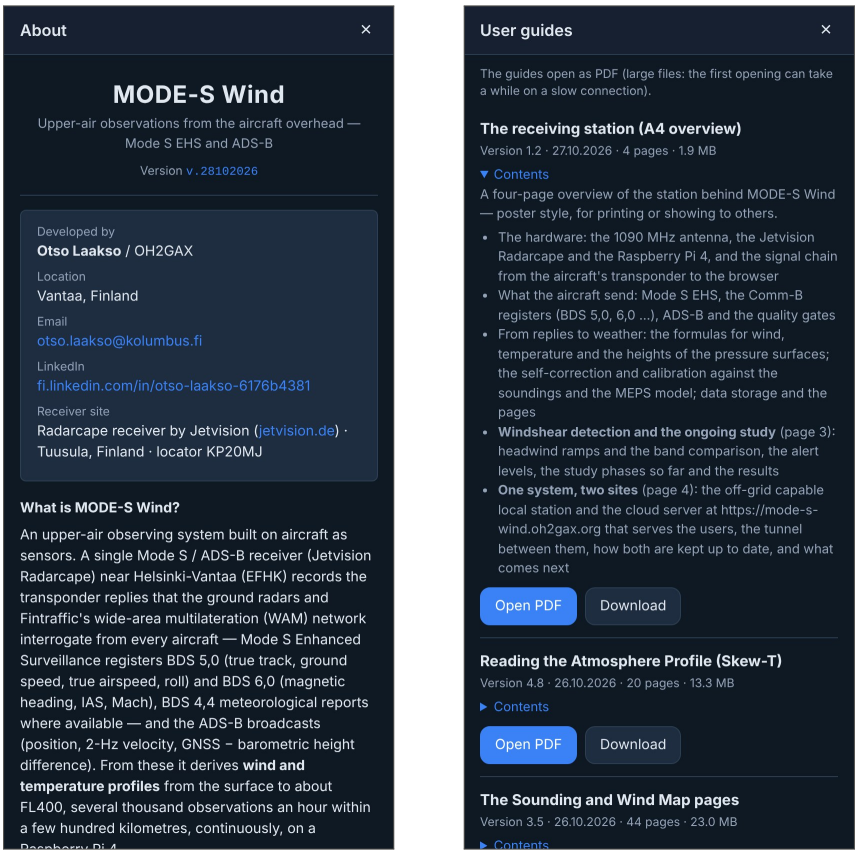


Figure 3. About (left) and User guides (right, with the contents of the first guide opened), from the menu's General section.

3 Touch, rotation and updates

Tap for values. On the full site the values appear when the mouse is over a diagram. On the phone, *tap* the diagram: a box shows the values at that point — on the Skew-T the level's temperature and wind (and the sonde's and model's), on the time–height section the hour and layer, on the ACI & WS chart the nearest landing, departure or go-around, on the space–time diagram the flights of that cell. *Drag* sideways or up and down to move along; tap elsewhere to move the box. On the ILS view a tap on an aircraft chooses whose wind barbs are drawn (Section 6).

Scrolling. When a view is taller than the screen — ACI · WS · ST with its list of flights, the History, the ILS view with many aircraft, or a Skew-T turned to landscape — swipe up and down to scroll, also when the swipe starts on the diagram. A short tap still gives the values.

Portrait and landscape. In portrait each diagram takes the full width and as much of the height as it needs. Turn the phone for more room across: the time–height section gets a longer time axis, the ILS profile spreads over the screen (Fig. 4); the Skew-T keeps its shape and the page scrolls.

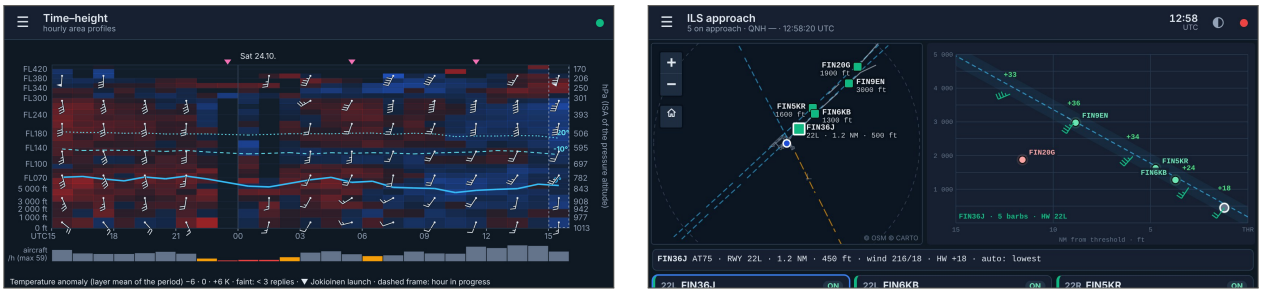


Figure 4. Landscape: the time–height section (24 hours) and the ILS approach with Show: Both — the map beside the profile. The strips of the ILS view are below; scroll down to see them. (The ILS picture: approach traffic replayed from the stored observations; the map tiles are not shown, see Fig. 14.)

Updates. Only the view on the screen is updated, and nothing while the phone's screen is off or another app is in front; when you come back the view is updated at once. Table 1 gives the intervals. The ILS view is the only one that updates every few seconds: it loads only the aircraft on the approach and the active alerts, compressed — about 1–5 kB each

time, depending on the traffic — so watching it for an hour on mobile data uses roughly 1–4 megabytes; with All tracked (30 NM) the map's list is longer, a few kB more each time in busy hours. Its map adds the aircraft positions (well under 1 kB each time) and, once, the map program and the map tiles (about half a megabyte; the phone keeps them). The Statistics view uses about 7 megabytes an hour (Section 9); the Weather view about 1–3 megabytes when opened, and 1–3 megabytes an hour more with the air traffic on (Section 10); the other views use little.

View	Updated	Data
Skew-T · Area now	every 2 min	the area profile; METAR every 10 min
Skew-T · Area hour	when you choose an hour	stored hourly profile
Time–height	every 10 min	hourly profiles of 12 h – 14 days
ILS approach	every 5 s	live approach traffic (with the map: their positions), alerts; METAR and QNH every 10 min
ACI · WS · ST	every minute	landings, departures, go-arounds of 3 h – 1 day; space–time diagram
History	every minute (not for a date)	landings or departures of 1 h – 1 day or of one date
Statistics	every 30 s	the Statistics page's data of the window (about 55 kB)
Weather	maps when opened; run every 10 min	the model hours (about 20–70 kB each); with the FMI radar its newest image every 4 min; with air traffic its positions every 6 s
Health dot	every minute	the system health indicators

Table 1. When the views are updated (only while shown and the screen is on).

4 Skew-T: Area now and Area hour

The Skew-T is the same diagram as the Live Map's *Atmosphere Profile* and the Sounding page (Fig. 5): temperature against pressure, with the isotherms tilted to the right, and the wind as barbs at the right. The grey curve and the grey barbs with their values are the *aircraft* — the average of all aircraft within 150 km. With Sonde the Jokioinen radiosonde is drawn in pink (barbs inside the right edge of the plot), with MEPS the MEPS weather model in teal (barbs in the margin, just left of the aircraft's). The labels at the top left give the data quality, the sounding's and the model's time and how far the aircraft are from them.



Figure 5. Left: Skew-T · Area now, the last 60 minutes, with Sonde (pink) and MEPS (teal) on; the labels give how far the aircraft are from them: on average 0.0 K from the 12 UTC sounding and −0.3 K from the model, wind 10 and 7 kt RMS. Right: Area · hour 24 October 2026 15–16 UTC with Analysis: Levels (tropopause, 0 °C level, maximum wind); a tap at 447 hPa shows the aircraft (−29.7 °C, 191°/35 kt), the sonde and the model at that level.

Area now is the live profile, updated every 2 minutes, with the latest METAR at the ground (ground line, temperature and dewpoint). **Area hour** shows one stored hour: choose the date and the hour in the menu, or step with ⟨ ⟩. The METAR of that hour is stored with it.

Option	Choices	What it does
Window	30 min, 60 min, 2 h, 3 h	period of Area now; longer = more aircraft, less up to date
Date, Hour	calendar, ⟨ ⟩	the stored hour of Area hour
Analysis	Off, Levels, Stability, Turbulence, Advection, Full	automatic marks: tropopause, isotherms, jets, inversions, stability, turbulence risk, warm / cold advection, contrails, surface parcel
Analysis of	Mode S, MEPS, Sonde	which profile the analysis is computed from; MEPS and Sonde add likely cloud layers
Airport profile	Off, Overlay, Zoom	the fine low-level profile of the landings and departures at EFHK; Zoom shows the lowest 5 000 ft; from 29 October 2026 with the hour's low-level jet (◊ LLJ) and surface inversion (red SFC INV bracket)
Smoothing	Off, 3 layers, 5 layers	vertical smoothing of the aircraft profile
Sonde	switch	the Jokioinen radiosonde
MEPS	switch	the MEPS weather model over the same area
RH	switch	the trial moisture strip with the sonde's and the model's humidity
Data quality	switch	the data badge and the rings at layers with only 1–2 aircraft

Table 2. Skew-T options. The *Reading the Atmosphere Profile (Skew-T)* guide explains each of them.

5 Time–height

The time–height section puts the hourly profiles side by side: time runs to the right, height up (Fig. 6). The colour is the chosen field, the barbs the hourly wind; lines mark the 0, −10 and −20 °C levels, the tropopause and the maximum wind when switched on. The strip at the bottom gives the aircraft per hour; a pink triangle at the top marks a Jokioinen launch, and the last column (dashed frame) is the hour in progress. Tap a cell for its values.

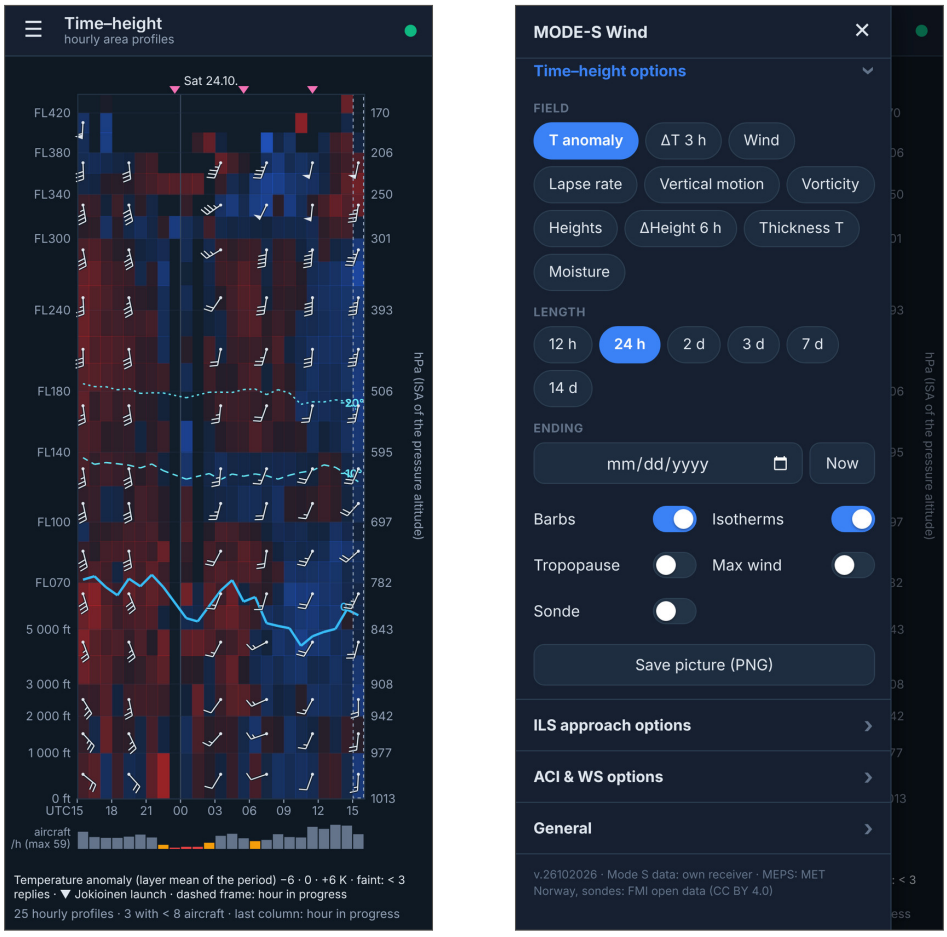


Figure 6. Time–height, 24 hours to 24 October 2026 15 UTC, temperature anomaly (blue colder, red warmer than the period's mean in that layer), with barbs and isotherms; right: its options.

Options. Field: temperature anomaly, temperature change over 3 h, wind speed, lapse rate, vertical motion, vorticity, heights of the pressure surfaces, height change over 6 h, thickness temperature check, the moisture trial and the *boundary layer* — BL wind and BL temp, the lowest 5 000 ft at the airport on a linear scale (Fig. 7) — and, from 31 October 2026, the boundary layer *flight by flight*: BL headwind, BL Δ headwind and BL shear, every landing and departure as its own thin column with its headwind, its change against the flights of the previous 45 minutes or its change with height (Fig. 8); Flights chooses all, the landings or the departures, and the coloured line along the top gives the landing runway. Length: 12 h to 14 days — 24 h by default on a phone; landscape gives the longer periods room. Ending: a past date, or Now. Switches for barbs, isotherms, tropopause, maximum wind, the sonde as its own column and the Boundary layer — the low-level jet (◊ with its speed in kt, joined hour to hour) and the surface inversion (red, from the ground to its top) on any field. Switches that do not apply to the BL fields are greyed out. Save picture (PNG) stores the section as an image on the phone. The *Sounding and Wind Map pages* guide explains the fields.



Figure 7. Left: BL wind, 72 hours to the end of 19 October 2026 — the wind of the aircraft within 25 km in 250-ft steps (blue calm, green, yellow, red 55 kt), the low-level jet of the evening of 17 October (30 kt at 1 750 ft, sinking) and the surface inversions under the high (red bar, red line at the top). Hatched: no flights. Right: Lapse rate with the Boundary layer switch on — the jet and the inversions in the lowest 3 000 ft.

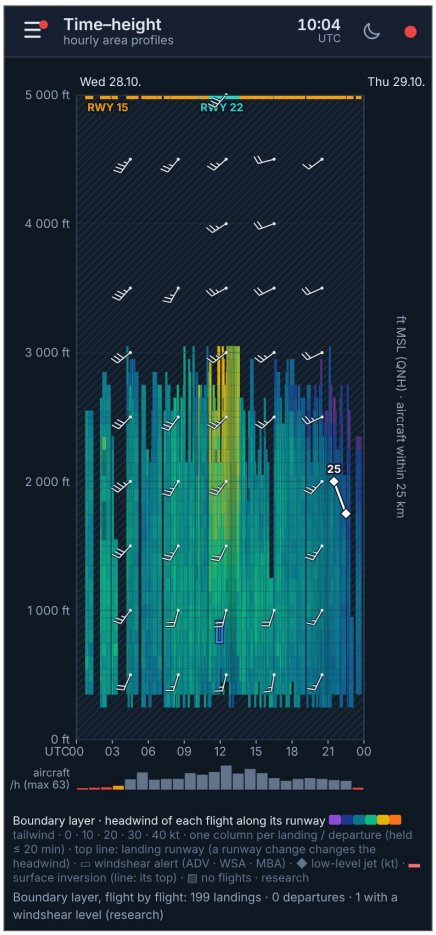


Figure 8. BL headwind, landings only, 28 October 2026 (the station's data): one column per landing, runway 15 most of the day (10–20 kt of headwind), the landings on runway 22 around midday with 25–35 kt — the runway changed, not the wind (line along the top) — and a low-level jet of 25 kt at 2 000 ft in the evening.

6 ILS approach

The ILS view is the Windshear page's vertical profile of the final approach, live (Fig. 9): distance from the runway threshold to the right (15 NM to the threshold), altitude up (to 5 000 ft). It is redrawn every 5 seconds.

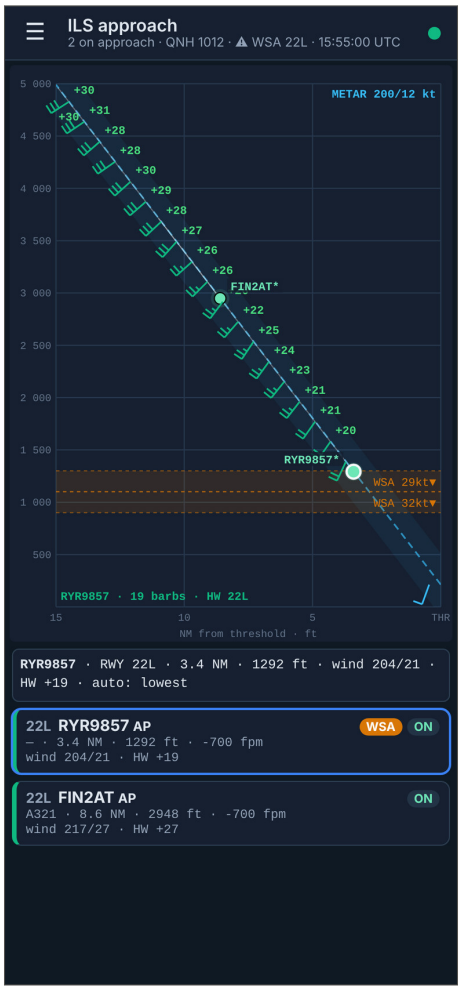


Figure 9. ILS approach, runway 22L. Two aircraft on the glideslope (green `ON`); the barbs are those of the lower one, RYR9857, measured along its approach from 15 NM in, with the headwind component of each in kt above it; a windshear alert (`WSA`) is active at 900–1 300 ft. The METAR surface wind is the blue barb at the threshold. Under the profile the chosen aircraft and the strips. *Illustration with simulated approach traffic.*

What is drawn.

- **The glideslope**: the dashed line is the 3° path (318.5 ft per NM above the threshold, corrected for the QNH), the shaded band ±300 ft around it.
- **Aircraft** in the approach corridors as dots with their callsigns (⋆: autopilot engaged): green *on* the glideslope, amber *high*, red *low*; the faint line behind each is its path over the last minute.
- **Wind barbs** of one aircraft, measured by it on the way down, coloured by where the wind comes from (green: computed from the aircraft's speed and heading replies; blue, orange, violet: other report types). The number above each barb is the headwind component for that runway (Headwind; positive = headwind) or the crosswind (Crosswind). Small hollow circles mark points where no wind could be computed (amber: the aircraft was turning; grey: a gap in its position data). The line at the bottom left names the aircraft and the number of barbs.
- **Windshear alerts**: an active alert is a band across the profile at its altitudes, blue `ADV` (advisory), amber `WSA` (windshear alert) or red `MBA` (microburst alert), with the change in kt (▼ loss, ▲ gain of headwind).
- **METAR**: the surface wind as a blue barb at the threshold, its text at the top right.

The map (from 28 October 2026). With Show: Both — the default — a map of the approaches is above the profile (beside it in landscape), with Map only the map, with Profile only the profile as before (Fig. 14). The map shows the aircraft as on a radar screen: an open square framed in the colour of the wind source (as the barbs) with the callsign and altitude; the aircraft whose barbs are drawn has its square framed thinly in white (in the light theme in black, which stands out on the light map), from 30 October 2026 the same size as the other approach traffic and with the same label (in the pictures below still larger).

Departures (from 29 October 2026). The climb-outs are not shown by default, as on the Windshear page. With Departures on the map: Shown they are drawn like the other traffic, with their runway and an arrow in the label, e.g. `A016 · 22R↑` — useful to see a departure climbing through the layers the arrivals descend in. A go-around is not a departure:

it stays with the approaches.

Boundary layer line (from 29 October 2026; research). Under the selected aircraft a line always tells what the lowest air is doing (Fig. 10): *Boundary layer, last hour* with a chip `LLJ 750 ft · 18 kt 023°` when there is a low-level jet and a red chip `surface INV +2 K` when the air at 600–1 000 ft is warmer than at the ground; otherwise grey *no jet · no inversion*, and *no recent flights* at night when nothing flew. A jet means the headwind changes on final below its height; an inversion means calm, smooth air near the ground (Section 7).

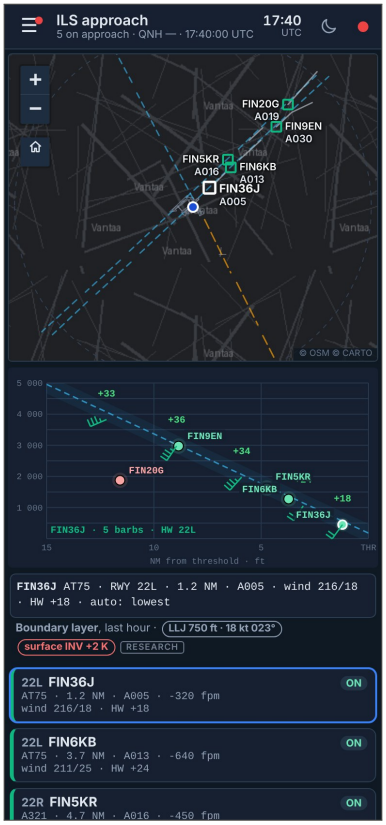


Figure 10. The boundary-layer line under the selected aircraft: a low-level jet at 750 ft and a surface inversion of +2 K (18 October 2026 17 UTC).

Turbulence on the map (from 29 October 2026; research). The option Turbulence on the map (EDR, research) (Off by default, 30 min, 1 h) colours the straight pieces (about 2 km each) of the paths of the landings of that period — and of the departures when Departures on the map is Shown (from 30 October 2026) — with thin lines by their turbulence, the EDR (Section 7): green smooth, yellow light (from 0.10), orange moderate (from 0.20), red severe (from 0.45). Where several flights flew the same path the strongest is drawn on top, so the colour shows the worst piece. A line under the selected aircraft sums it up, e.g. *Turbulence (EDR), last 60 min · 9 landings, 3 departures · max 0.26 moderate at 1400 ft (FIN8MC 22L) · median below 1000 ft 0.15, 1000–3000 ft 0.12* — the departures are counted only when they are shown (Fig. 11).

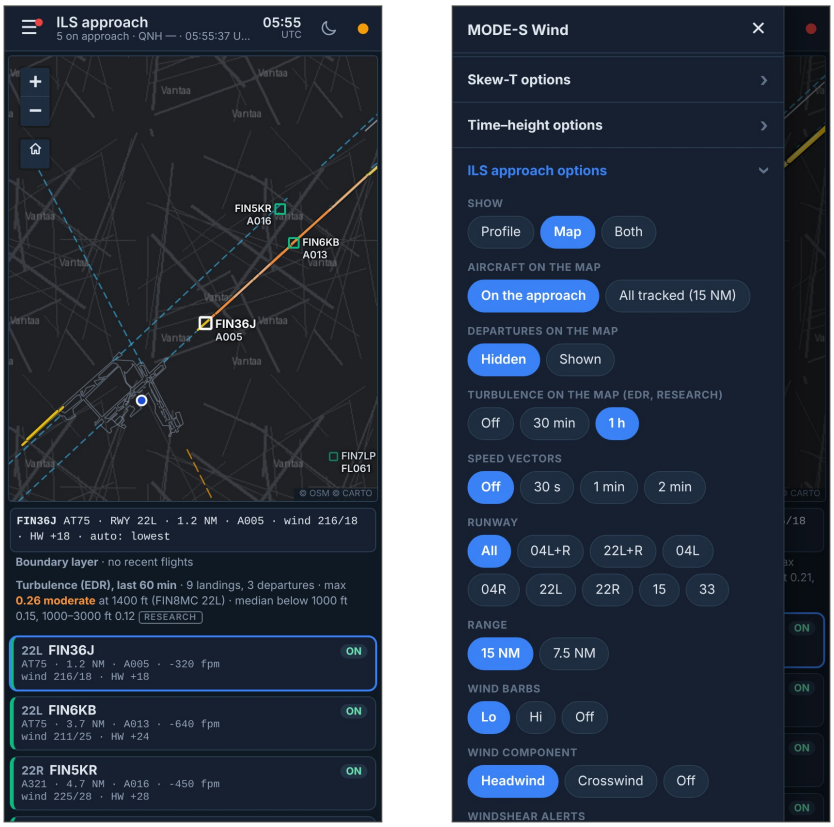


Figure 11. Left: Turbulence on the map 1 h with Departures on the map: Shown — the final approach to 22L in orange (moderate) and yellow (light), a departure at the lower left; the flights of 28 October 2026 replayed in a test. Right: the option in the menu.

Speed vectors (from 29 October 2026). The option Speed vectors (Off by default, 30 s, 1 min, 2 min) gives each aircraft a line to where it will be after that time at its ground speed along its track, as on a radar screen — in the colour of its square, white for the selected aircraft. A faster aircraft has a longer line: below 5 000 ft, at 140–250 kt, 30 s is 1.2–2.1 NM and 1 minute 2.3–4.2 NM, about the spacing between the aircraft on final. Start with 30 s; 1 min shows the spacing to the aircraft ahead. A landed aircraft gets none.

Altitudes as a controller sees them (from 29 October 2026). On the map, the strips and the line under the profile the altitude is written as on an air traffic controller's radar label: `A023` is 2 300 ft above sea level on the airport's QNH (the METAR pressure), and above the transition altitude of 5 000 ft the flight level, e.g. `FL061`. Aircraft transponders report their altitude on the standard pressure of 1013.25 hPa, so on a low-pressure day the raw value is several hundred feet too high: at QNH 1003 hPa an aircraft reporting 1 275 ft is really at about 1 000 ft, `A010`. The profile's height axis and the glideslope already use the QNH.

ATC labels (from 30 October 2026). The option Labels on the map: ATC (Standard by default) gives every aircraft on the map the three-line label of the ATC style of the Live Map and the Windshear page, in a small monospaced font: the callsign; the level in hundreds of feet — the altitude on the METAR QNH up to the transition altitude of 5 000 ft, the flight level above, without the letters — with ↑ or ↓ when climbing or descending at 300 ft/min or more and the selected level when the aircraft has sent it (`007↓020`: at 700 ft, descending, 2 000 ft set); the ground speed in tens of knots and the type (`14 A320`), for a departure followed by its runway (`04R↑`). The labels are placed as the standard ones (below); the squares are drawn a little smaller. The options Aircraft type on the map and Selected altitude change only the standard labels (the selected altitude still appears in the strips and the selected aircraft's line). **Tap for the extended label** (from 31 October 2026; Fig. 12). With the ATC labels, *tap an aircraft* — any one on the map — and its label grows into the six-line *extended label* of the big pages' Hover, on a dark backing (light in the light theme) with a thin frame, the other labels moving out of its way: the callsign, type and registration; the level with the trend, the selected level, the vertical rate and `AP` / `APP` when the aircraft reports the autopilot; the ground speed, true and indicated airspeed and Mach number; the magnetic heading and track, the drift and the bank angle; the wind with its head- or tailwind and crosswind and the temperature; the distance and bearing from the airport, the NACp and the squawk. The values are what the receiver has just heard from the aircraft (a value not heard within 20 s shows as `---`), read again every 2 seconds while the label is open — about 0.5 kB each time. It stays open until you tap an empty place on the map (a tap on the label itself keeps it), switch the labels to Standard, or the aircraft leaves the map. A tap on an aircraft on the approach still also follows it for the barbs, as before. The Windshear guide explains the lines in detail.

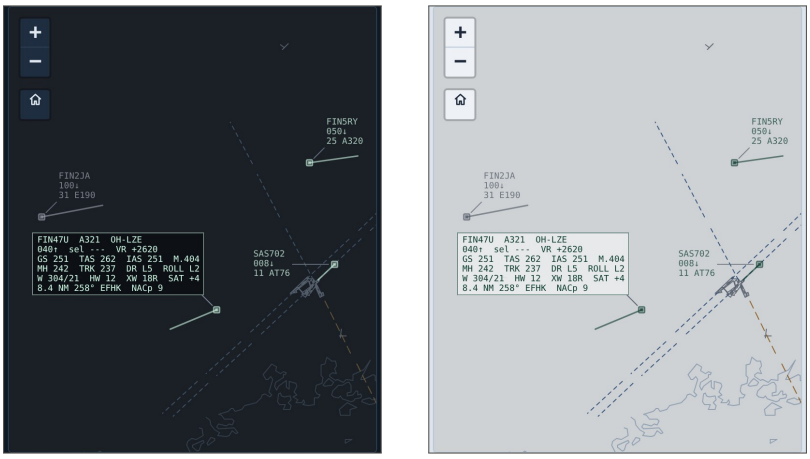


Figure 12. The extended label of FIN47U after a tap, ATC map style, dark and light theme. A test with the stored observations of 30 October 2026, 08:29:44–51 UTC (four aircraft: positions, levels, speeds and FIN47U's BDS 5,0 / 6,0 values as stored) and the QNH 1018 of that time: FIN47U climbing to the south-west through 4 000 ft at 2 600 ft/min, IAS 251 kt, Mach 0.404, magnetic heading 242°, the wind 304/21 with 12 kt headwind and 18 kt crosswind from the right, 8.4 NM from the airport. No selected altitude was stored, hence `sel ---`.

ATC map style (from the evening of 30 October 2026; Fig. 13). The option Map style: ATC (research) (Street by default) gives the map the radar-display look of the Live Map and the Windshear page: no street map but a plain background — dark grey in the dark theme, light grey in the light one — with the coastline, the airport layout and the ILS (short dashes) and RNP (long dashes) finals. The squares, trails, speed vectors and labels are monochrome: light below 6 000 ft, grey above; the aircraft whose barbs the profile shows is not marked on this map (the line under the profile tells which one it is). It goes well with Labels on the map: ATC, but works with either. The first time it is used the phone loads the drawing code and the coastline, about 0.8 MB; after that the browser keeps them and only checks whether they have changed. Like the ATC style of the big pages it is a research display, not for air traffic control: the positions are those received by this station.

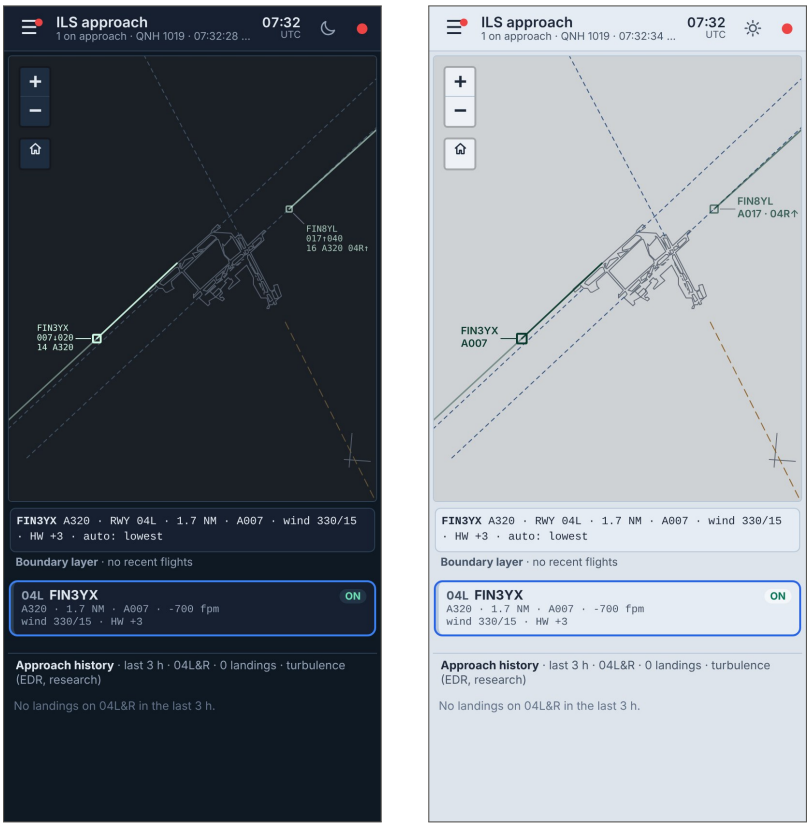


Figure 13. Map style: ATC, Show: Map, Runway: 04L+R, All tracked, departures shown, Speed vectors: 1 min. The traffic is the live approach state of the production site of 30 October 2026, 14:22 UTC (its list of the other aircraft was still the earlier one, within 15 NM below 5 000 ft), with the METAR QNH 1019 of that time, drawn in a test with the label placement of 31 October 2026: FIN3YX at 700 ft on final to 04L — its label to the left, off the approach line —, FIN8YL climbing out of 04R. Left: dark theme with Labels on the map: ATC; right: light theme with the standard labels.

Selected altitude (from 30 October 2026). With the option Selected altitude: On (Off by default) the altitude is followed by the altitude the pilots have set on the autopilot panel (the MCP or FCU), when the aircraft has sent it in the last 2 minutes — from its answers to the radars' Enhanced Surveillance questions (register BDS 4,0) or its own ADS-B. It is written as on the Live Map (from the evening of 30 October 2026): + climbing, – descending (300 ft/min or more), = level, then the selected altitude as `A` and hundreds of feet up to the transition altitude of 5 000 ft and as a flight level above. `A023+A050` is an aircraft at 2 300 ft, climbing, with 5 000 ft set; `FL120-A030` one at FL120 descending, with 3 000 ft set — usually the altitude it has been cleared to; `FL390=FL390` one level at its selected FL390. The selected altitude is as the pilots set it (on the QNH below the transition altitude). Not every aircraft sends it, and the radars ask for it only now and then, so it is missing for some aircraft; it is never guessed. The option Aircraft type on the map (Off by default) adds the ICAO type after the callsign, e.g. `FIN456 AT75`. With either option on, the map's labels and squares are drawn a little smaller so that the longer labels fit; with both off they are as before.

Label placement (from 31 October 2026). The labels — standard or ATC — are placed as on the Live Map and the Windshear page: each is joined to its square by a thin *leader line* and moved to where it covers least — not over another label, another square, the trails, the speed vectors or the approach lines — and it stays there while that place stays free, so the labels do not jump. The approach traffic is placed first. Before, a label stood at a fixed place beside its square (to the right, to the left for 22R and 04R), so on 04L and 04R — where the aircraft fly up and to the right — the first aircraft's label lay over the approach line ahead of it. On the street map the labels have a dark outline (a light one in the light theme) to stay readable over the map. Behind them the ILS centrelines (blue, dashed; the RNP approach to 33 amber), the airport, the tracking range (dashed circle) and, with Trails, each aircraft's path over the last 2 minutes — in the ATC map style (from 31 October 2026) instead the *history plots* of the big pages' ATC style: small dots of the last five positions, about 6 seconds apart and fainter with age, behind *every* aircraft on the map (an aircraft on the approach has them at once, the others after half a minute). Aircraft on the map: On the approach (default; those of the chosen runway) or All tracked (30 NM) — also every other aircraft the receiver hears within 30 NM of the airport, at any level (from 31 October 2026; before within 15 NM and below 5 000 ft), dimmed. Departures on the map: Shown alone adds the climb-outs within 15 NM below 5 000 ft. *Tap* an aircraft on the approach to follow it, as on the profile. Zoom with two fingers or + −, move with one finger; the map keeps the place and zoom you leave it at, and the house button under them takes you back to the airport. To scroll the page down to the strips, swipe on the profile or the strips, not on

the map. The map is light or dark with the theme.

A landed aircraft (from 29 October 2026). After touchdown the receiver still hears an aircraft for a while, so before it stayed in the view for about one and a half minutes at its last position, about 0.6 NM before the threshold. Now an aircraft within 2 NM of the threshold and below 1 000 ft whose position has not changed for 15 seconds is shown *faded*: a grey square with `landed` on the map, a grey dot on the profile and a dimmed strip with `LANDED?` and `no new position for 22 s`. After 30 seconds it is no longer shown, and Auto has already moved the barbs to the next aircraft. Only the display changes; the landing is recorded as before.

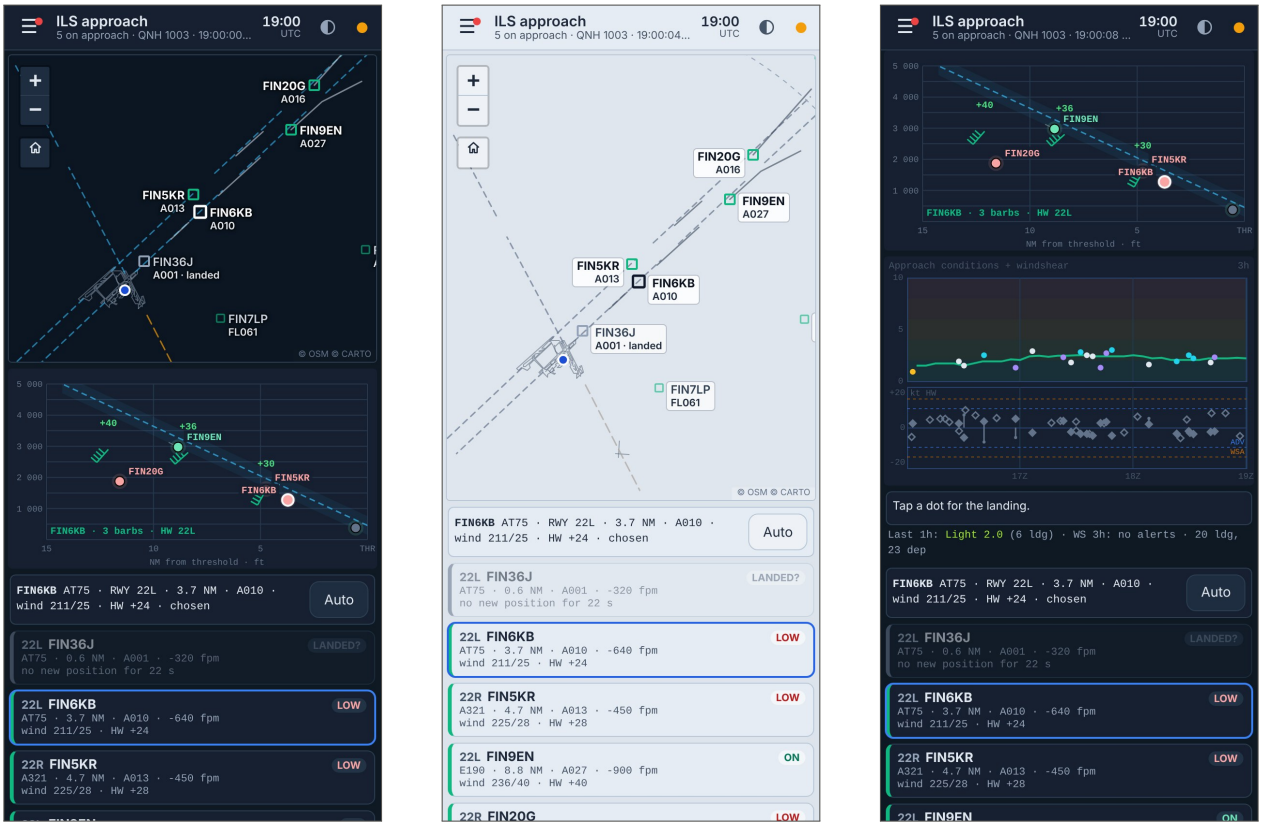


Figure 14. The ILS approach with the map (the labels still at their fixed place of before 31 October 2026): five aircraft on 22L and 22R (approach traffic replayed from the stored observations of 27 October 2026, with QNH 1003 hPa; FIN36J is shown as just landed; in these pictures the map tiles — streets, coast, lakes — could not be loaded, on the phone they are under the aircraft). Left: Show: Both — the map, the lower profile and the strips; FIN6KB has been tapped, so its square is white and the profile shows its barbs; Auto goes back to the lowest. Middle: Show: Map in the light theme, with room for four strips. Right: the chart WS + ACI (3 h) under the profile, scrolled down; the chart with the stored landings and departures of 28 October 2026 16–19 UTC.

Sizes. In portrait with Show: Both the map takes about 40 % of the screen height and the profile about a quarter, so that the first strips are visible under them; with Map the map takes 58 % and leaves room for about four strips.

Chart under the view (from 29 October 2026; from 30 October on by default). The option Chart under the view — WS + EDR (the default), WS + ACI or Off — adds a chart of the ACI · WS · ST view to the ILS view (Fig. 14, right: WS + ACI): on top the turbulence (EDR, Section 7) of every landing (dot) and departure (ring), or how rough each landing was (the Approach Conditions Index), and below the windshear report of every landing and departure as a change of headwind in kt, for the last 3, 6 or 12 hours (Chart range, 3 h by default). It is under the profile, or under the map with Show: Map, and the strips follow it. Tap a dot for that landing or departure; the line under it gives the last hour's turbulence or conditions and the windshear alerts of the period. Section 7 explains the chart. Its data are fetched at most once a minute.

Boundary layer below (from 31 October 2026; research). The option Boundary layer below — Off (the default), BL wind, BL temp, BL headwind, BL Δ headwind or BL shear — adds one of the boundary-layer charts of the ACI · WS · ST view (Section 7) after that chart, on the same Chart range and the same time axis (Fig. 15), so the turbulence and windshear of the flights and the wind layers they flew through are on one screen; it works also with Chart under the view: Off. Tap it for an hour's cell, a jet or a flight at a height.

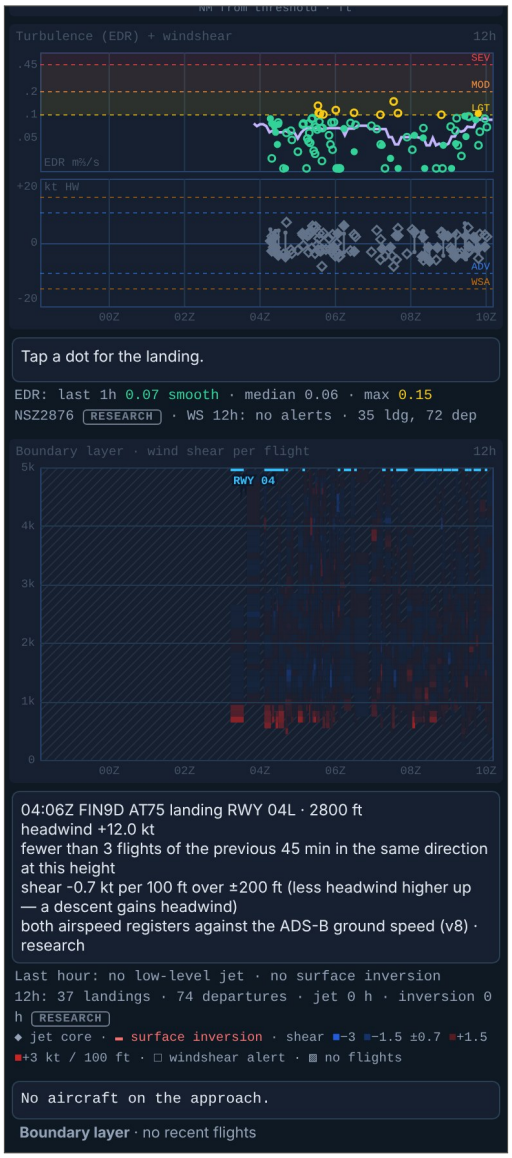


Figure 15. The ILS view scrolled down (stored data to 31 October 2026 10:10 UTC, drawn in a test with no aircraft on the approach): WS + EDR for 12 hours and, under it, Boundary layer below: BL shear with a tapped landing (FIN9D, 2 800 ft).

Approach history under the strips (from the evening of 30 October 2026; Fig. 16). Under the strips the ILS view lists the landings of the last 3 hours (Approach history under the strips: Off, 3 h — the default — or 6 h) of the runways chosen, newest first, with the same cards as the History view (Section 8): time, callsign, type, runway, the ACI, a windshear level, the EDR and a go-around as chips, and a second line chosen with Approach history shows — by default Turbulence: the EDR of the landing with its class, below and above 1 000 ft and its roughest piece; or the headwind, crosswind or wind per height band, the ACI or the windshear report. Tap a card for all its bands, its reports and the boundary layer at the time; tap again to close it. So the traffic now on final and how rough the last landings found the air are on one screen. The list is fetched at most once a minute.

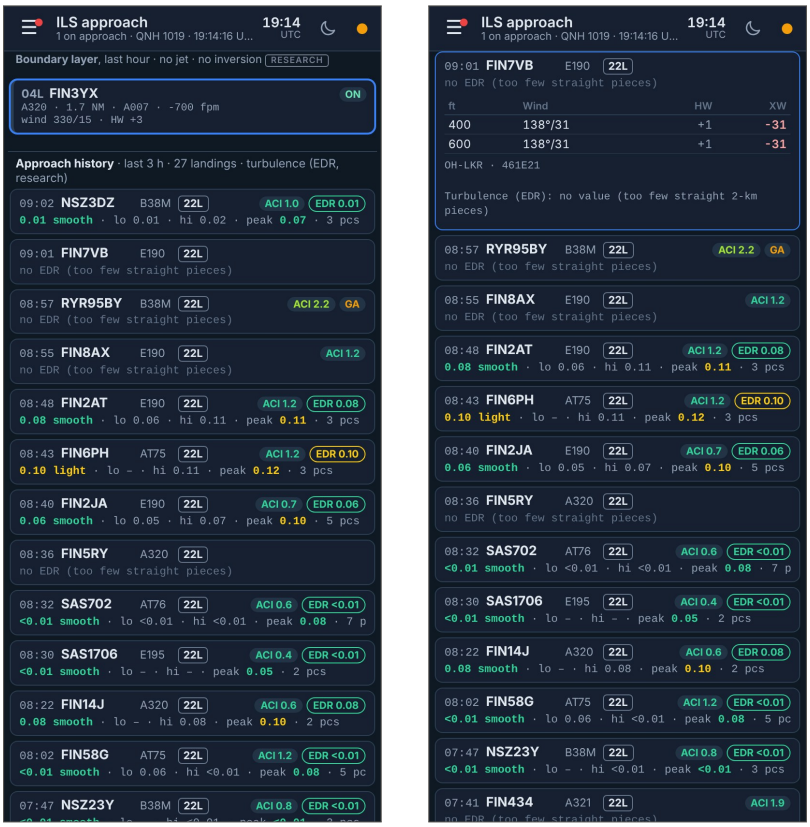


Figure 16. The approach history under the strips, scrolled down (3 h, Turbulence). A test: the stored landings of 30 October 2026, 06:05–09:05 UTC (all on 22L), moved to the present, under the approach traffic of 14:22 UTC. Left: the list — most landings smooth, FIN6PH light (0.10); landings without enough straight pieces have no EDR. Right: FIN7VB tapped open: its band winds, registration and turbulence.

Whose barbs. By default the barbs follow the *lowest* aircraft on the approach, the one closest to the threshold — the freshest picture of the wind it is flying through — and change to the next aircraft when it lands. Tap another aircraft on the profile or the map, or its strip, to follow that one; the line under the profile then says `chosen` and an Auto button takes you back to the lowest.

The strips under the profile list the aircraft on the approach, nearest first: runway, callsign (`AP`: autopilot), any windshear alert of that aircraft, the glideslope status; aircraft type, distance, altitude (`A010`, see above) and vertical speed; the latest wind and its headwind (`HW`) or tailwind (`TW`) component. The coloured left edge is the wind source as for the barbs. The top bar gives the count, the QNH used for the glideslope and the active alerts.

Option	Choices	What it does
Show	Profile, Map, Both	the profile, the map, or both (default)
Aircraft on the map	On the approach, All tracked (30 NM)	only the aircraft on the approach (default), or also all others within 30 NM at any level
Departures on the map	Hidden, Shown	the climb-outs, marked with their runway and ↑ (default Hidden)
Turbulence on the map	Off, 30 min, 1 h	the paths of the latest landings and departures coloured by their EDR, and a summary line (default Off; research)
Map style	Street, ATC	the street map, or the radar-display look of the Live Map and the Windshear page (default Street; research)
Labels on the map	Standard, ATC	callsign / altitude, or the ATC style's three lines `FIN3YX / 007↓020 / 14 A320` (default Standard)
Aircraft type on the map	Off, On	the ICAO type after the callsign, e.g. `FIN456 AT75` (default Off)
Selected altitude	Off, On	the altitude set on the autopilot panel after the altitude, e.g. `FL120–A030` (default Off)
Speed vectors	Off, 30 s, 1 min, 2 min	a line to where each aircraft will be after that time on the map (default Off)
Trails	switch	each aircraft's path over the last minute (profile) and 2 minutes (map)
Runway	All, 04L+R, 22L+R, 04L … 33	the approaches shown (profile, strips and map)
Range	15 NM, 7.5 NM	7.5 NM spreads the last part of the approach
Wind barbs	Lo, Hi, Off	Lo: one barb per 400 ft / 0.5 NM; Hi: per 150 ft / 0.2 NM (denser, more scatter)
Wind component	Headwind, Crosswind, Off	the number above each barb
Windshear alerts	ADV +, WSA +, MBA, Off	the lowest alert level drawn (the same setting as on the Windshear page of the same browser)
Chart under the view	WS + EDR, WS + ACI, Off	turbulence (EDR) or approach conditions (ACI) above the windshear of each landing and departure, under the profile or the map (default WS + EDR)
Chart range	3 h, 6 h, 12 h	the period of that chart (default 3 h)
Boundary layer below	Off, BL wind, BL temp, BL headwind, BL Δ headwind, BL shear	a boundary-layer chart after that chart, on its range (default Off)
Approach history under the strips	Off, 3 h, 6 h	the landings of that period as History cards under the strips (default 3 h)

7 ACI · WS · ST

The approach conditions and windshear chart of the Windshear page (Fig. 17). The upper part is the *Approach Conditions Index* (ACI, 0–10) of every landing: how rough the last part of the approach was, from the aircraft's own replies — below 2 smooth, 2–4 light, 4–6 choppy, 6–8 rough, 8 and above very rough. The dots are coloured by the aircraft class (`N` narrowbody, `R` regional jet, `T` turboprop, `W` widebody), the line is the running median. With ACI + windshear the lower part shows the windshear report of each landing and departure on the same time axis, as a change of headwind in kt: the strongest headwind ramp of a landing as a stem from zero, the change against the previous 45 minutes as a filled diamond (landings) or a hollow one (departures), go-arounds as triangles, and the advisory and alert levels as dashed lines.

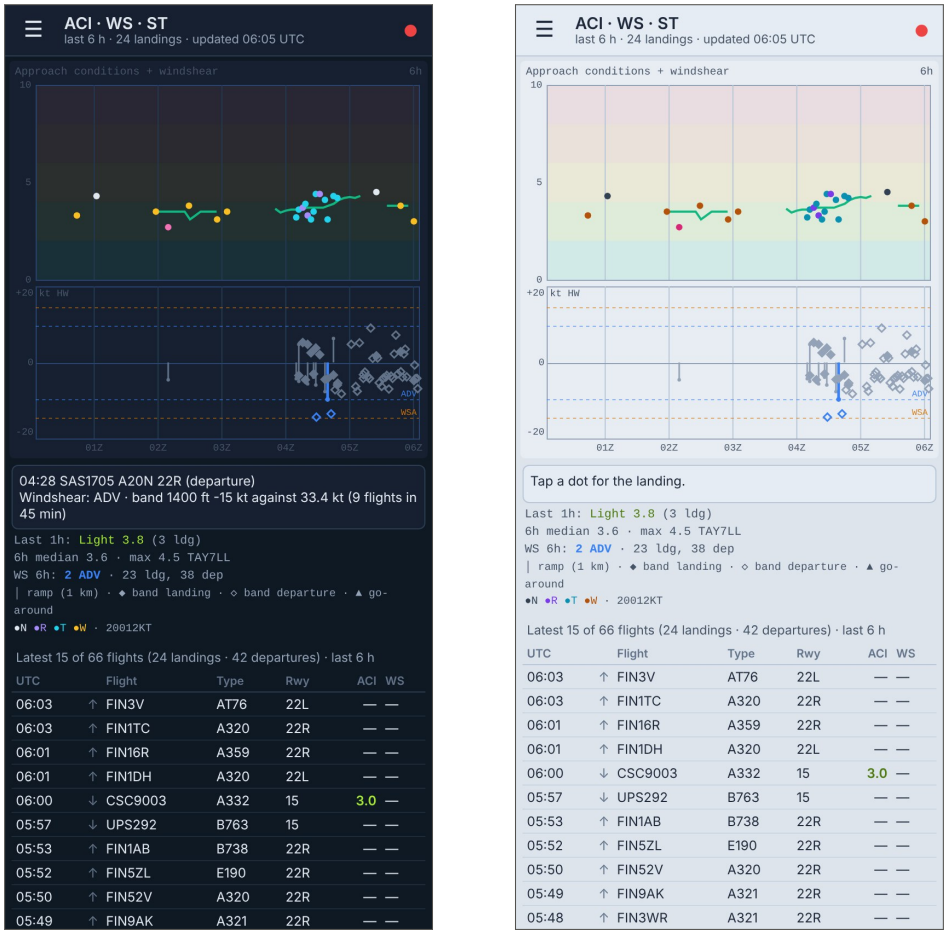


Figure 17. ACI + windshear, the last 6 hours to 28 October 2026 06:05 UTC: landings on runway 15, departures from 22L/22R in a south-westerly low-level jet, ACI mostly 3–4.5. Left: a tap on a diamond shows that flight (here the departure SAS1705, an advisory: 15 kt less headwind at 1 400 ft than the flights before); right: the light theme. The list under the chart is in Fig. 22.

ACI + EDR + WS (from 29 October 2026; research). The fourth Show choice puts the **turbulence** between the two (Fig. 18). For every landing (dot) and departure (ring) MODE-S Wind estimates from the aircraft's own replies the **EDR** — the turbulence measure of ICAO, which calls a peak EDR of 0.10 light, 0.20 moderate and 0.45 severe for a medium-size aircraft. The middle strip has those three lines on a logarithmic scale, the dots coloured green (smooth), yellow, orange or red, and the running median in purple. **Tap a flight** to see its EDR over the whole approach or climb, below and above 1 000 ft and its strongest 2-km piece; a line marks it through all three strips. The summary adds *EDR: last 1h 0.13 light · median 0.12 · max 0.19*. The EDR is an average over the approach from replies about 2 s apart, not the ICAO one-minute peak: a research value, to be compared with the pilot reports. The *Windshear* guide explains how it is computed.

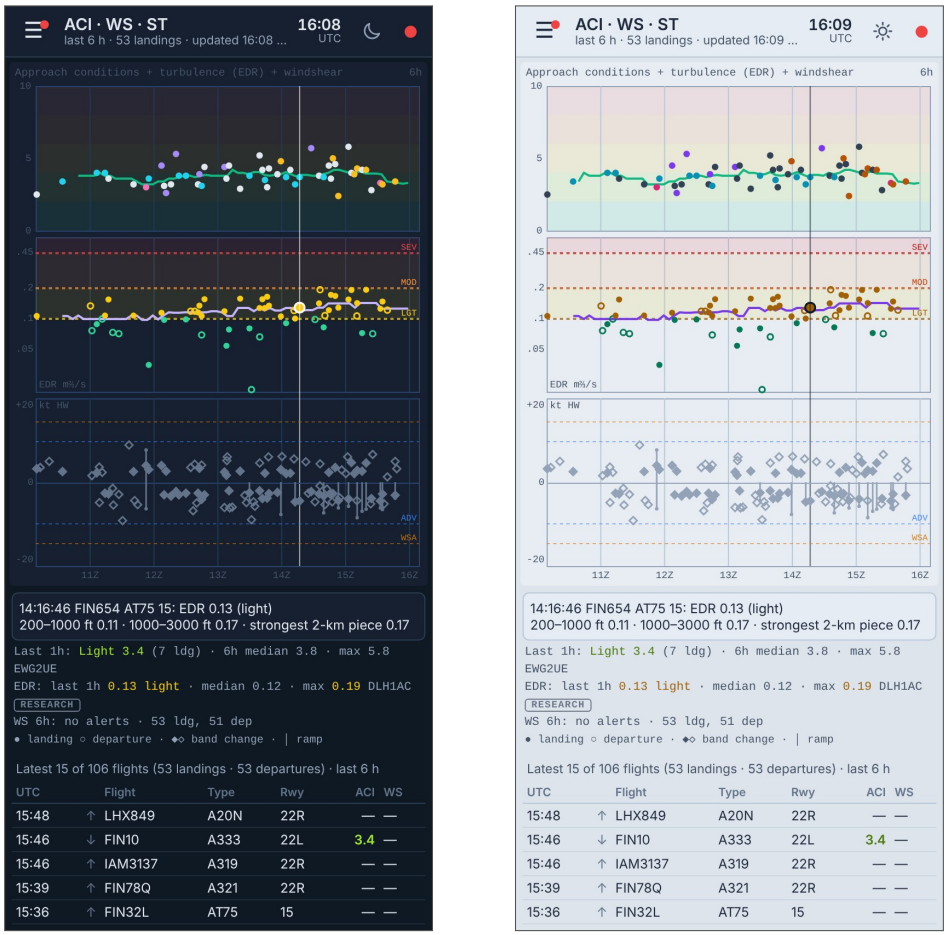


Figure 18. ACI + EDR + WS, 6 hours: the flights of 28 October 2026 07–12 UTC replayed in a test (the time axis shows the replay time). A tapped landing (FIN654, EDR 0.13, light) is marked through the three strips; most landings were light, the departures (rings) a little lower. Right: the light theme.

EDR + WS (from 31 October 2026) is the same without the ACI part: the turbulence and the windshear of every landing and departure, a little taller each.

Boundary layer below (from 31 October 2026; research). With ACI only, ACI + windshear, ACI + EDR + WS or EDR + WS the option Boundary layer below adds one of the boundary-layer charts (described next: BL wind, BL temp, BL headwind, BL Δ headwind or BL shear) *under* the chart, on the same hours and the same time axis (Fig. 19) — so you can see, for example, whether the turbulence and the windshear of the flights came with a low-level jet, an inversion or a change of the headwind. It has its own tap read-out and summary lines; the list of flights follows under it. Off (the default) leaves the chart alone; with Space–time and the boundary-layer views the option is hidden.



Figure 19. Boundary layer below, 12 hours of stored data to 31 October 2026 10:10 UTC (drawn in a test; the stored flights start at about 04 UTC). Left: EDR + WS with BL headwind under it and a tapped departure (FIN935, 3 200 ft, 16 ktheadwind). Right: ACI + EDR + WS with BL wind (Light theme). The hours line up through all the parts.

Boundary layer (from 29 October 2026; research). The choices BL wind and BL temp (until 31 October 2026 Boundary layer · wind and · temperature) show the lowest 5 000 ft at the airport hour by hour (Fig. 20): the wind speed in colour, or the temperature against the ground (red: warmer than at the ground — an *inversion*, calm and smooth air; blue: colder). A **low-level jet** — a band of strong wind a few hundred metres up, usually at night — is marked by a diamond at its height with its speed, joined hour to hour; a **surface inversion** by a red bar along the bottom. Hatched: no aircraft flew. Tap a cell for its wind or temperature, a diamond for the jet, a red bar for the inversion. The summary gives the last hour, e.g. *low-level jet 750 ft 18 kt from 023° · surface inversion +2 K*. The *Windshear* guide explains how they are found.

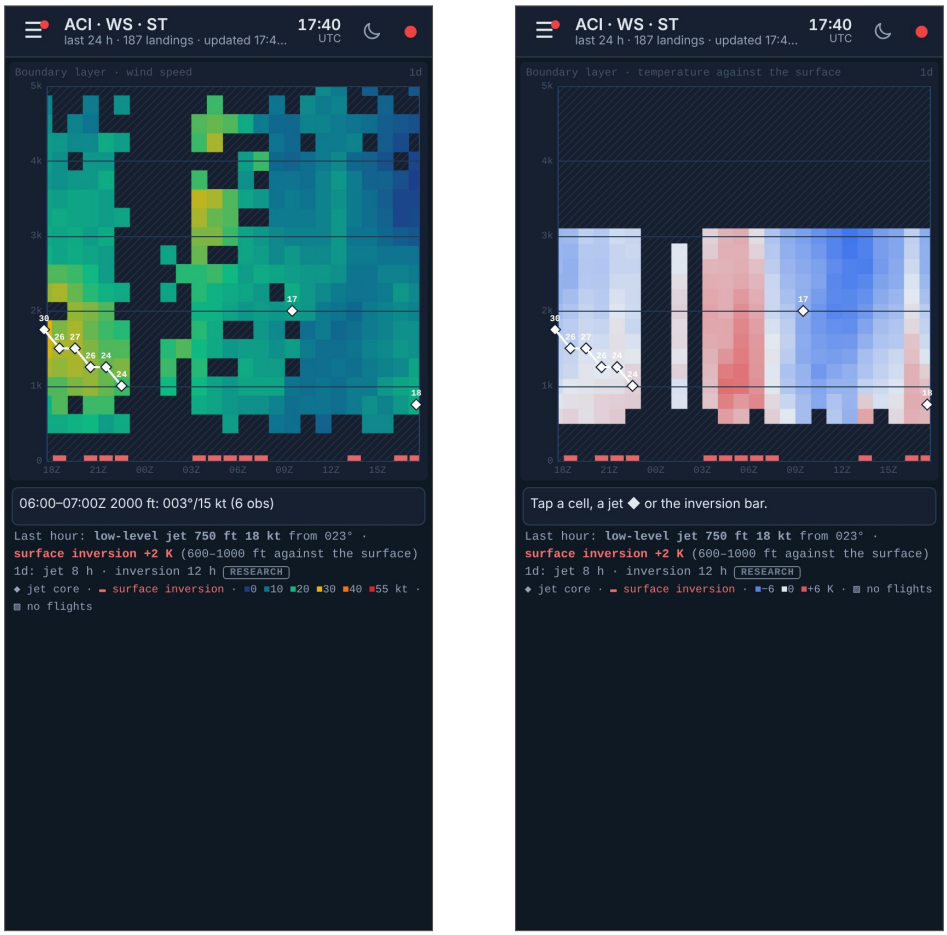


Figure 20. Boundary layer, 17 October 18 UTC – 18 October 17 UTC. Left, wind: the evening jet sinking from 1 800 to 1 000 ft (30 → 24 kt), a tapped cell above. Right, temperature: warmer aloft in the night and morning (red), colder by day (blue); the red bars are the hours with a surface inversion.

Flight by flight (from 31 October 2026; research). BL headwind, BL Δ headwind and BL shear draw every landing and departure as its own column, held until the next flight, in 100-ft steps — the same fields as in the Time–height view (Section 5) and on the Windshear page: the headwind along the flight's runway (violet a tailwind); the change against the flights of the previous 45 minutes in the same direction (blue less, red more headwind); and the vertical shear of the flight's own headwind, red where it grows with height (a descent loses headwind), blue where it falls (Fig. 21). A coloured line along the top gives the landing runway, windshear alerts are outlined, and the jet and inversion marks stay on top. Tap a column for the flight at that height: its headwind, the change, the shear and its alert.

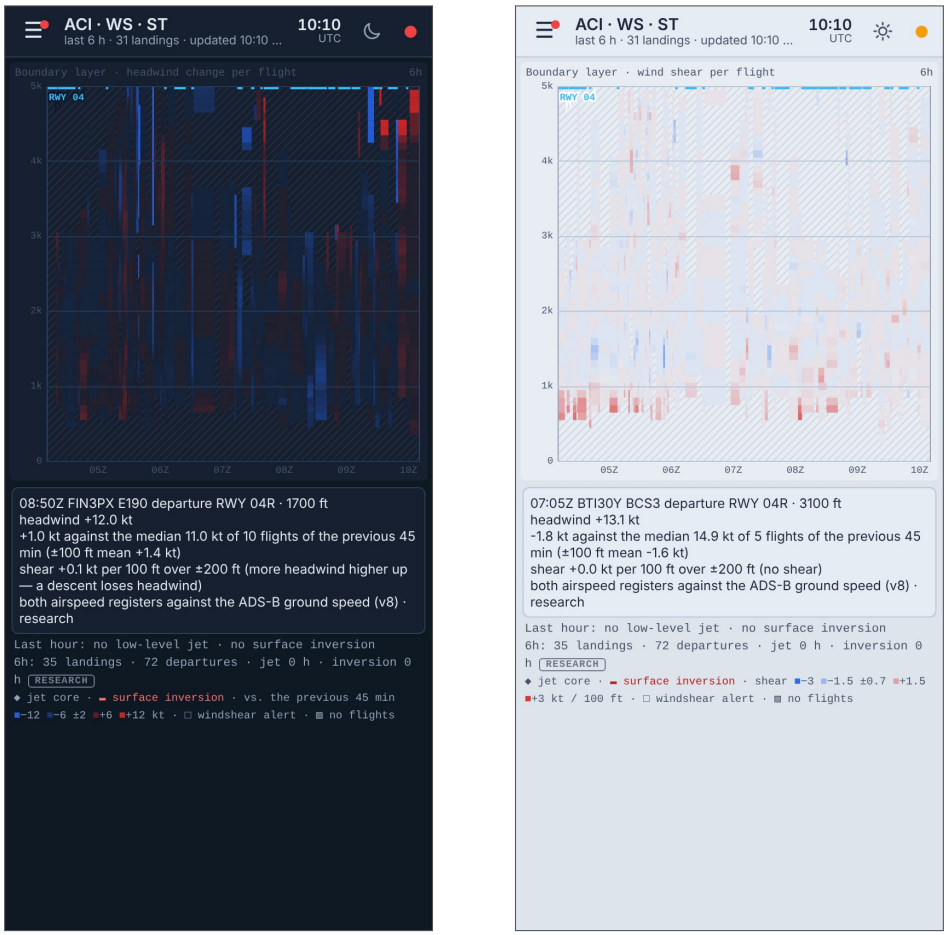


Figure 21. Boundary layer flight by flight, 31 October 2026 04–10 UTC, a calm morning. Left, BL Δ headwind with a tapped departure: FIN3PX at 1 700 ft, 1 kt more headwind than the median of the 10 flights before it. Right, BL shear (Light theme), a tapped climb-out at 3 100 ft with hardly any shear.

Official reports on the chart (from 29 October 2026). When a METAR reports windshear (`WS R22L`) the windshear part has an amber bar along its top from that METAR to the next one, with the runway; a pilot report near the airport (a WXREP or ARS within 30 NM, at or below 10 000 ft) is a teal **P** at the time it was observed (Fig. 28, left). Tap them for the whole message. The summary adds e.g. `METAR WS R22L · 1 pilot report near`. The same marks are on the WS + ACI chart of the ILS view. The messages are listed in the History (Section 8.1).

Under the chart: the box with the tapped landing, departure or go-around; the summary lines of the Windshear page (last hour, median and maximum of the period, the windshear alerts and the counts); and the **list of the flights of the period** (from 28 October 2026; Fig. 22), newest first. Its heading gives the count and the period (*Latest 15 of 59 flights (17 landings · 42 departures) · last 3 h*); 15 rows are shown, Show all opens the rest. The list follows the chart: with ACI only the landings, with ACI + windshear the landings (↓) and departures (↑) — time, flight, aircraft type, runway, ACI (landings only) and windshear level — and with Space–time the flights of the diagram with their largest band change and its height (*−7 @1200*). Landings in History and Departures in History open the History view (Section 8) with the same period, for the bands and reports of each flight. **Options**: the period (3 h, 6 h, 12 h, 1 day) and ACI + windshear, ACI only, ACI + EDR + WS, Space–time, BL wind, BL temp, BL headwind, BL Δ headwind or BL shear. The *Windshear* guide and the *Approach Conditions Index* article explain them.

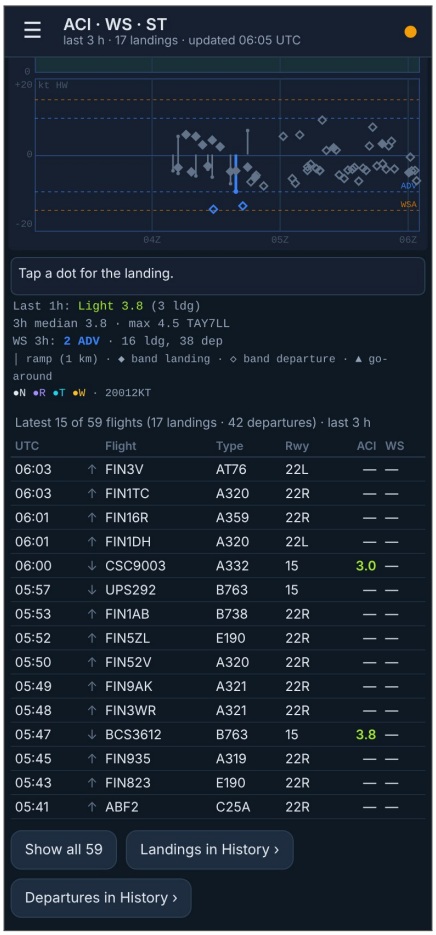


Figure 22. The list under the chart (scrolled down), ACI + windshear, the last 3 hours to 28 October 2026 06:05 UTC: the latest 15 of 59 flights — landings on runway 15 (↓) and departures from 22L/22R (↑) — with Show all 59 and the History buttons.

Space–time (from 28 October 2026; Fig. 23) shows how the wind changes move through the successive flights: time to the right, height (400–1 800 ft) upwards, and in each cell the median change of the headwind of the landings and departures in that 5–30 minutes against the flights of the previous 45 minutes — **blue** less headwind, **red** more, from 3 to 15 kt. A front or a shear layer is a coloured streak through several flights and bands, turbulence scattered single cells. A dot marks a flight at or beyond its advisory limit, a triangle at the top a flight with a windshear level. Tap a cell: the box below shows the cell, and the list its flights with their change and wind (All flights × goes back to the whole period). Turn the phone for shorter time cells.

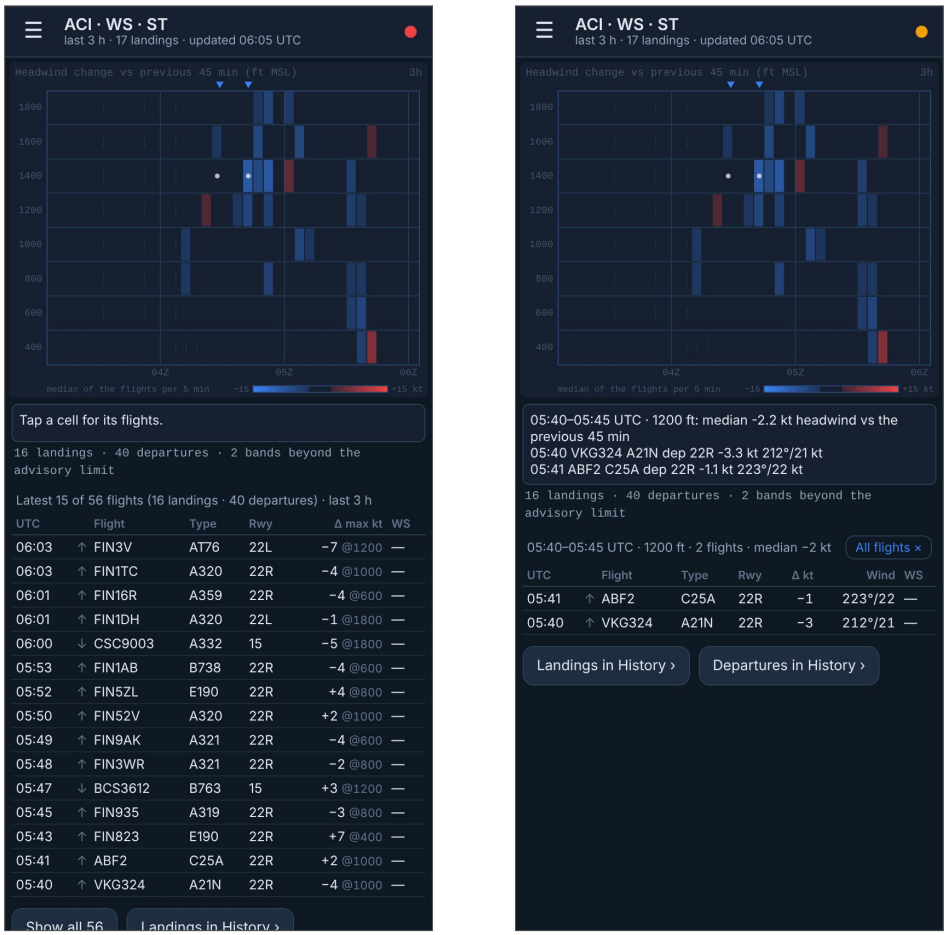


Figure 23. Space–time, the last 3 hours to 28 October 2026 06:05 UTC: the morning departures from 22L/22R climbing into a weakening south-westerly low-level jet — blue cells (less headwind) at 1 200–1 600 ft. Left: the diagram and its flights, each with its largest band change; right: a tapped cell (05:40–05:45 UTC, 1 200 ft) and its two departures in the list.

8 History

The Approach History of the Windshear page made for a phone (Fig. 24): the **landings** or the **departures**, newest first, as cards.

- **Line 1**: time (UTC; earlier days with the date), callsign, aircraft type, runway (in a thin frame; the columns line up from card to card), and chips: the **ACI** value, the **windshear level** (`ADV`, `WSA`, `MBA`), ***trial*** (a departure whose headwind ramps along the climb would have given that level — a trial, no alert), **EDR** (from 29 October 2026: the turbulence of the flight, outlined in its colour — green smooth, yellow light from 0.10, orange moderate from 0.20, red severe from 0.45) and **GA** (go-around).
- **Line 2**: depends on Show. Headwind and Crosswind: one cell per height band (the heights are in the row under the search field) with the component along the runway in kt — headwind green, tailwind red; crosswind + from the right, − from the left. Wind: an arrow (where the wind blows to) and the speed. ACI: the index and its two segments with the METAR. Windshear: the strongest headwind ramp and the band change. Turbulence (from 29 October 2026): the EDR with its class, below (lo) and above 1 000 ft (hi), the roughest 2-km piece (peak) and the number of pieces (Fig. 25).
- **Tap a card** to open it: all its height bands with wind, headwind and crosswind, the approach conditions in detail, the windshear report and the turbulence in words — the texts the full site shows when the mouse is over a row — and, from 29 October 2026, the **boundary layer** of that hour: *Boundary layer then: low-level jet 1750 ft 27 kt from 134°* (or a surface inversion, or neither). Tap again to close.

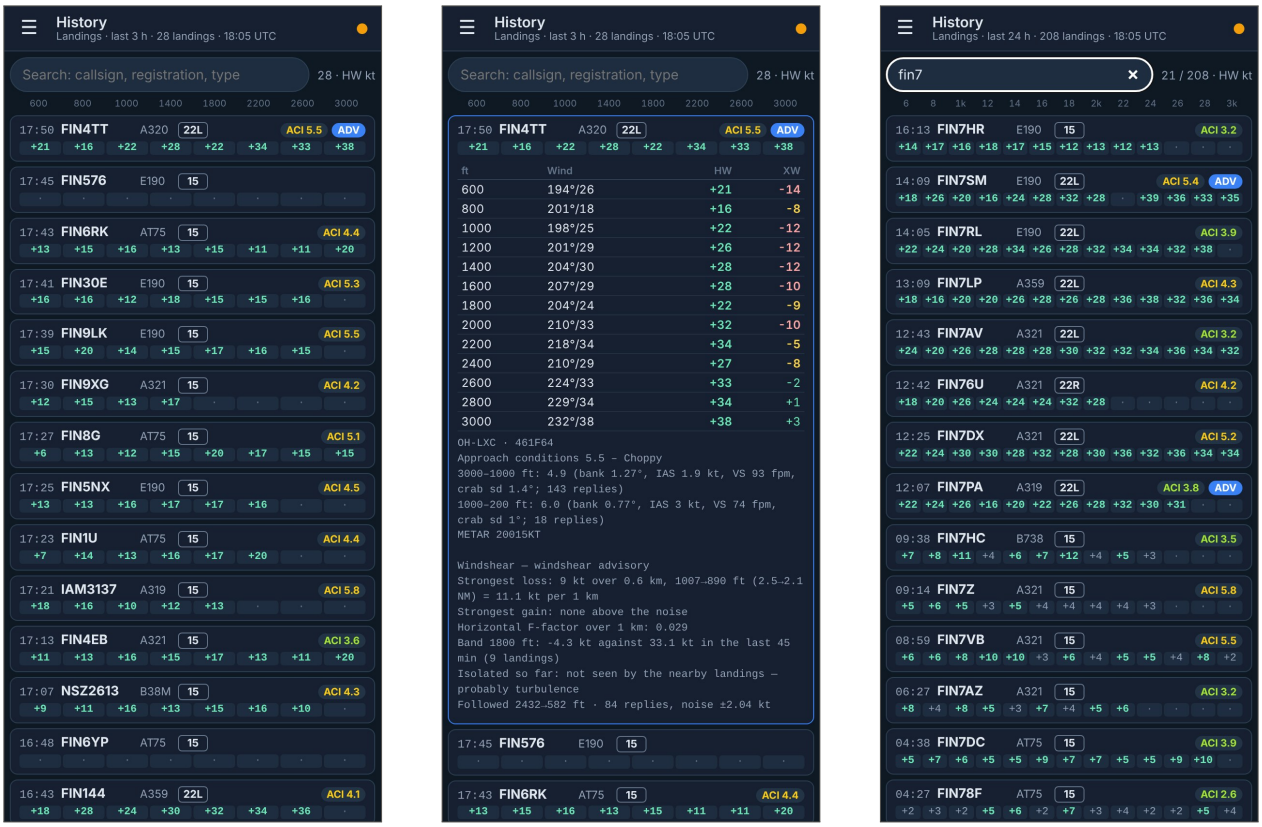


Figure 24. History, 27 October 2026. Left: the landings of the last 3 hours, headwind per band (a strong south-westerly: +13 to +38 kt). Middle: a card opened — the bands, the approach conditions and the windshear report. Right: the search `fin7` over a day, with the 13 height bands of Hi.

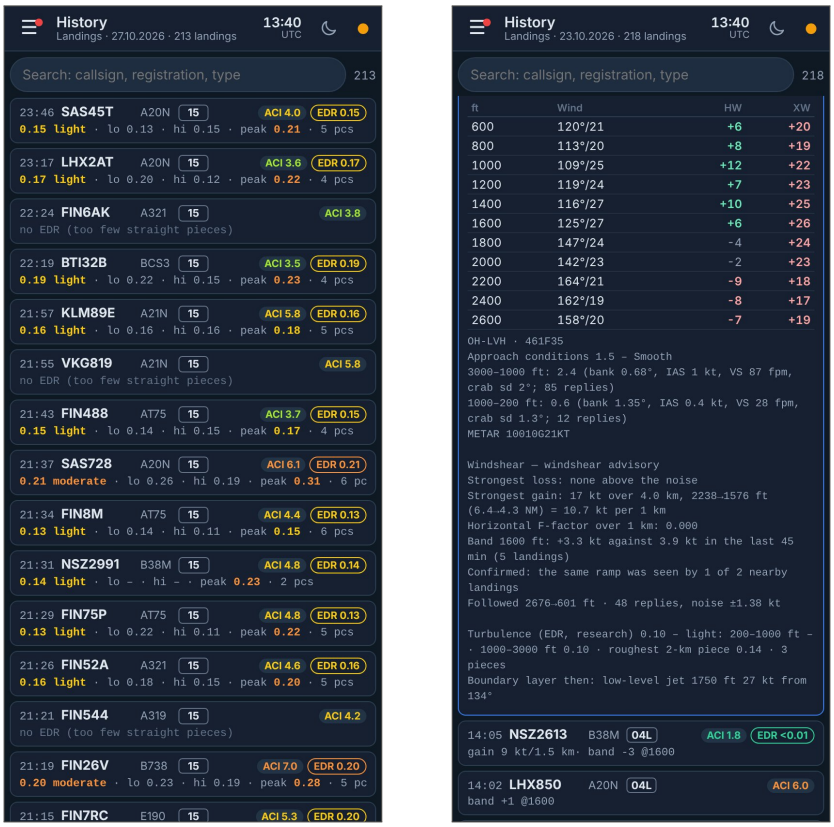


Figure 25. Left: Show: Turbulence, the landings of 27 October 2026 — most light, SAS728 and FIN26V moderate; “no EDR” when the approach had too few straight pieces. Right: an opened card of 23 October with the turbulence and the boundary layer then — FIN440 had a headwind-gain advisory while a low-level jet blew at 1
,750
,ft. The EDR is a research value: an average over the approach, not the ICAO one-minute peak.

The headwind profile (from 31 October 2026). An opened card begins with the flight’s headwind every 100 ft against the flights of the previous 45 minutes on the same runway direction — their median (dashed) and middle half (grey band) — with the ramps of its windshear report drawn thick (blue loss, red gain), the band change as a diamond and its turbulence pieces in a strip at the right (Fig. 26). A flight that leaves the grey band and comes back met a gust of its own; when the band moves with it, the air mass changed. The *Windshear* guide explains the chart.



Figure 26. An opened card of 27 October 2026, FIN9DZ on runway 15 with an advisory (the station's data): a loss of 10 kt over 0.4 km at about 600 ft where the six flights before it kept their headwind, and moderate turbulence there (orange piece at the right).

Search. The field above the cards finds the callsign, registration or aircraft type anywhere in the text, upper or lower case and with or without the hyphen: `fin7`, `OH-LX` or `ohlx`, `AT75`. The number beside it shows how many of the flights match. The search on the full site's Approach History works the same way.

Options (Fig. 27): List Landings / Departures (or METAR & reports, Section 8.1); the range 1 h – 1 day (default 3 h); or a **date**: the calendar field or ⟨ ⟩ (a day back / forward), and Live returns to the range; Show; and Lo · 8 or Hi · 13 height bands. A live range is updated every minute; a date is loaded once.

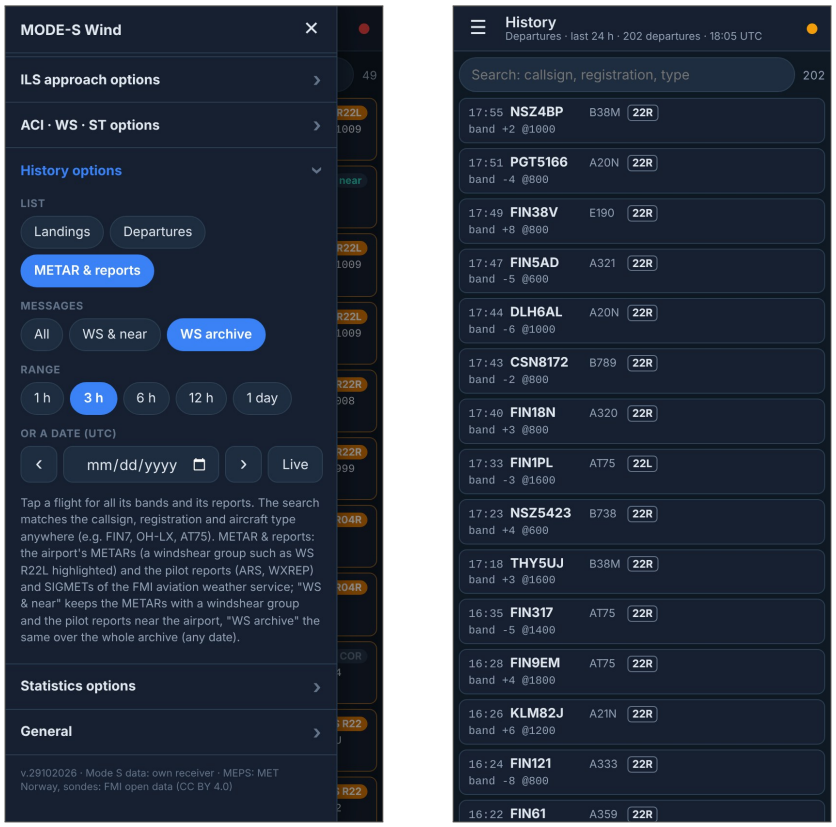


Figure 27. Left: the History options (here with METAR & reports chosen, which has Messages in place of Show and the height bands). Right: the departures of a day, Windshear shown — the band change of each climb-out against the earlier flights.

8.1 METAR & reports

From 29 October 2026 the History's List has a third choice, METAR & reports (Fig. 28): the METARs of Helsinki-Vantaa and the pilot reports and SIGMETs of the FMI aviation weather service, newest first, one card each — the time, the kind (`METAR`; `WXREP` teal, `ARS` red, `SIGMET` violet), for a pilot report the aircraft, what was reported and the height, the chips `WS R22L` (a METAR with a windshear group) and `near`, and the whole message with the windshear group in amber and the reported phenomena (`MOD WS`, `FBL TURB`, `INV` ...) in teal.

- **Windshear in a METAR**: in Finland the group `WS R22L` or `WS ALL RWY` is only in the METARs made by an observer — windshear that an aircraft or the tower reported on a landing or take-off below 1 600 ft. The automatic METARs of the night (`AUTO`) never have it.
- **WXREP** is a pilot report below the ARS criteria: light turbulence, light icing, light windshear, an inversion, the top of a CB. **ARS** is for moderate or severe turbulence or icing and the like.

Options: Messages All, WS & near (only the METARs with a windshear group and the pilot reports near the airport) or WS archive (the same over every stored date — also years back once the METAR history has been loaded); the range or a date as for the flights. The search finds text in the messages: `ws`, `r22l`, `turb`, a callsign.

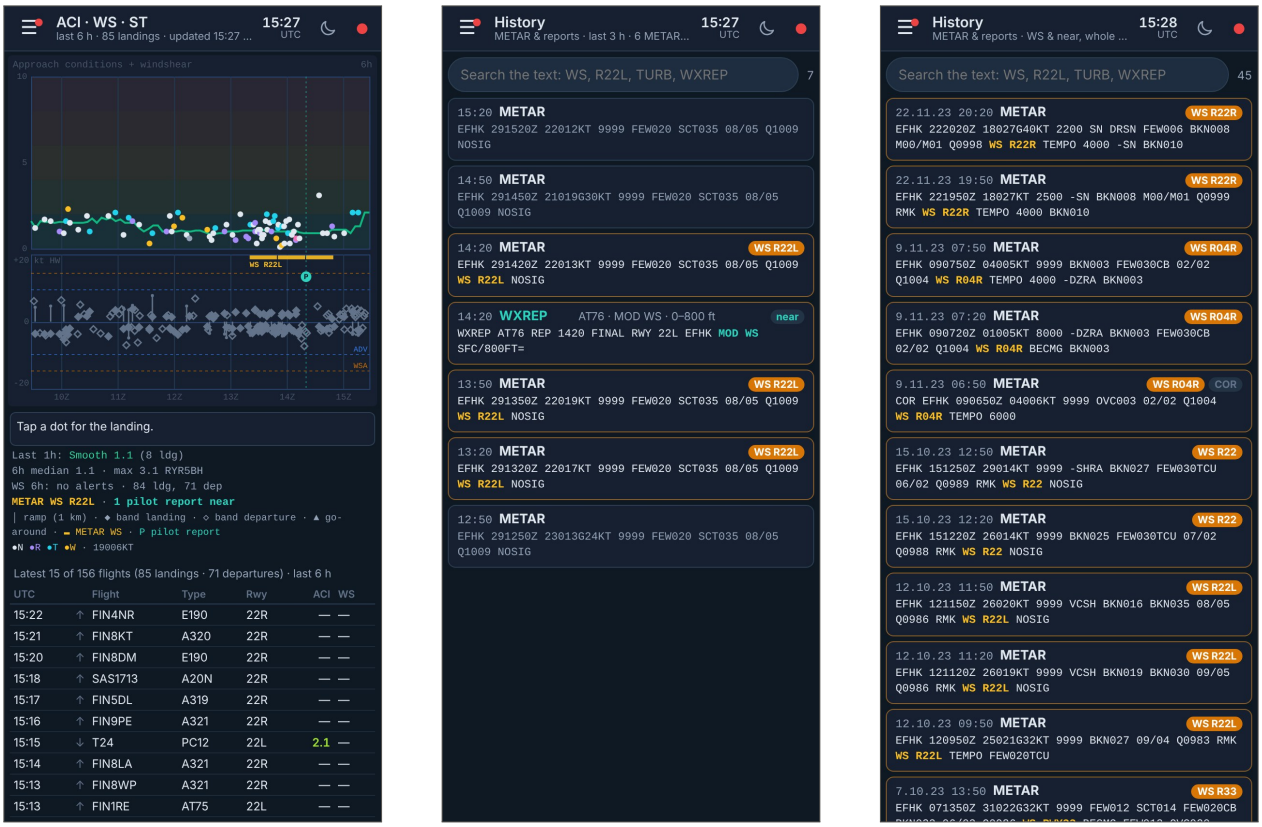


Figure 28. Left and middle: an example drawn with test messages — a METAR `WS R22L` for three half-hours and a WXREP `MOD WS SFC/800FT` on final 22L, on the ACI + windshear chart (amber bar, **P**) and in the History's METAR & reports. Right: WS archive — the real METARs of Helsinki-Vantaa with a windshear group in 2023, e.g. 22 November in snow and a southerly gale, `WS R22R`.

9 Statistics

The Statistics page of the full site made for a phone (from 28 October 2026): what the receiver hears, one panel under the other (Fig. 29). At the top six figures — messages per second, aircraft, aircraft with ADS-B and with EHS (the Comm-B registers that give wind and temperature), the MLAT and ADS-B positions and the age of the receiver's feed — and the time of the last update with the window. Below them the sections you have chosen, by default:

- **Message rate** — the messages per second as a chart (1 h, 24 h, 7 d above it; the selector chooses the message class). Its second tab, Data transfer, shows how much data the server receives from the receiver and sends to the users.
- **Downlink formats** — the share of each kind of Mode S reply, e.g. DF17 ADS-B, DF20/21 the Comm-B replies that carry the meteo registers, DF11 the all-call replies.
- **Meteo yield** — how many winds and temperatures per minute the replies give, and why the rest gave none.
- **Range rings** — how far the receiver hears aircraft in each direction, for three height layers, with a table per distance. *Tap* the rings for the farthest aircraft in that direction and its height.

Each panel's explanation is folded under About this panel; tap it to read it. The panels are the same as on the full site, so the *Mode S & ADS-B and the Statistics page* guide explains them in full.

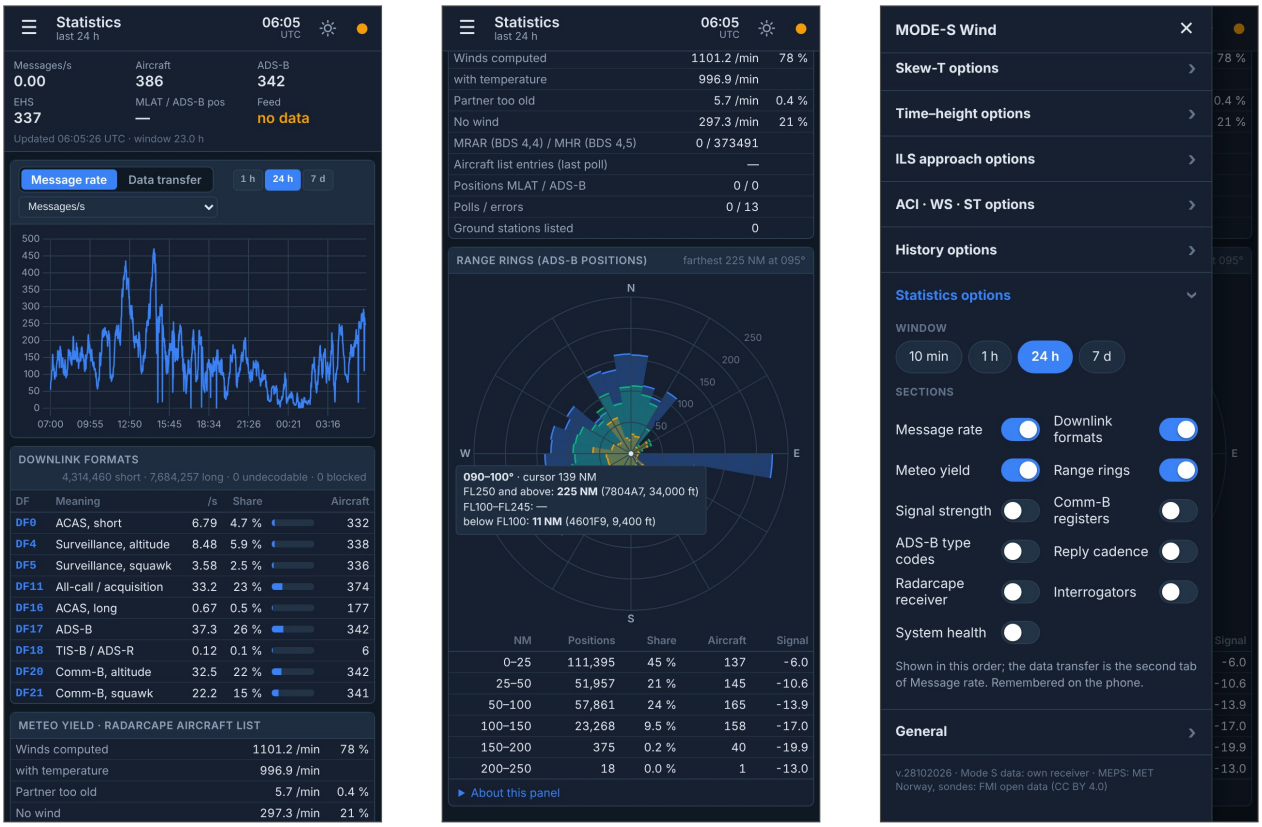


Figure 29. Statistics, last 24 h (a copy of the database of 28 October 2026 without a live feed, so the top figures show 0 messages per second and *no data*). Left: the summary, the message rate and the downlink formats. Middle: the range rings with the read-out of a tap towards the east. Right: the Statistics options — window and sections.

Options (Fig. 29, right): the **window** 10 min, 1 h, 24 h (default) or 7 d — the period of the tables, the downlink formats, the signal histogram and the range rings; and a switch for each **section**. Besides the four above you can switch on Signal strength (the histogram of the reply levels), Comm-B registers, ADS-B type codes, Reply cadence (how often each aircraft is interrogated), Radarcape receiver (its GPS, timestamps and temperature), Interrogators (the radars and WAM stations that ask, from the all-call replies) and System health (the indicators of the health dot with their details). The sections are always shown in this order, and the choice is remembered on the phone.

Updates and data. The view is updated every 30 seconds while it is shown (the full site's page every 10 seconds), and not at all while another view is shown. Each update is about 55 kB, so an hour of watching uses about 7 megabytes of mobile data — more than the other views; switch to another view when you have seen what you wanted. The chart program and the Statistics code are loaded the first time you open the view.

10 Weather

From 30 October 2026 the phone has the weather maps of the full site's *Weather* page: the **MEPS** model of MET Norway over Finland and the Baltic Sea, hour by hour, with a slider to move in time and ▶ to play them as an animation (Fig. 30). It shows the newest model run from **6 hours back** to **24 or 48 hours ahead**. All the hours are loaded when the view is opened — the strip above the slider fills as they arrive (grey: past hours, violet: forecast; pale: not loaded yet) and a `Loading 36 / 40 hours...` badge shows the progress — so the animation then runs smoothly without waiting for the network. The hour nearest to now is loaded first.

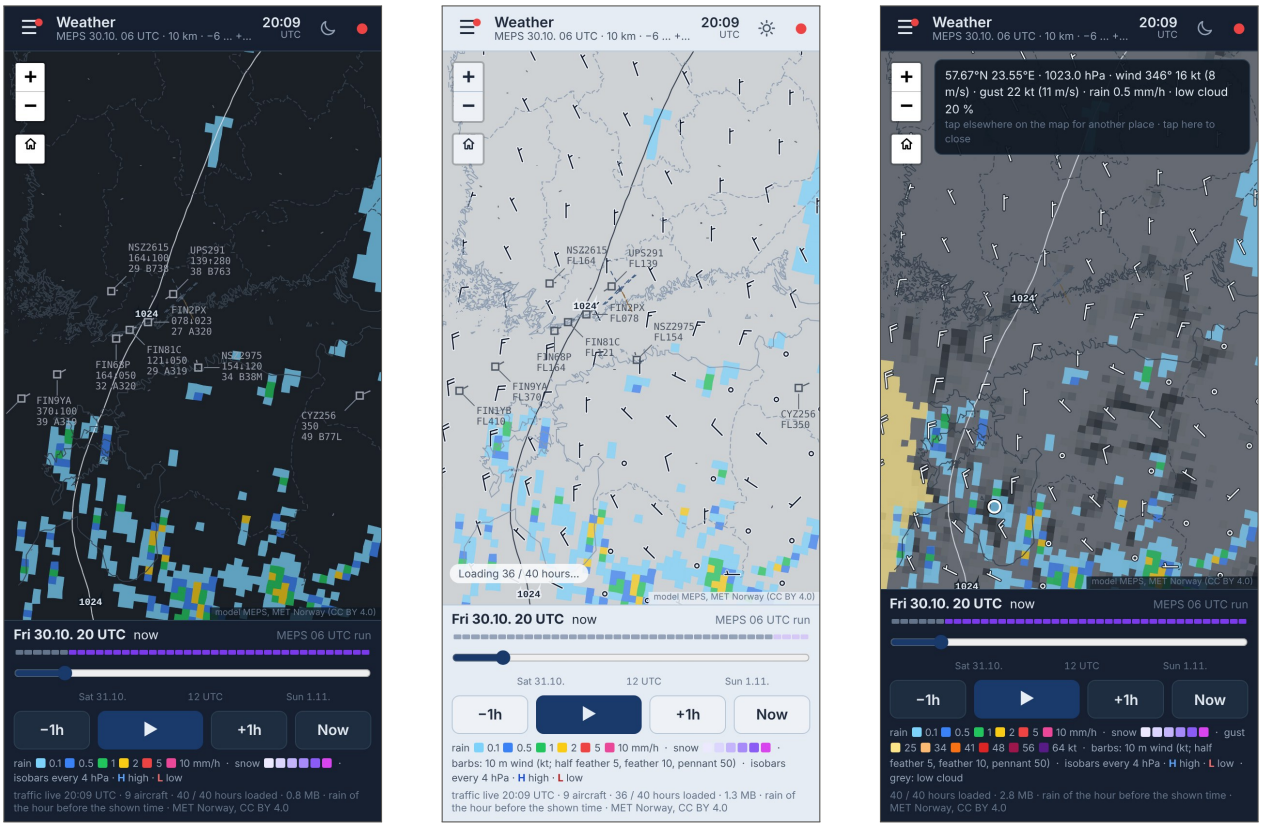


Figure 30. The Weather view at 20 UTC on 30 October 2026, MEPS 06 UTC run, 10 km grid. Left: Dark theme, rain and isobars with the air traffic on the ATC map with ATC labels. Middle: Light theme with wind barbs and standard labels (callsign and flight level), still loading (36 of 40 hours). Right: wind, gusts and low cloud, with the read-out of a tap on the map. The aircraft are a real snapshot of the production Live Map at 20:09 UTC on 30 October (the 9 with a position under a minute old); the weather is the stored model run, drawn in a test with a copy of the database. The street map's tiles cannot be loaded in that test, so the pictures use the ATC map style (on the phone the Street style shows the usual street map).

The panel under the map. The shown hour (*Fri 30.10. 20 UTC*) with how far it is from now (*now*, *−3 h*, or in violet *+12 h* for the forecast) and the model run; the strip and the slider with the days; −1h, ▶ / ■, +1h and Now; the legend of the shown layers; and a status line: the air traffic's time and number of aircraft, the hours loaded and the megabytes. The rain and snow are those of the *hour before* the shown time, as on the full site. In landscape the panel is beside the map.

Tap the map for the values of that place at the shown hour: position, pressure, wind, gust, rain or snow and cloud, as far as the layers are on (Fig. 30, right). A small circle marks the place, and the values follow the slider and the animation, so you can watch how the weather at one place changes. Tap elsewhere for another place, or the box to close it. The box moves to the top when you tap the lower half of the map. The house button goes back to southern Finland; the map's position is remembered.

FMI radar (from 30 October 2026). Rain source adds the rain the Finnish weather radars observe — the national composite of the Finnish Meteorological Institute (FMI open data, CC BY 4.0): the rain rate of the last 5–15 minutes, about 2 km, over Finland and the nearby seas — as on the Live Map's weather panel. It is always the *newest* radar image, so it is shown only at the **present hour** (Now; the panel then says *now · radar 20:40*); at the other hours of the slider the model's rain is shown, and the status line says *FMI radar only at the present hour*. FMI radar shows the radar alone at that hour; Both the radar inside its coverage (dashed edge) and the model's rain outside it and, inside it, as white outlines (thin from 0.1, thick from 1 mm/h), so you can compare the forecast with what the radar sees (Fig. 31). A tap then gives the radar's value too: *radar 15.6 mm/h*, *radar dry* or *outside the radar*. The rain of the radar is a rate at that moment, the model's the rain of the hour before the shown time. Rain opacity and Radar opacity make the model's rain and the radar more or less transparent, separately — e.g. the radar strong and the model faint. The radar image is read every 4 minutes while the view is shown (about 10–150 kB, depending on the rain).

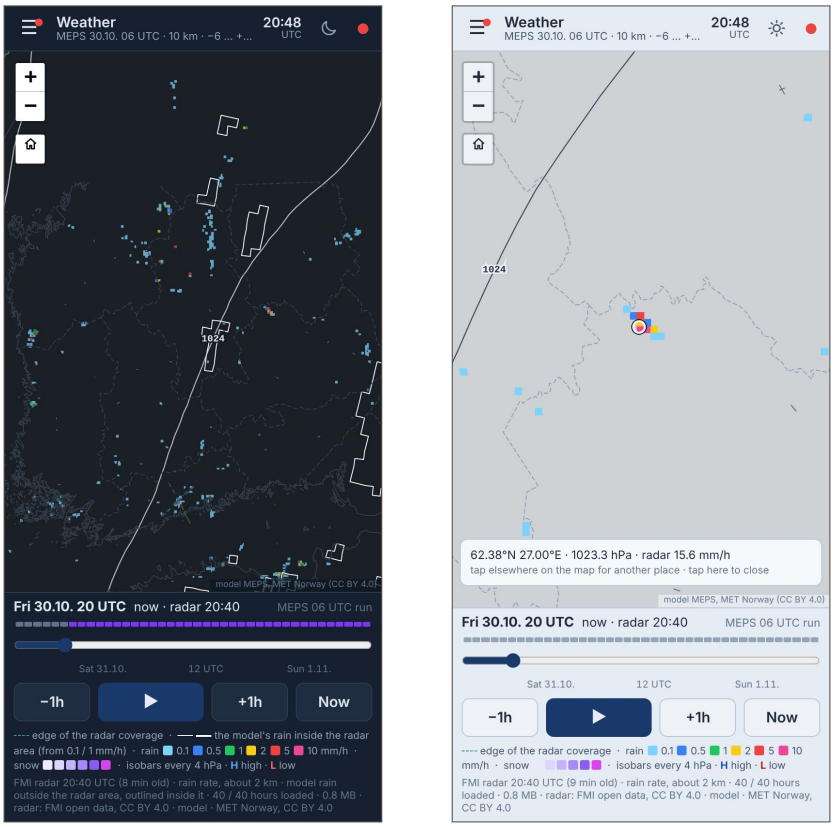


Figure 31. The FMI radar at the present hour: the composite of 20:40 UTC on 30 October 2026, read from FMI's open data in a test, with the stored MEPS 06 UTC run of the same day at 20 UTC. Left: Both, dark theme — light showers in central and eastern Finland (the radar's colours), the model's rain areas outlined in white, the dashed edge of the radar coverage. Right: FMI radar alone, light theme, Radar opacity 100 %, zoomed in near Pieksämäki, with the read-out of a tap on the strongest shower (15.6 mm/h). The ATC map style is used because the street map's tiles cannot be loaded in the test.

2.5 km detail near the airport (from 31 October 2026). MEPS itself is computed on a 2.5 km grid; the maps above use every fourth point of it (10 km), to keep the data small. Around Helsinki-Vantaa the view now uses the *full* grid: a box of about 300 × 300 km — from central Estonia to the latitude of Mikkeli and from about Turku to Hamina — with every 2.5 km point — when the map is zoomed in to **zoom 7 or closer** and the box is on the screen (Fig. 32). Inside the box showers, rain bands, fog patches and the clouds along the coast get their real shape instead of 10 km squares; a faint **dotted line** marks its edge, and outside it the 10 km map continues without a gap. The rain and snow, the clouds and fog and the gusts use the box; the isobars and the wind barbs stay those of the 10 km map. A tap inside the box gives its 2.5 km values, marked *2.5 km grid*, and the status line says *2.5 km near the airport*. Zoomed out further the box is not loaded or drawn. Detail near EFHK: Off switches it off. A finer grid shows the model's features more sharply, but it does not make the forecast for one place more exact: the model really resolves things of about 10–15 km.

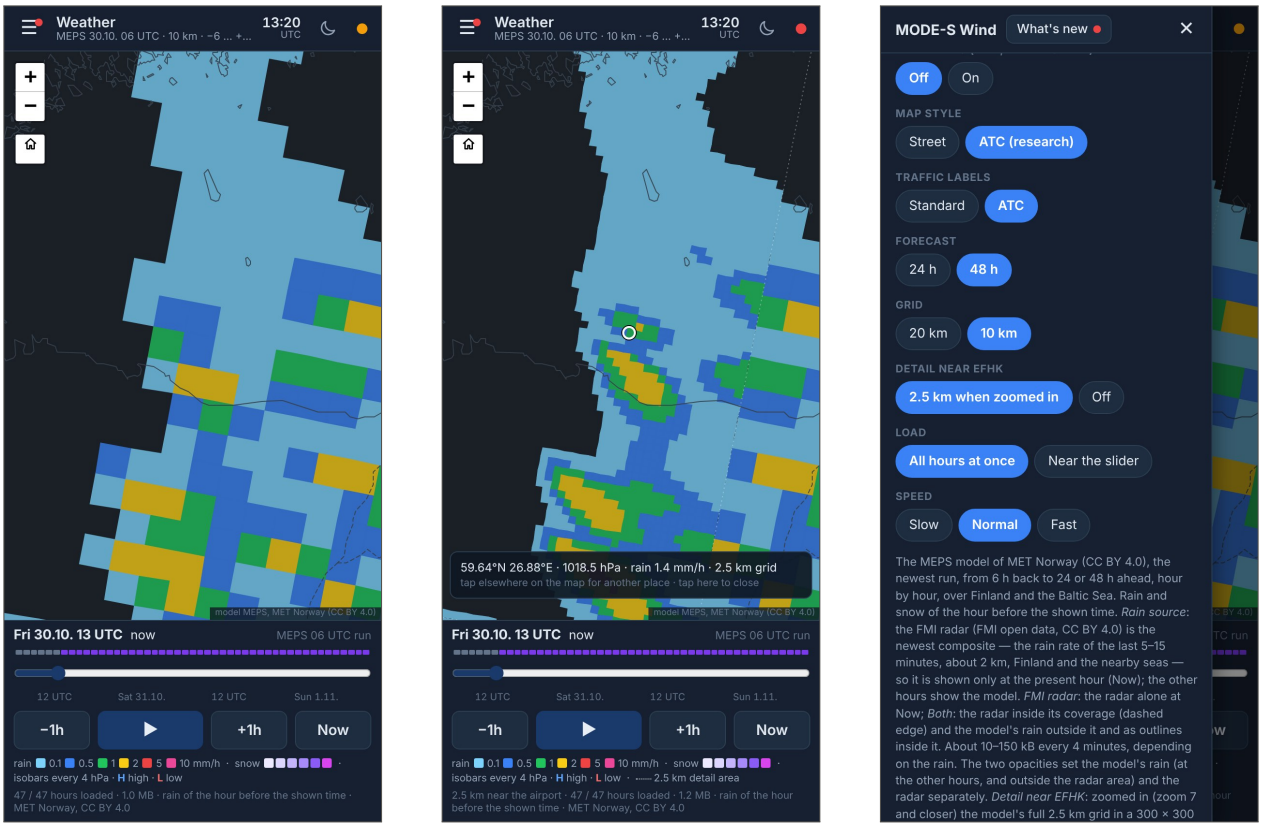


Figure 32. The 2.5 km detail: the stored MEPS 06 UTC run of 30 October 2026 at 13 UTC, a band of showers over the Gulf of Finland and the north coast of Estonia (zoom 8, ATC map style, drawn in a test). Left: Detail near EFHK: Off — the 10 km map. Middle: the default — the same hour on the full 2.5 km grid, with the read-out of a tap (*rain 1.4 mm/h · 2.5 km grid*); the dotted line at the right is the edge of the box, beyond it the 10 km squares. Right: the option in the menu.

Air traffic (research). With Air traffic: On the aircraft the receiver hears *now* are on the map — all of them, not only the approaches — updated every 6 seconds, with their last positions as dots and a one-minute line ahead. They are always the live traffic, whatever hour the slider shows. Traffic labels: ATC gives the three-line labels of the Live Map's ATC style (callsign; flight level with an arrow for climbing or descending and the selected level; ground speed in tens of knots and type), Standard just the callsign and the flight level. The labels are a little smaller than on the full site (10 px) and move out of each other's way. *Tap an aircraft* for its callsign, type, level, climb or descent, selected level, ground speed and track. Map style: ATC is the dark (or light) research display of the Live Map with the EFHK sectors and the national border instead of the street map; the aircraft symbols are then coloured as on the Live Map. It is a research display, not for air traffic control.

Smooth shading (from 31 October 2026). The model's values are given on a grid, and drawn cell by cell they make a map of small squares. With Shading: Smooth (the default) the map is drawn smoothly instead: the rain and snow, the gusts and the FMI radar as areas whose edges follow each colour step between the grid points, and the clouds and fog as a smooth grey (or yellow) shading (Fig. 33). The values and the colour steps are the same, and so is the read-out of a tap; only the drawing between the grid points is smoother. A smooth edge is not finer data — a peak in a single cell can shrink to a small spot. Shading: Cells brings back the squares, e.g. to see the grid itself. The full site's Weather page has the same choice, and the Live Map's weather panel a Smooth tick box.

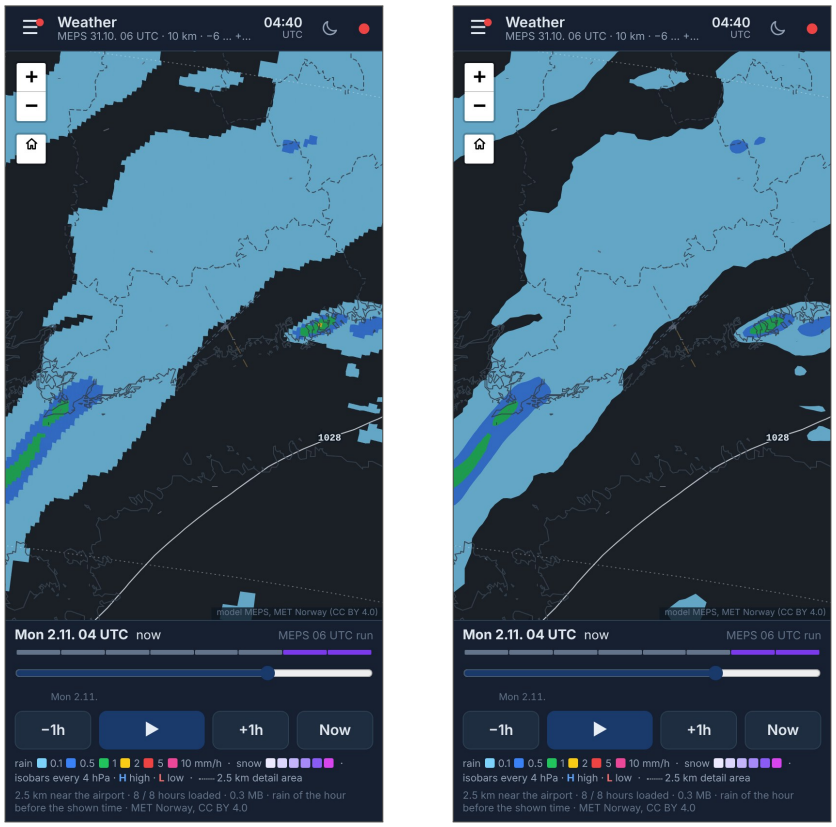


Figure 33. Smooth shading: the stored MEPS 06 UTC run of 31 October 2026, the rain of the hour to 04 UTC on 2 November (+46 h; drawn in a test, ATC map style, zoom 7). Left: Shading: Cells — every grid cell a square. Right: the default Smooth — the same values as smooth bands.

Temperature (from 1 November 2026). Temperature (2 m) adds the model's temperature near the ground, in whole degrees (Fig. 34). Colours paints it under the other layers in bands of 2 °C on a fixed scale — purple at −30, blue below freezing, cyan at 0 °C, then green, yellow, orange and red to +30 — with a thin line along **0 °C**; with Temperature numbers: On the whole degrees are written on the map as small numbers. Isotherms draws lines instead: every 2 °C when zoomed in (every 4 °C further out), the 0 °C line thick, each labelled with its value. The lines go well with the rain, whose light blues would otherwise look like the cold colours. A tap gives the value, e.g. *2 m temperature +6 °C*; near the airport, zoomed in, the 2.5 km grid has its own values. The temperature is stored from the model runs of 1 November 2026 on; an earlier hour says *no temperature stored for this hour*. It adds about 6 kB per hour at 10 km.

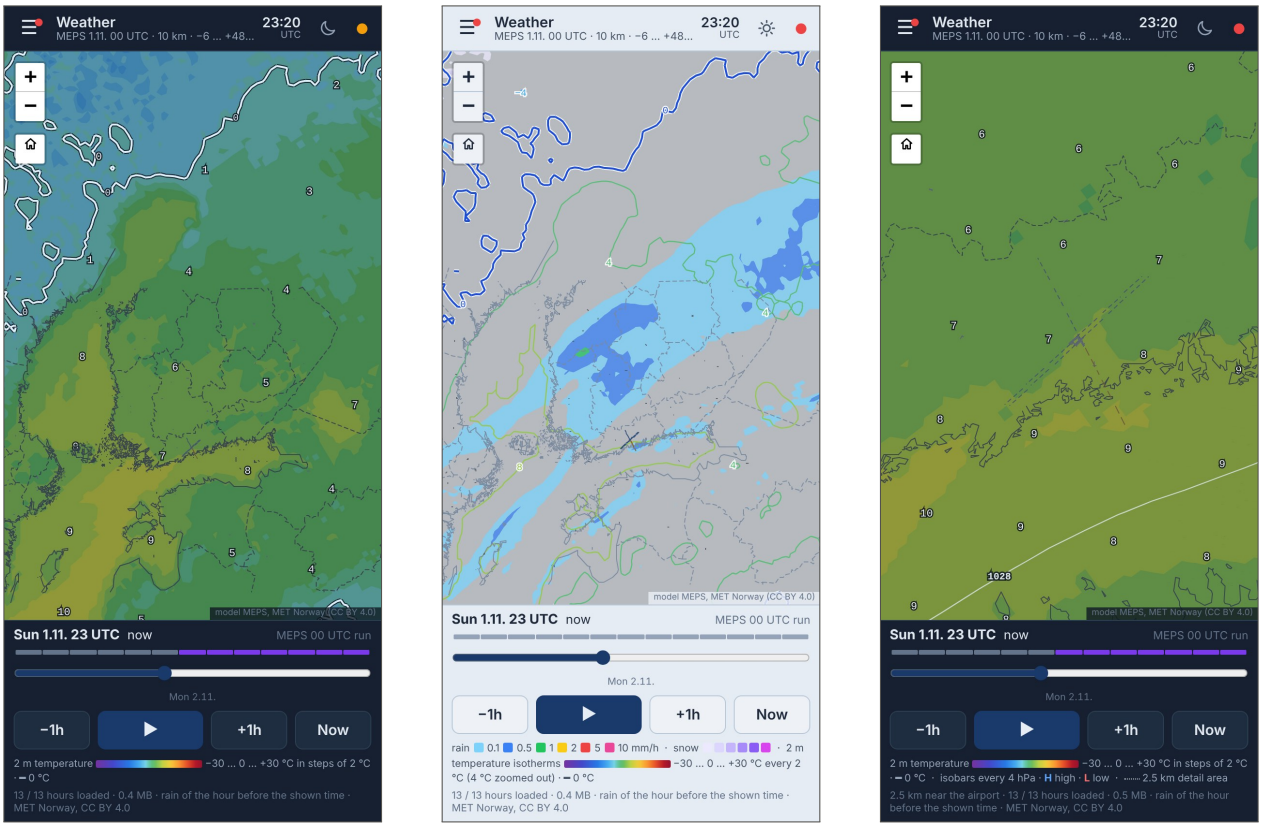


Figure 34. The 2 m temperature, the stored MEPS 00 UTC run of 1 November 2026 at 23 UTC (drawn in a test, ATC map style). Left: Colours with Temperature numbers — below freezing in the north-west, +4 to +9 °C in the south. Middle: Isotherms with the rain (Light theme). Right: zoomed in near the airport (2.5 km grid) with the isobars.



Option	Choices (*default*)
Rain and snow	*On*, Off
Rain source	*MEPS model*, FMI radar, Both
Rain opacity (model)	25, 50, *75*, 100 %
Radar opacity	25, 50, *75*, 100 %
Isobars, highs and lows	*On*, Off — every 4 hPa, **H** / **L**
Wind (barbs)	*Off*, On — 10 m wind in knots
Gusts	*Off*, On — coloured from 25 kt
Temperature (2 m)	*Off*, Colours, Isotherms
Temperature numbers	*Off*, On — with Colours
Clouds	*Off*, Total, Low, Medium, High, Fog (grey)
Air traffic	*Off*, On — live, all aircraft
Map style	*Street*, ATC (research)
Traffic labels	Standard, *ATC*
Forecast	24 h, *48 h* ahead
Grid	20 km, *10 km*
Detail near EFHK	*2.5 km when zoomed in* (zoom 7+), Off
Shading	*Smooth*, Cells
Load	*All hours at once*, Near the slider (±6 h)
Speed	Slow, *Normal*, Fast (0.8 / 0.4 / 0.2 s per hour)

Figure 35. The Weather options in the menu (left, with Rain source: Both and the ATC map style; the menu scrolls on to the other options) and their choices (right). The choices are remembered on the phone.

Data use. The phone loads only the area of Finland and the Baltic Sea (about 40 % of the model's grid). At 10 km each hour is about 20 kB with rain and isobars, about 50 kB with wind and gusts as well and about 70 kB with clouds too — e.g. 40 hours with rain and isobars 0.8 MB, with wind, gusts and low cloud 2.8 MB (measured). The 20 km grid takes about a third of that and draws faster on an older phone; Near the slider loads only the 13 hours around the slider and the rest when you move it. The model run is checked every 10 minutes; a new run is loaded when it arrives. The 2.5 km detail adds about 8 kB per hour with rain and isobars (about 30 kB with wind, gusts and clouds), only while zoomed in near the airport. The FMI radar adds about 10–150 kB every 4 minutes (at most about 2 MB an hour), only with Rain source FMI radar or Both. The air traffic adds about 1–3 MB an hour (more with heavy traffic), and nothing when it is off. The map program and the Weather code are loaded the first time you open the view; nothing is loaded while another view is shown.

11 When something looks wrong

- **The page does not load, or asks for the password again and again.** The phone must reach MODE-S Wind as a computer does; check the network and the address (with `/app`). The login is remembered for 30 days; log in again once after your password has been changed, or when the phone's browser data has been cleared.
- **`Could not load ...`** under a view: the server did not answer in time. The view tries again at its next update, or switch the view and back.
- **The health dot is amber or red.** Open the menu: General says which part. MODE-S Wind keeps working with what it has — e.g. without new MEPS data the Skew-T has no model line, the rest is unchanged.
- **`No aircraft on the approach`**: there is no traffic in the approach corridors of the chosen runway; choose All.
- **`MEPS: no model data for this time`** or `no sounding stored`: the model run or the radiosonde for that time has not arrived (or is not available); the aircraft profile is not affected.
- **After an update of MODE-S Wind** the phone may still show the old page from its cache: reload the page in the browser, or close the home-screen app and open it again.
- **Weather: `No weather maps stored yet.`** or the strip stays pale: the MEPS run has not been stored yet or the network is slow; the view tries again with the next run check (10 min), or open it again. With an old phone choose 20 km or Near the slider. `FMI radar not reachable`: FMI's service did not answer; the view tries again within a minute or a few, and shows the model meanwhile.
- **Text too small?** Use landscape, or the phone's own zoom (pinch); the diagrams are drawn at the phone's full resolution.

12 Quick reference

Item	Meaning
`/app`	the mobile view; same login as the full site, remembered for 30 days
≡	menu: views as tiles, options of each product, General
Red dot on ≡	a new version: open What's new at the top of the menu (or in General)
Time at the top	the current time in UTC (Finland: + 2 h in winter, + 3 h in summer)
Moon / sun / half circle	theme Dark / Light / Auto (follows the phone); a tap steps to the next
Dot at the top right	system health: green working, amber late / fallback, red stopped
Tap / drag	values at that point (the mouse hover of the full site)
Swipe up / down	scroll a view taller than the screen
Grey line and barbs	aircraft profile (Skew-T), with the wind values
Pink / teal	Jokioinen radiosonde / MEPS weather model
Green / amber / red dot (ILS)	aircraft on / above / below the glideslope (±300 ft)
Squares on the map (ILS)	aircraft; colour = wind source, framed = whose barbs are drawn; tap to follow
`ADV` / `WSA` / `MBA`	windshear advisory / windshear alert / microburst alert
`HW` / `TW` / `AP`	headwind / tailwind component; autopilot engaged
ACI	Approach Conditions Index 0–10: below 2 smooth, light, choppy, rough, 8+ very rough
Updates	Skew-T now 2 min, time–height 10 min, ILS 5 s, ACI · WS · ST and History 1 min, Statistics 30 s, Weather air traffic 6 s; only the shown view, only with the screen on
Blue / red cells (ST)	less / more headwind than the flights of the previous 45 min
Card chips (History)	ACI value, windshear level, *trial* (departure ramps, no alert), GA go-around; for the reports `WS R22L` and `near`
Amber bar / **P** (WS chart)	a METAR with a windshear group / a pilot report near the airport
Strip / slider (Weather)	hours loaded: grey past, violet forecast, pale not yet; ▶ plays them
Dotted box (Weather)	the 2.5 km detail near the airport, zoom 7 and closer
Radar (Weather)	the newest FMI radar image, only at Now; dashed: the edge of its coverage; white outlines (Both): the model's rain
Tap the map (Weather)	the weather of that place, following the slider; tap an aircraft for its details
About this panel (Statistics)	the panel's explanation, folded; tap to open
Settings	remembered on the phone; Skew-T options and theme shared with the full site in the same browser

Other guides (the User guides tab of the full site's *What's new* window): *Reading the Atmosphere Profile (Skew-T)*; *The Sounding and Wind Map pages*; *Windshear detection and the Windshear page*; *Mode S & ADS-B and the Statistics page*.