

MG Digital Key - Entrance

User could enter the digital key in the vehicle home page after bound the vehicle.

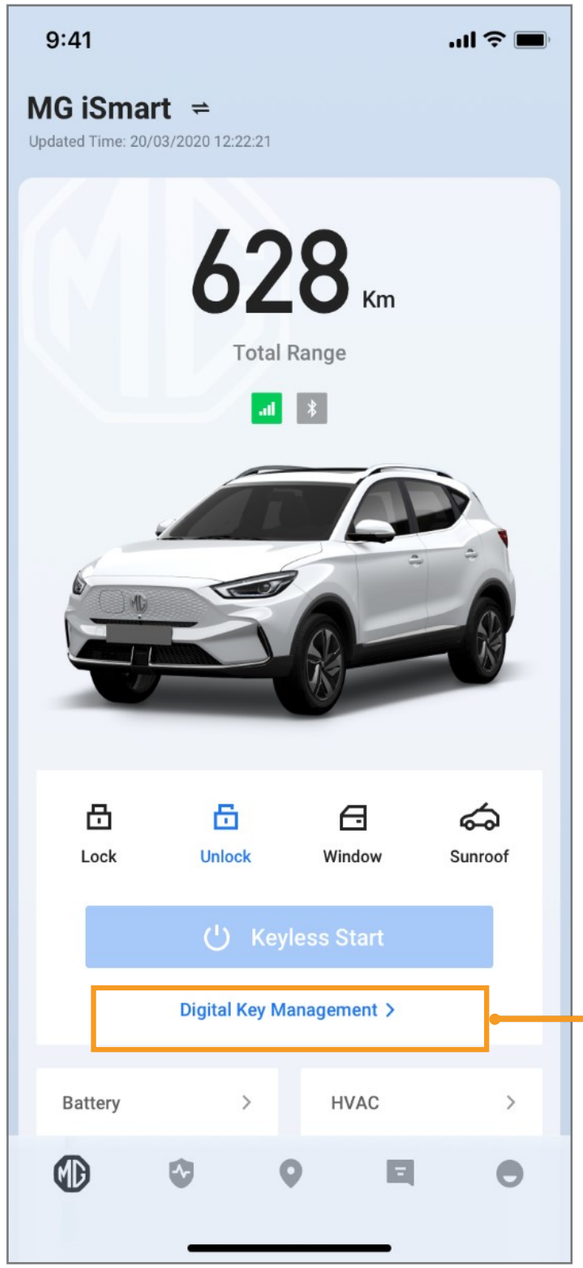


Vehicle Control Page

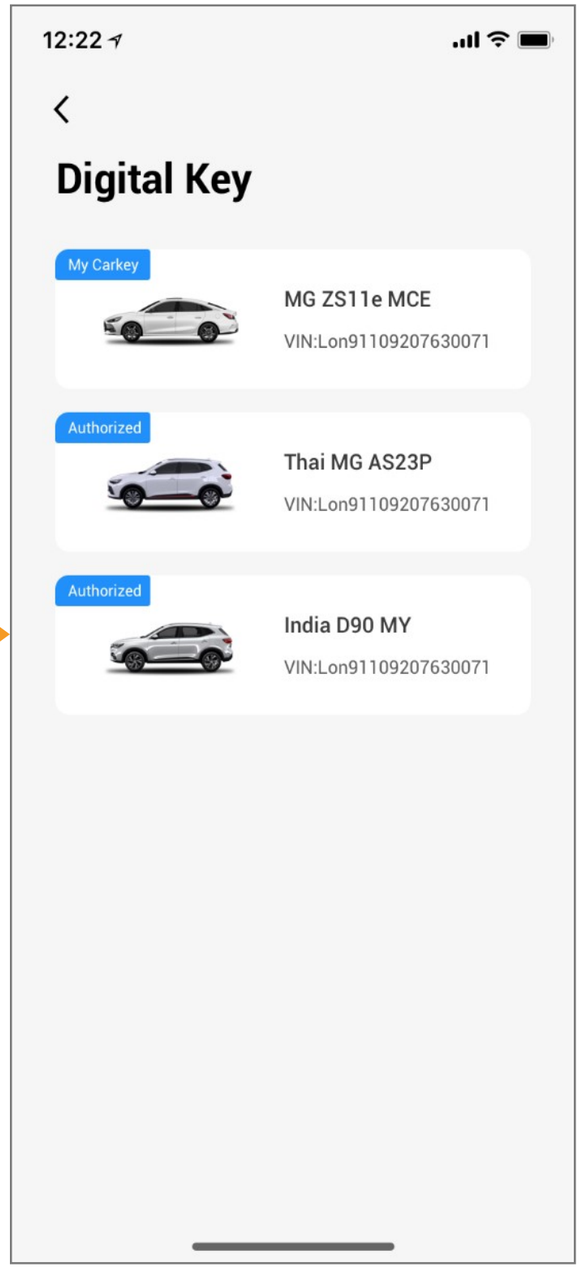

Digital key list


MG Digital Key - Master Account active the Digital Key

For car owner, she/he have the master account, could activate the digital key and share it to others. Please see the activation operation in below:
For the user that's shared the digital key by master acount, she/he have the guest acount. Please see the opration for more information about guest account in last page.

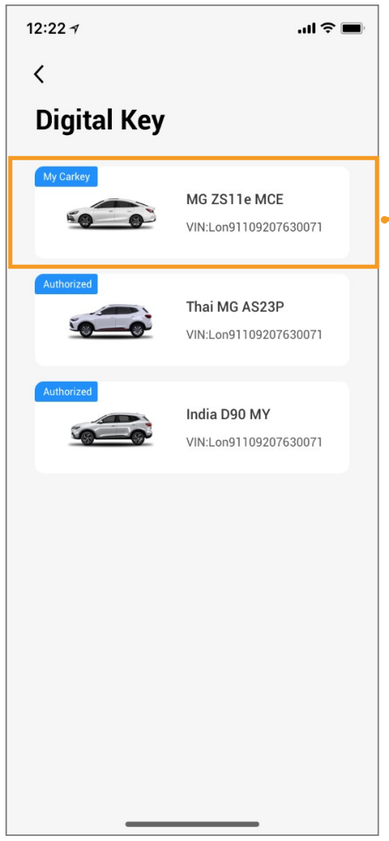


Digital Key Listes


My Carkey

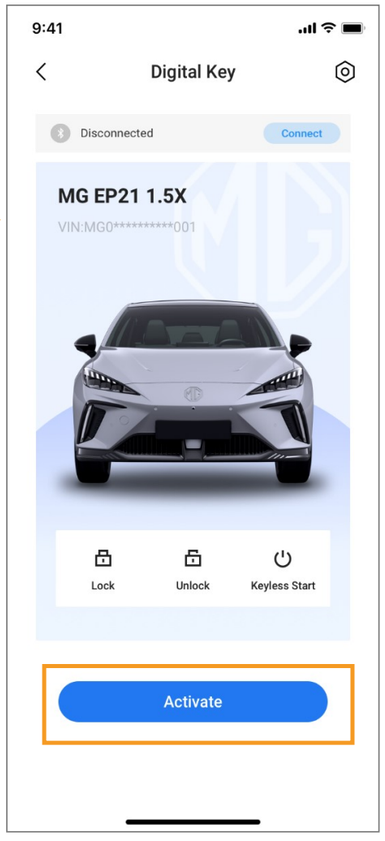

Frist Step:
To activate the key

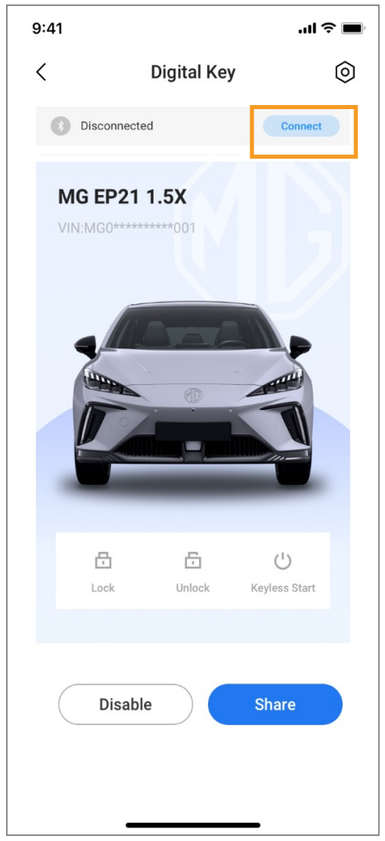


Second Step:
To connect Bluetooth

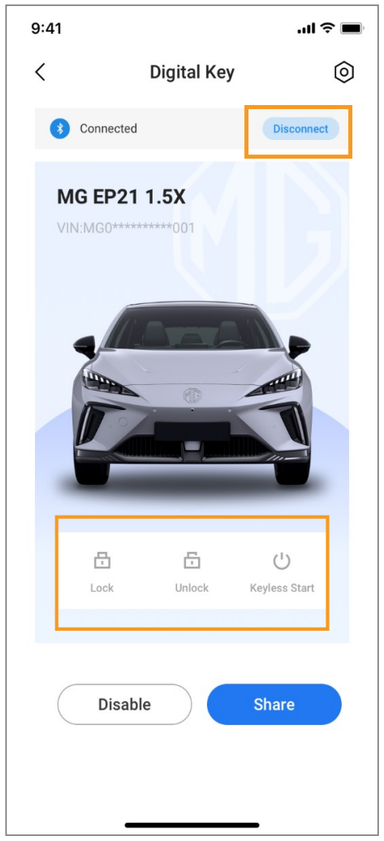

After Bluetooth is connected, then Digital key is ready.

User could Lock or Unlock the door and car window proactively;


User can click keyless start button on phone and then ignite the Vehicle by press the start button in the Cockpit.

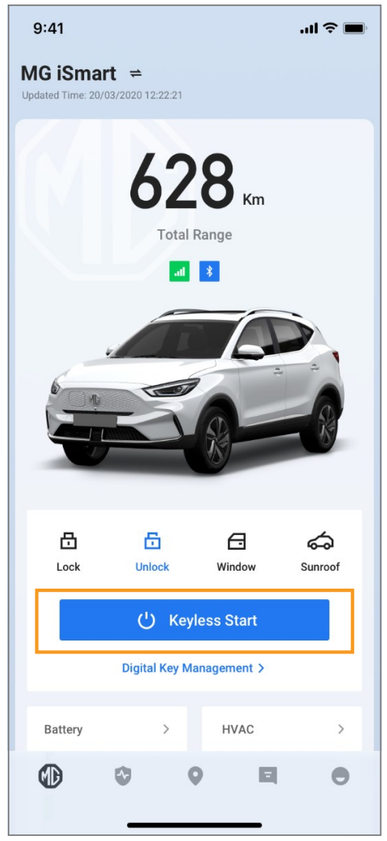

After bluetooth is connected and digital key is actived, user could trigger Keyless Start in Vehicle Control Page


MG Digital Key - Master Account share the digital key to others

For car owner, she/he could share the digital key to others, please see the operation in below:

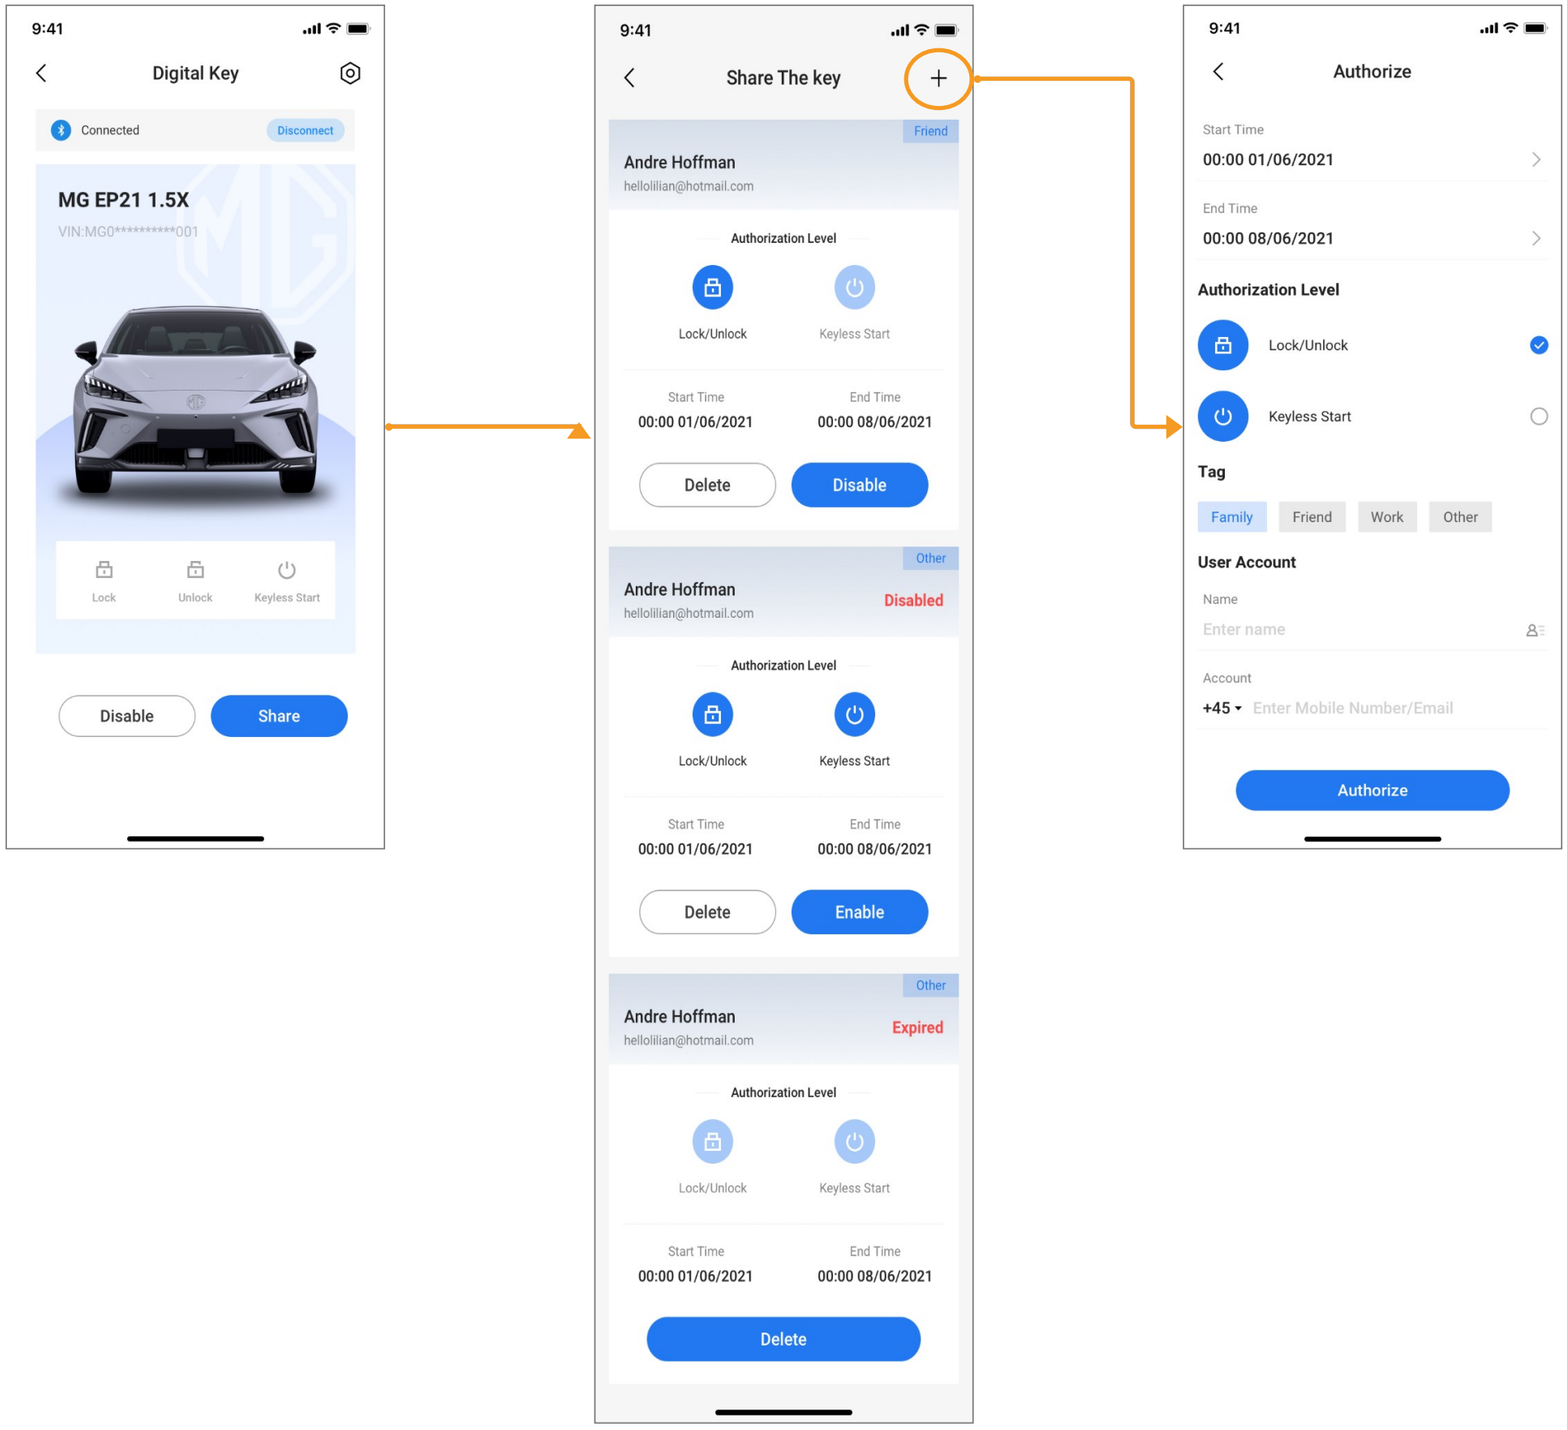


MG Digital Key - Guest Account connect the Bluetooth

After master account shared the digital key to guest account, she/he could connect the bluetooth to use the digital key function.

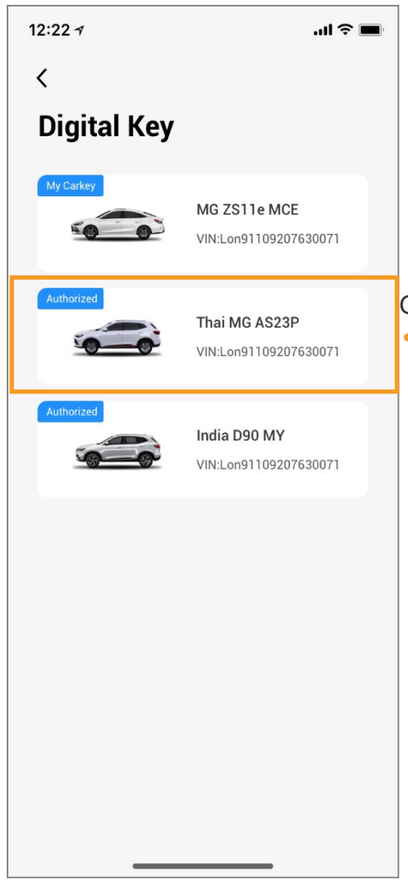


Guest Carkey

Digital Key Listes

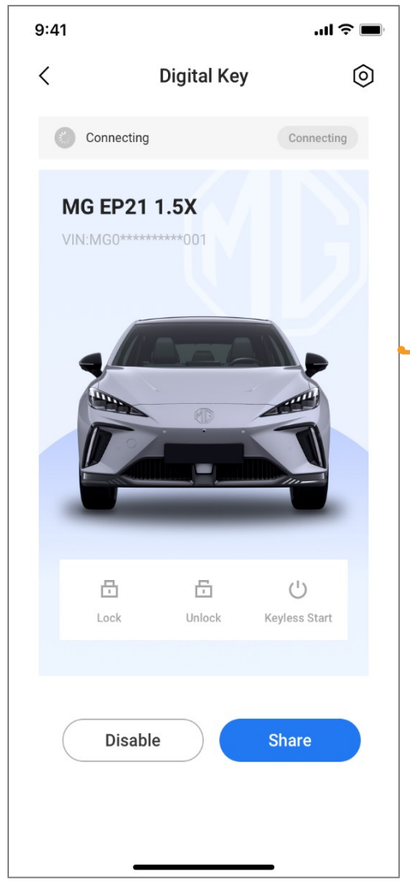


User to connect Bluetooth

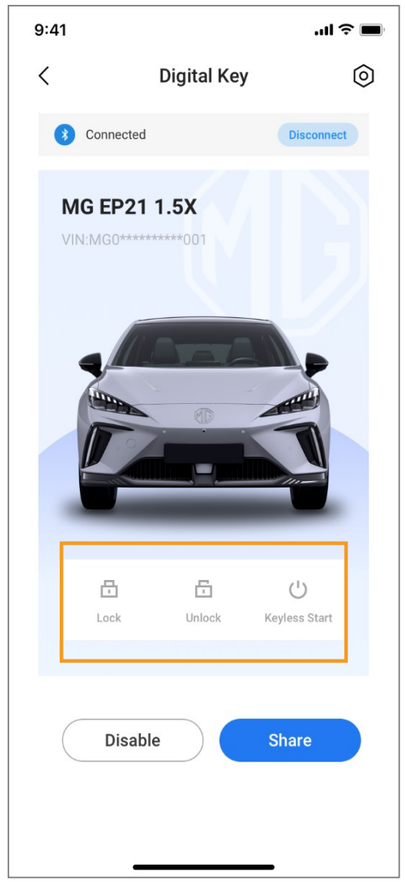

After Bluetooth is connected, then Digital key is ready.

User could Lock or Unlock the door and car window proactively;

User can click keyless start button on phone and then ignite the Vehicle by press the start button in the Cockpit.

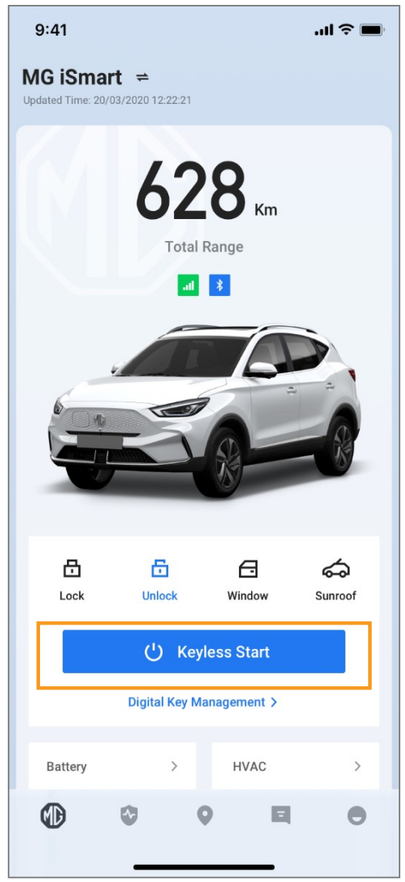

After bluetooth is connected and digital key is actived, user could trigger Keyless Start in Vehicle Control Page