


DMX Modes & Values

Function	Value	Percentage/Settings	9 Channels	11 Channels
Pan Movement	000-255	Pan Movement	1	1
Pan Fine	000-255	Fine Control of Pan Movement		2
Tilt Movement	000-255	Tilt Movement	2	3
Tilt Fine	000-255	Fine Control of Tilt Movement		4
		COLOR WHEEL:		
Color Wheel	000-009	Open White		
	010-019	Red		
	020-029	Green		
	030-039	Blue		
	040-049	Yellow		
	050-059	Orange		
	060-069	Light Blue		
	070-079	Pink	3	5
	080-089	Light Blue + Pink		
	090-099	Orange + Light Blue		
	100-109	Yellow + Orange		
	110-119	Blue + Yellow		
	120-129	Green + Blue		
	130-139	Red + Green		
	140-255	Automatic color change from slow to fast		
		GOBO WHEEL:		
Gobo Wheel	000-007	Open White		
	008-015	Gobo 1		
	016-023	Gobo 2		
	024-031	Gobo 3		
	032-039	Gobo 4		
	040-047	Gobo 5		
	048-055	Gobo 6		
	056-063	Gobo 7		
	064-071	Open White Shake		
	072-079	Gobo 1 Shake	4	6
	080-087	Gobo 2 Shake		
	088-095	Gobo 3 Shake		
	096-103	Gobo 4 Shake		
	104-111	Gobo 5 Shake		
	112-119	Gobo 6 Shake		
	120-127	Gobo 7 Shake		
	128-255	Automatic gobo change from slow to fast		
Strobe	000-009	Non-functional		
	010-249	Strobe from slow to fast	5	7
	250-255	Strobe OFF		
Master Dimmer: 0-100%	000-009	Light OFF	6	8
	010-255	From dark to bright		
Pan/Tilt Speed	000-255	PAN/TILTSPEED: From fast to slow	7	9
Auto & Sound Mode	000-059	Other channel effects		
	060-084	Auto Run mode 3		
	085-109	Auto Run mode 2		
	110-134	Auto Run mode 1		
	135-159	Auto Run mode 0	8	10
	160-184	Sound Activated mode 3		

	185-209 210-234 234-255	Sound Activated mode 2 Sound Activated mode 1 Sound Activated mode 0		
Reset	000-249 250-255	RESET: Non-functional Reset	9	11

System Menu

The fixture includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made. (See image below) During normal operation, pressing the MENU button once will access the fixture's main menu. Once in the main menu, you can navigate through the different functions and access the sub-menus with the UP and DOWN buttons. When you reach a field that requires adjusting, press the ENTER button to access that field and use the UP and DOWN buttons to adjust the field. Pressing the ENTER button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the MENU button.

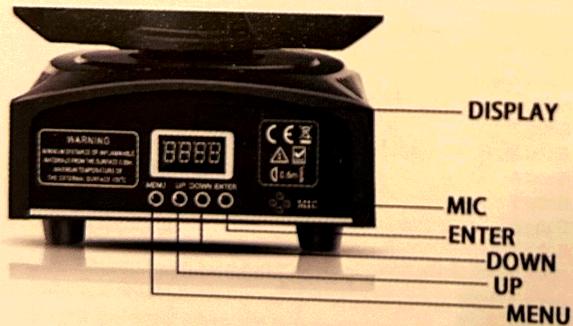

Gobos & Colors

7 Colors + Open White:



7 Gobos + Open White:

