


Lawnmower Artifact Dissection


Oliver Chang // August 12, 2022

Drawings


Isometric Drawing

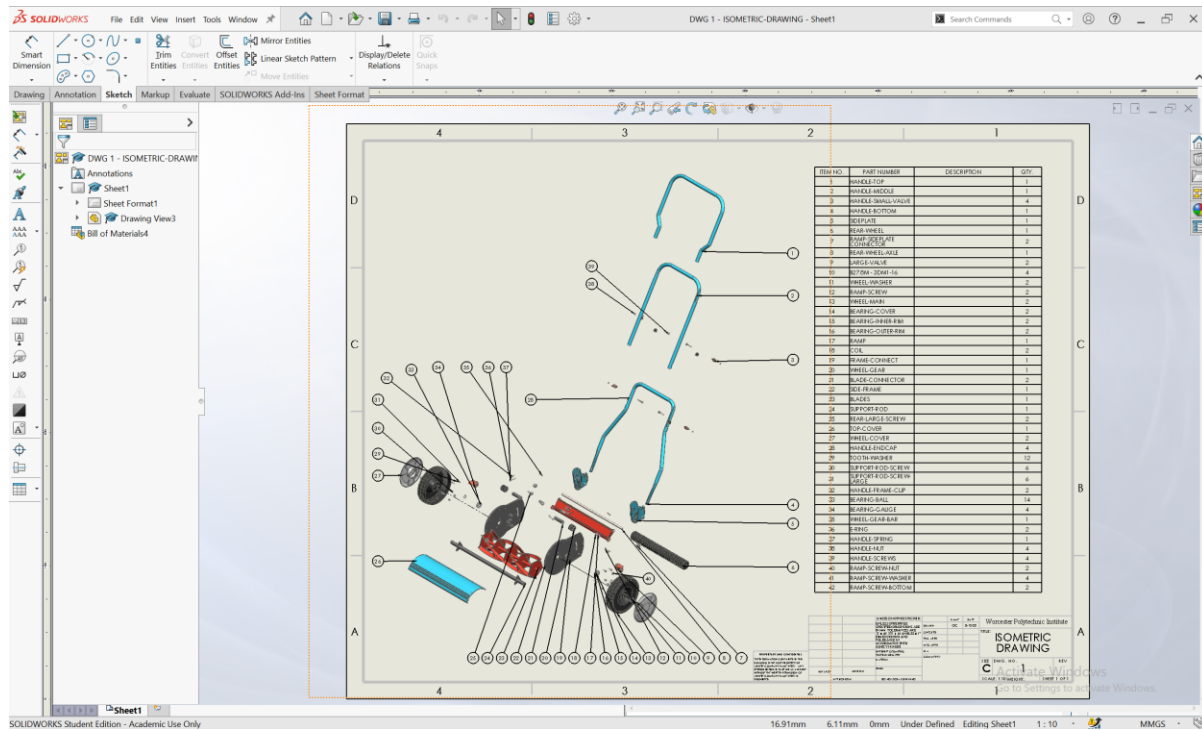


Section View Drawing

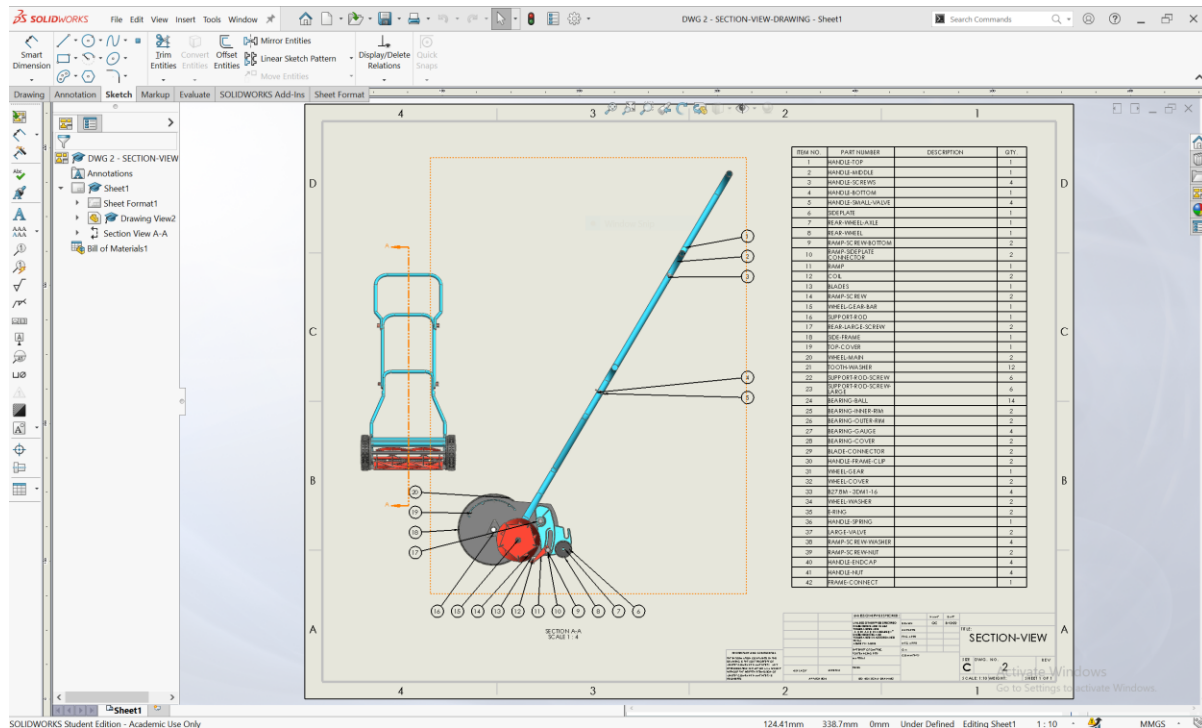


Middle Handle Drawing

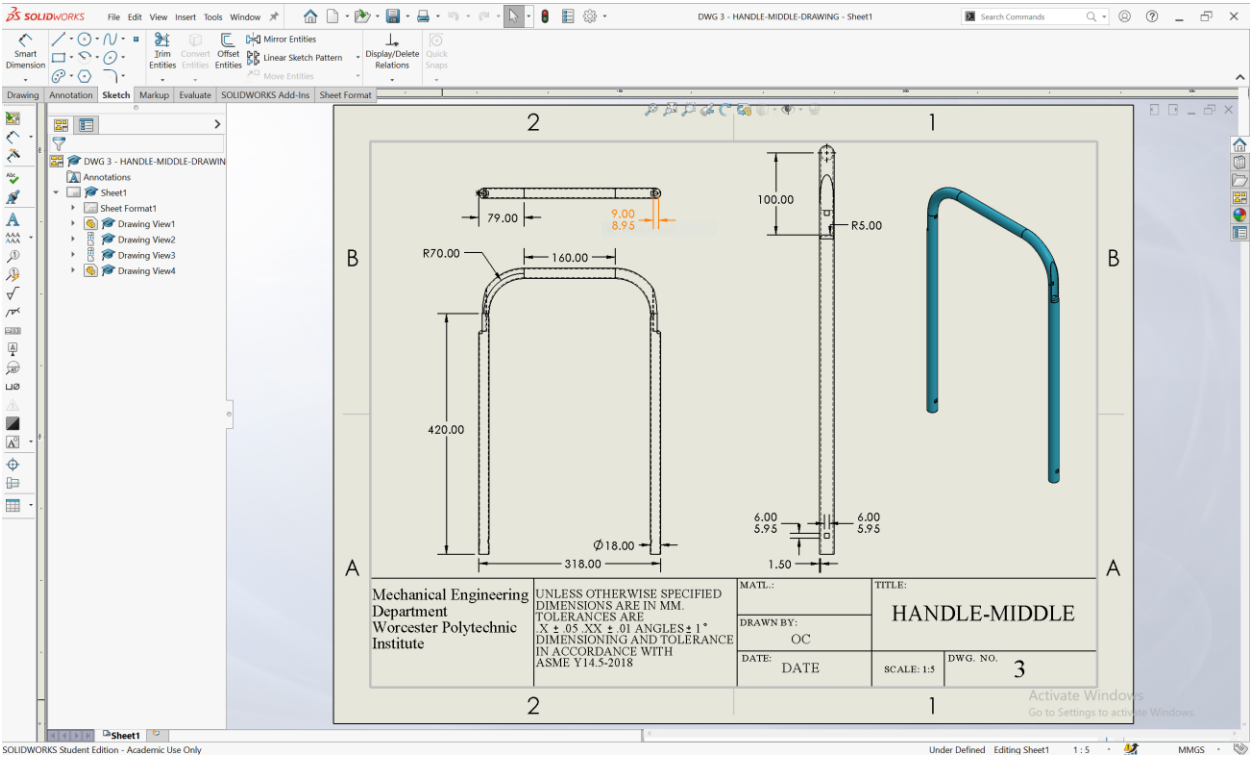


Top Cover Drawing

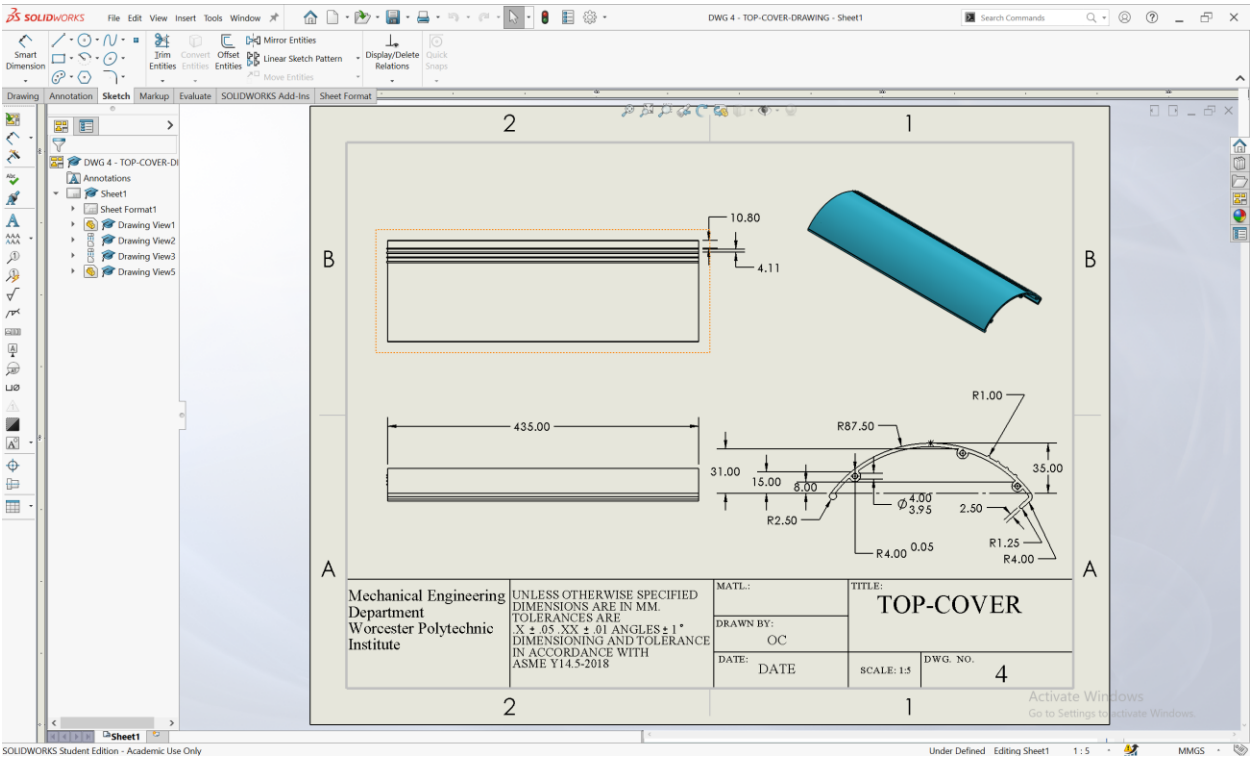


Wheel Gear Drawing

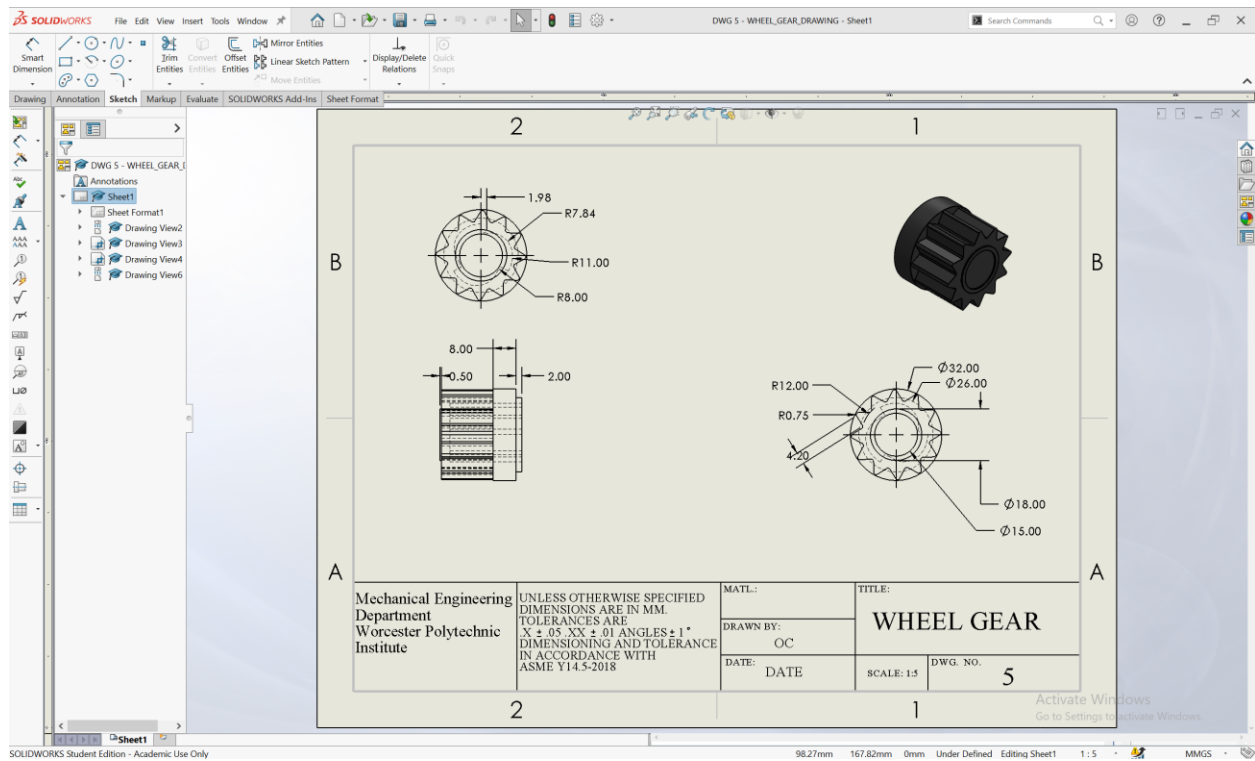


Ramp Wheel Drawing

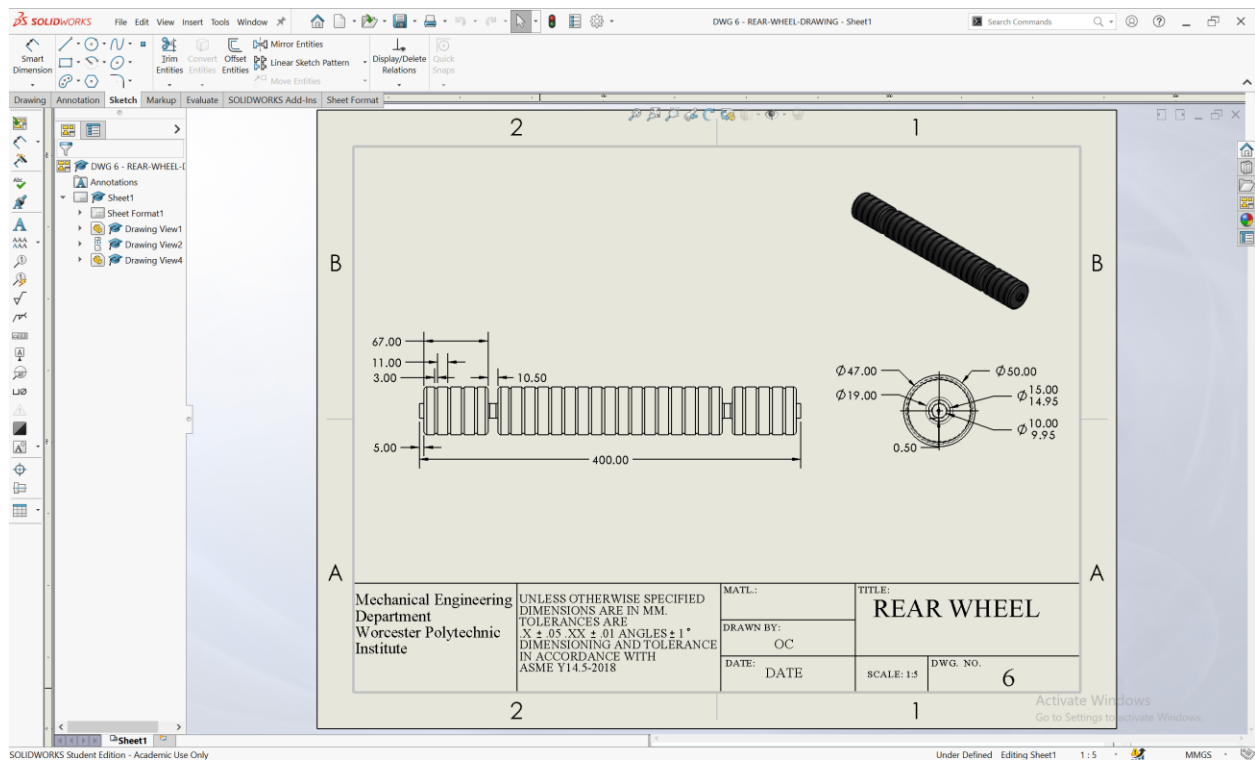


Support Rod Drawing

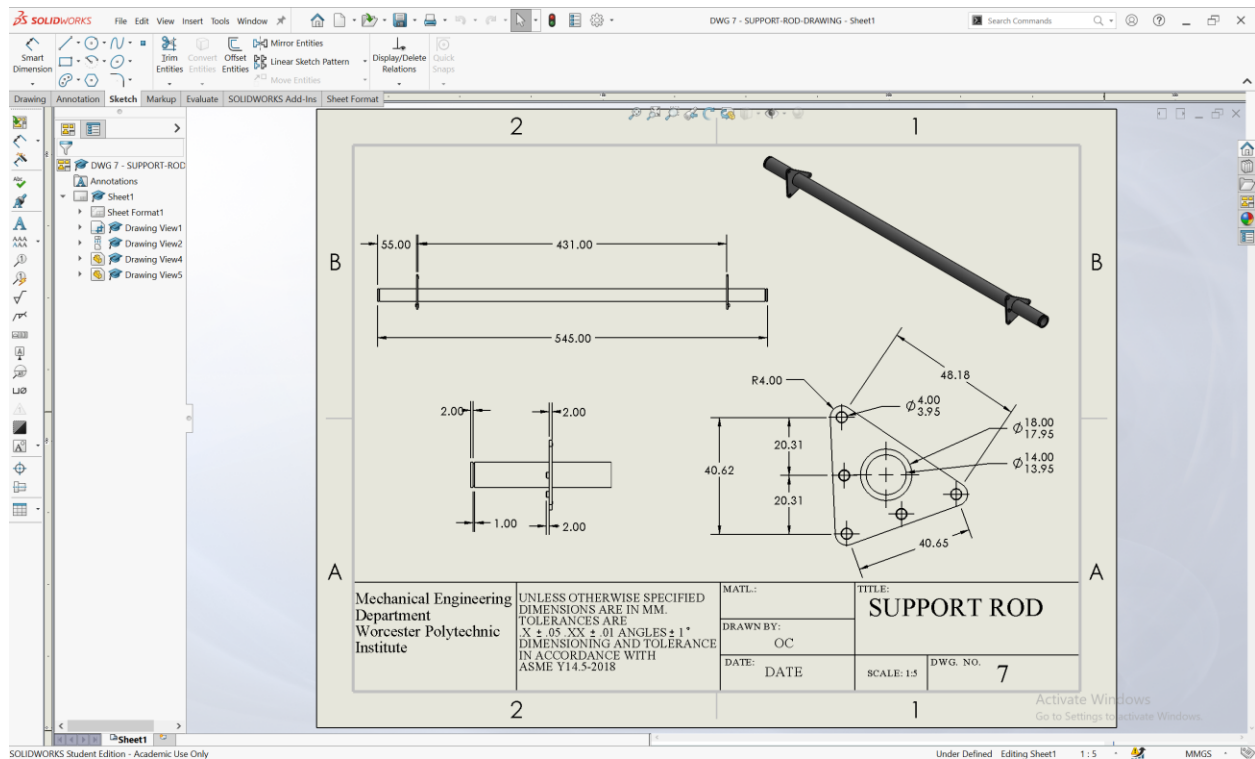


Blade Connector Drawing

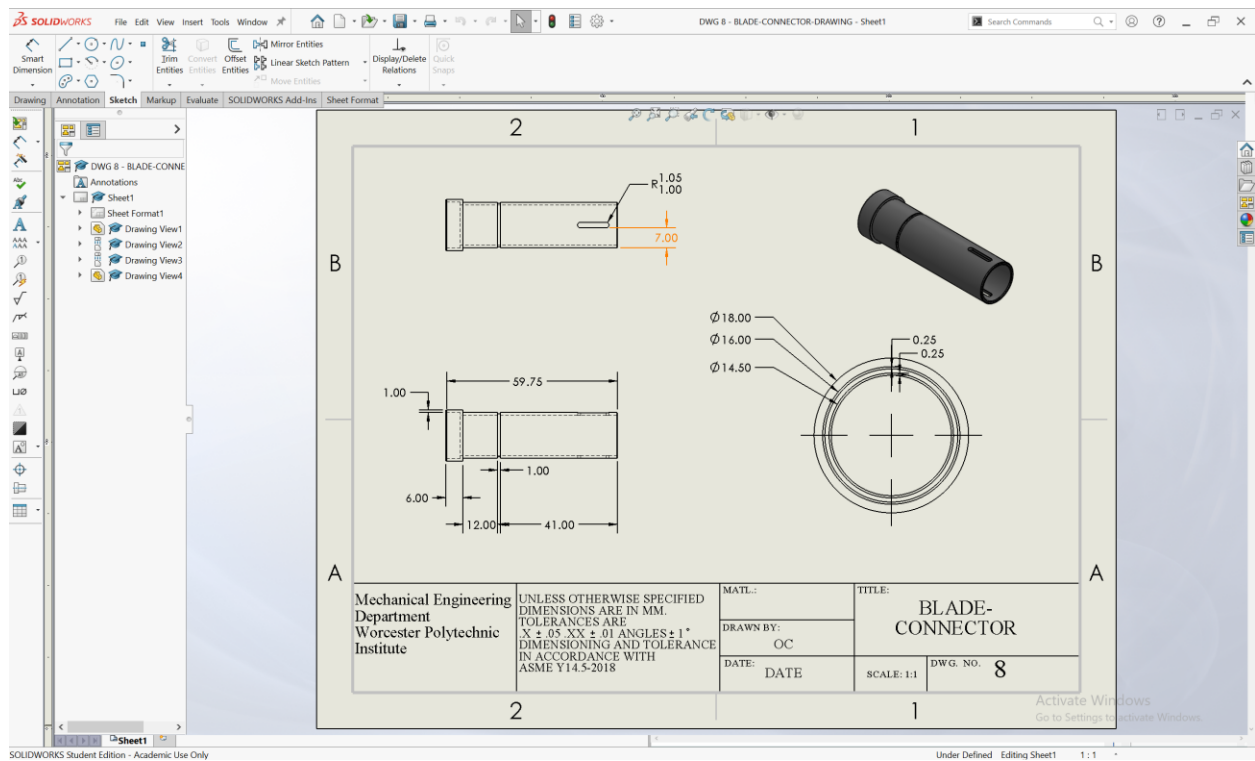

Side Frame Drawing

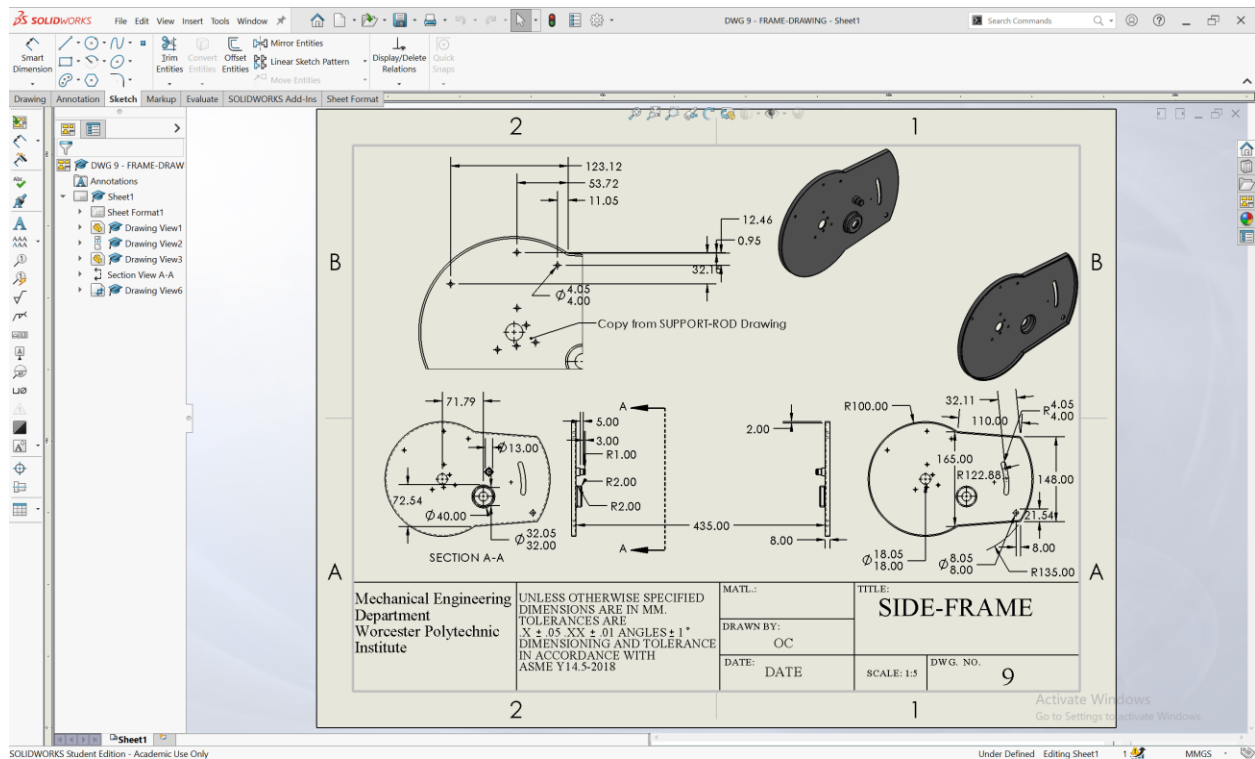

Ramp Side Plate Connector Drawing

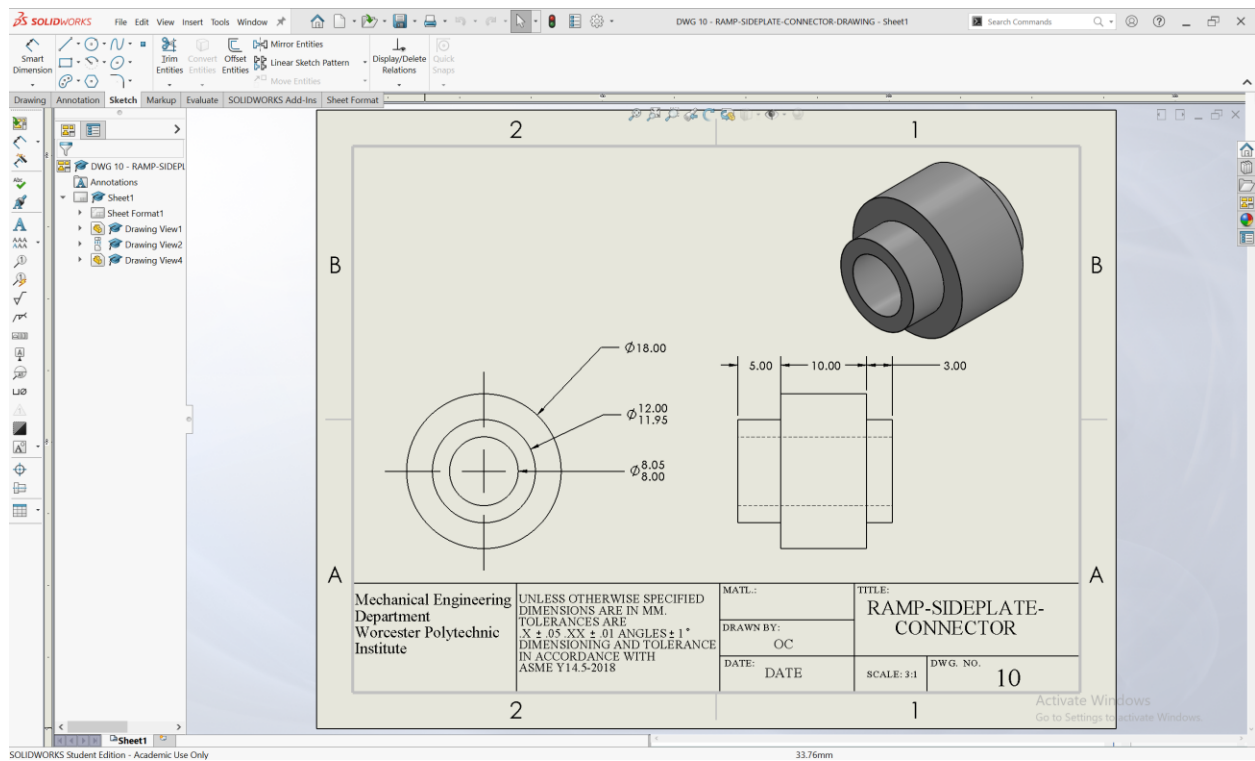

In drawing 10, there are multiple instances of a clearance fit, where the shaft diameter is less than the hole diameter. This connector part is both a hole for a screw as well as a shaft that fits into the ramp and side-plate.

Appendices

Assembly-Disassembly Instructions

1. Remove the wheel covers using the rectangular divot and a screwdriver
2. Remove the retaining ring and washer that holds the wheel in place. This allows you to remove the wheel, wheel-gear, and inner retaining ring.
3. Unscrew the large valve, ramp screw, and connector screw to remove the rear-assembly. This allows you to remove the side plates, ramp, coils, rear wheels, and rod
4. Unscrew the screws connected to the frame to remove the top cover and support rod. You can now also dis-assemble the blade and connector piece.
5. To disassemble the handle, remove the E-Ring and clip that hold the handle in place. After removing the handle, there is a coil/spring that is hooked onto the frame. By angling it, it will slide out.
6. Remove the small valves and screws that hold the handle parts in place. Afterwards, remove the black cap pieces on the middle and top handle parts.

Reference Images



