

Piano de Voyage - User Manual

V1.5 - April 2022 - Ryme Music

[Foreword](#)

[Assembly instructions](#)

[Step1 : Hinges](#)

[Step 2 : Toggle latch](#)

[Master Module](#)

[Startup](#)

[Configuration App](#)

[MIDI Channel](#)

[Sustain pedal](#)

[Octave shift](#)

[Transpose](#)

[Knobs](#)

[Switches](#)

[Velocity curve](#)

[Disassembly instructions](#)

[Step 1 : toggle latch](#)

[Step 2 : hinges](#)

[Taking care of your keyboard](#)

Foreword

You are now one of the very few owners of a Piano de Voyage and I'd personally like to thank you for this! I hope you'll enjoy it as much as we enjoyed making it and that it'll be your travel companion. And don't hesitate to contact me and provide your feedback so we can make it even better.

Olivier Balbous

CEO Ryme Music and creator of the Piano de Voyage


olivier@pianodevoyage.com

Assembly instructions

⚠ Please make sure you fully read these instructions in order to avoid damaging your keyboard connectors.

The modules locking mechanism involves two components : the two hinges at the bottom and a toggle latch at the back of the modules.

Step1 : Hinges

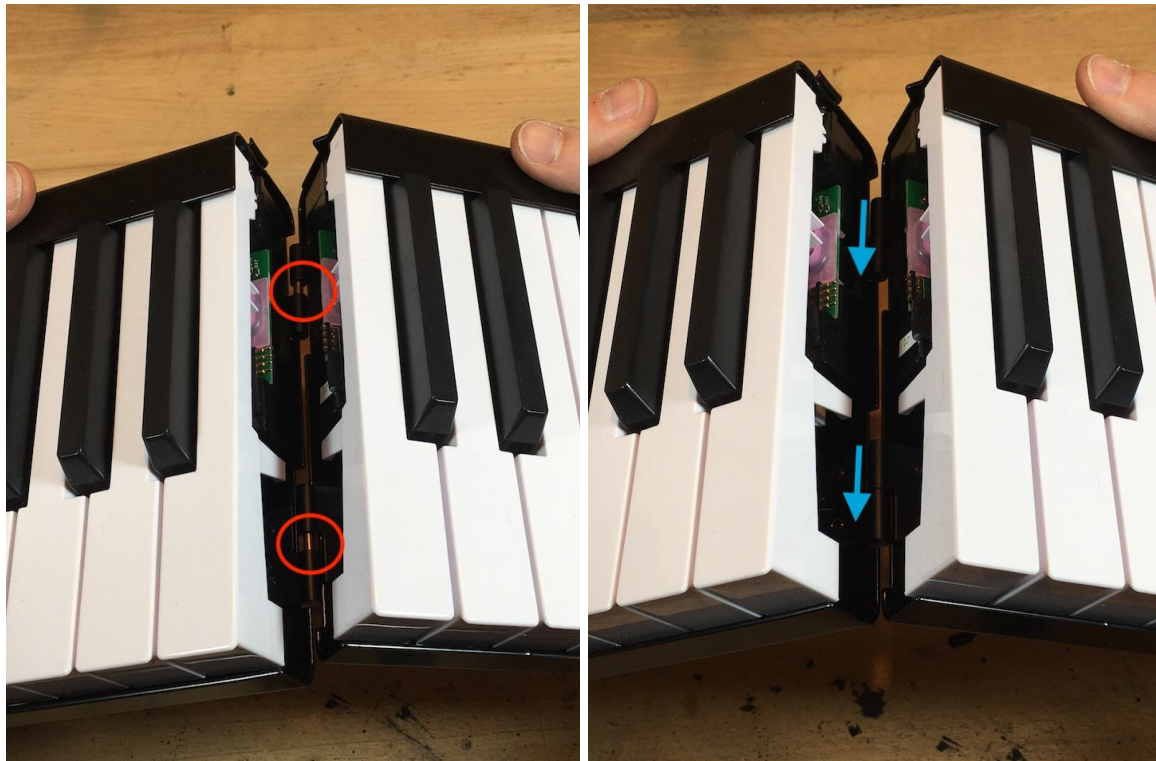

First action is to join the hinges of two modules together.

Take the right-hand module to assemble in your right hand. Top of the modules facing.

Make sure the latch at the back is properly positioned : as if it was closed.

Take the second module to assemble, in your left hand.

Position the two male hinges of the left hand-side module into the two female hinges of the right hand-side module **keeping a slight angle** between the two modules so that you can see if all hinges are in the right position.

Now slide the male hinges into the female hinge making sure that :

- Both hinges pairs are inserted
- Male hinges are inserted all the way through their female counterparts.


Step 2 : Toggle latch



First double check that both hinges pairs are well positioned otherwise you may damage your modules when locking the latch.

You can now gently position the two modules horizontally (**watch out for your fingers!**).


Double check that the front and back of the modules are well aligned and that the latch is still in “closed” position.

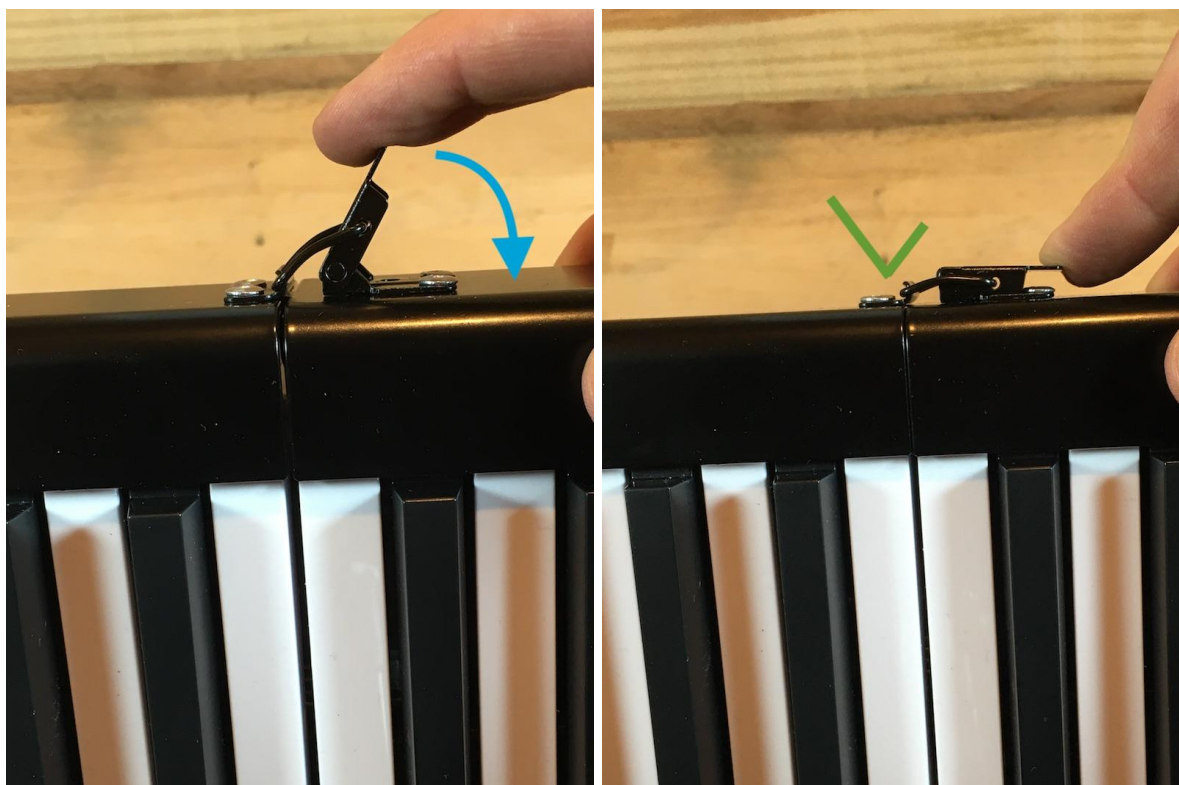

Now open the latch and attach it to its hook on the left hand-side module and slowly lock it until it is back to its “closed” position and holds the two modules firmly assembled - still keeping an eye on your fingers or anything else that may interfere with the joint of the two modules.

Now you’re done!

Master Module

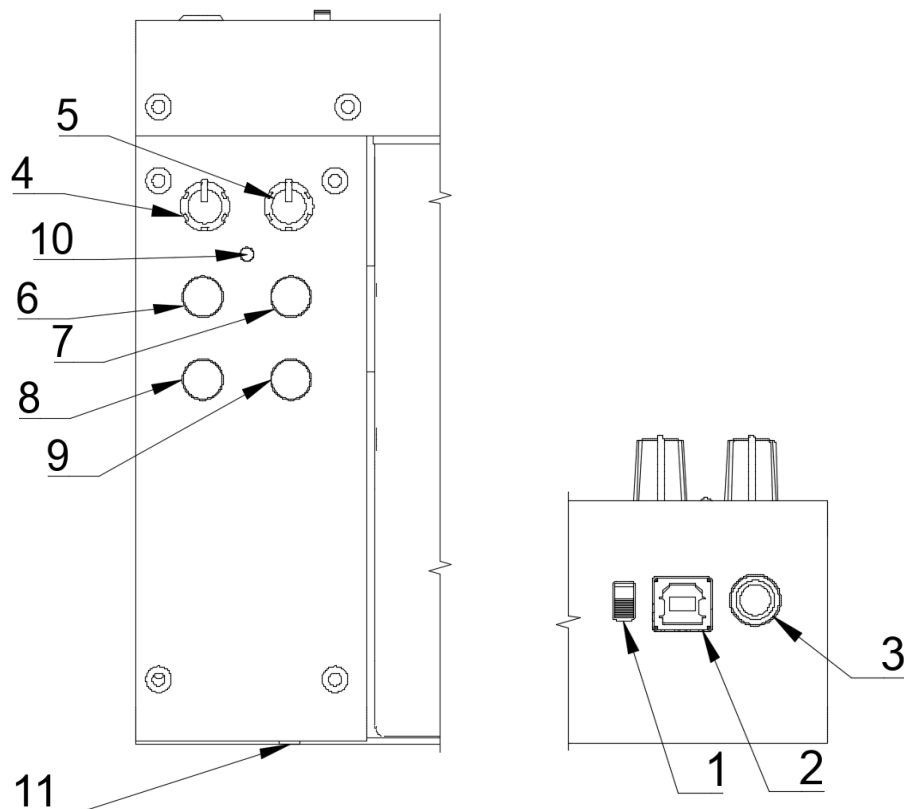

Back Panel

1. ON/OFF Switch
2. USB/MIDI connector
3. Sustain Pedal jack connector

Top Panel (factory settings)

4. MIDI Volume control (CC ID : 0x07)
5. Unassigned
6. MIDI Program Change (-)
7. MIDI Program Change (+)
8. Octave Shift (-)
9. Octave Shift (+)
10. Status LED

Front Panel

11. (Optional) Phones output

Note : All MIDI controls are configurable in the configuration app.

Startup

If using the USB-only version of the Master module, the keyboard has to be connected to a USB/MIDI device (computer, ipad...) using a USB-B cable (provided) for power and sound generation.

If using the Master module with embedded Soundboard option the keyboard only needs to be powered by connecting to a power source such as USB phone charger or power bank using the USB-B cable (provided). Note that USB/MIDI connection to a computer is still possible with this configuration.

Once connected and switched on the Master module will begin its initialization phase :

- Status LED red = device initialization
- Status LED flashing green = establishing connection to the modules
- Status LED green = ready to play

Configuration App

Behavior of the keyboard may be configured to adjust your playing style and accessories.

The Piano de Voyage configuration app is accessible using Google Chrome browser (only) at : <https://configuration.pianodevoyage.com/>

This app will automatically detect any Piano de Voyage keyboard connected to your computer (PC or Mac) and display its internal software version and the current configuration.

Note : Due to iOS restrictions, this web app doesn't currently work on iOS devices (iPhone, iPad) but we are working on developing a dedicated mobile app.

MIDI Channel

The Keyboard MIDI output channel can be configured using the following menu.

Default MIDI channel is #1

Sustain pedal

Depending on your sustain pedal type you may need to change the default behavior which is to send MIDI event 127 when the pedal is pressed and 0 when released to the other way round.

Octave shift

By default, the position of middle C key will be mapped depending on how many modules are connected as below :

88 keys (4 modules)



64 keys (3 modules)



40 keys (2 modules)



Using the “Octave shift” setting you can override this behavior by shifting your keyboard by 0 to 3 octaves up or down

Transpose

Transpose your keyboard by 0 to 12 semitones up or down

Knobs

Configure the behavior of the 2 master module knobs by choosing one of the 4 modes :

- Unassigned : the knob will be disabled
- MIDI Control : this mode will allow you to change any MIDI control value specified by the “Control Number” field. See the [MIDI Specifications](#) for a control numbers list.
- Pitch bend : this mode will enable the MIDI pitch bend control
- Aftertouch : this mode will enable the MIDI aftertouch control


Switches

Configure the behavior of the 4 master module knobs by choosing one of the 4 modes :

- Unassigned : the switch will be disabled
- Program shift : shift the MIDI program/instrument up if “Control number” is 1 or down if 0
- Octave shift : shift the keyboard by 0 to 3 octaves (up if “Control number” is 1 or down if 0)
- Program select : select a given MIDI program/instrument whose value is “Control number”. See the [General MIDI Specifications](#) for instrument numbers.

Velocity curve

The keyboard touch response (aka “velocity curve”) can be fully customized either by manually drawing a curve or by selecting one of the eight presets are available ::

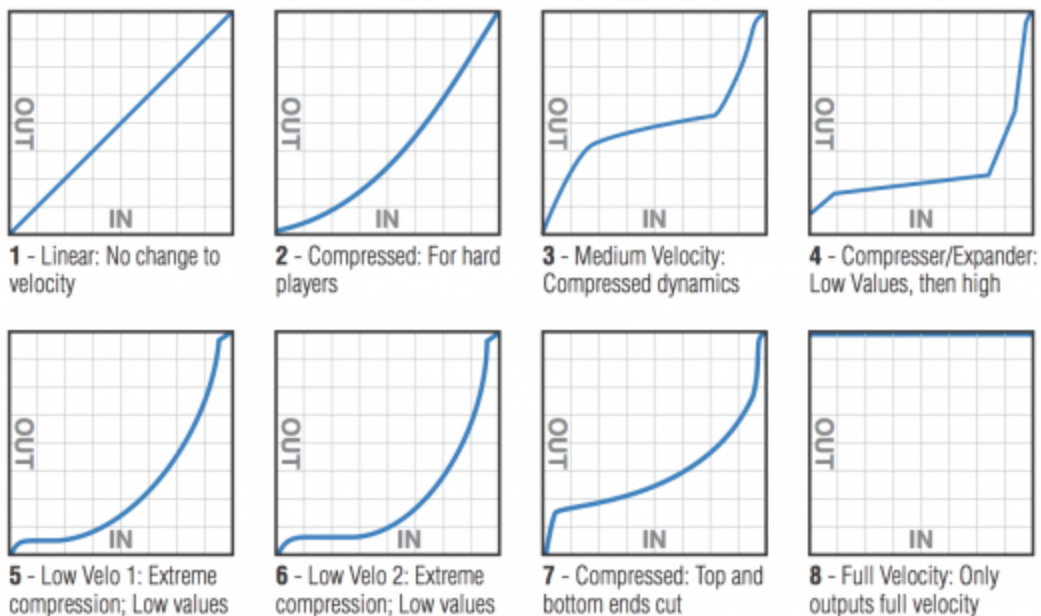

Disassembly instructions

Unassembling the modules is more or less repeating the assembly operation the other way round.

Special care must be taken though to avoid the fall of modules when unlocking them : always hold the two modules to disassemble one in each hand.

Step 1 : toggle latch

Hold the two modules to disassemble one in each hand and then unlock the latch making sure none of the left or right modules will fall.

Step 2 : hinges

Bend the modules around the hinges to get a **slight angle** and avoid damaging the modules electronic contacts.

Un-assemble the hinges.

Repeat the operation for all modules. Et voilà!

Taking care of your keyboard

Piano de voyage modules are not particularly fragile nevertheless special care must be taken :

- When assembling/disassembling to preserve a slight angle between the modules to avoid damaging the electronic connectors when sliding in/out the hinges.
- When assembling, not to lock the latch if hinges are not well positioned
- When disassembling, hold both modules to avoid falls.

And of course, exposure to dust, extreme temperatures or humidity is to be avoided.

It is a good practice to use the provided pouches to store/pack unassembled modules and protect them from dust and scratches.