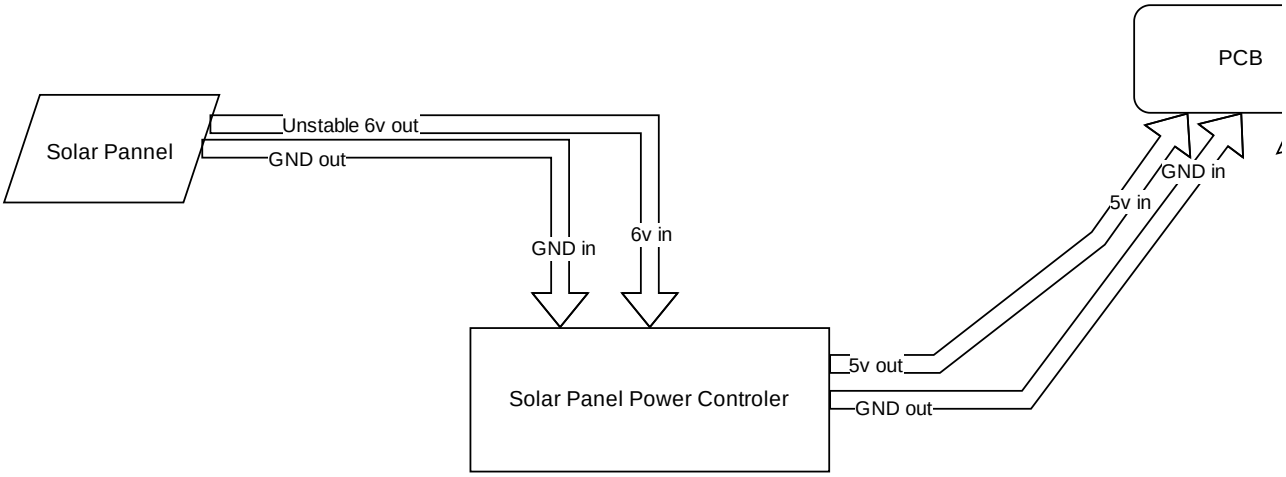
PCB
Solar Pannel
Unstable 6v out
GND out
GND in
6v in
5v in
GND in
Solar Panel Power Controler
5v out
GND out

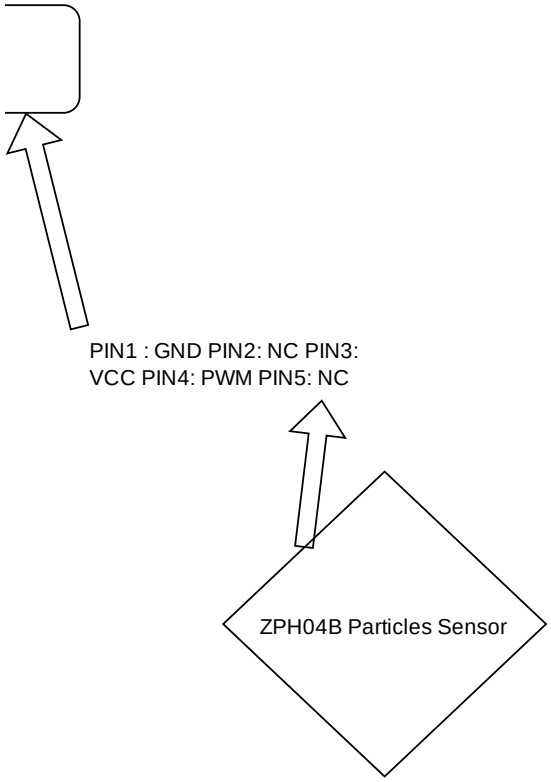
PIN1 : GND PIN2: NC PIN3:
VCC PIN4: PWM PIN5: NC
ZPH04B Particles Sensor