
1. Run below netassist tool (any tcp tool that can listening at specified port is ok).




netassist.zip


2. Change the language to English.

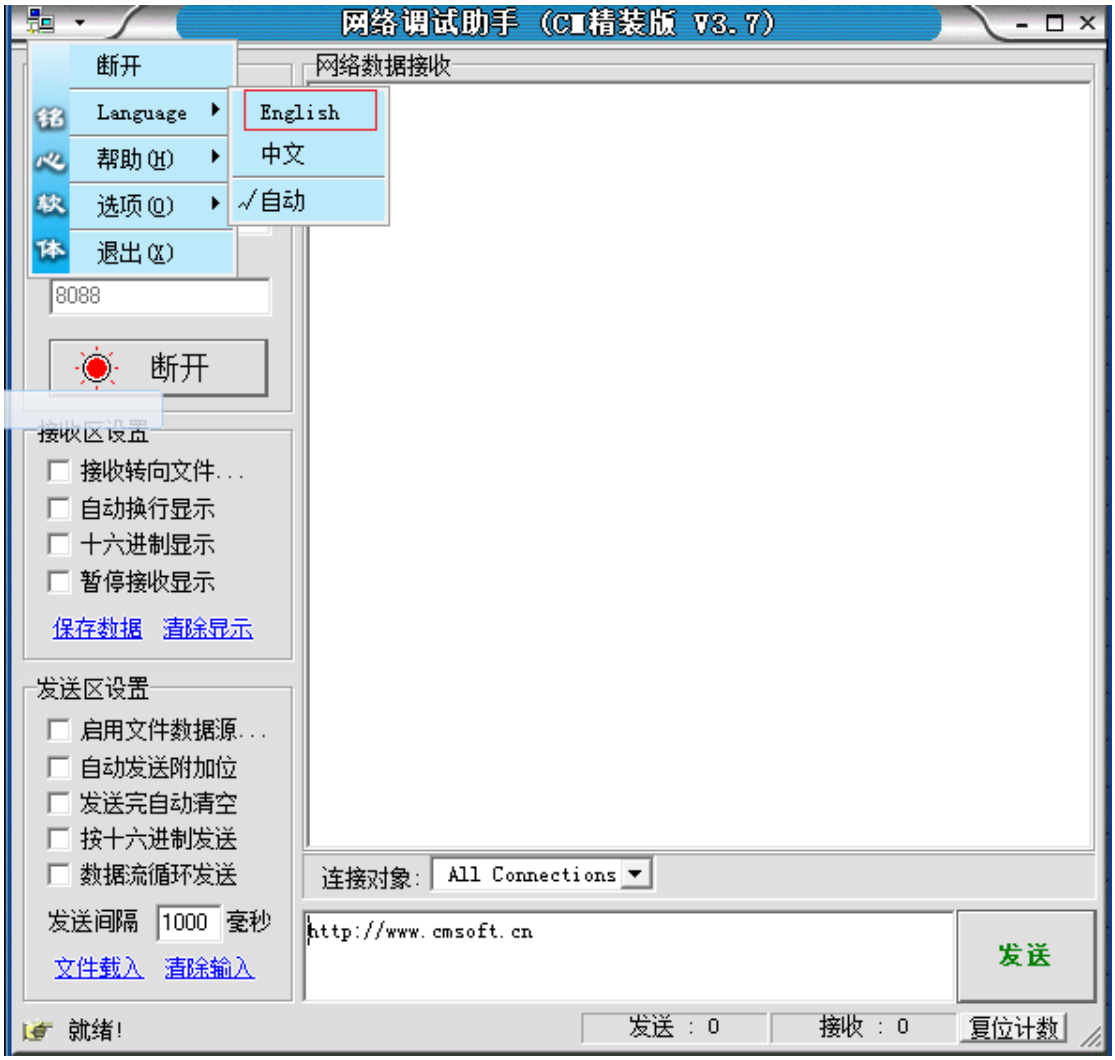


3. Set “Protocol” to “TCP Server” and input specified local host port. Please make sure the specified port is available on your computer.

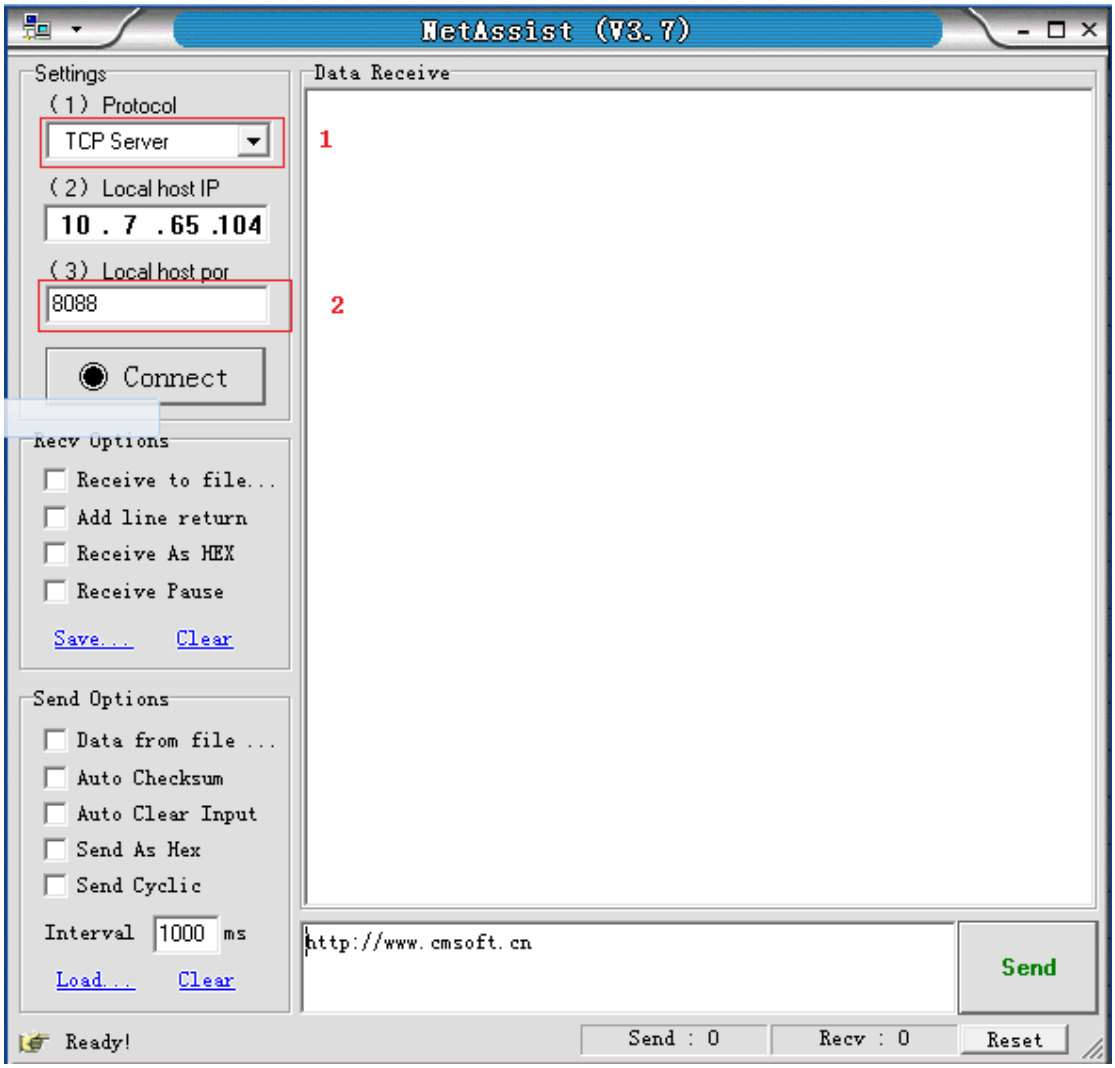

4. Start to listen at the specified port.

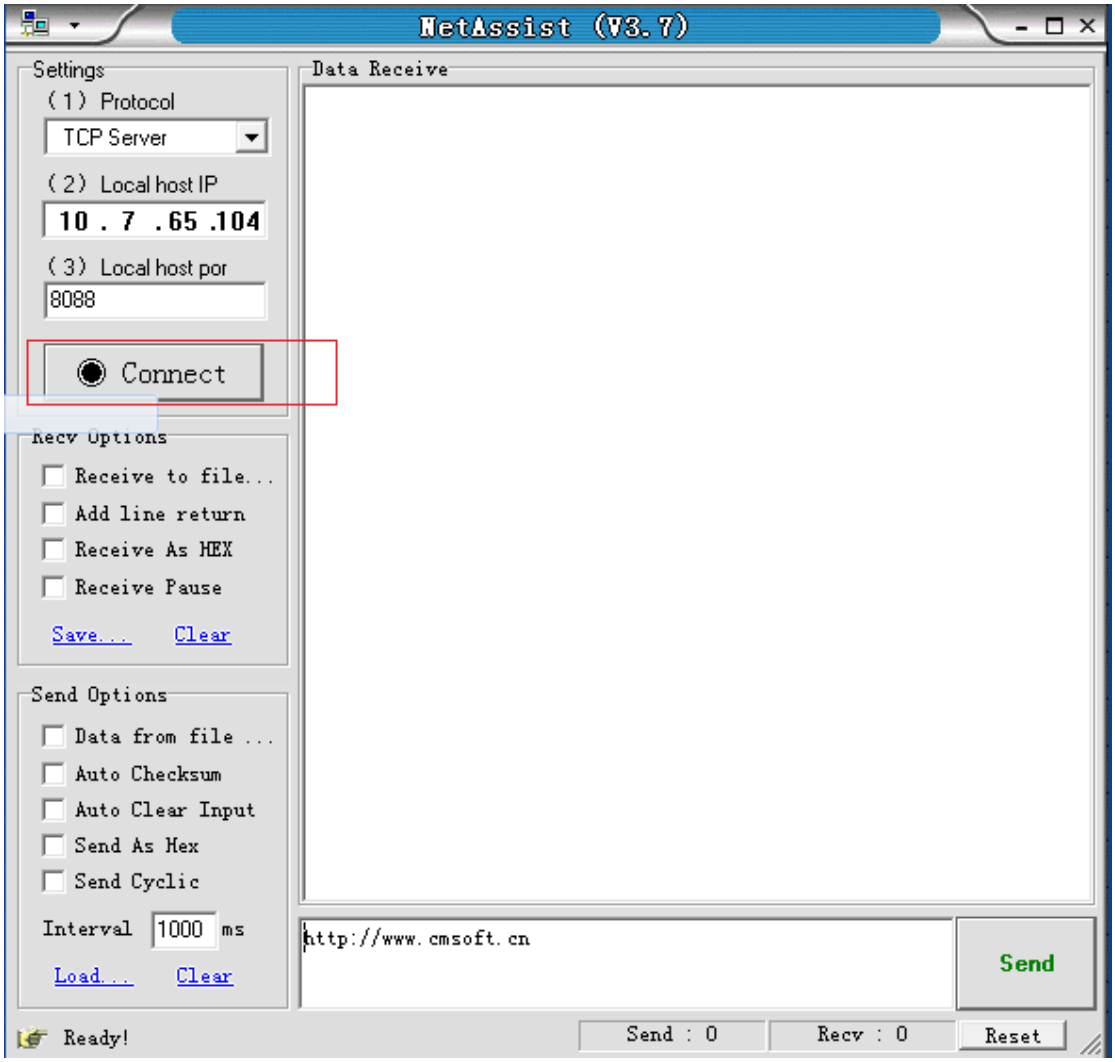


If the specified port is **available**, you should see ready status on the tool.

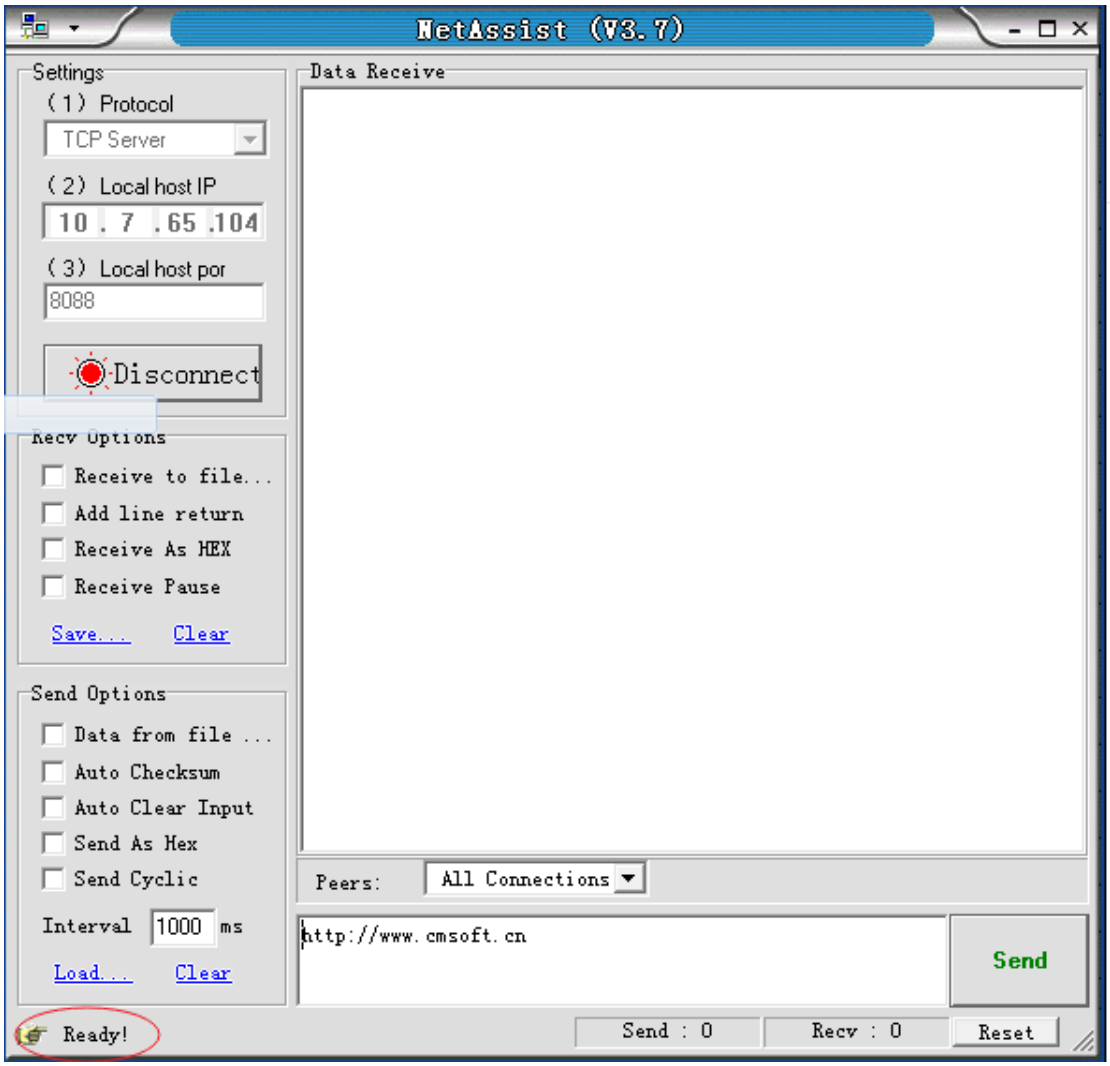


5. Configure the IP, Port and URL of the Http Host on webpage of the camera **or** by ISAPI command

   Configure on wepage of the camera:

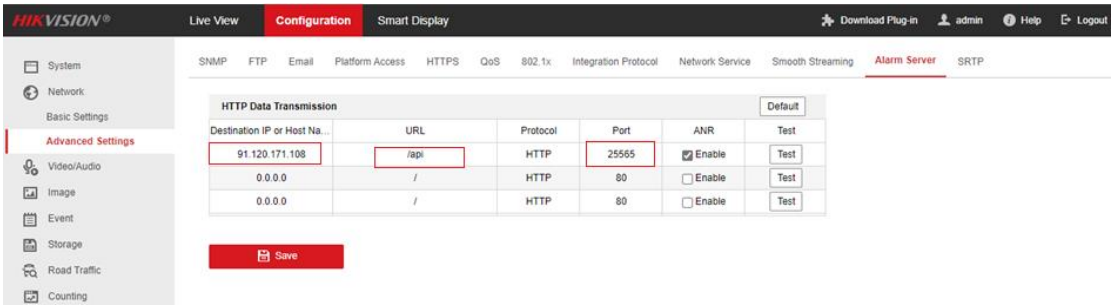


   ITS camera

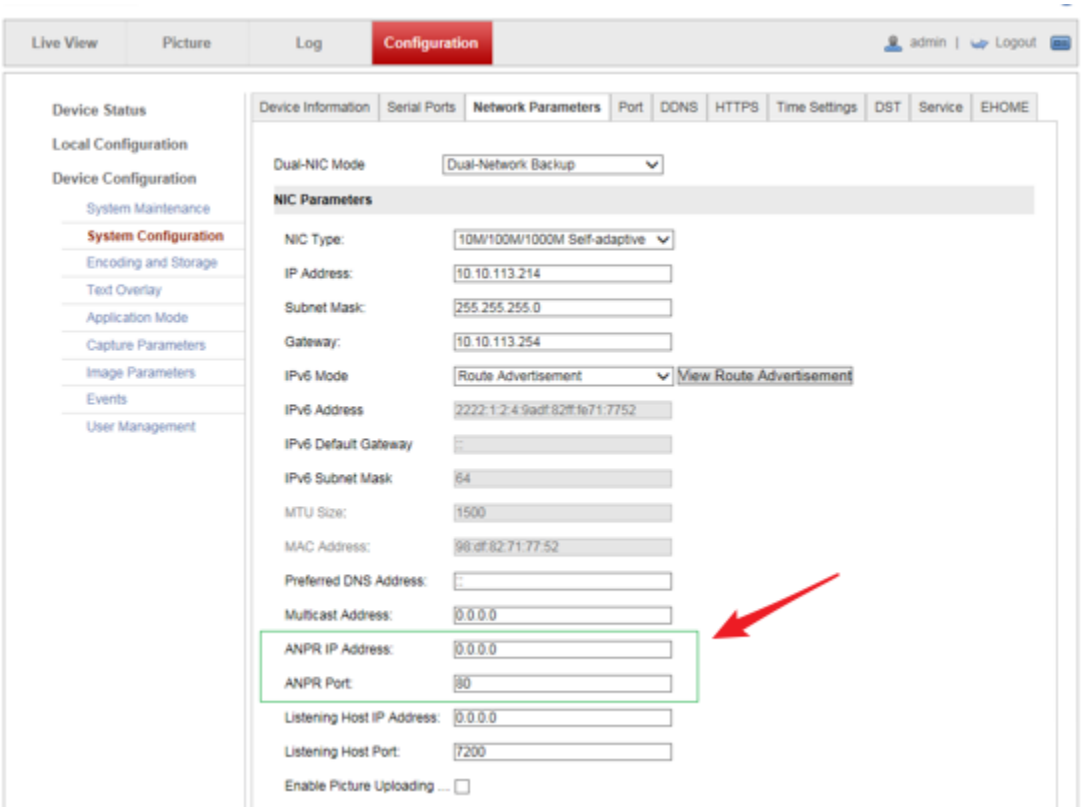


Configure by ISAPI command:

a. Use GET /ISAPI/Event/notification/httpHosts to get the IP and port configured in the camera.
b. Use PUT /ISAPI/Event/notification/httpHosts to change IP and Port to the same in the tool

6. Trigger the related event and check event data in the tool. The camera will send the event by POST http://IP:Port/URL to the tool （below is an example of ANPR event）.

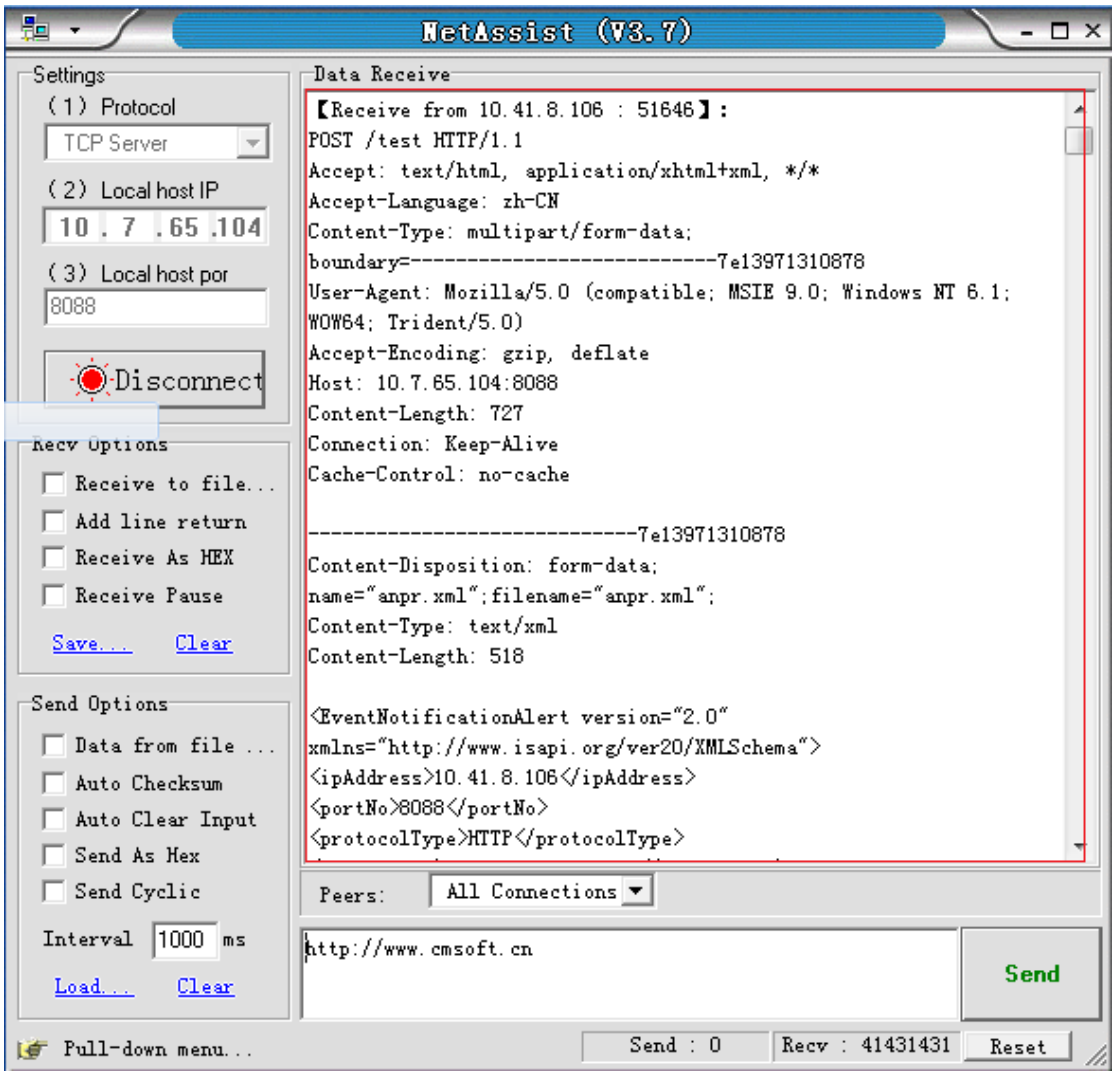

You can also save the data to local file. Like below.

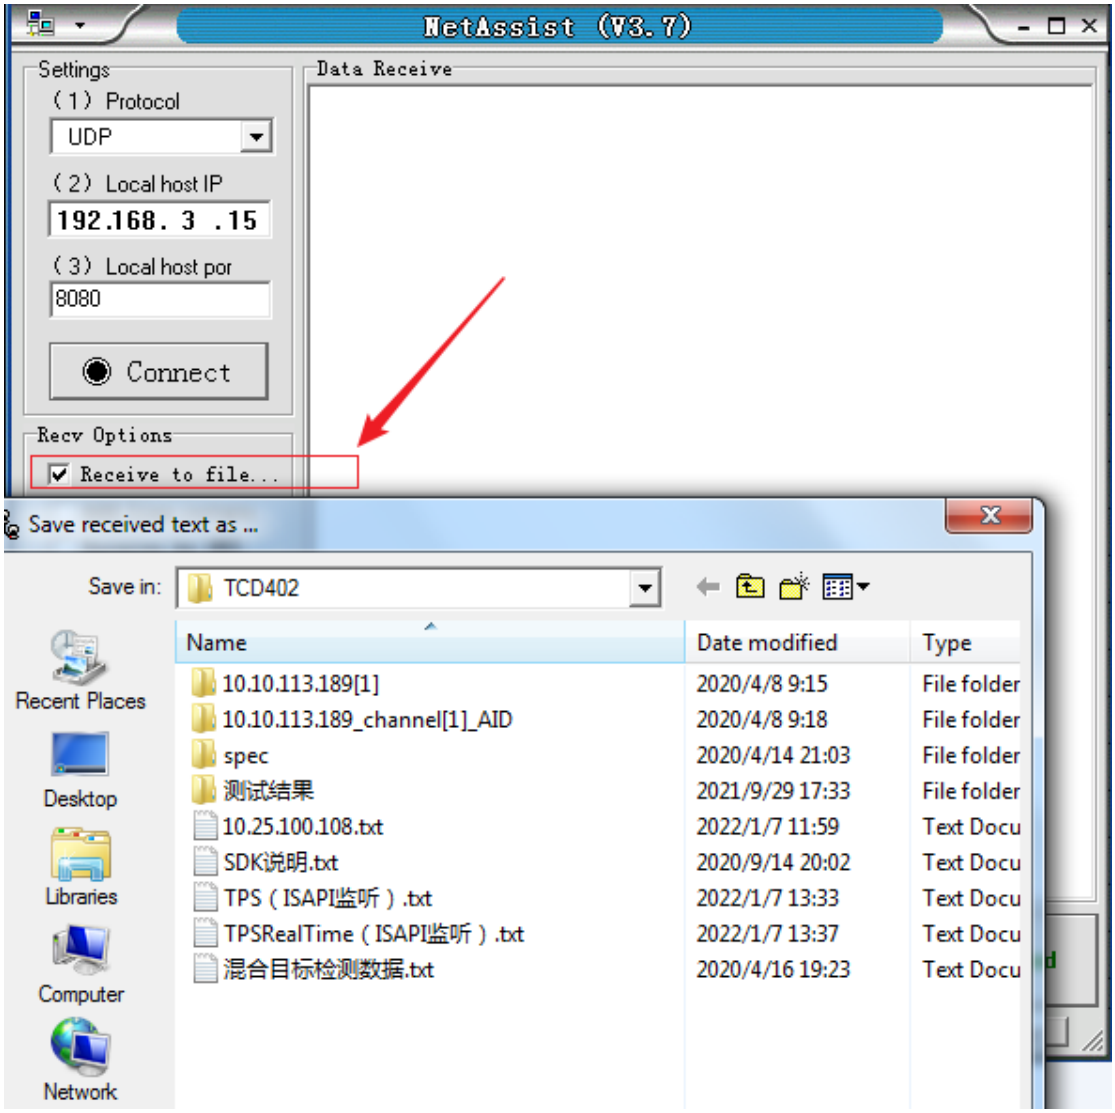
NetAssist (V3.7)
Settings
(1) Protocol
UDP
(2) Local host IP
192.168. 3 .15
(3) Local host por
8080
Connect
Recv Options
Receive to file...
Data Receive
Save received text as ...
Save in:
TCD402
Recent Places
Desktop
Libraries
Computer
Network
Name
Date modified
Type
10.10.113.189[1]
2020/4/8 9:15
File folder
10.10.113.189_channel[1]_AID
2020/4/8 9:18
File folder
spec
2020/4/14 21:03
File folder
测试结果
2021/9/29 17:33
File folder
10.25.100.108.txt
2022/1/7 11:59
Text Docu
SDK说明.txt
2020/9/14 20:02
Text Docu
TPS（ISAPI监听）.txt
2022/1/7 13:33
Text Docu
TPSRealTime（ISAPI监听）.txt
2022/1/7 13:37
Text Docu
混合目标检测数据.txt
2020/4/16 19:23
Text Docu