QUAKELOGIC

QUAKELOGIC


DOWNHOLE SEISMIC SOFTWARE

DOWNHOLE STUDIO

DOWNHOLE P- AND S-WAVE ANALYSIS


From raw SEG-2 records to reviewed picks, a validated velocity model, Vs30 and a professional report.


VERSION 1.0.0 · WINDOWS 10 / 11

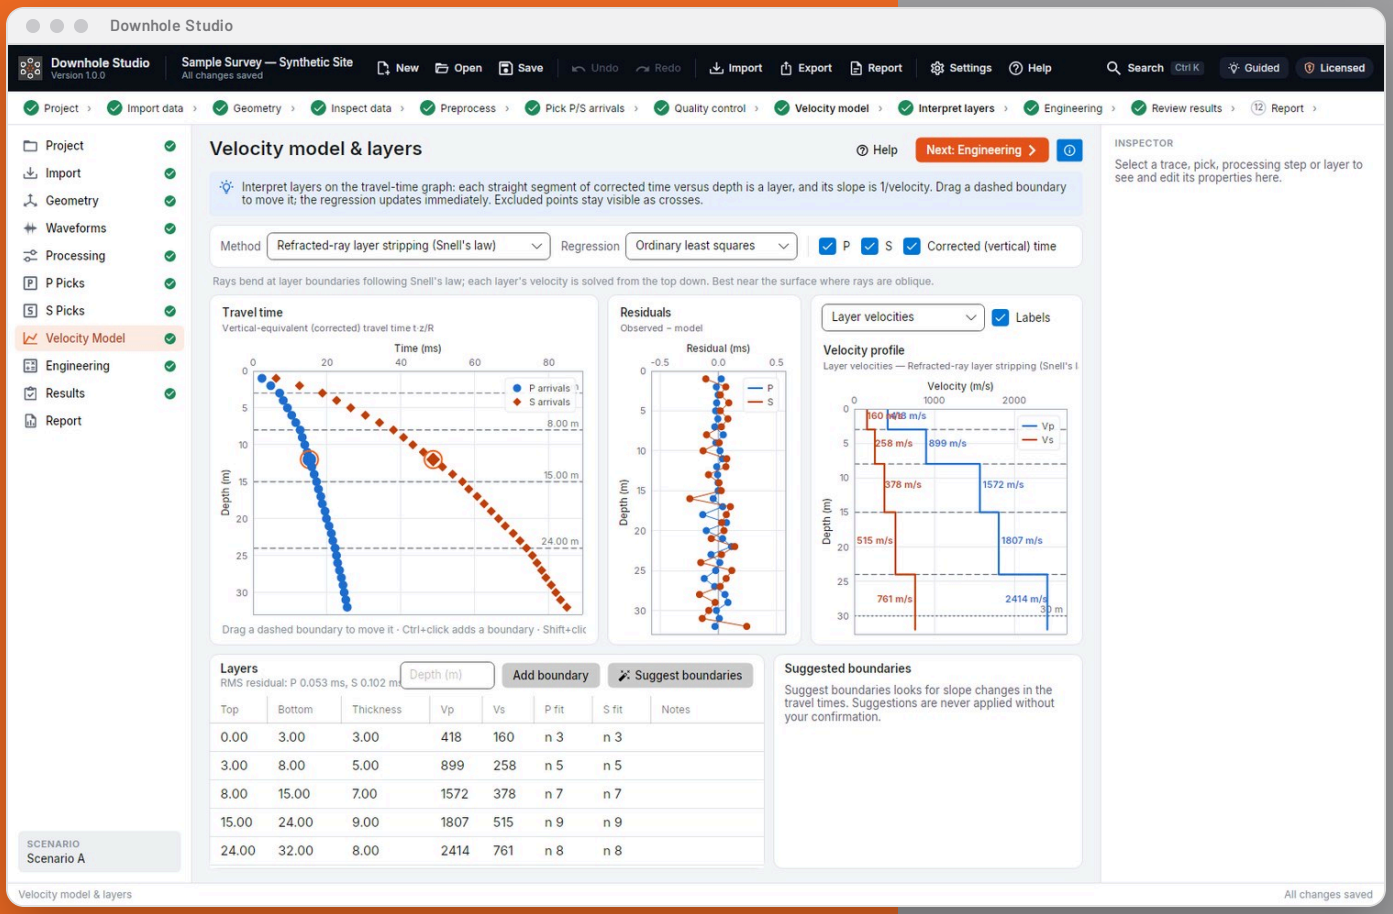


DOWNHOLE STUDIO

DOWNHOLE SEISMIC ANALYSIS SOFTWARE

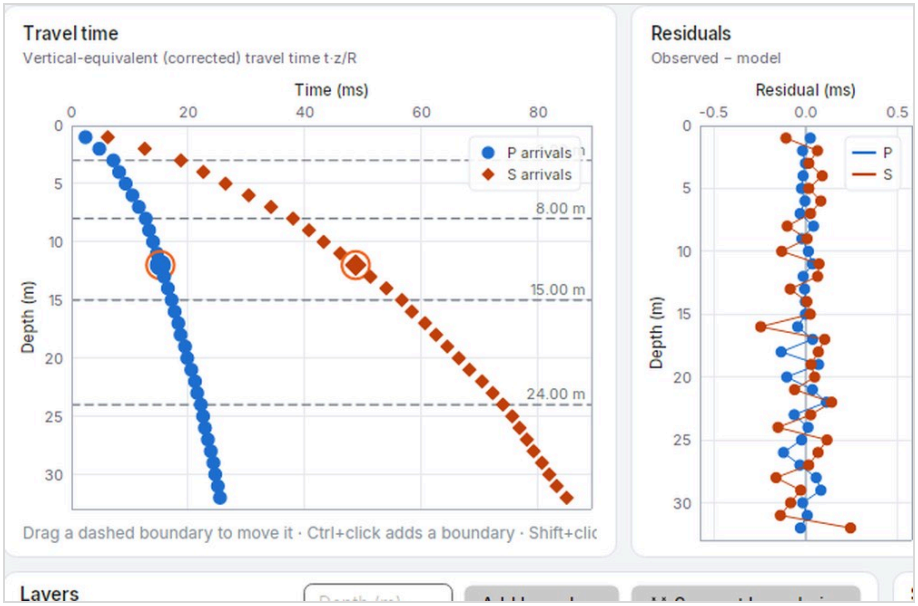

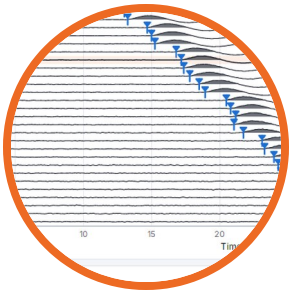

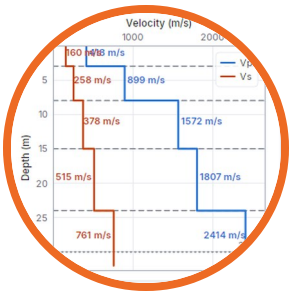

FROM FIELD RECORDS TO A DEFENSIBLE VS PROFILE

Downhole Studio is QuakeLogic's Windows application for downhole seismic testing. It takes SEG-2 records from a borehole survey through validated import, geometry, non-destructive processing and trigger correction, automatic and manual P and S picking, layer interpretation with four velocity methods, elastic moduli and Vs30, to quality control and a branded report. Raw data are never modified and every step is recorded.

- Validated import: every file is inspected before it is accepted, and corrections are applied only when the analyst approves them.
- Picks you can explain: each automatic pick carries a confidence score built from signal quality, sharpness and agreement.
- Honest results: density is never assumed, Vs30 is never silently extrapolated and invalid moduli are withheld and flagged.
- Client-ready output: branded PDF reports, full-precision Excel tables, figures and an audit record from one project file.

STANDARD FEATURES »

- SEG-2 import with validation
- Byte-exact raw data archive
- Channel profiles & geometry
- Live borehole diagram
- Non-destructive processing
- Butterworth & notch filters
- Reference trigger correction
- AIC, STA/LTA & MER pickers
- Explained pick confidence
- S+ / S− difference traces
- Polarization & rotation
- Four velocity methods
- Robust Huber regression
- Suggested layer boundaries
- Moduli with explicit density
- Vs30 & custom intervals
- Automatic quality control
- Branded PDF report
- Excel, CSV, PNG, SVG export
- Undo, snapshots, scenarios

QUAKELOGIC

KEY FEATURES

- Inspects every SEG-2 file before import — sample rates, missing channels, duplicates and depth order — and never repairs questionable data silently.
- Keeps the original records byte-for-byte with SHA-256 checksums; every processing step works on a copy and can be switched off, edited or undone.
- Corrects trigger delay and shot-to-shot jitter from reference-geophone onsets, keeping raw and corrected times side by side.
- Picks P and S arrivals with AIC, STA/LTA or modified energy ratio, and explains each confidence score: SNR, sharpness, agreement and consistency.
- Confirms shear arrivals with opposite-direction shots, (S+ – S–)/2 difference traces, polarization analysis and per-depth rotation, applied only on request.
- Builds the layer model with regression, pseudo-interval, true-interval or Snell's-law refracted-ray layer stripping, with draggable boundaries.
- Reports Poisson's ratio and moduli only with explicit density, and Vs30 from measured depth only — extrapolation is labelled everywhere.
- Produces a QuakeLogic-branded PDF report with methodology, QC, figures, tables and the full processing history, ready for review.

PRODUCT FEATURES

Data import
SEG-2 rev. 1, 16/32-bit integer and 32/64-bit float, either byte order; files or whole folders.

Geometry
Ground or collar depth reference; independent P and S offsets; depth assignment by order or file; channel profiles.

Processing & trigger
Mean/trend removal, taper, Butterworth and notch filters, AGC, balance, polarity, shifts, resampling; trigger correction.

Picking
AIC, STA/LTA, MER; confidence scores; keyboard-driven review; S+ / S– comparison; cross-correlation checks.

Velocity model
OLS or Huber layer regression, pseudo- and true-interval, refracted-ray stripping; BIC boundary suggestions.

Engineering
Vp/Vs, ν, G, E, K; measured, constant or labelled empirical density; Vs30 and custom intervals.

Outputs
Branded PDF report, Excel and CSV tables, PNG / SVG / PDF figures, JSON audit record, .dhsx project.

For more information about features, licensing and training for Downhole Studio, please contact QuakeLogic.

WORKFLOW — ONE PAGE PER STEP · THE NEXT BUTTON SHOWS THE WAY

PAGE	WHAT YOU DO
Project	Name the survey, job number and date; snapshots, scenarios and archive
Import	Drag SEG-2 files or folders; review the inspection before importing
Geometry	Borehole, P and S source offsets, depths and shot types, channel map
Waveforms	Inspect every trace raw or processed; gain, polarity, exclusions
Processing	Processing chains per component; reference onsets and trigger correction
P picks · S picks	Automatic picking, then review of every depth with explained confidence
Velocity model	Layer boundaries on the travel-time graph; choice of velocity method
Engineering	Density, elastic moduli, Vs30 and custom time-averaged intervals
Results	Quality verdict, findings with links, scenario comparison, history
Report	Client, site and branding; preview, PDF, Excel, CSV and figures

DATA, PROJECTS & OUTPUTS

ITEM	SUPPORTED
Seismic input	SEG-2 (.sg2, .seg2, .dat); integer and floating-point samples
Project file	.dhsx with original records, interpretation and history
Report	QuakeLogic-branded PDF, Letter or A4
Tables	Excel (.xlsx) at full precision and CSV
Figures	PNG at any pixel size, SVG, PDF; clipboard
Audit	JSON record of files, processing, picks, methods and version

HELP & SUPPORT BUILT IN

GUIDED MODE

Explains each page and recommends defaults; Expert mode shows every parameter. The project is identical in both.

BUILT-IN HELP

Press F1 on any page for its section of the user guide, including shortcuts, methods and troubleshooting.

SAMPLE PROJECT

A complete synthetic survey with a known answer: open it from the start screen to see every page with content.

QUAKELOGIC SUPPORT

Email support@quakelogic.net with the diagnostic package from Settings. Email response time: 3 business days.

TECHNICAL SPECIFICATIONS


SPECIFICATION	DESCRIPTION
Platform	Windows 10 (21H2+) or 11, 64-bit desktop
Memory / disk	8 GB RAM recommended; about 200 MB
Installation	Per-user setup, no administrator rights
Seismic format	SEG-2 revision 1, either byte order
Sample types	16/32-bit integer, 32/64-bit float
Not supported	20-bit packed (code 3), reported
Channel layout	Vertical, X, Y, reference; saved profiles
Depth reference	Ground surface or collar with stick-up
Filters	Butterworth HP / LP / BP, notch; causal or zero-phase
Other steps	Detrend, taper, AGC, balance, shift, resample
Trigger	Subtract reference onset or align to median
Pickers	AIC, STA/LTA, modified energy ratio
S-wave tools	S+ / S– difference, stacking, rotation
Correlation	Opposite shots and adjacent depths

SPECIFICATION	DESCRIPTION
Ray geometry	Straight-ray correction or Snell's law
Velocity methods	Layer regression, pseudo- and true-interval, refracted-ray
Regression	Ordinary least squares or Huber (robust)
Layer suggestion	Piecewise-linear segmentation, BIC
Elastic properties	Vp/Vs, ν, G, E, K per layer
Density	Measured, constant, Gardner or Brocher
Vs30	Measured depth only; extrapolation labelled
Quality control	Automatic checks; Good / Review / Incomplete
Report	Branded PDF with processing history
Exports	XLSX, CSV, PNG, SVG, PDF, JSON audit
Editing	Undo / redo, snapshots, scenarios
Safety	Atomic save, backup copy, recovery
Licensing	Per computer; offline activation key, no internet needed
Validation	87 / 87 checks; Vs30 within 0.2–1.2 %

Licensing: per-computer licences, activated offline with a computer code and an activation key from QuakeLogic; no internet connection is ever needed. Without an active licence, projects still open read-only and are never modified. Downhole Studio supports the established downhole workflow described in ASTM D7400/D7400M but does not certify compliance with any standard; results require professional review.


PRODUCT GALLERY

Screenshots show Downhole Studio 1.0.0 with the bundled sample project, a synthetic survey with a known answer; they are product illustrations, not a site interpretation.

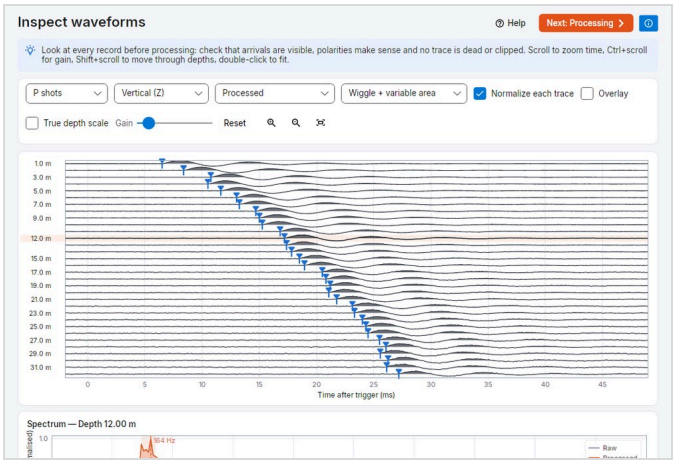

WAVEFORMS

Every trace at every depth with picks, gain and the trace inspector.

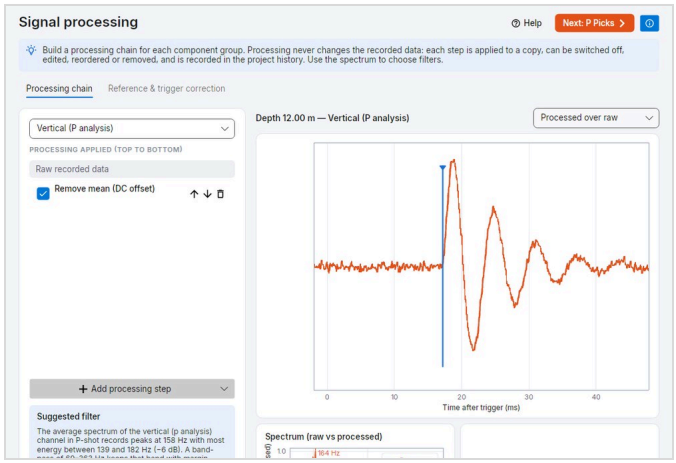


PROCESSING

Per-component chain, processed over raw, spectrum and filter suggestion.




P PICKS

Automatic picks reviewed depth by depth, with a travel-time preview.

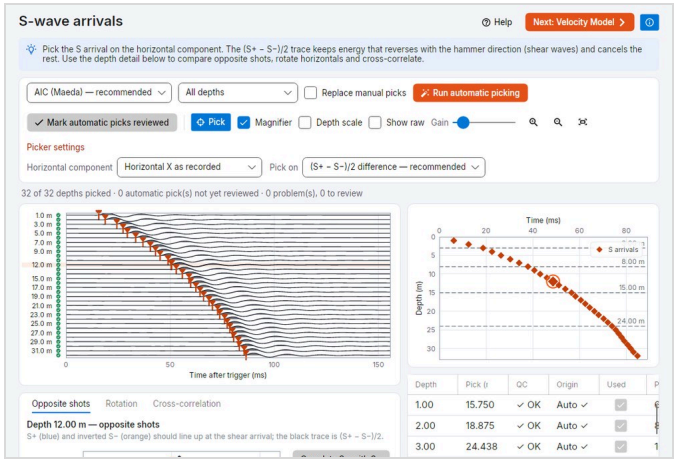


S PICKS

S+ and inverted S− compared at the selected depth before accepting.

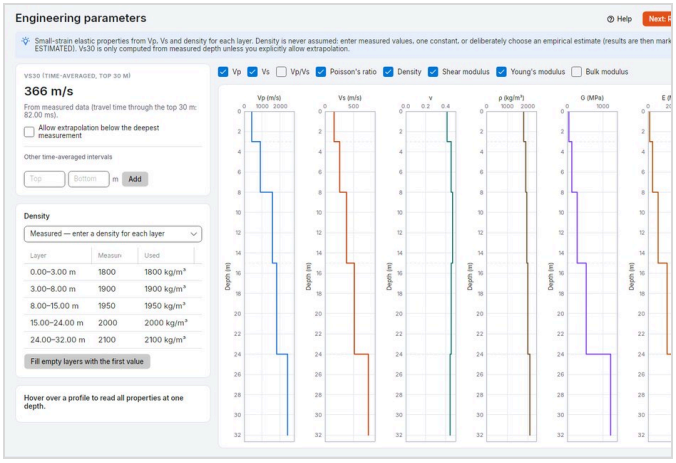

ENGINEERING

Vs30 from measured data and elastic property profiles per layer.

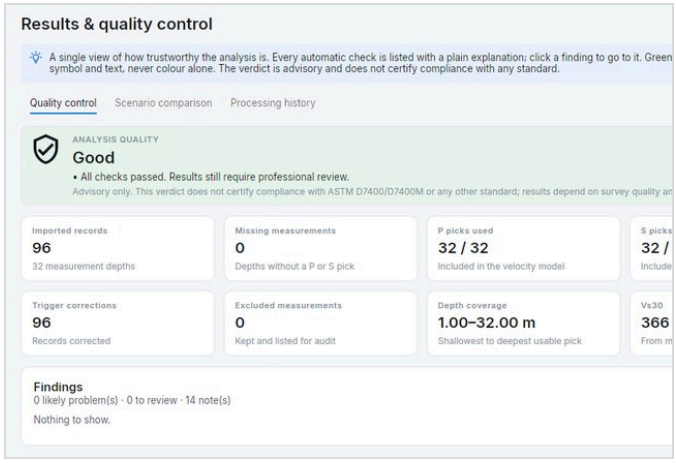

QUALITY CONTROL

A plain-language verdict with findings linked to depths and layers.

QUAKELOGIC

USER GUIDE

Downhole Studio user guide

VERSION 1.0.0 · ALSO IN THE APPLICATION: PRESS F1

This guide follows a survey from raw SEG-2 files to a finished report. The same text, organised by page, is available inside the application: press **F1** or click **?** on any page.

1. Installing and starting

Requirements: 64-bit Windows 10 (21H2 or later; 22H2 recommended) or Windows 11, 8 GB RAM recommended, 1 GB of free disk space for the program plus room for projects.

1. Run `DownholeStudio-Setup.exe`. By default the program is installed for the current user only, so no administrator rights are needed. An administrator can choose *Install for all users* instead.
2. If Windows SmartScreen shows *Windows protected your PC*, click **More info → Run anyway**. This happens with builds that are not Authenticode-signed.
3. Optional setup tasks are a desktop shortcut and opening `.dhsx` project files with Downhole Studio.
4. Start **Downhole Studio** from the Start menu. The first time, the activation window opens (see section 15). The start screen offers **New Project**, **Open Project**, **Import Survey**, **Explore Sample Project** and recent projects.

The sample project is a complete worked survey. It contains 32 depths, P and opposite-direction S shots and a reference geophone. All of its data is synthetic and its true answer is known. It is the quickest way to see every page with real content.

Uninstalling (Settings → Apps) removes the program. It never removes your projects or your settings and licence, which are in `%LOCALAPPDATA%\QuakeLogic\Downhole Studio`.

2. The workspace

- The **workflow strip** at the top lists the twelve steps: Project, Import, Geometry, Waveforms, Processing, P Picks, S Picks, Velocity Model, Engineering, Results, Report. Each step shows its status: done, needs attention, or not started. Nothing is locked, so you can move between pages in any order.
- **Guided / Expert** (top bar): Guided mode explains each page and recommends defaults. Expert mode shows every parameter. The project is identical in both modes.
- The **inspector** on the right edits whatever is selected: a trace, a processing step, a pick, a layer.
- **Ctrl+K** opens the command palette, which searches every command and page.
- **Undo/redo** (Ctrl+Z / Ctrl+Y) covers every change to the project, including geometry, processing, picks, layers and report settings.
- Notifications appear briefly at the bottom right.

The analysis recalculates automatically after every change. You never need to "run" the velocity model or the QC.

3. Projects, snapshots and scenarios

A project file (`.dhsx`) holds:

- the original records byte-for-byte, with SHA-256 checksums, and the decoded samples;
- geometry, processing, picks, layers and report settings;
- an append-only history of every change.

Saving is atomic. The file is first written to a temporary copy and verified. Only then does it replace the previous file, which is kept as `name.dhsx.bak`. Every few minutes a recovery copy is written to your local application data, and after an unexpected shutdown Downhole Studio offers to restore it. Recovery copies never overwrite your project file.

- **Snapshots** store the complete interpretation at a moment in time inside the project. Restoring a snapshot is itself an undoable edit.
- **Scenarios** are alternative interpretations of the same raw data, for example manual versus automatic picks, or two filter settings. Compare them on the Results page.
- **Duplicate** writes an independent copy with a new project identity.
- **Archive** creates a ZIP containing the saved project, a machine-readable audit record and the result tables.

Projects are saved where you choose. The default folder is `Documents\Downhole Studio`. Projects never leave your computer.

4. Import

Drag SEG-2 files or a whole folder onto the Import page, or use **Add files / Add folder** (Ctrl+I).

Supported formats: SEG-2 revision 1 in either byte order, with 16-bit or 32-bit integer or 32/64-bit floating-point samples. The 20-bit packed format (data code 3) is reported as unsupported rather than decoded by guesswork. Export such files as 32-bit from the acquisition software.

Every file is inspected before anything is imported. The preview lists:


- sample count and interval;
- trace count and channel numbers;
- recording date and time;
- any depth or shot type that can be read from the file's keywords or file name.

Problems are listed as **Errors**, **Warnings** or **Information**. Examples are mixed sample rates, missing channels, unreadable files, duplicate files, duplicate depths and an acquisition order that does not match the recording times.

Nothing is repaired silently. Corrections such as skipping duplicate files, ordering records by recording time or using the suggested depths are applied only when you tick them. Files with errors are not imported.

5. Geometry and channels

- **Depth reference:** depths can be measured below the ground surface or below the top of casing (collar). With a collar reference, depths are converted using the collar height.
- **Sources:** P and S sources have independent horizontal offsets (distance from the borehole axis) and depths.
- **Depth assignment:** depths can be assigned in three ways:
  - by acquisition order: first depth, increment, top-down or bottom-up, and the shot pattern per depth (for example P, S+, S−);
  - from the suggestions read from the files;
  - one record at a time in the table.

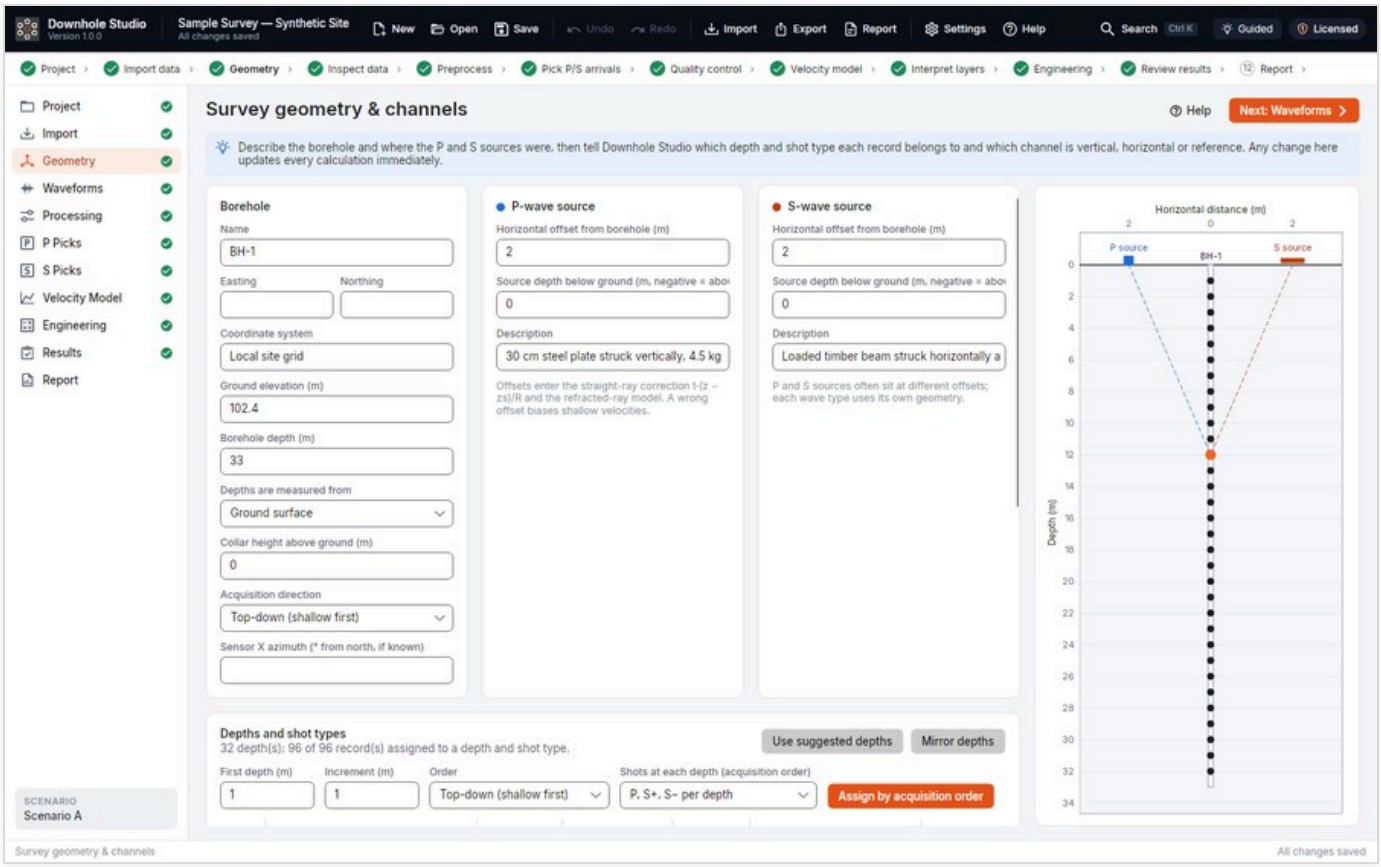


GEOMETRY PAGE: BOREHOLE, INDEPENDENT P AND S SOURCES, DEPTH ASSIGNMENT AND THE LIVE BOREHOLE DIAGRAM

Mirror depths fixes a survey that was assigned in the wrong direction.

- **Channels:** map each channel to Vertical, Horizontal X, Horizontal Y or Reference. Built-in profiles, such as *QuakeLogic 3C Borehole*, apply a known layout, and you can save your own instruments as profiles. **Reverse polarity** corrects a sensor that was wired backwards.
- The **borehole diagram** shows the receivers, sources and layers to scale and updates as you type.

6. Waveforms

ACTION	MOUSE / KEY
Zoom time around the cursor	Mouse wheel
Amplitude gain	Ctrl + wheel
Scroll through depths	Shift + wheel
Show more / fewer traces	Alt + wheel
Pan	Right-drag or Shift-drag
Fit everything	Double-click

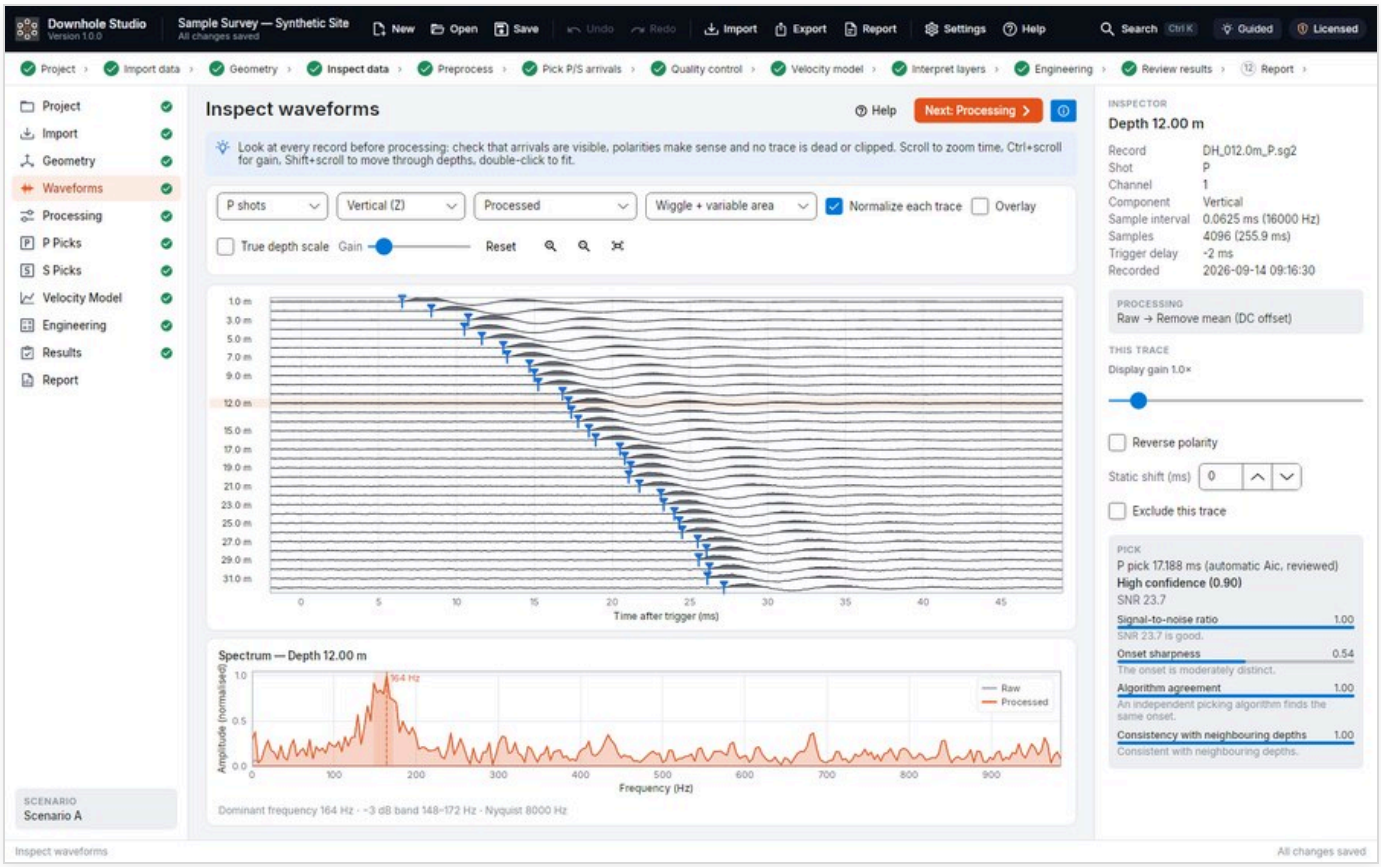

WAVEFORM VIEWER WITH P PICKS, THE TRACE INSPECTOR AND THE SPECTRUM OF THE SELECTED TRACE

Display options:


- wiggle, variable area, or both;
- each trace normalised to its own peak, or all traces to a common peak;
- stacked or overlaid traces;
- traces evenly spaced, or placed on a true depth scale.

The **Raw / Processed / Processed over raw** switch shows exactly which data you are looking at. The spectrum below the traces shows the dominant frequency and the −3 dB band of the selected trace, raw versus processed.

Hover over a trace to see its depth, channel, component, sample interval, amplitude, time, pick, SNR and QC status. Click a trace to select it. The inspector then edits its gain, polarity and static shift, or excludes it. Excluded traces stay in the project and are listed in the report.

7. Processing and trigger correction

The vertical, horizontal and reference components each have their own processing chain. Steps are applied in order to a copy of the raw samples. Each step can be switched off, edited in the inspector, moved or removed. Every change is recorded in the history and can be undone. **The raw data is never modified.**

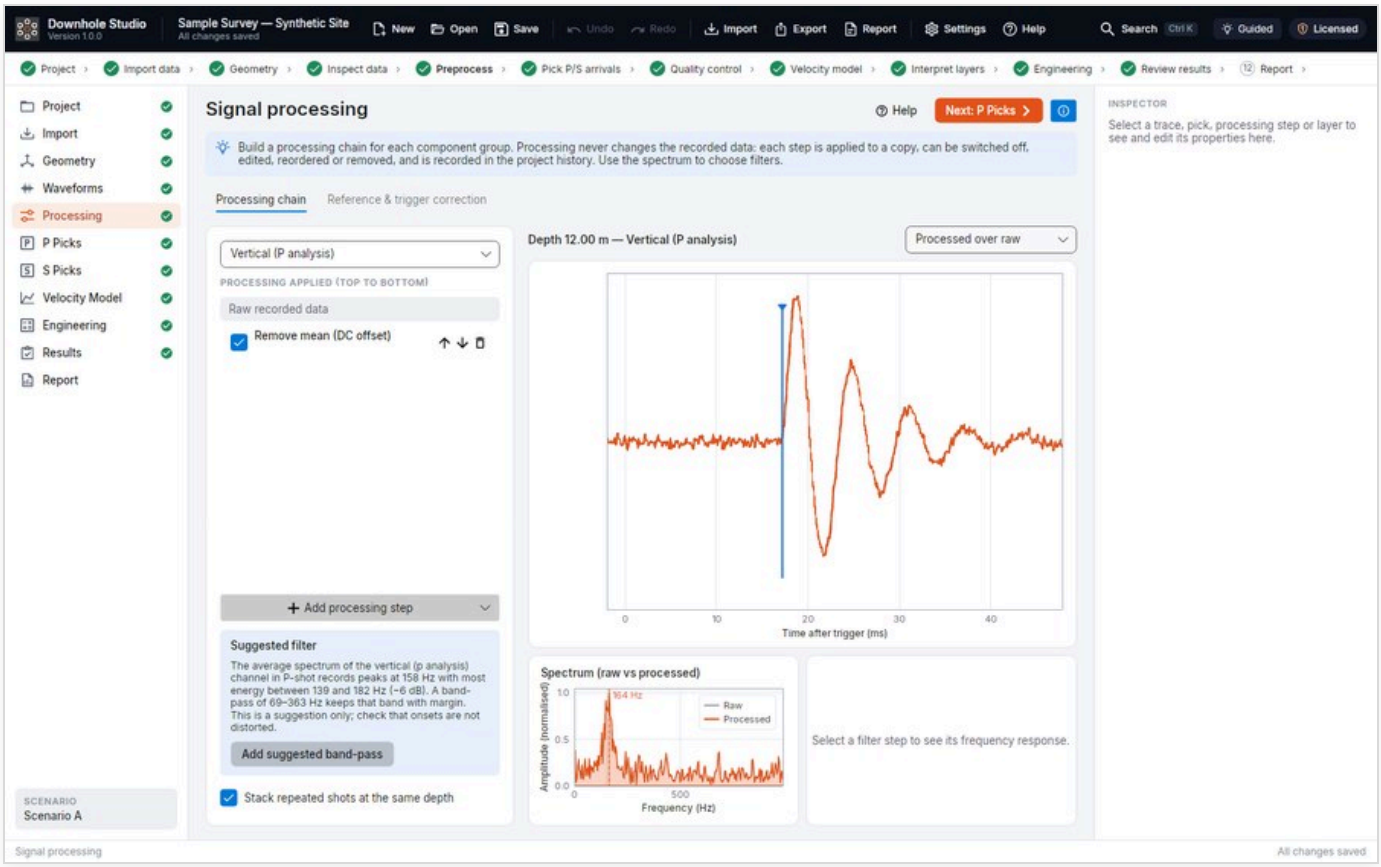

PROCESSING CHAIN FOR THE VERTICAL COMPONENT WITH PROCESSED-OVER-RAW PREVIEW AND A FILTER SUGGESTION

Available steps:

- mean or trend removal;
- taper;
- Butterworth high-pass, low-pass and band-pass, of any order, causal or zero-phase;
- notch;
- normalisation, trace balance and AGC;
- polarity reversal;
- time shift;
- anti-aliased resampling.

> **Picking advice.** Zero-phase filters do not shift the waveform, but they are acausal: energy can appear slightly *before* a sharp onset. Causal filters delay the waveform. For first-break picking keep processing light and compare with the raw trace.

The **suggested band-pass** is computed from the average spectrum. It is only a suggestion and is added to a chain only when you click it.


Trigger correction. If the survey has a reference (spy) geophone:

1. Pick its onset for every record, automatically or by hand.
2. Choose a correction:
   - **Subtract reference onset:** times are measured from the moment the source was struck. This removes both a constant trigger delay and shot-to-shot jitter.
   - **Align to median:** removes shot-to-shot jitter only.

Raw times are always kept next to corrected times. QC flags records whose reference onset deviates from the expected time.

8. P picks

Run the **automatic picker**, then review every depth.

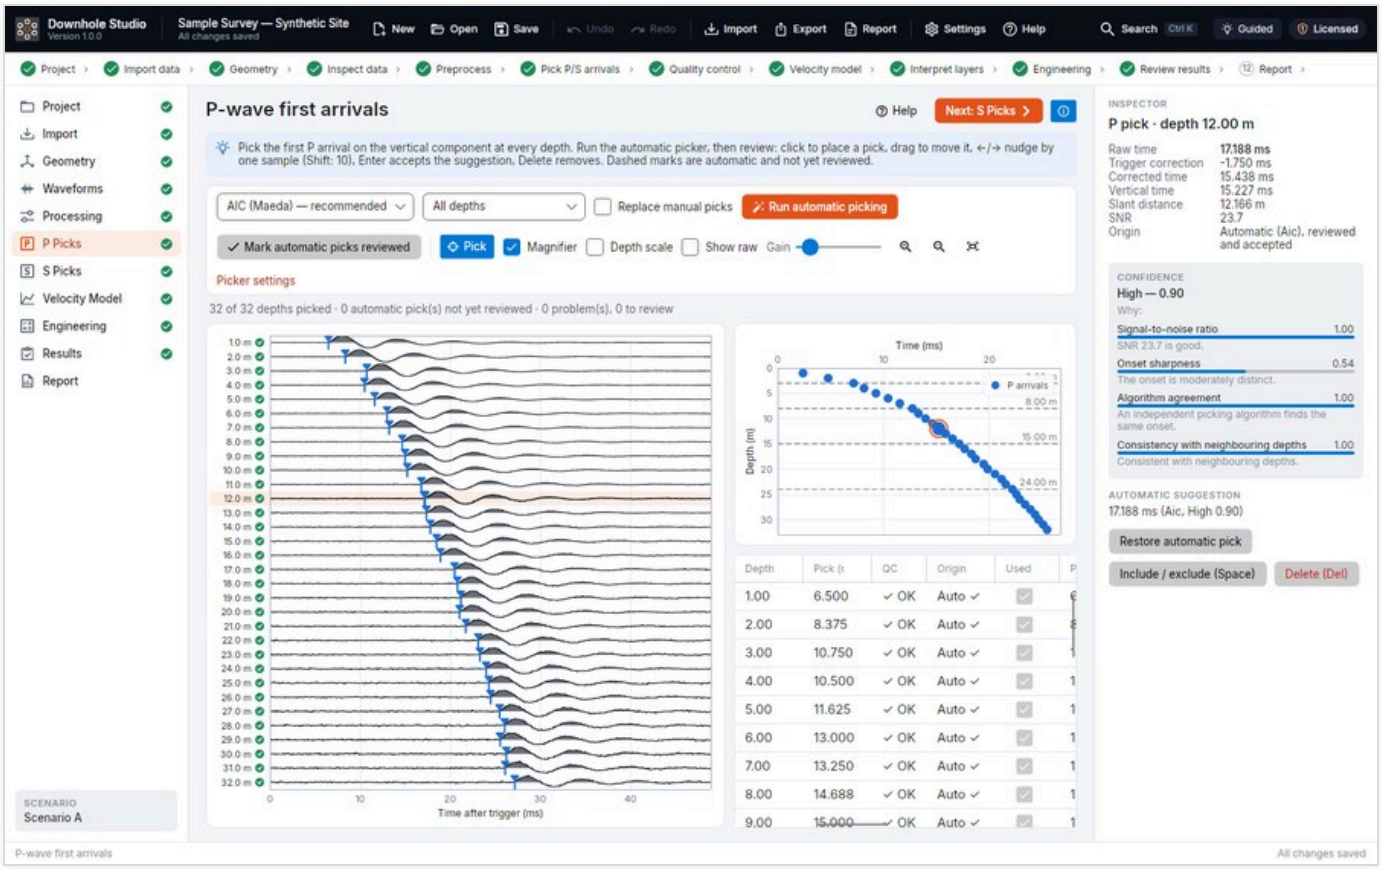

P-WAVE PICKING: THE INSPECTOR EXPLAINS THE CONFIDENCE OF THE SELECTED PICK

ACTION	MOUSE / KEY
Place a pick	Click
Move a pick	Drag, or ← / → (one sample), Shift + ← / → (ten samples)
Snap to the automatic suggestion	Alt + click, or Enter
Select without picking	Ctrl + click
Previous / next depth	↑ / ↓
Remove pick	Delete
Include / exclude pick	Space

Algorithms:

- **AIC** (Maeda, 1985) finds the point that best splits the window into noise and signal.
- **STA/LTA** detects a rise of short-term over long-term energy.
- **Modified energy ratio** (Han et al., 2009) sharpens that rise.

Each automatic pick has a **confidence score** built from five factors, and the inspector explains why a pick scored low:

- signal-to-noise ratio;
- onset sharpness;
- agreement between algorithms;
- consistency with neighbouring depths;
- for S, agreement between opposite shots.


Pick markers:

- Solid marks are manual or reviewed picks.
- Dashed marks are automatic picks not yet reviewed.
- A hollow violet mark is an automatic suggestion that differs from your manual pick.

Re-running the picker never overwrites manual picks unless you ask it to. The pick table shows every time at full precision. Typing in it changes a pick only when you actually edit the value.

9. S picks

S waves are recorded on the horizontal components, with the source struck in opposite directions (S+ and S−). A shear wave reverses polarity with the source direction; P energy and noise common to both shots do not. The half-difference **(S+ − S−)/2** therefore keeps the shear wave and cancels the rest.

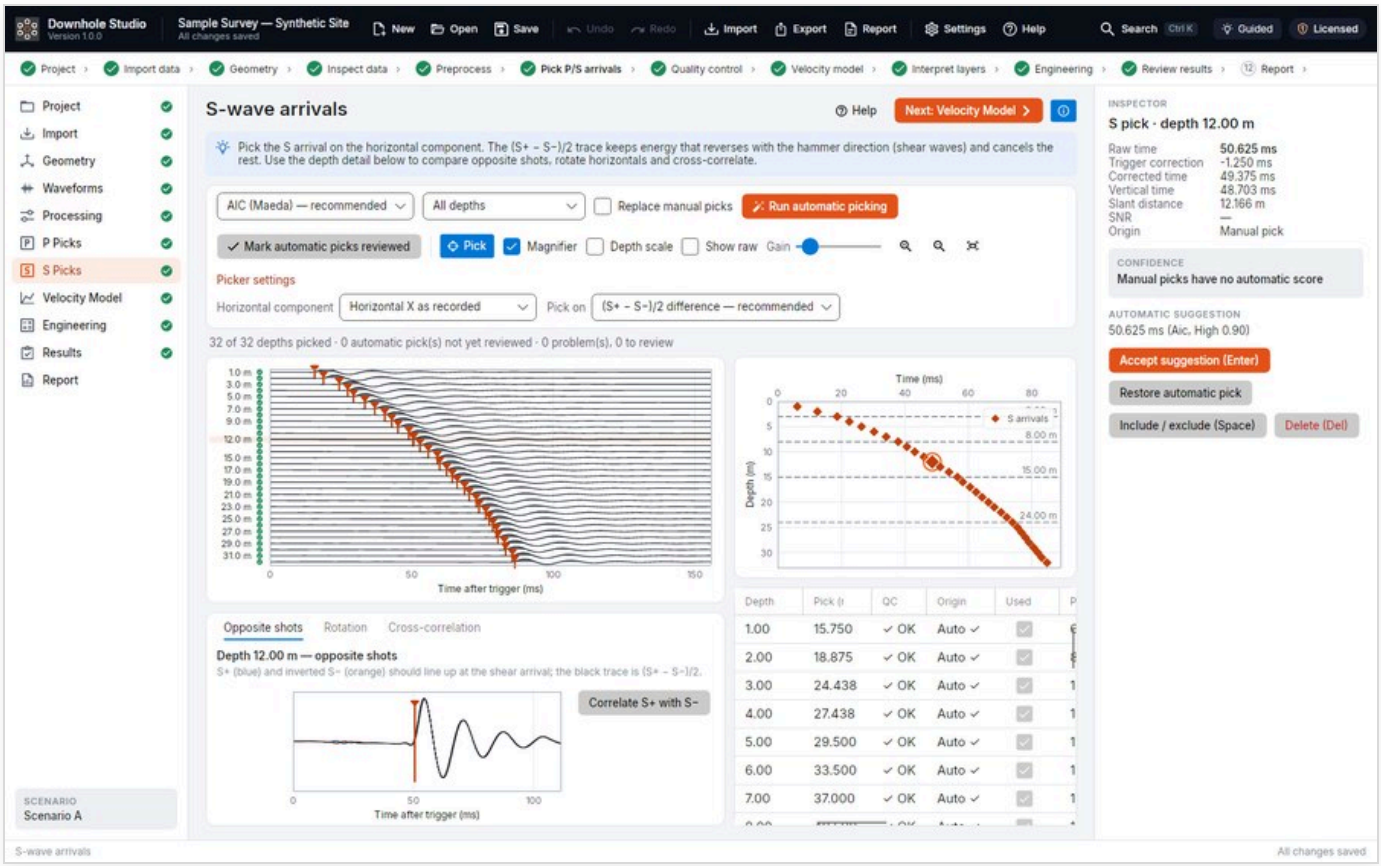


S-WAVE PICKING WITH THE S+ / INVERTED S- COMPARISON AT THE SELECTED DEPTH

- The **depth detail** overlays S+ and the inverted S−. Where they line up, the energy is shear.
- **Correlate opposite shots** checks this numerically: a strongly negative correlation is expected.

- **Rotation.** The probe can rotate between depths. **Analyse** finds the horizontal direction with the most energy in a window around the S arrival, using covariance polarization; the hodogram shows the particle motion. The rotation is applied only when you click **Apply**, and the angle is recorded and reported.
- **Correlate adjacent depth** proposes an arrival from the waveform shift relative to the nearest picked depth. Picks made this way are recorded as coming from cross-correlation.
- **Stack repeated shots** averages repeated records at the same depth and shot direction before picking.

10. Velocity model

Methods:

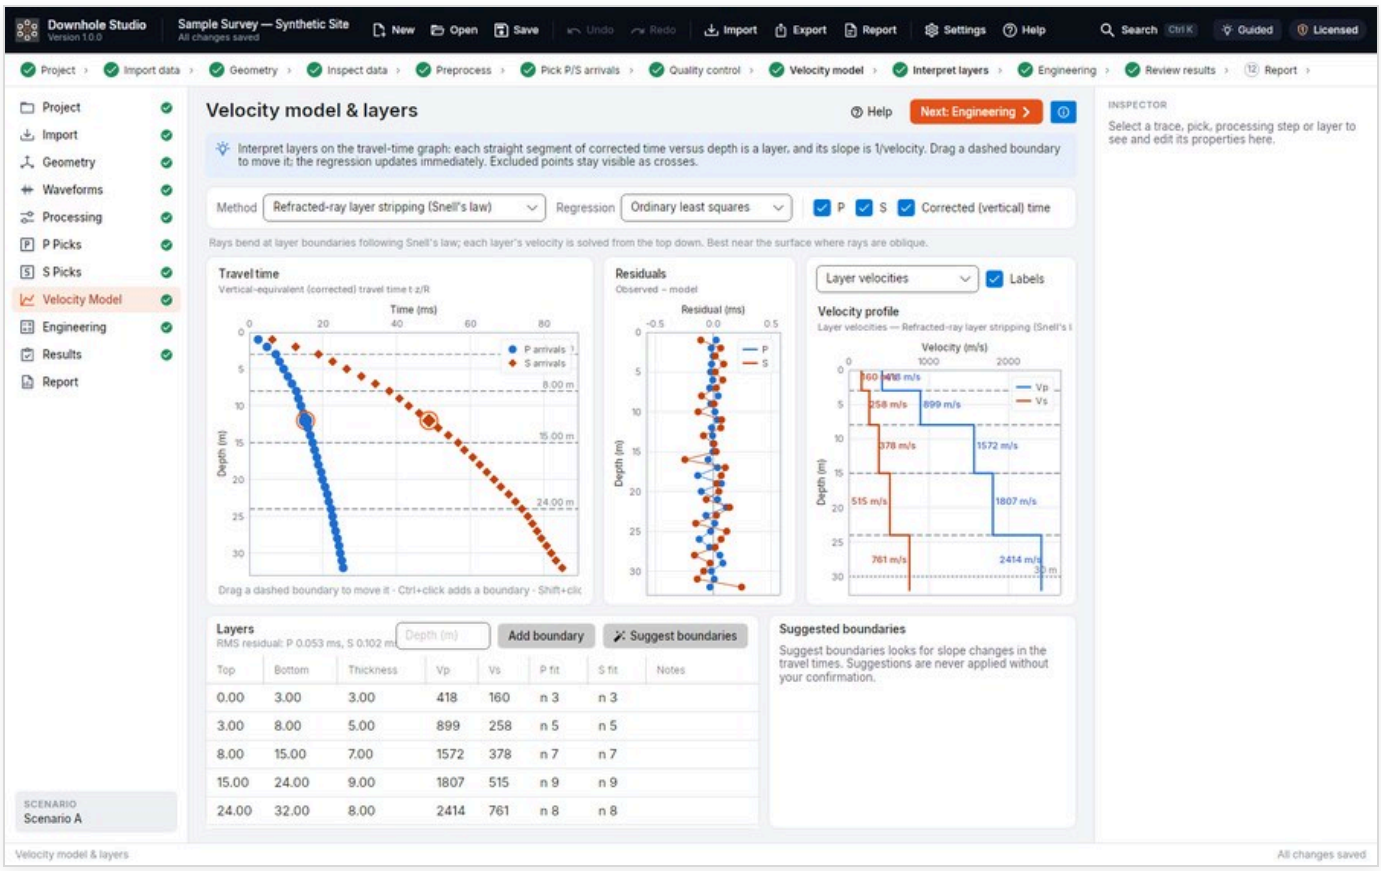

TRAVEL-TIME GRAPH WITH LAYER BOUNDARIES, RESIDUALS AND THE VP / VS PROFILE

- **Layer regression** fits $t_v = a + z/V$ to the corrected travel times inside each layer, with $t_v = t - (z - z_s)/R$ and $R = \sqrt{((z - z_s)^2 + x^2)}$. It can use ordinary least squares or robust **Huber** regression, which down-weights outliers without deleting them.
- **Refracted-ray layer stripping** traces Snell's-law rays through the layers and solves each layer's velocity from the top down. It is the most accurate method near the surface, where rays are oblique.
- **Pseudo-interval** ($\Delta z/\Delta t_v$) and **true interval** ($\Delta R/\Delta t$) velocities between adjacent receivers. Both assume straight rays. True-interval velocities are biased below slower layers, where rays bend.

Layers:


- **Add a boundary** by typing a depth, by Ctrl-clicking on the travel-time graph, or with **Suggest**. Suggest uses a piecewise-linear segmentation with a BIC penalty and requires at least a 15% velocity contrast between layers. Treat its result as a starting point, and prefer boundaries from the boring log where one exists.
- **Drag** a dashed boundary to move it; the regression updates immediately.

- **Merge, split or delete** layers from the layer inspector.
- **Points:** click a point to select its depth. Shift-click excludes or includes it. Excluded points remain visible as crosses and are listed in the report.

The residual plot shows how well each layer's line fits its points. Residual QC runs only after layers have been interpreted.

11. Engineering parameters and Vs30

PARAMETER	EQUATION
Poisson's ratio	$\nu = (Vp^2 - 2Vs^2) / (2(Vp^2 - Vs^2))$
Shear modulus	$G = \rho Vs^2$
Young's modulus	$E = 2G(1 + \nu)$
Bulk modulus	$K = \rho(Vp^2 - 4Vs^2/3)$

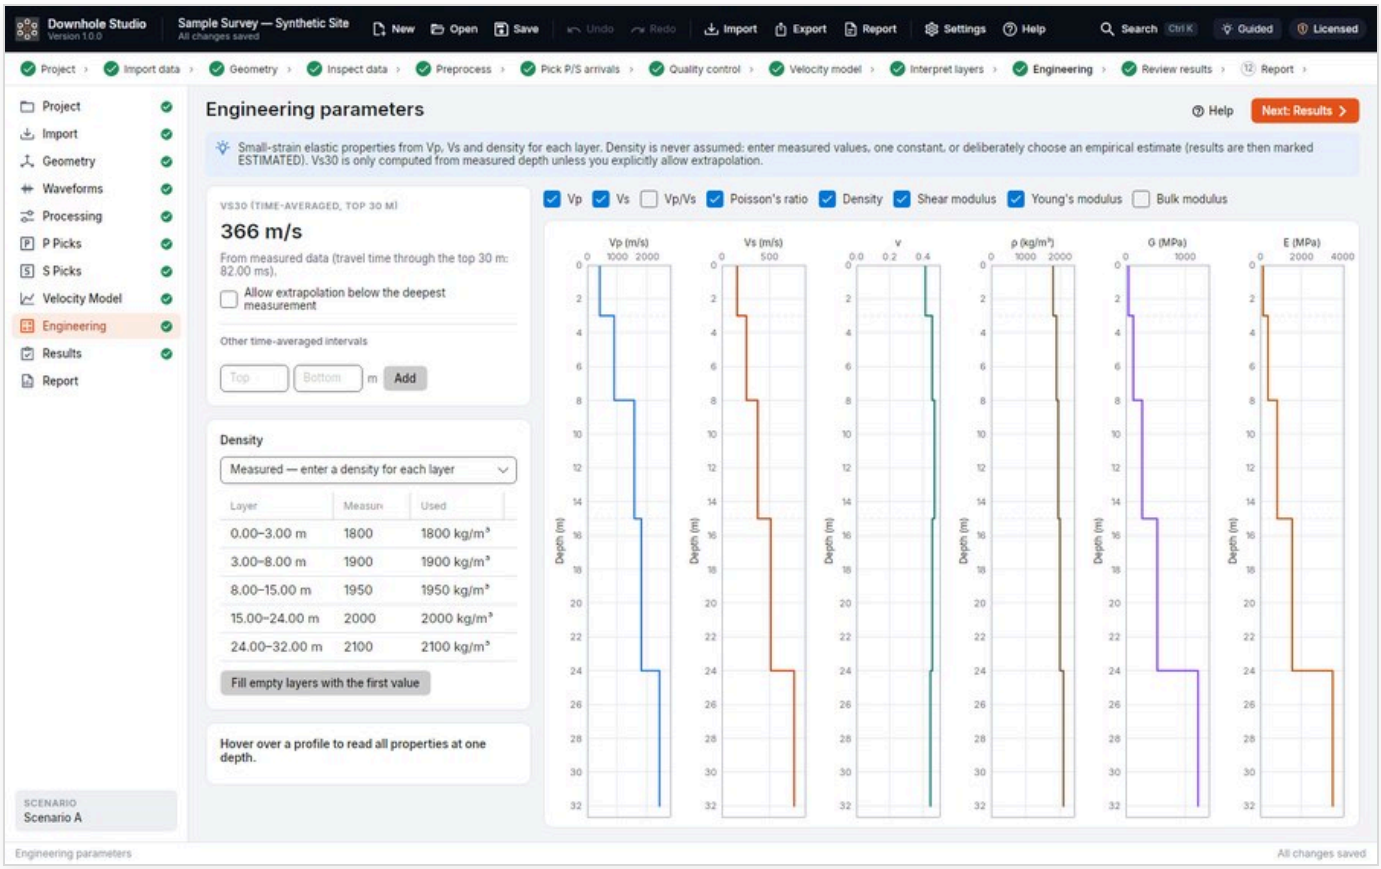

VS30 FROM MEASURED DATA, DENSITY PER LAYER AND PROPERTY PROFILES

Values that are physically inconsistent, for example Vs ≥ Vp or a negative modulus, are **withheld and flagged**, never silently corrected.

Density is never assumed. You can:


- enter measured values per layer;
- enter one constant value; or
- explicitly choose an empirical estimate from Vp (Gardner, 1974, or Brocher, 2005).

Estimated densities, and the moduli derived from them, are labelled **ESTIMATED**. Both empirical relations were developed for rocks.

Vs30 = 30 / Σ(h_i/Vs_i) over the top 30 m. If the S measurements do not reach 30 m, Downhole Studio reports *Insufficient measured depth for direct Vs30 calculation*. You may allow extrapolation, which extends the deepest layer. The value is then labelled **EXTRAPOLATED** everywhere, including in the report. Add custom intervals to obtain other time-averaged velocities.

12. Results and quality control

The automatic checks flag:

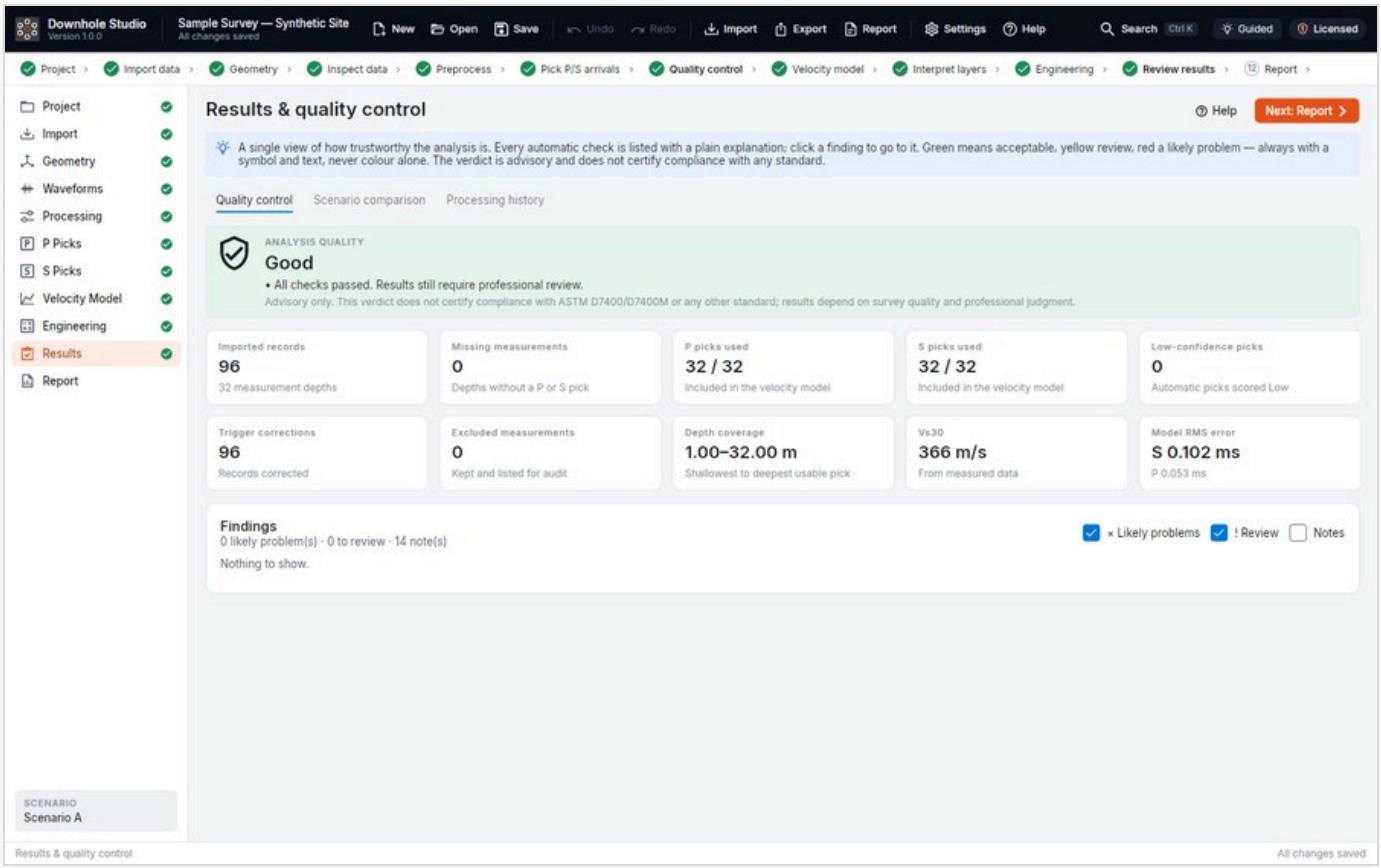

ANALYSIS QUALITY VERDICT, SUMMARY CARDS AND FINDINGS

- low SNR and emergent onsets;
- large residuals and unusual velocity jumps;
- arrivals that get earlier with depth;
- poor or missing opposite-polarity confirmation;
- energy on an unexpected component;
- trigger timing problems;
- poor regressions;
- invalid elastic properties.


Each finding has a plain-language explanation. Click it to go to the depth, record or layer concerned.

The **analysis quality** is one of *Good*, *Review recommended* or *Incomplete*, and the page explains why. It is advisory. It does **not** certify compliance with ASTM D7400/D7400M or any other standard. Results depend on survey quality and professional judgment.

Scenario comparison puts the layer velocities and Vs30 of two scenarios side by side.

13. Reports and exports

The **PDF report** can contain the following sections; choose which to include:

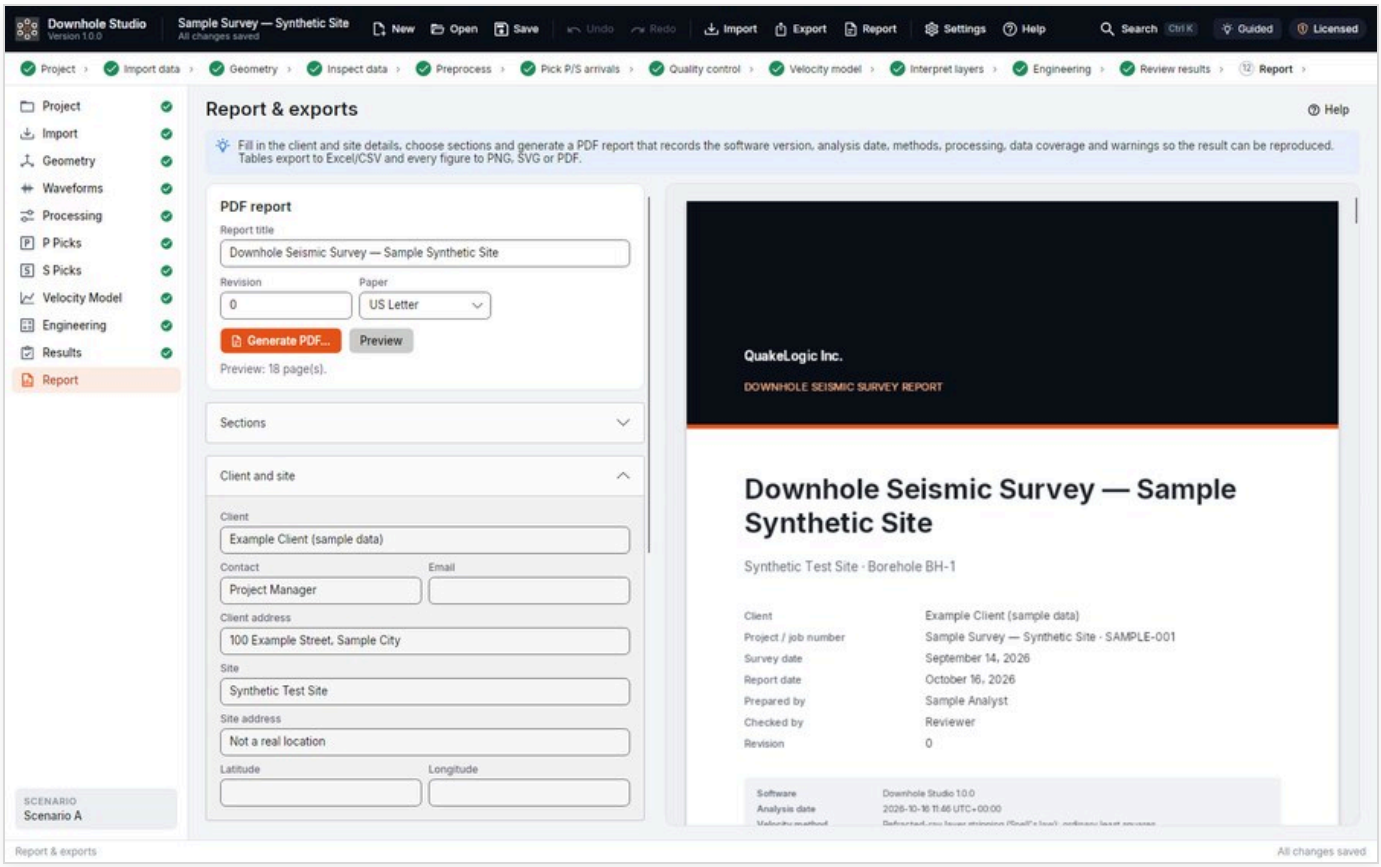

REPORT PAGE WITH THE LIVE PAGE-BY-PAGE PREVIEW

- cover page;
- project, client and site information;
- survey configuration and instruments;
- geometry;
- processing methodology;
- quality control;
- P and S analysis and travel-time curves;
- velocity profiles and the layer model;
- engineering parameters and Vs30;
- notes, warnings and conclusions;
- appendices with the pick table and the full processing history.

Every report records the software version, analysis date, velocity method, processing settings, data coverage, warnings and the user, so it can be reproduced.

Branding covers your company name, logo, contact details, footer, engineer and registration. Save it as a template to reuse it in other projects. Choose Letter or A4 paper in Settings.

Exports:

- all tables to **Excel**, at full precision with nothing rounded;
- individual tables to **CSV**;
- figures to **PNG** (any pixel size), **SVG** or **PDF**, with a white or transparent background, or to the **clipboard**;
- an **audit record** (JSON) listing the imported files with checksums, the processing, the picks and their origin, the exclusions, the methods and the software version.

14. Settings, updates and diagnostics

- **General:**
  - your name, which is recorded in the project history and reports;
  - the recovery-copy interval;
  - theme (light, dark or system);
  - display units. Calculations always use SI units at full precision; units change only how values are shown and exported.
- **Defaults:**
  - default P and S pickers;
  - new projects start with mean removal only. Filters are never applied automatically.
- **Updates:**
  - choose whether to check automatically, and the stable or beta channel;
  - **Check for updates now**.

Updates are signed by QuakeLogic. Each installer is verified against its signed checksum before it is run, and a failed check deletes the download. Updates never change your projects.

- **Diagnostics: Export diagnostic package...** creates a ZIP for QuakeLogic support. It contains system information, settings, logs with personal details redacted, and crash reports. Projects are included only if you choose them.

15. Licensing and privacy

- **Per computer, activated offline.** No internet connection is needed, ever.
- **To activate:**
  - The activation window (also Settings → License) shows this computer's code: five groups of five characters, e.g. `7K3M9-QPZX2-AB4HV-N0R5T-W8YCD`.
  - Select **Copy Code**, or **E-mail to QuakeLogic** to open a pre-filled e-mail. Send the code with your company name and order number.
  - QuakeLogic replies with an activation key for this computer, and an activation file (`.dhslic`).
  - Paste the whole key (it starts with `dhs1.`) and select **Activate**, or select **Open Activation File...**.
- **The key works only on that computer.** The code stays the same when Downhole Studio is reinstalled or updated. After replacing the computer or reinstalling Windows, request a new key.
- **Licence end dates:** if your licence has an end date, it is shown in Settings → License. Setting the computer's clock back does not extend it.
- **Moving to another computer:** use **Settings → License → Remove Activation from This Computer**, then send the new computer's code to QuakeLogic.
- **Without an activation**, projects can still be opened and viewed read-only. Licence problems never delete or modify project files.
- **Privacy:** survey data never leaves your computer. The computer code contains no personal or project data, Downhole Studio makes no network connections for licensing, and it does not collect usage telemetry.

16. Keyboard shortcuts

SHORTCUT	COMMAND
Ctrl+N / Ctrl+O	New / open project
Ctrl+S / Ctrl+Shift+S	Save / save as
Ctrl+Z / Ctrl+Y	Undo / redo
Ctrl+I	Import
Ctrl+R	Generate report
Ctrl+K	Command palette
F1	Help

The shortcuts for the waveform and picking pages are in sections 6 and 8.

17. Troubleshooting

SYMPTOM	WHAT TO DO
Windows protected your PC when installing	The installer is not Authenticode-signed. Click **More info → Run anyway**, or ask QuakeLogic for a signed build.
A file is listed as *unsupported data format code 3*	Re-export it from the acquisition software as 32-bit integer or float SEG-2.
Picks look early after filtering	Zero-phase filters are acausal. Pick on lightly processed data, or use a causal filter and check against the raw trace.
Vs30 shows *Insufficient measured depth*	The S picks do not reach 30 m. Either report Vs to the deepest depth, or allow extrapolation (labelled EXTRAPOLATED).
Moduli are blank	No density has been chosen, or the velocities are physically inconsistent at that layer. See the QC finding.
This activation key was issued for another computer	The key belongs to a different computer code. Send this computer's code (shown in the same message) to QuakeLogic.
This activation key is not valid	Part of the key is missing. Copy the whole key from the e-mail, or open the attached activation file instead.
The program closed unexpectedly	Restart it and accept the recovery offer. Then send the diagnostic package (Settings → Diagnostics) to QuakeLogic support.

For support, contact quakelogic.net/contact.

QUAKELOGIC

DOWNHOLE STUDIO

Corporate Headquarters:

QUAKELOGIC INC.
2008 Opportunity Dr., Suite 130
Roseville, CA 95678, USA

Monday – Friday
9:00 AM – 5:00 PM (PST/PDT)

Contact Us:

Phone: +1 (916) 899-0391
Email: sales@quakelogic.net
Web: products.quakelogic.net

Software Support:

support@quakelogic.net
Email response time: 3 business days

About QuakeLogic:

QuakeLogic Inc. is a California-based engineering and technology company providing innovative, reliable, high-quality solutions to customers worldwide.

Our Commitment

We are committed to quality, innovation, and customer satisfaction — building lasting partnerships through reliable solutions and dependable support.

Scan to View Products:

