

User Manual

Field	Value
Document ID	UAIL-ITDASH-UM-001
Version	1.0
Status	Active baseline
Classification	Internal
Owner	Tech-Unit IT
Last Updated	2026-07-19
Audience	Operators, admins, support users

1. Purpose


Provide practical usage guidance for the operator wallboard and the admin console, including login, interpretation, filters, recovery actions, and use of the documentation Help area.

2. Access

Surface	URL Pattern	Intended User
Operator	<code>http://<server>:21060/login</code>	Operations viewers
Admin	<code>http://<server>:21061/login</code>	Administrators

The operator page asks only for the operator password.
The admin page asks only for the admin password.


3. Operator Login

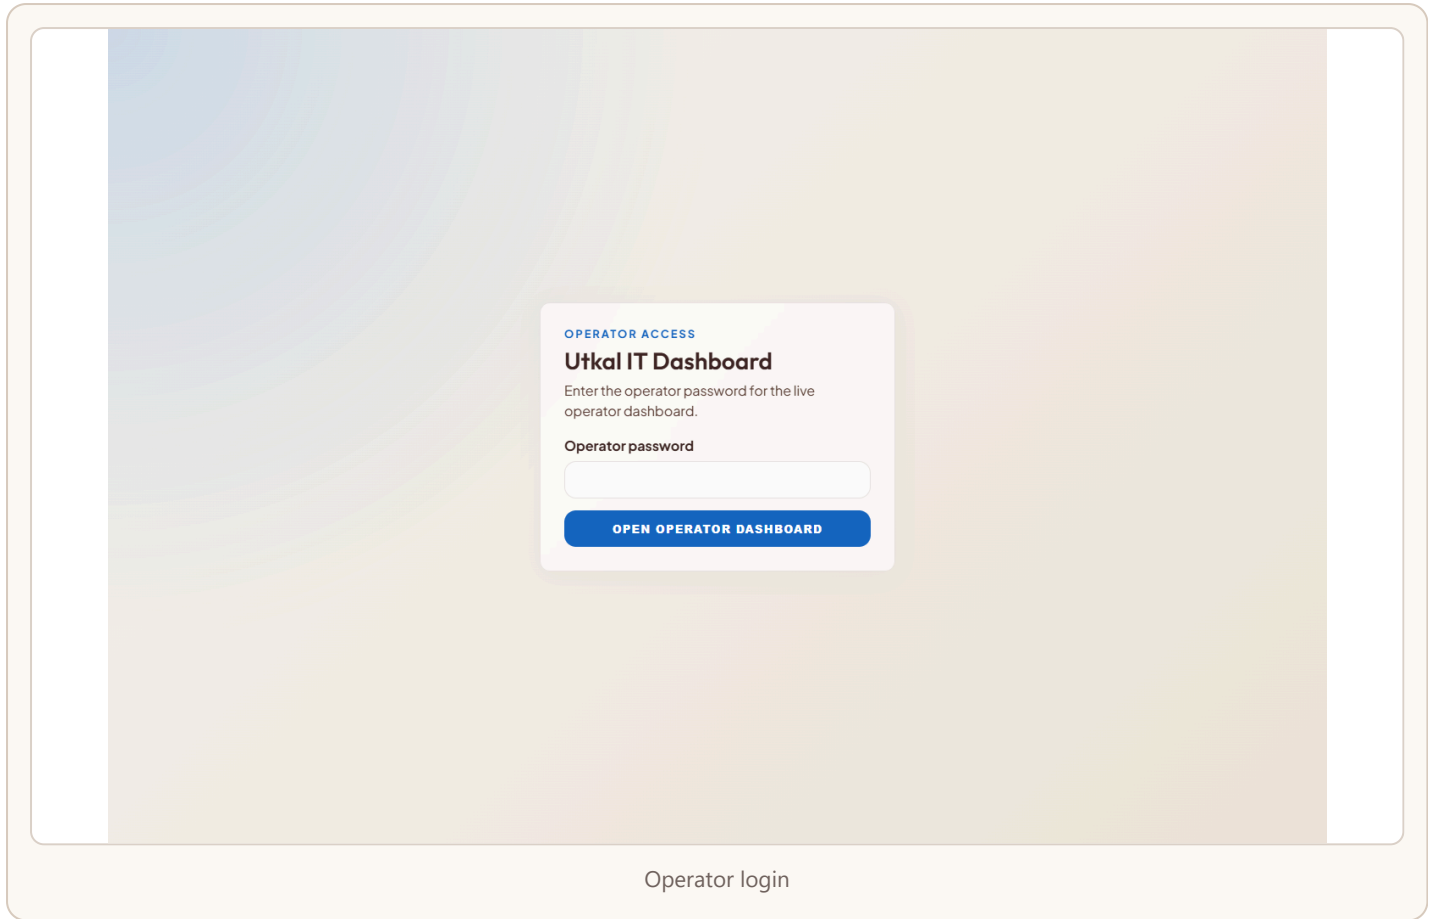

Steps:

1. Open the operator surface in a browser.
2. Enter the operator password.
3. Confirm that the wallboard loads with live cards and the filter bar.

4. Operator Dashboard

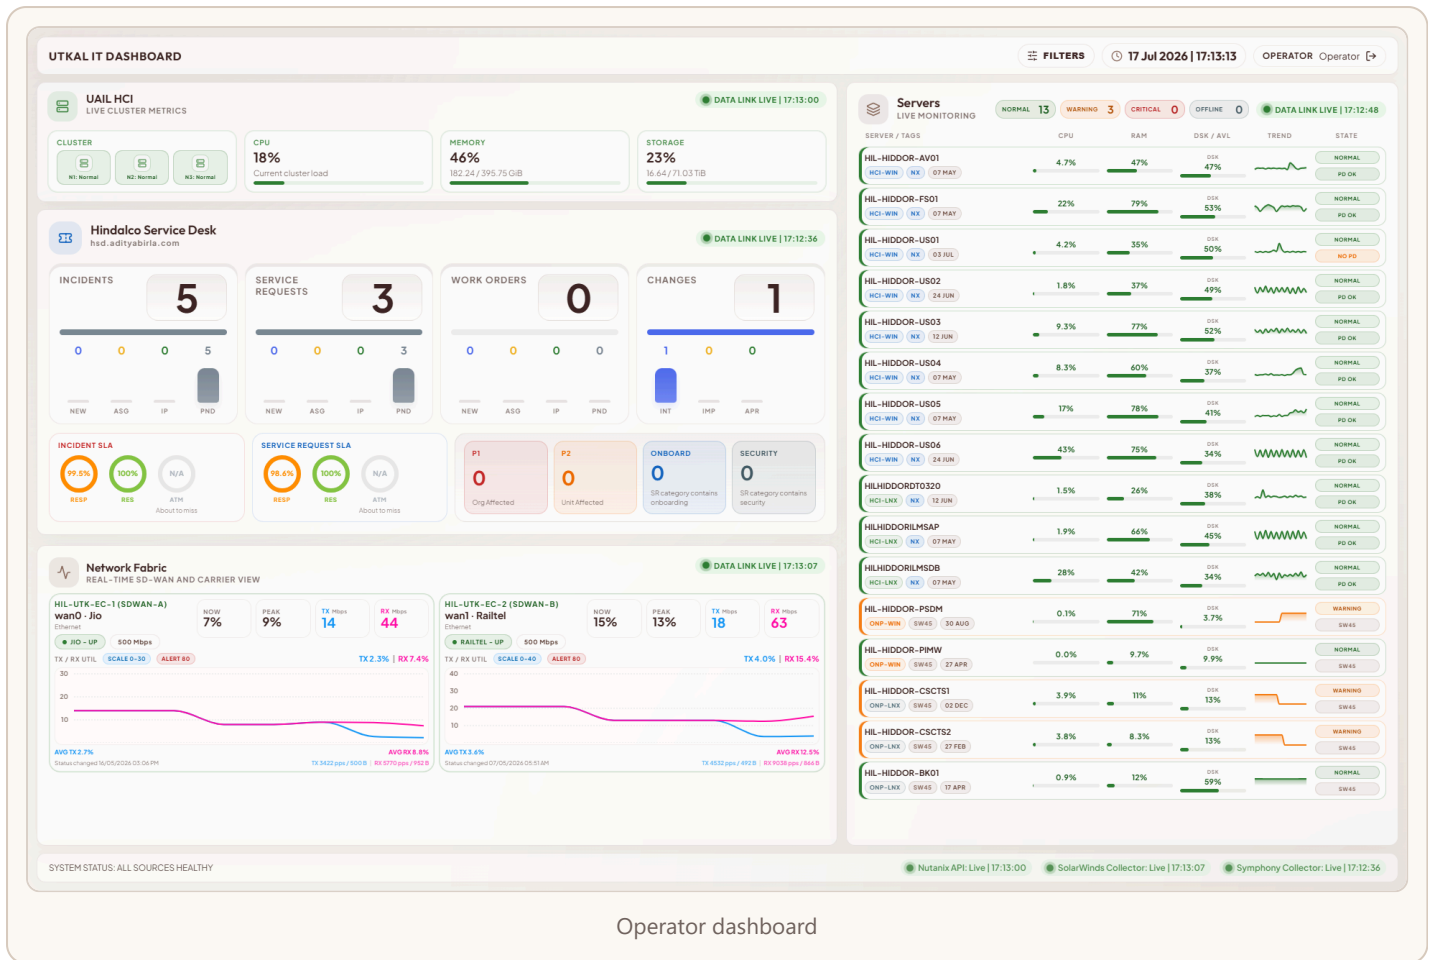

Operator dashboard

The operator dashboard is organized into four major domains:

- HCI cluster metrics
- HSD backlog and SLA metrics
- Network status and utilization
- Server fleet state

5. Reading The Dashboard

5.1 Data-Link Status

Each major card shows a concise data-link status.

State	Meaning
OK	the collector is updating normally
STALE	the last success is older than expected
ERROR	the collector attempted to refresh but failed
NEVER	the section has not yet received a successful sync

Important rule:

- if the data-link is stale or erroring, the displayed numbers are last-synced values, not guaranteed-live values

5.2 Color Language

- green: healthy
- amber: warning
- orange: elevated concern
- red: critical or about to miss
- slate/grey: offline or unavailable

5.3 HCI Section

Use HCI to see:

- cluster resource posture
- node health
- threshold-based utilization bars

5.4 HSD Section

Use HSD to see:

- open work item totals
- backlog mix across new, assigned, in progress, and pending
- SLA posture
- P1, P2, onboarding, and security work pressure

5.5 Network Section

Use Network to see:

- link state for carriers and SDWAN paths
- current Tx/Rx values
- sparkline history and utilization trend

5.6 Server Section

Use Servers to see:

- HCI VM versus on-prem grouping
- Windows versus Linux grouping
- normal, warning, critical, and offline posture
- fallback or source attribution where relevant

6. Filters

The operator surface supports filters for:

- visible sections
- server status
- server platform
- server OS
- server source
- network carrier and path
- HSD work types and special queues


Use filters when:

- you need to isolate one domain
- you want to hide noise for a focused operational view
- you want to inspect one class of servers or one class of tickets

7. Mobile And Portrait Use

On narrow screens the dashboard switches to a stacked responsive layout. This is intended for monitoring and quick review, not as a replacement for the primary wallboard display.

8. Admin Console

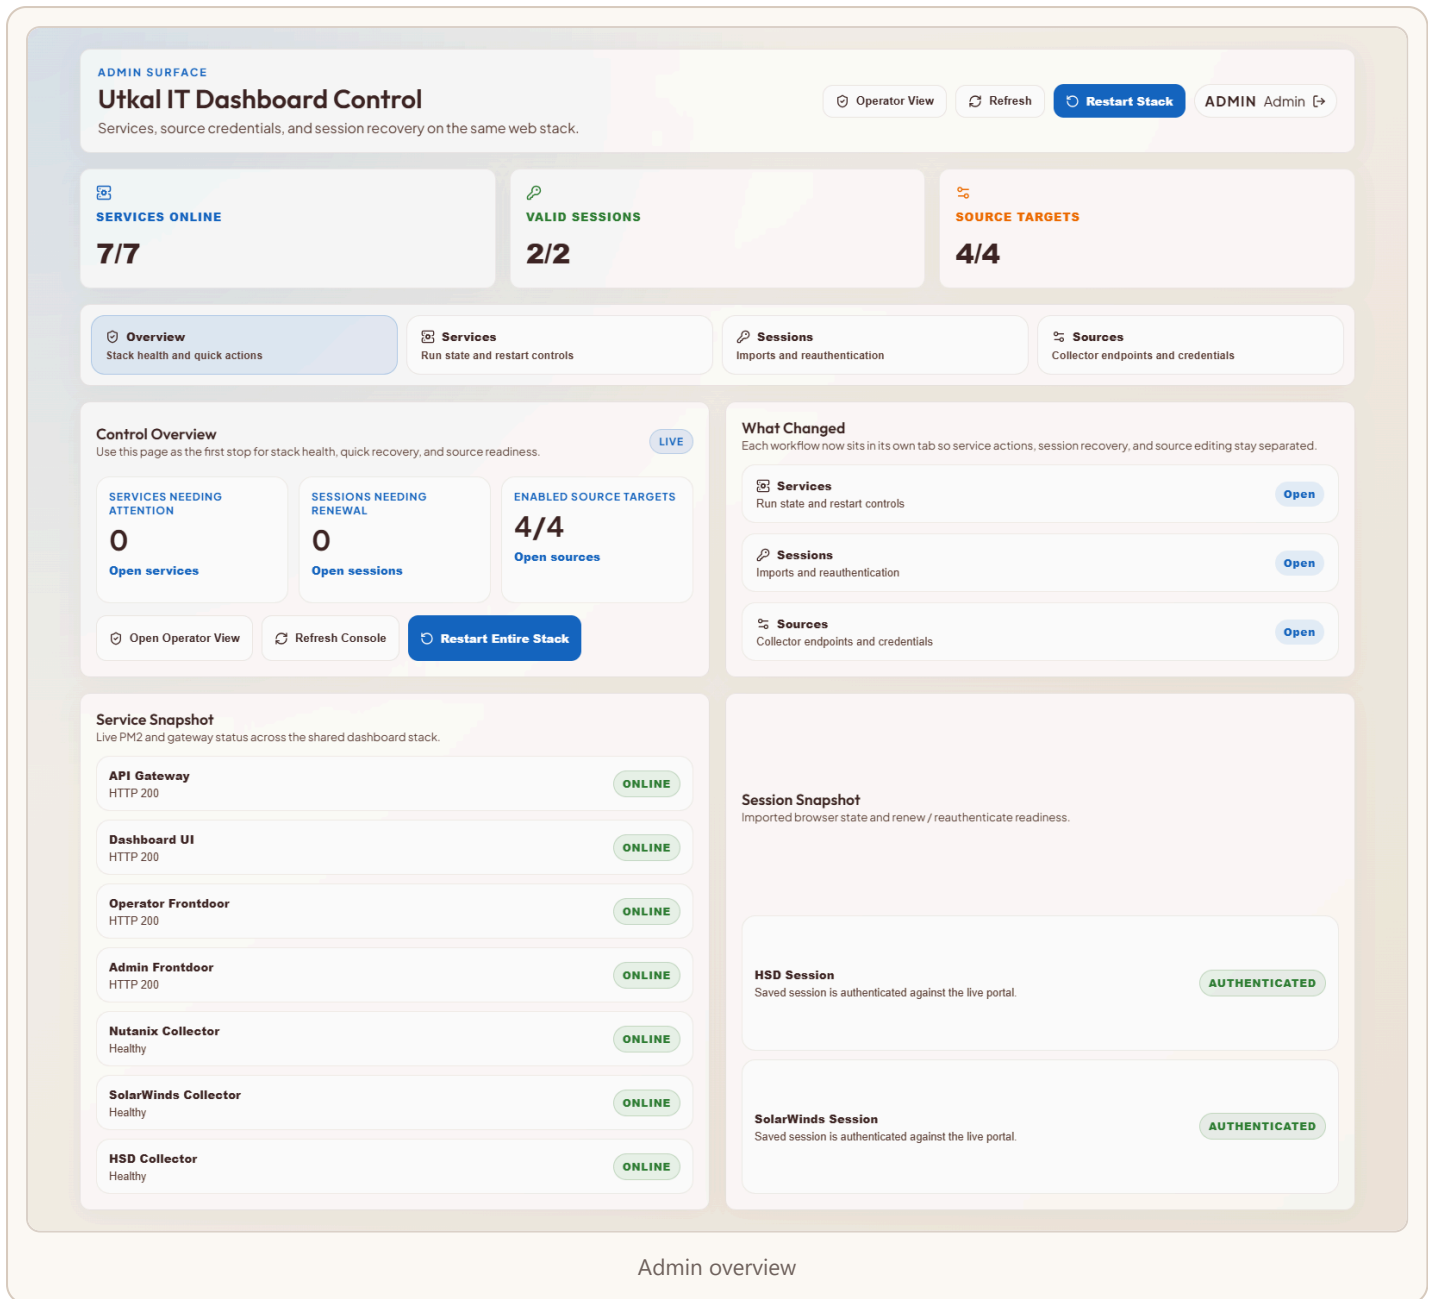

The admin console provides five workflow areas:

- Overview
- Services
- Sessions
- Sources
- Help

9. Services Tab


Use **Services** to:

- inspect PM2-backed process health
- restart a single service
- restart the full stack when needed
- confirm health summaries and recent sync posture

Use this tab first when:

- a card is stale
- a collector appears down
- the dashboard stops updating

10. Sessions Tab

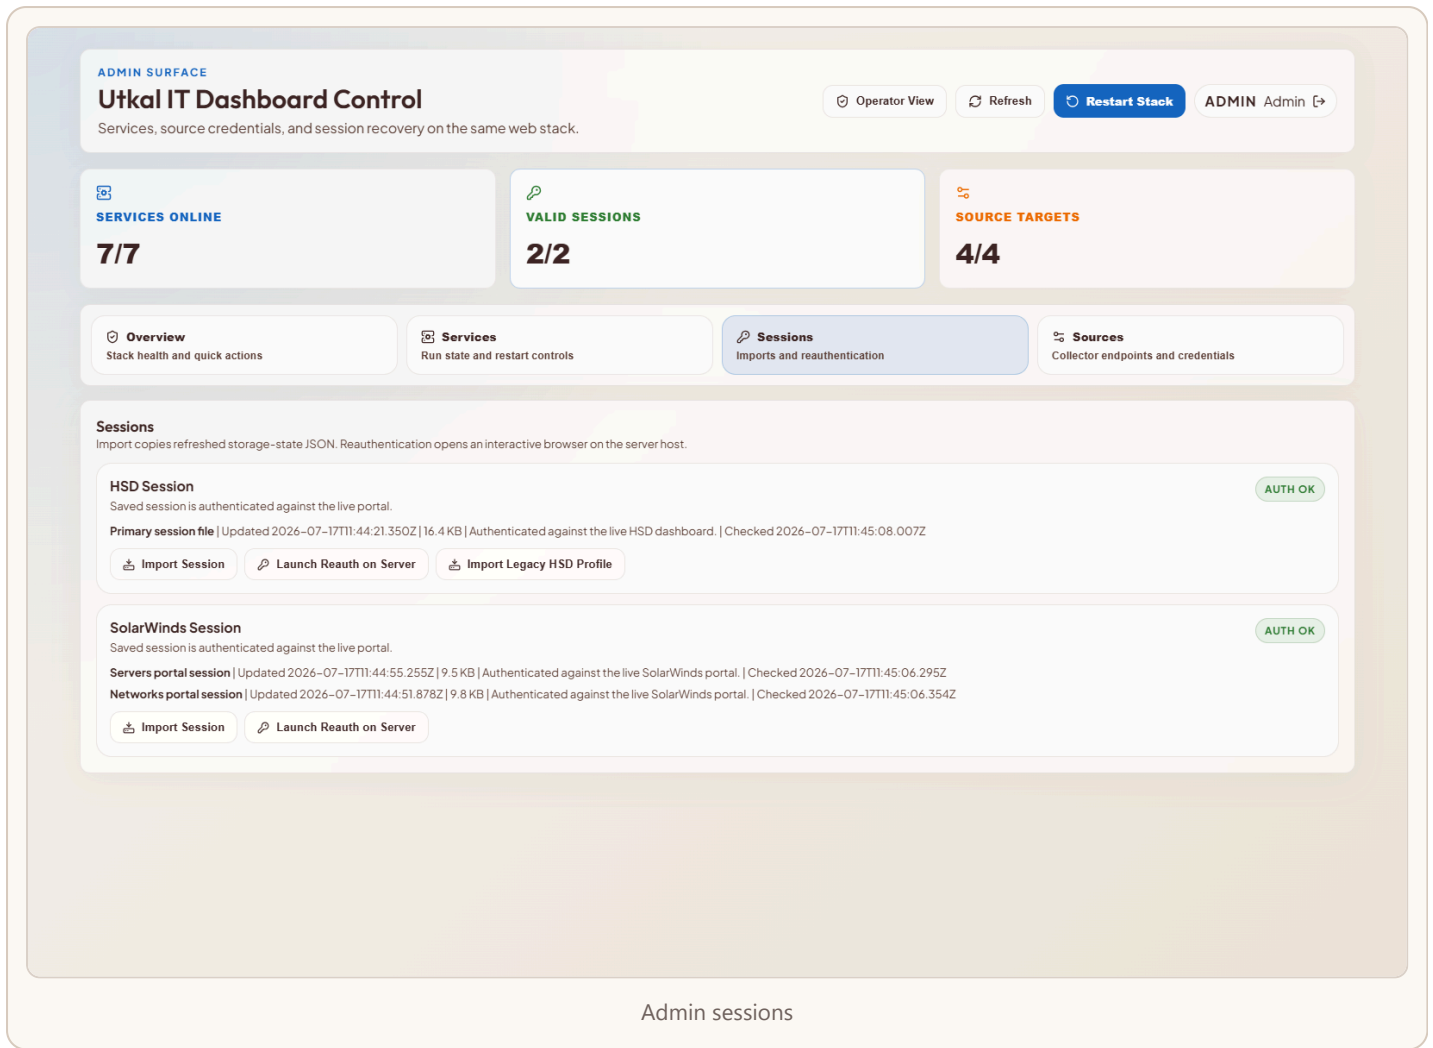

Use **Sessions** to validate whether HSD and SolarWinds session files are still accepted by the live portals.

Typical states:

- **AUTH OK**
- **EXPIRED**
- **UNREACHABLE**
- **MISSING**
- **INVALID**

11. HSD Recovery

When HSD is expired:

1. Open the admin console on the server if possible.
2. Go to **Sessions**.
3. Launch HSD reauthentication.
4. Complete the interactive login in Edge.
5. Return to the admin console and refresh session state.

Use legacy profile import only when an older authenticated profile must be recovered deliberately.

12. SolarWinds Recovery

When SolarWinds session validation fails:

1. Open **Sessions**.
2. Launch the SolarWinds reauthentication helper.
3. Complete the login flow.
4. Refresh the session state and verify recovery.

13. Sources Tab

Use **Sources** to manage:

- enable or disable state
- target URLs
- usernames and passwords
- poll intervals
- source-specific metadata such as monitored servers or network object IDs

Save source changes before expecting the new values to take effect.

14. Help Tab

The **Help** tab exposes the maintained PDF documentation set directly inside the admin console.

Use it for:

- viewing the PRD
- reviewing project history and timeline
- checking system design details
- opening the user manual
- opening the developer handbook

15. Troubleshooting Guide

15.1 A Dashboard Card Looks Wrong

1. Check the card data-link status.
2. If stale or erroring, treat it as last-synced.
3. If healthy but abnormal, treat it as a live operational condition.
4. Escalate to admin review if needed.

15.2 A Collector Is Not Updating

1. Check **Services**.
2. Check **Sessions**.
3. Check **Sources**.
4. Restart the affected service only after confirming the probable cause.

15.3 Credentials Were Changed

1. Update the values in `Sources` .
2. Save changes.
3. Restart the affected collector if necessary.
4. Verify the next successful sync.

16. Operational Dos And Don'ts

Do:

- use the data-link state to judge freshness
- use filters to simplify the wallboard view
- use admin Help for the latest internal documentation

Do not:

- assume a visible number is live if the card is stale
- expose internal ports `3001` or `4000`
- use legacy HSD import as a normal daily path