


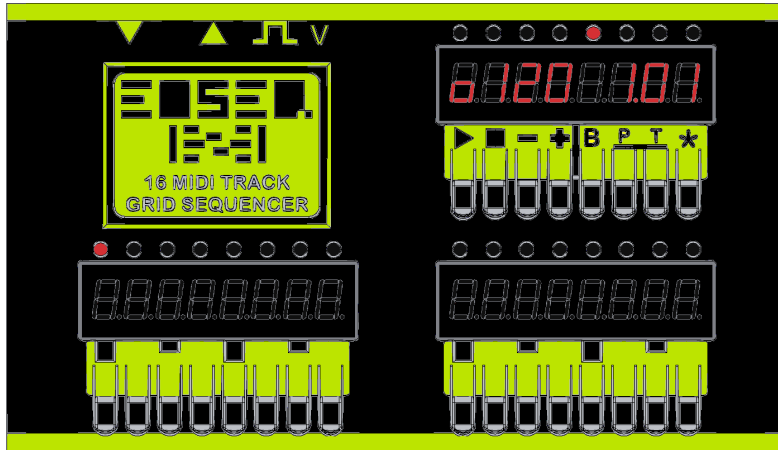

VARIATION EDIT, ABCD SETTING

- ● ● ● CHASE
- ● ● ● MIRROR, EDIT/CLONE A B C D
- ● ● ● EDIT ONLY VARIATION A
- ● ● ● EDIT ONLY VARIATION B
- ● ● ● EDIT ONLY VARIATION C
- ● ● ● EDIT ONLY VARIATION D

BESIDES NORMAL STEP EDITING, MOST EDITING FUNCTIONS DEPEND ON THE VARIATION SETTING (TRANPOSE ALL, NUDGE, RANDOMIZE, ERASE, RECORD AND ALSO TRACK COPY)

SETUP VALUES:

PATTERN SETTINGS (SAVED PER SINGLE PATTERN)

P.1. PAT REPEAT – INF / 001–255

How many times to repeat current pattern before switching.

P.2. NEXT PAT – PLUS ONE / 1.01–G.16

Next pattern after repeat is finished (can cross banks).

P.3. CHAIN REPEAT – INF / OFF / 001–254

When looping to a previous pattern with P.2., this counts the amount of loops played back. Exit from loop = current pattern +1

P.4. MIDI CHN – 001–016

Set track MIDI channels (default: drums = 10, notes = 1–6).

P.5. DRUM NOTE – Learnable by holding step

Sets MIDI note per drum track, hold a step to learn from midi in.

P.6. NOTE LEN – 001–129

Note playback duration per track (1 step = 6 tics = full 16th note).

P.7–P.9. VELOCITY 1–3

Sets the three velocity levels, valid for all tracks in pattern.

P.A. PRGCHNG – OFF / 001–128

Sends program change at pattern start, per track / midi channel.

P.b. PAT VARI – A / AB / ABC / ABCD

Sets number of active variations in current pattern.

P.C. TRAKLEN – 001–016

Length per track (Polymeter, forces Variation A, max. 16 steps).

P.d. SHUFFLE – 000–005

Delays even steps (2, 4, 6, 8 etc. max. delay 5 tics).

P.E. STEP SKIP – 000–100

Step playback probability per track (% in steps of 10).

GLOBAL SETTINGS (VALID FOR ALL PATTERNS)

G.1. CLOCK – AUTO / INTERN

Select clock source.

G.2. CLOCKOUT – ON / OFF

Sends clock (internal or also forwarded from MIDI in).

G.3. CLOCKDIV – 001–016

Divides internal clock output, for highspeed sequencing.

G.4. MIDI THRU – ON / OFF

Forwards MIDI input (depends on drum note, MIDI channel and single or multi recording mode setup.)

G.5. TRACK REC – SINGLE / MULTI

Recording mode, record on one track or several tracks.

G.6. PULSE RATE – OFF / 001–016

Rate for TRS pulse click (TE / Volca = 002).

G.7. PULSE LENG – 001–016

TRS pulse click length (TE / Volca = 001).

G.8. MIDI PAT CHNG – OFF / 001–016

Enables MIDI pattern select by note (uses one channel).

G.9. PROTECT – ON / OFF

Prevents auto-save.

G.A. FLASH ACTIONS

RESET NONE – Do nothing

SETUP PAT.2BANK – Copy setup to all patterns in bank

Does not erase steps in patterns.

CLONE PAT.2BANK – Copy current steps + setup to bank

RESET BANK – Erase current bank

RESET FACTORY – Full memory wipe + reset

G.b. BRIGHT DISP – 000–002 Display brightness level

BASIC FUNCTIONS:

- ▶ START PLAYBACK
- ▶ RECORD MIDI IN ON/OFF
- STOP PLAYBACK
- DECREASE VALUE (BPM, NOTE, SETUP)
- + INCREASE VALUE (BPM, NOTE, SETUP)
- B BANK SELECT (16 BANKS, 1-9...A-G)
- P PATTERN SELECT (16 PATTERNS, 1-16)
- T TRACK SELECT (TRACK 1-10 DRUMS, 11-16 NOTES)

TWO BUTTON COMBOS:

- B+P SETUP
- P+T PATTERN / TRACK COPY / PASTE
- T+* MUTE SCREEN

* MULTIPLE FUNCTIONS:

PUSH *: SWITCH BETWEEN ABCD VARIATION EDIT MODES

(A PATTERN IS UP TO 64 STEPS, 16 STEPS PER VARIATION A/B/C/D)

ON ANY TRACK: HOLD * AND - OR + FOR STEP NUDGE, B TO RANDOMIZE TRACK, P TO ERASE TRACK

HOLD * AND PUSH STEP TO SET VELOCITY IN THREE VALUES (SEE SETUP P.7. - P.9.)

ON DRUM TRACKS ONLY: HOLD A STEP LONG (1 SECOND) TO INSERT 32ND NOTE

ON NOTE TRACKS: HOLD STEP THEN EDIT NOTE WITH - AND +, ALSO WORKS WITH MULTIPLE STEPS

HOLD A STEP THEN PUSH * TO TOGGLE EDITING MODE, SINGLE or ALL NOTES

HOLD * THEN PUSH A STEP LONG (1 SECOND) TO INSERT GLIDE / LEGATO

HOLD * AND PUSH A LEGATO STEP LONG (1 SECOND) TO INSERT MANUAL NOTE OFF

HOLD * AND PUSH STOP TO SEND SYSEX DUMP OF CURRENT PATTERN STEPS AND SETUP

STEPS AND SETUP ARE SAVED WHEN PATTERN IS CHANGED OR STOP IS PUSHED