



USB-C

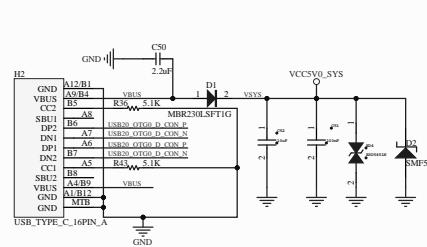


USB


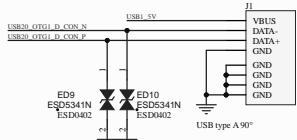


For the Luckfox Lyra Ultra W:
When adding an external USB hub to connect
USB-A, WiFi module, and MX1.25 4P USB header
For the Luckfox Lyra Ultra just connect USB-A


	A	B
Luckfox Lyra Ultra	YES	NO
Luckfox Lyra Ultra W	NO	YES

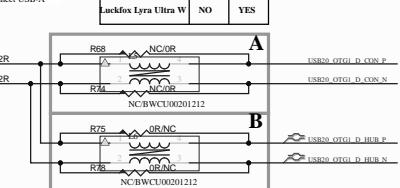

GPIO

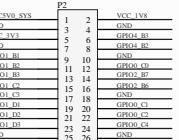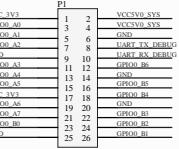


DSI

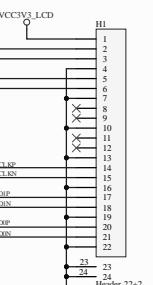


LED



RJ45

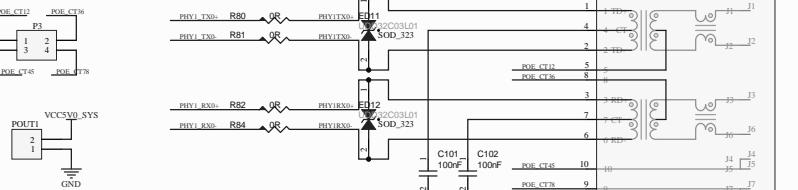

SPEAKER PA

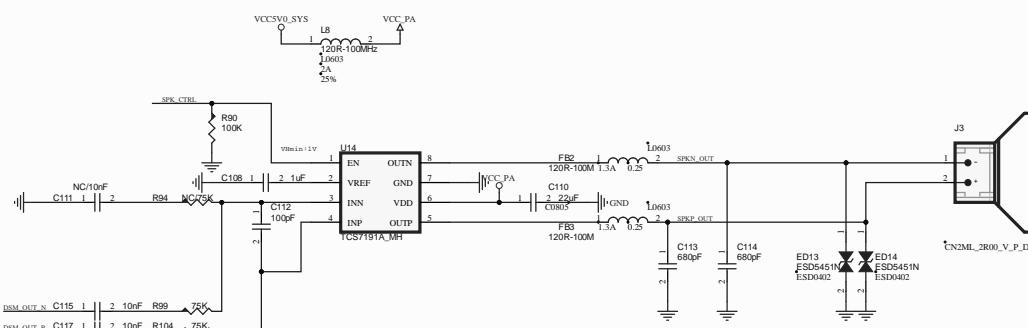

WIFI

