
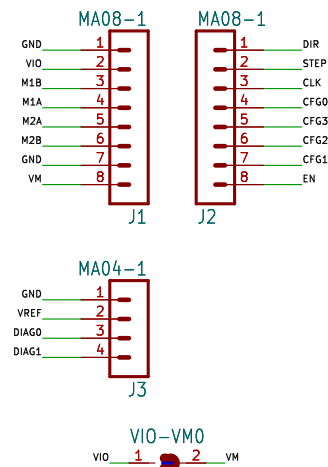


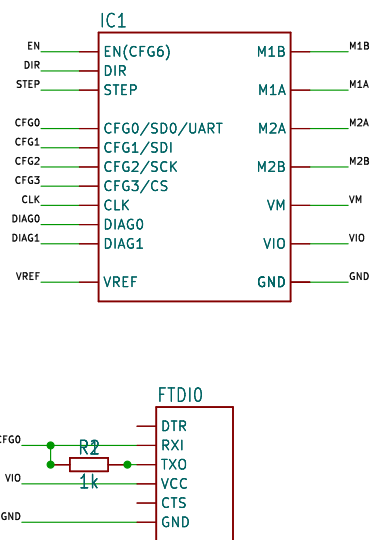

Open the VIO-VM jumper, if you use the tester on a board or in a circuit.  
Note, that VM has to be always present before VIO.