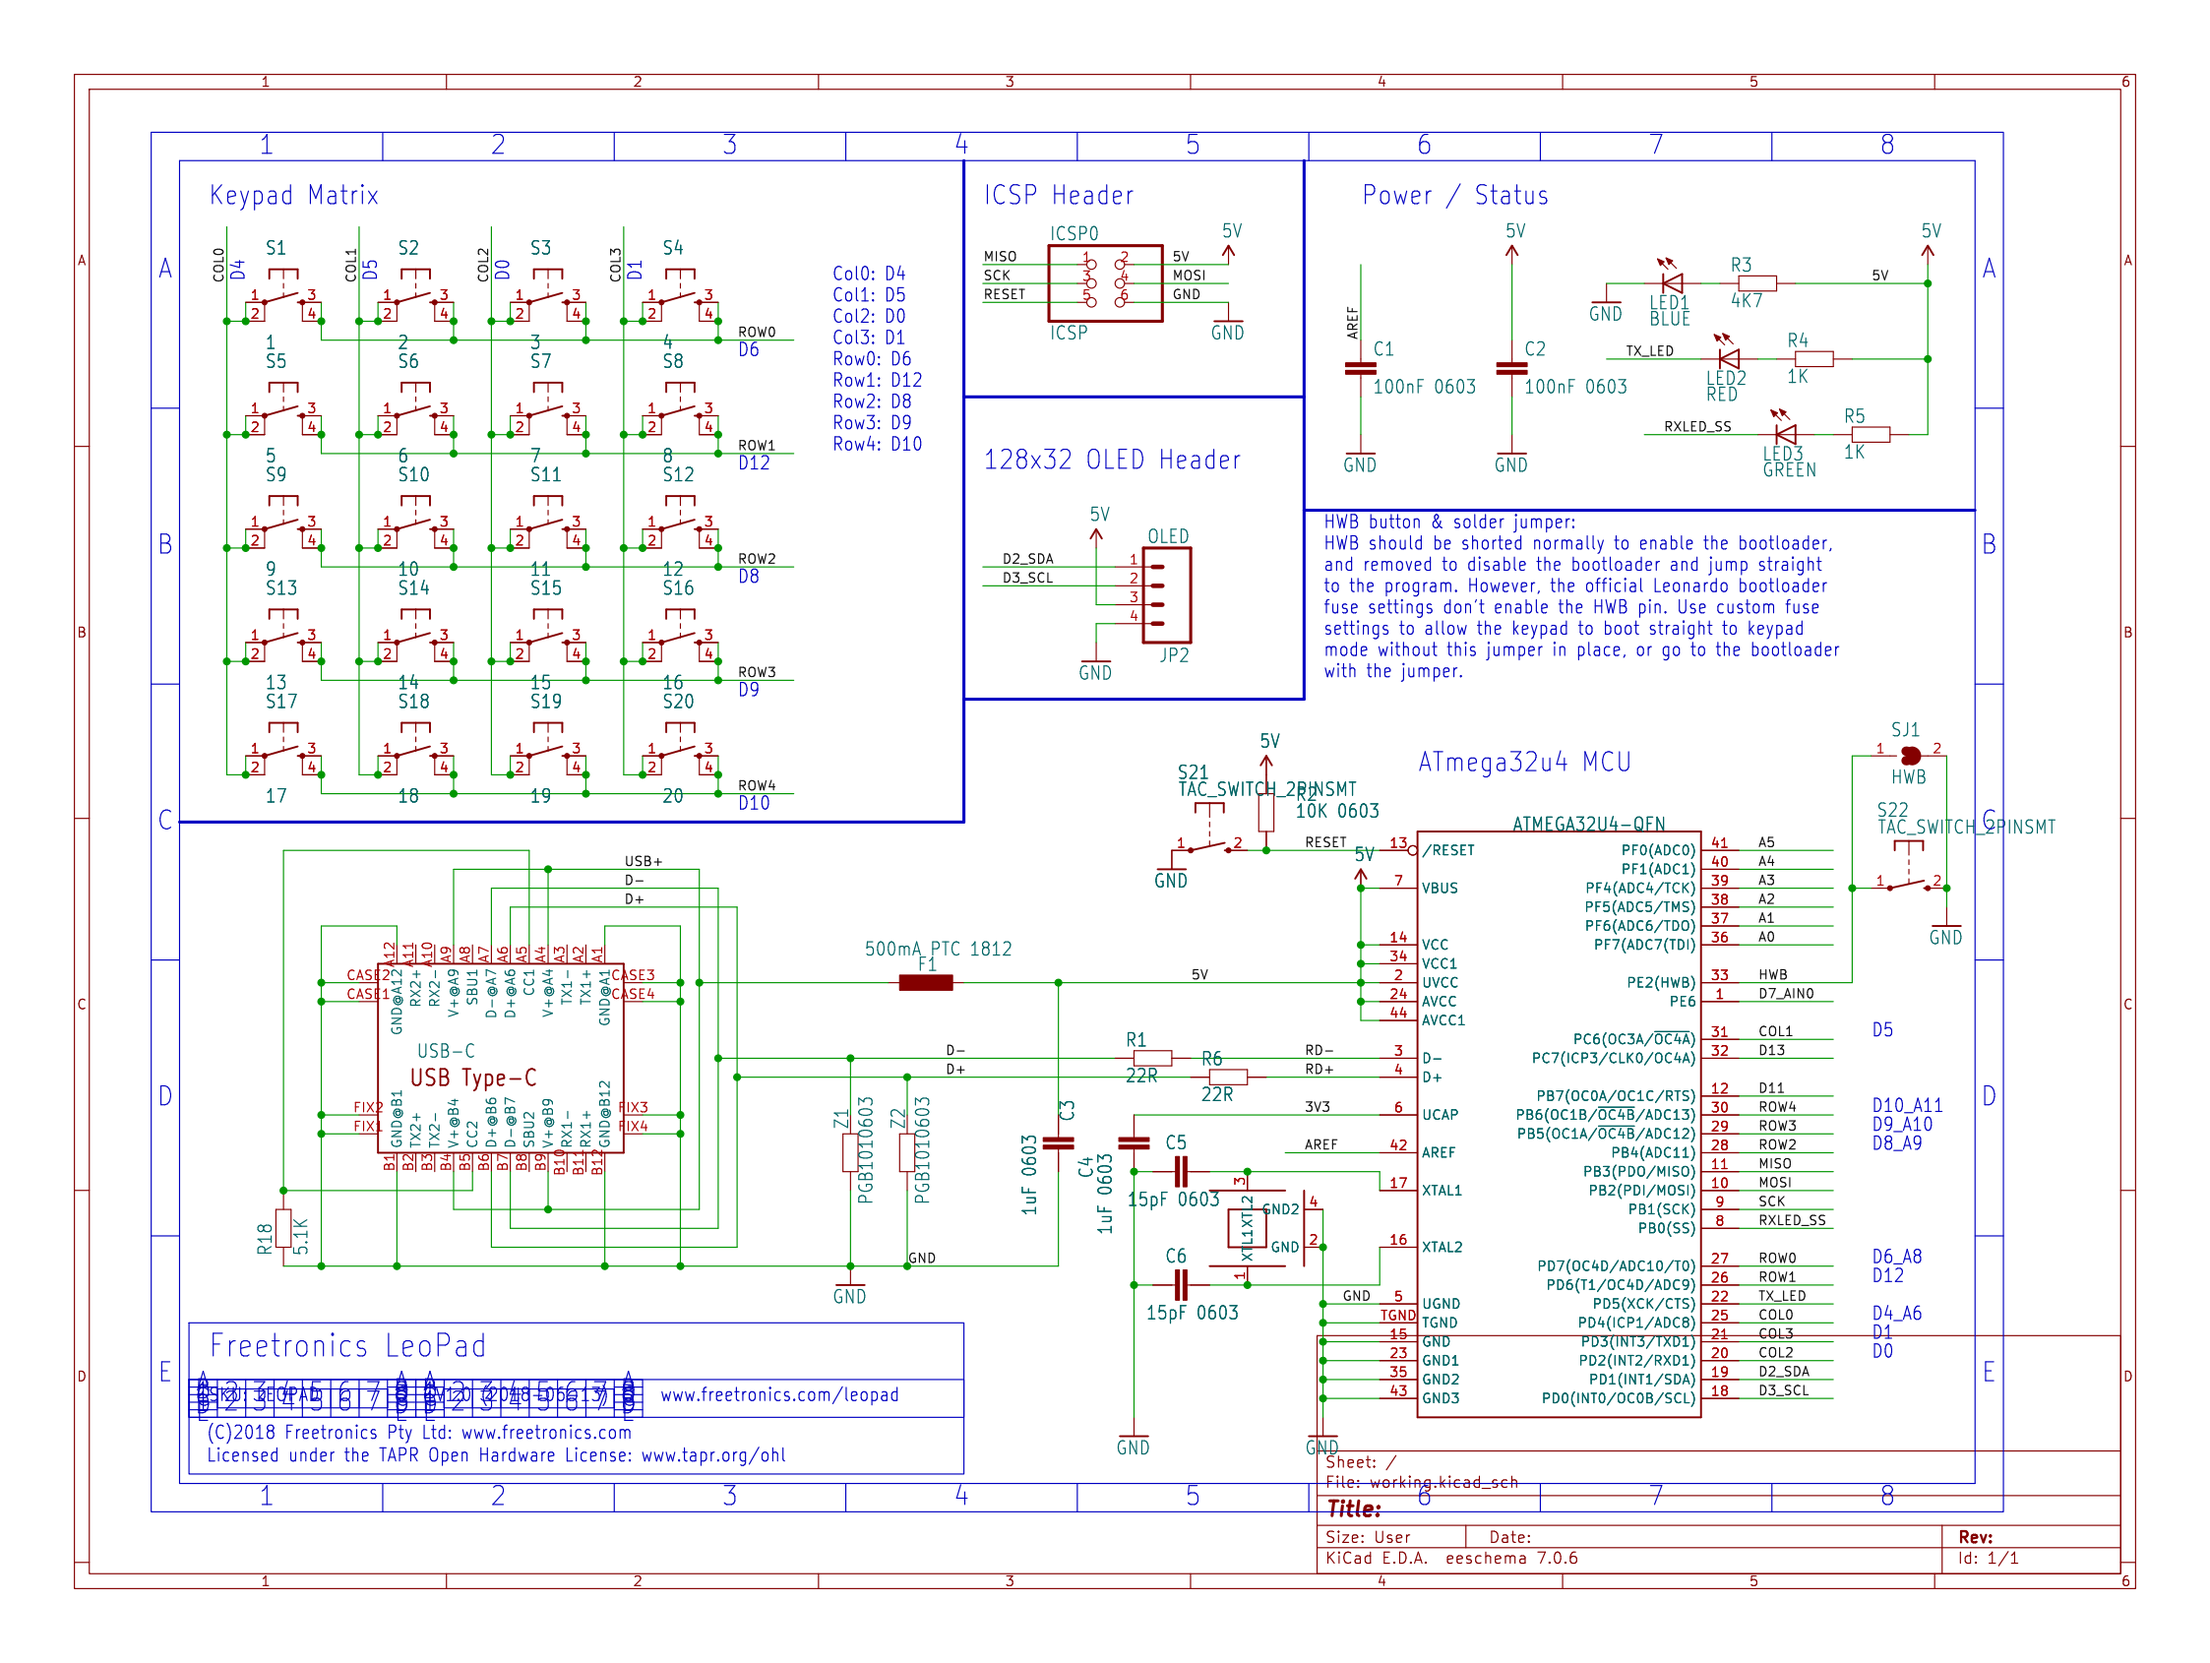
Keypad Matrix
Col0: D4
Col1: D5
Col2: D0
Col3: D1
Row0: D6
Row1: D12
Row2: D8
Row3: D9
Row4: D10
ICSP Header
128x32 OLED Header
Power / Status
HWB button & solder jumper:
HWB should be shorted normally to enable the bootloader, and removed to disable the bootloader and jump straight to the program. However, the official Leonardo bootloader fuse settings don't enable the HWB pin. Use custom fuse settings to allow the keypad to boot straight to keypad mode without this jumper in place, or go to the bootloader with the jumper.
ATmega32u4 MCU
ATMEGA32U4-QFN
USB-C
USB Type-C
500mA PTC 1812
Freetronics LeoPad
www.freetronics.com/leopad
(C)2018 Freetronics Pty Ltd: www.freetronics.com
Licensed under the TAPR Open Hardware License: www.tapr.org/ohl
Sheet: /
File: working.kicad_sch
Title:
Size: User
Date:
KiCad E.D.A. eeschema 7.0.6
Rev:
Id: 1/1