



Keypad Matrix

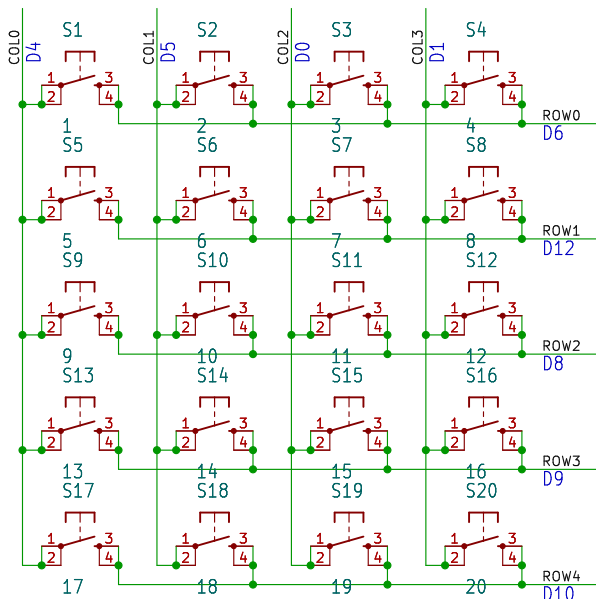


Col0: D4
Col1: D5
Col2: D0
Col3: D1
Row0: D6
Row1: D12
Row2: D8
Row3: D9
Row4: D10


ICSP Header

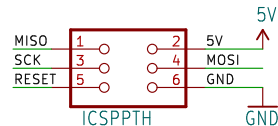

128x32 OLED Header

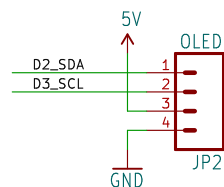


Power / Status

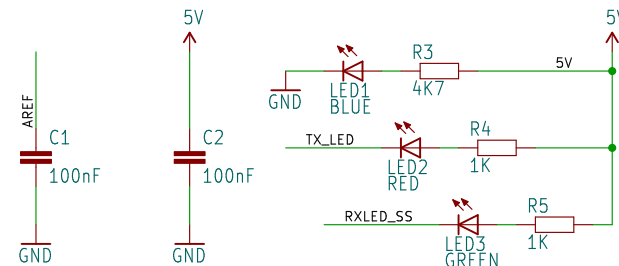

HWB button & solder jumper:
HWB should be shorted normally to enable the bootloader, and removed to disable the bootloader and jump straight to the program. However, the official Leonardo bootloader fuse settings don't enable the HWB pin. Use custom fuse settings to allow the keypad to boot straight to keypad mode without this jumper in place, or go to the bootloader with the jumper.

ATmega32u4 MCU

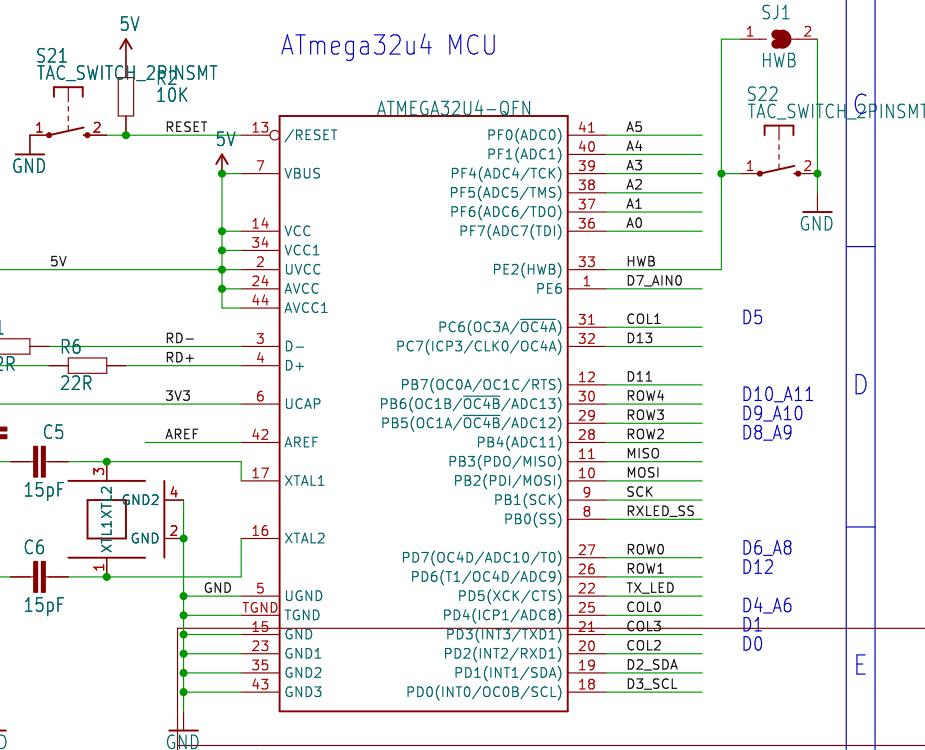

SuperHouse LeoPad Mini

www.superhouse.tv/lpmini

(C)2018-2019 SuperHouse Automation Pty Ltd: www.superhouse.tv
Licensed under the TAPR Open Hardware License: www.tapr.org/ohl

Sheet: /
File: working.kicad_sch

Title:

Size: User Date:
KiCad E.D.A. eeschema 7.0.6

Rev:
Id: 1/1