



HWB should be shorted normally to enable the bootloader, and removed to disable the bootloader and jump straight to the program. However, the official Leonardo bootloader fuse settings don't enable the HWB pin. We should use custom fuse settings so that this pin can allow the keypad to boot straight to keypad mode without this jumper in place, or go to the bootloader with the jumper.

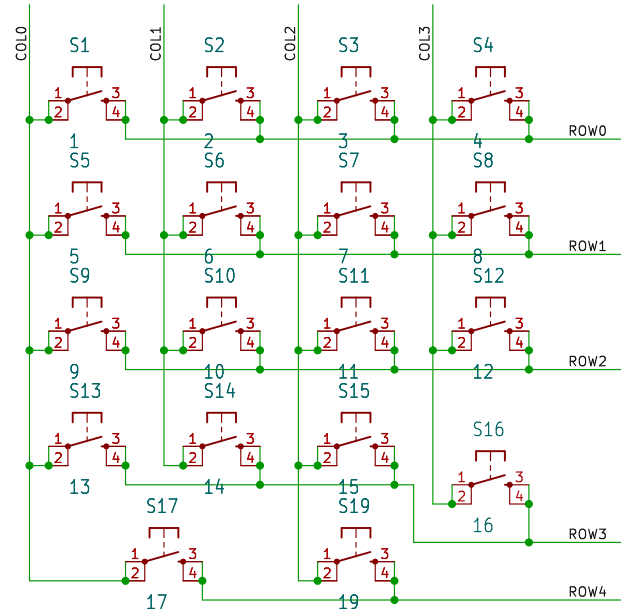


Col0: D3
Col1: D2
Col2: D0
Col3: D1
Row0: D6
Row1: D12
Row2: D8
Row3: D9
Row4: D10


Power / Status

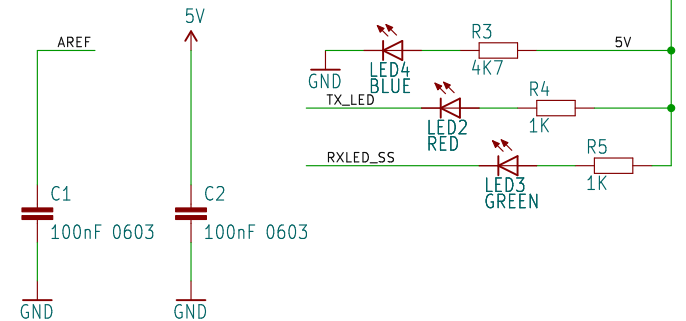

Atmega32u4 MCU

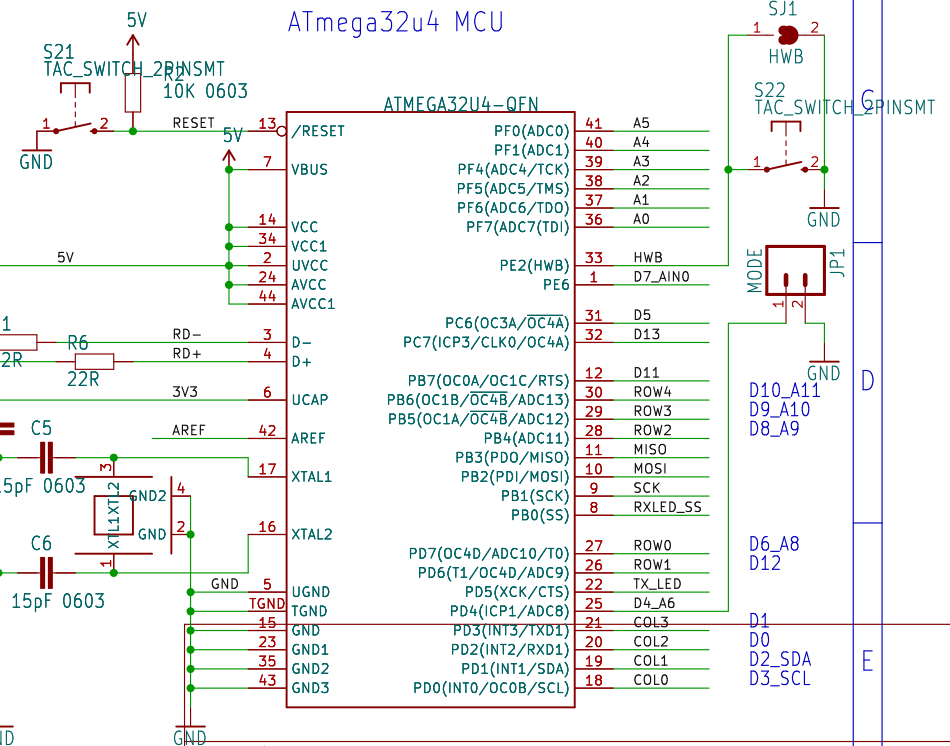

ICSP Header

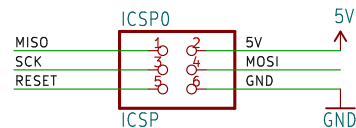

Freetronics LeoPad Retrofit

www.freetronics.com/leopard

(C)2018 Freetronics Pty Ltd: www.freetronics.com
Licensed under the TAPR Open Hardware License: www.tapr.org/ohl

Sheet: /
File: working.kicad_sch

Title:

Size: User Date:
KiCad E.D.A. eeschema 7.0.6

Rev:
Id: 1/1