





V_USB – 6V MAX
V_BATT – Single Cell (4.2V MAX)




V_BATT should be a single-cell LiPo battery.



Module recommended VCC range: 3.0–3.6V

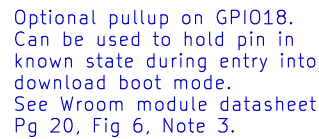


3_1-N

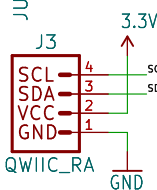

Boot Mode Configuration			
Pin	Default	Boot	Download
GPIO0	1	1	0
GPIO45*	x	x	x
GPIO46	0	x	0

*GPIO45 sets SPI voltage, see DS pg 17.
 If GPIO45 and GPIO46 are floating,
 GPIO0 determines boot mode



The diagram shows the pinout for the Raspberry Pi 4B. It includes two headers, J2 and J4, with pins numbered 1 through 16. Connections are shown for V_USB, V_BATT, and 3.3V. The connections are as follows:

- J2 Header:**
 - Pin 1: V_USB
 - Pin 2: V_BATT
 - Pin 3: EN
 - Pin 4: 13
 - Pin 5: 12
 - Pin 6: 11
 - Pin 7: 10
 - Pin 8: 8
 - Pin 9: 6
 - Pin 10: 9
 - Pin 11: 4
 - Pin 12: SCL
 - Pin 13: SDA
- J4 Header:**
 - Pin 1: 1
 - Pin 2: 2
 - Pin 3: 3
 - Pin 4: 4
 - Pin 5: A0
 - Pin 6: A1
 - Pin 7: A2
 - Pin 8: A3
 - Pin 9: A4
 - Pin 10: A5
 - Pin 11: SCK
 - Pin 12: COPI
 - Pin 13: CIPD
 - Pin 14: 33-/RX1
 - Pin 15: 34-/TX1
 - Pin 16: 3
- 3.3V:** Connected to pin 2 of J4.
- GND:** Connected to pin 16 of J4.



REV:
 > v1.0

Sheet: $\$ \{ \# \} / \$ \{ \#\# \}$

ev: 1/1