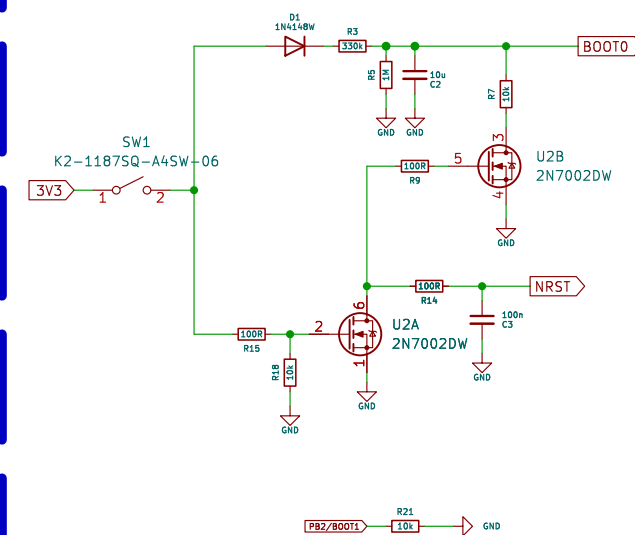


HARD RESET



GRAPHICS

- GR1 Anubis huge logo
- GR2 Anubis plated letters
- GR3 Anubis label



DB CONNS

WARNING: be sure to select the JST needed with the isolating resistors!

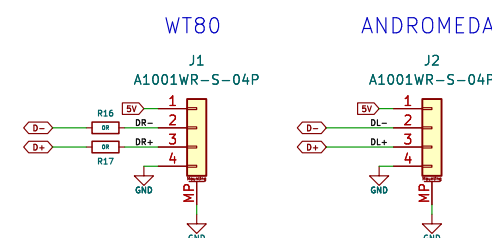
WTBO

J1
AL001WR-S-04P

ANDROMEDA

J2
AL001WR-S-04P

WARNING: be sure to select the JST needed with the isolating resistors!



5V

100k

10k

100 ohm

100uF

3V3

LM317

5V

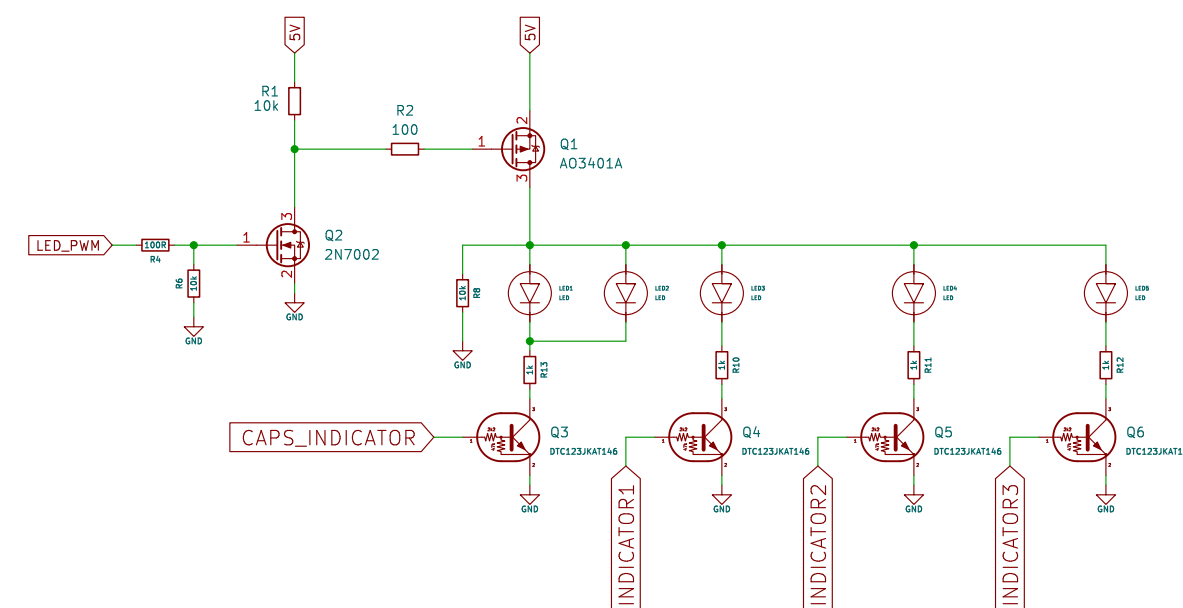
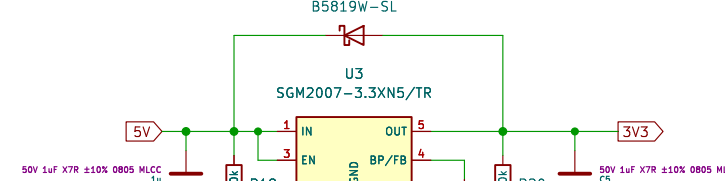
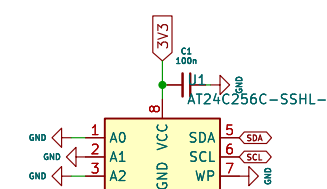
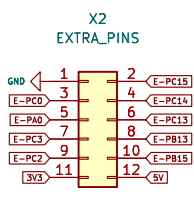
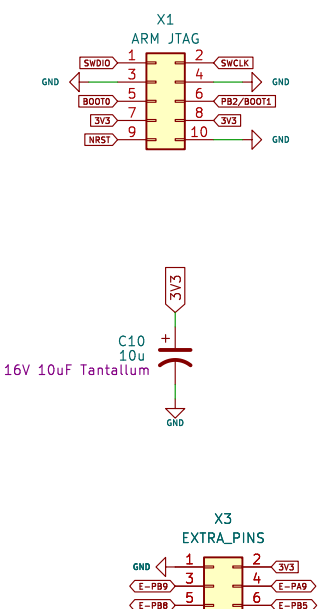
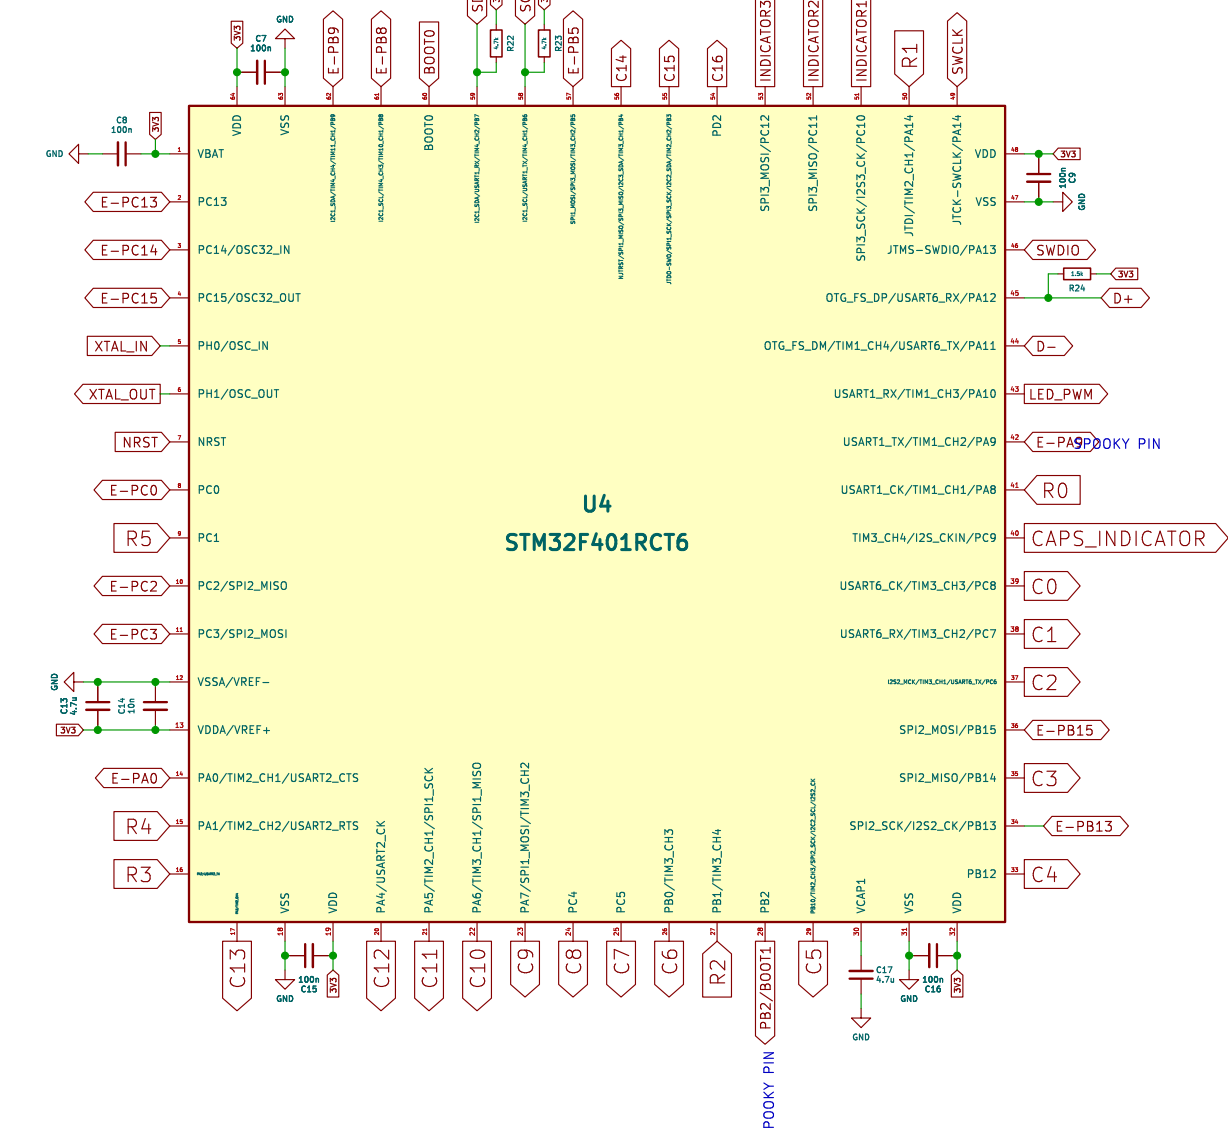
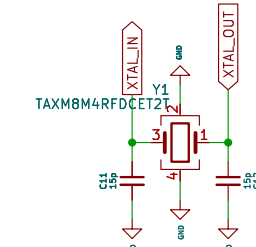
100k

10k

100 ohm

100uF

3V3

[illegible]

(*) "Spooky pins": on STM32F4xxL, pins A9 and B2 cannot be used for switch matrix:
- A9 is meant to be used as a VBUS sensing; it has a undocumented internal pulldown resistor;
- B2 is used as BOOT1 during bootup, so it needs an external pullup for successful bootup

(**) PA9 jumper: a solderable jumper used to tie PA9 to VBUS. It is disconnected by default, hence PA9 is left floating

[illegible]