


## MODULE-POWE

### KLD1117-S023-V33D


#### oom.lt/MP1117

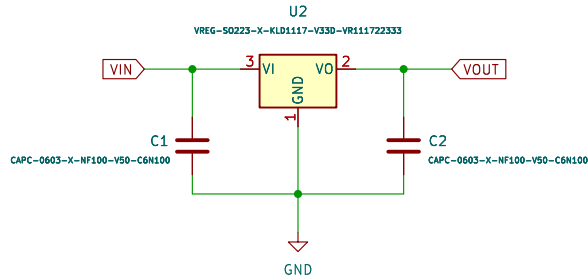

## MODULE-XTAL

### 5032-MZ16-01


#### oom.lt/MX53M16

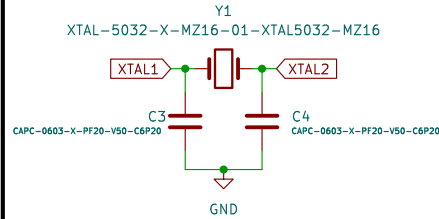

## MODULE-CONN

### ISP-STAN-SM


#### oom.lt/MCISPSM

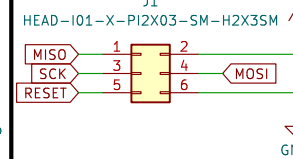

## MODULE-CONN

### I2C-QWIIC-01


#### oom.lt/MCQ

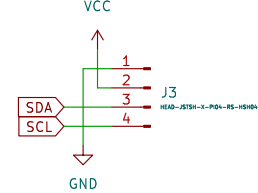

## MODULE-MCUU

### ATTINY84-S014-01



#### oom.lt/MMAT84S

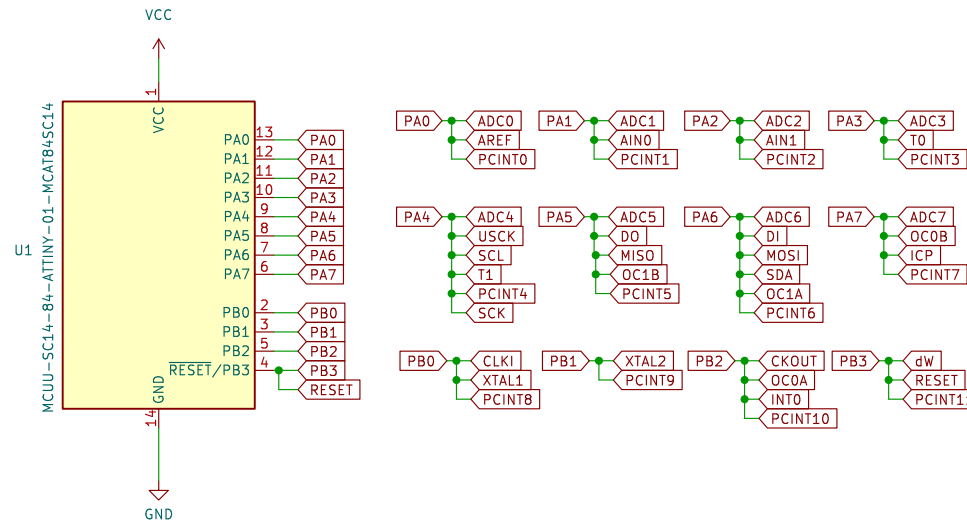

## MODULE-MOSN

### K4184-T252-TL

#### oom.lt/MMN4184252TL

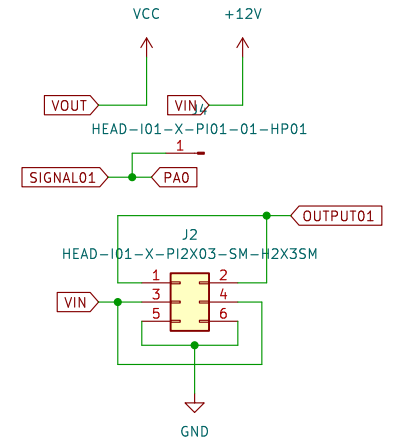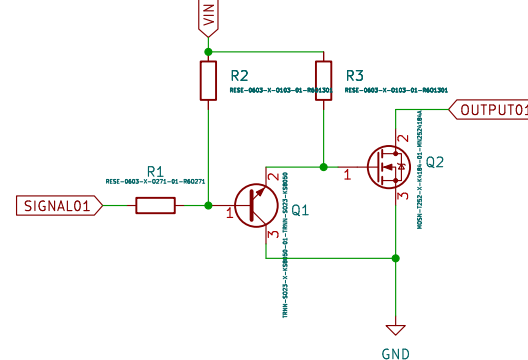

Sheet: /  
File: working.kicad\_sch

Title:

Size: A4 Date:  
KiCad E.D.A. kicad-cli 7.0.6-7.0.6-ubuntu22.04.1

Rev:  
Id: 1/1