

TeensyView

128x32 OLED on the Teensy 3 footprint.


Connect directly to Teensy. Draws ~16mA from the Teensy's 3.3V regulator.
(1.6V to 4.0V tolerant)

Teensy Connections


User jumpers 1–5 to configure where the OLED's control lines are connected, then configure with code to match.

Default (copper link side):	Alternate(Audio Shield Compatible)
D/C: 5	D/C: 21
CS: 10	CS: 20
MOSI: 11	MOSI: 7
<u>SCLK: 13</u>	<u>SCLK: 14</u>
RESET: 15	RESET: 2

5 Always connect power and ground as well.

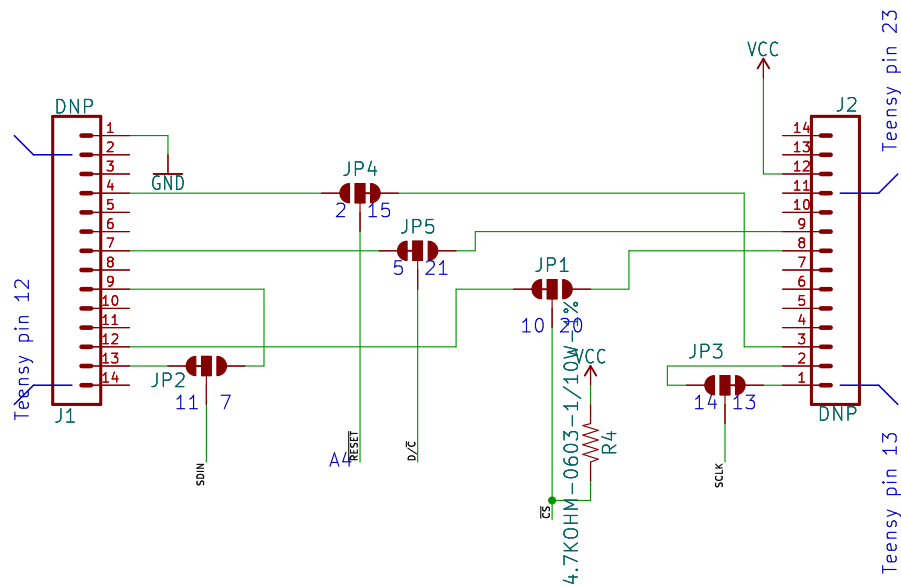

OLED Connections

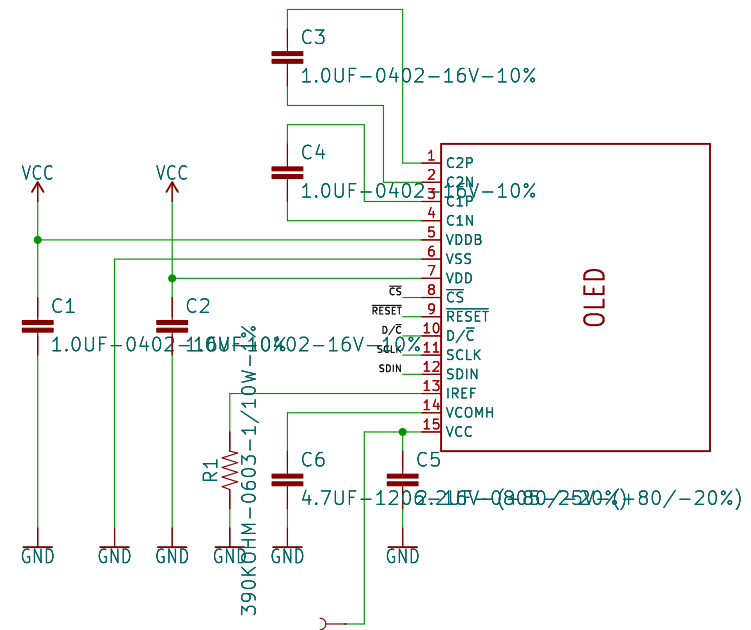

Released under the Creative Commons
Attribution Share-Alike 4.0 License
<https://creativecommons.org/licenses/by-sa/4.0/>

TITLE: \${PROJECTNAME}

Design by:
Marshall Taylor

REV:
v10

Date: \${CURRENT_DATE}	Sheet: \${#}/\${##}
------------------------	---------------------

Size: User	Date:
KiCad E.D.A.	eeschema 7.0.6

Rev:
Id: 1/1