
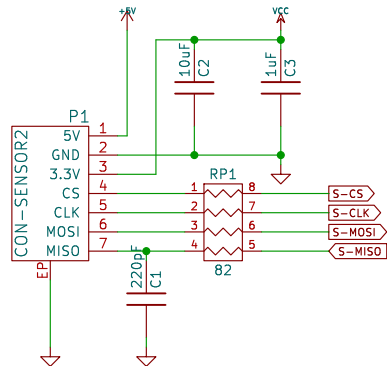
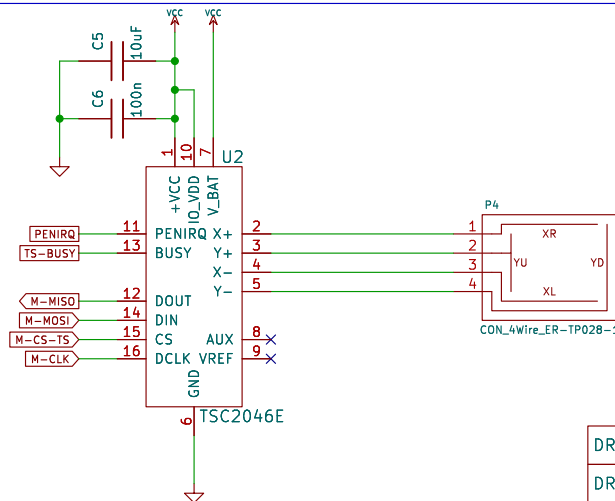


SPI Slave
P1.2 : USIC0_CH1-DOUT0 : MOSI
P0.7 : USIC0_CH1-DX0D : MISO
P1.3 : USIC0_CH1-SCLKOUT: CLK
P0.9 : USIC0_CH1-DX2B : SEL

SPI Master
P0.12 : USIC0_CH0-SEL03 : SEL
P0.13 : USIC0_CH0-SEL04 : SEL
P0.14 : USIC0_CH0-SCLKOUT: CLK
P0.15 : USIC0_CH0-DX0B : MISO
P2.0 : USIC0_CH0-DOUT0 : MOSI

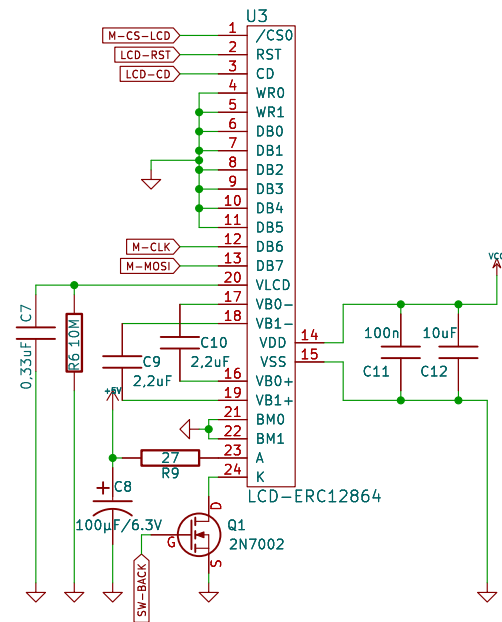

DRILL DRILL
DRILL DRILL

Copyright Tinkerforge GmbH 2018.
This documentation describes Open Hardware and is licensed under the
CERN OHL v.1.1.
You may redistribute and modify this documentation under the terms of the
CERN OHL v.1.1. (<http://ohwr.org/cernohl>). This documentation is distributed
WITHOUT ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING OF
MERCHANTABILITY, SATISFACTORY QUALITY AND FITNESS FOR A
PARTICULAR PURPOSE. Please see the CERN OHL v.1.1 for applicable
conditions

Copyright (©) 2018, L.Lauer <lukas@tinkerforge.com>
Licensed under CERN OHL v.1.1

Tinkerforge GmbH

Sheet: /

File: working.kicad_sch

Title: LCD 128x64 Bricklet

Size: A4 Date: 2018-03-27

KiCad E.D.A. kicad-cli 7.0.6-7.0.6-ubuntu22.04.1

Rev: 1.0

Id: 1/1