




128Mb Flash

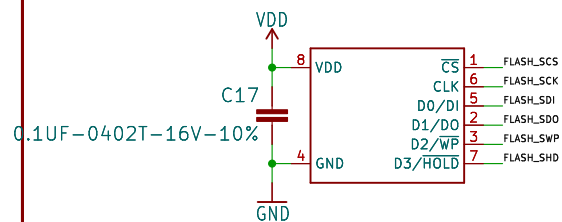


32.768kHz RTC Crystal

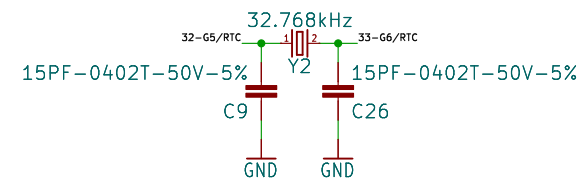


MicroMod Connector

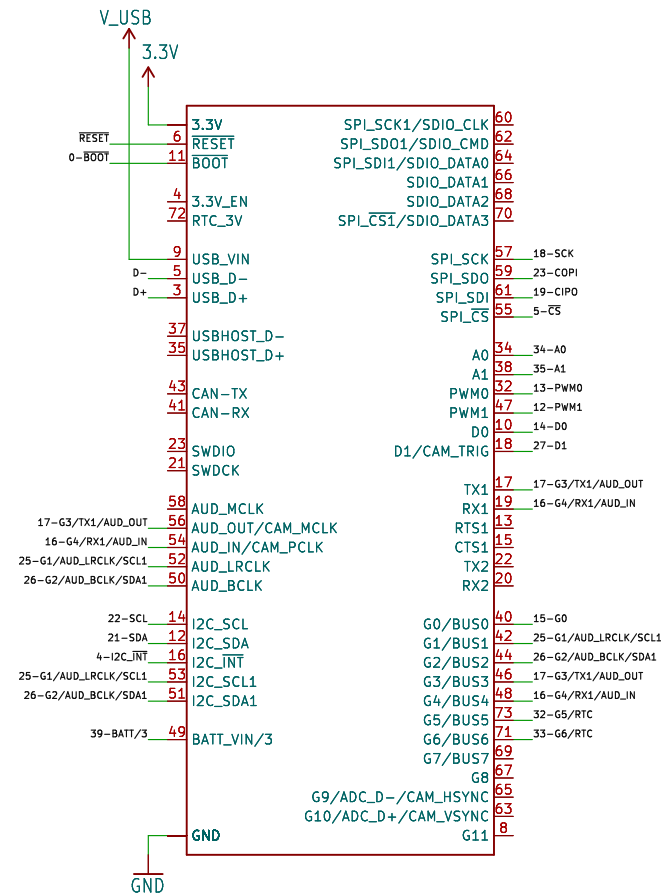

CP2104/2N (USB-to-Serial Converter)

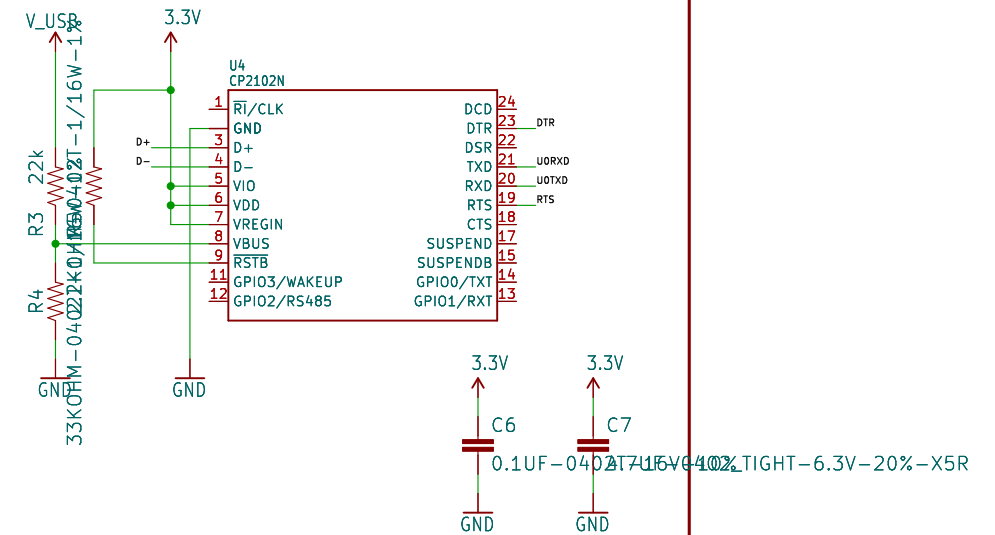


Espressif ESP32

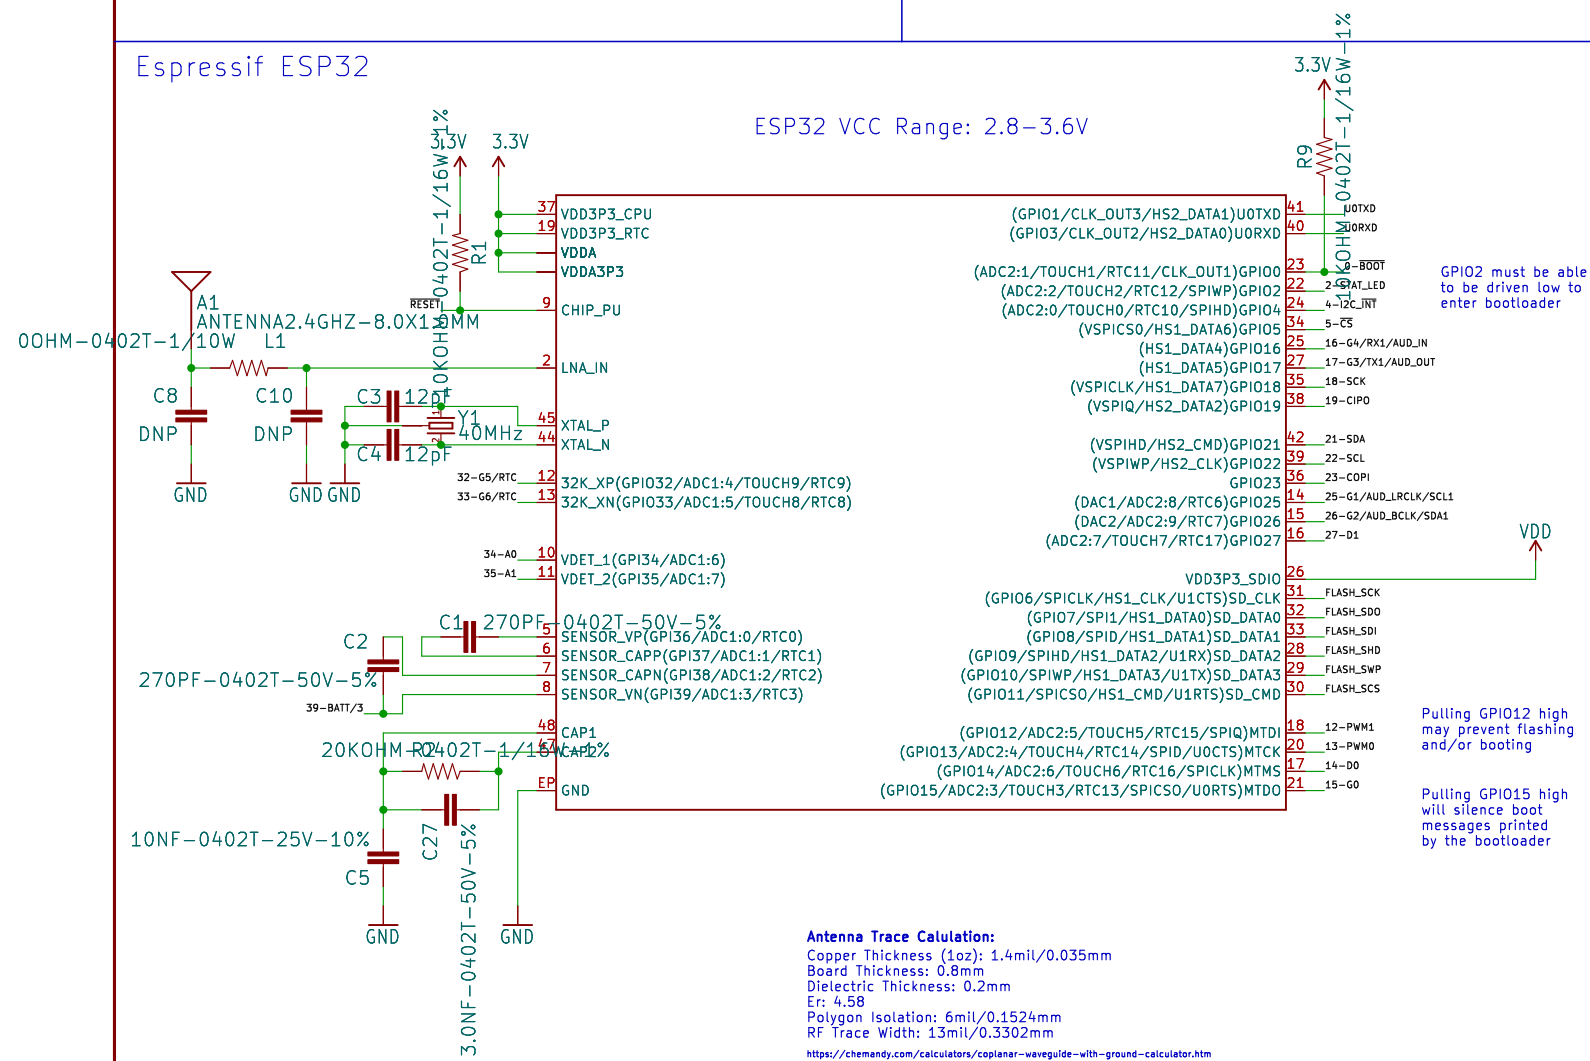

Auto-Reset Boot Mode Configuration


Pin	Default	Boot	Download
GPIO0	1	1	0
U0TXD	1	1	x
GPIO2	0	x	0
GPIO4	0	x	x
MTD0	1	x	x
GPIO5	1	1	x

If U0TXD, GPIO2, GPIO5 are floating,
GPIO0 determines boot mode

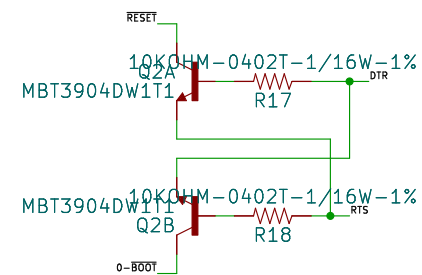

If DTR is LOW, toggling RTS from HIGH to LOW resets to run mode.
If RTS is HIGH, toggling DTR from LOW to HIGH resets to bootloader.

Status LED

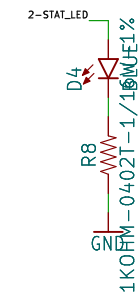

Released under the Creative Commons
Attribution Share-Alike 4.0 License
<https://creativecommons.org/licenses/by-sa/4.0/>

TITLE: \${PROJECTNAME}	
------------------------	--

Design by: **Alex Weller**

Date: \${CURRENT_DATE}	File: working.kicad_sch
------------------------	-------------------------

Sheet: \${#}/\${##}

Size: User	Date:
KiCad E.D.A.	kicad-cli 7.0.6-7.0.6~ubuntu22.04.1

Rev: 1/1

