



PZ1 and PZ2 are rectified inputs for VIN
See datasheet for electrical specs for VIN

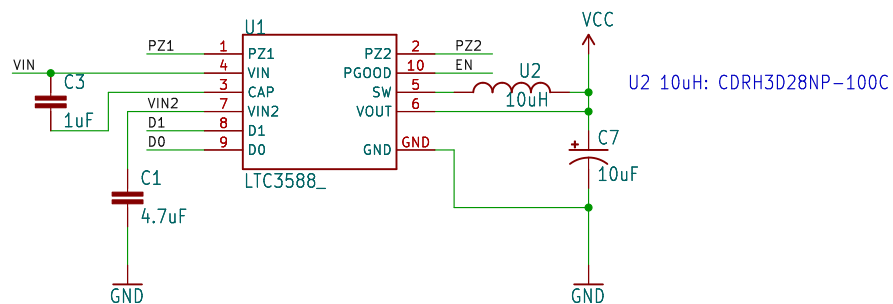

On the board 1 is VIN and 0 is GND
0 is default

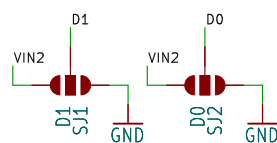

Released under the Creative Commons Attribution Share-Alike 3.0 License
<http://creativecommons.org/licenses/by-sa/3.0>
Design by: A.Weiss

TITLE: \${PROJECTNAME}		SFE
Document Number:		REV: v12
Date: \${CURRENT_DATE}		Sheet: \${#}/\${##}

Size: User	Date:	Rev:
KiCad E.D.A.	kiCad-CLI 7.0.6-7.0.6-ubuntu22.04.1	Id: 1/1