

11 GND

**Gamepad Buttons** 

**Volume Control** 

Address is '0101'b + A2:A1:A0 so in this case it will be 0x50

VOL/TOUCH\_SCL

Disabled write protect.

VOL/TOUCH\_SDA

100n

BSELECT

BSTART

10k 257tap dual digital

VDD

13 A1 HVC/A0

2 SCL

(volume control) MCP4661-103E/ST

> P0A POW


P1W


P1B

P0B 10

GND


C20 C21

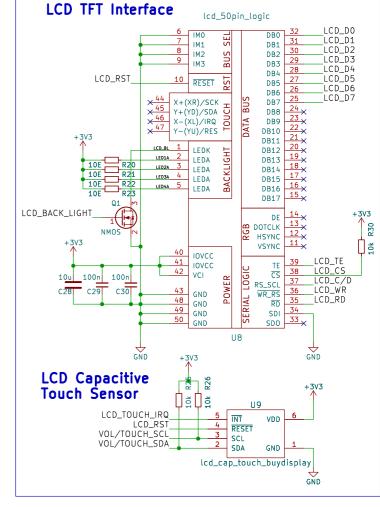

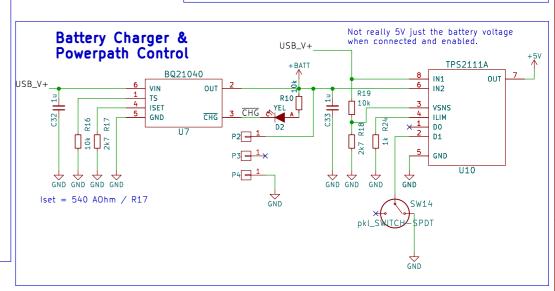

SDIO\_CD

GND

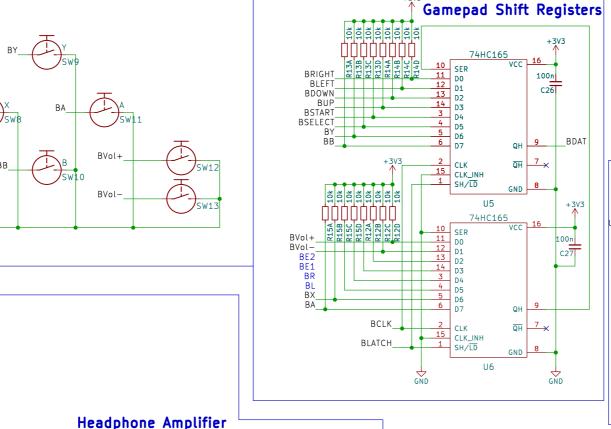

nkl JACK 3C1S

License: CC-BY-SA 4.0 (C) 2017 Nicolas Schodet <nico@ni.fr.eu.org> (C) 2017 1BitSquared LLC <info@1bitsquared.com> (C) 2017 Piotr Esden-Tempski <piotr@esden.net> Original design by 1BitSquared, modified by Nicolas Schodet File: working.kicad\_sch Title: 1Bitsy 1UP Retro Inspired Handheld Console, version Mini Size: A3 Date: KiCad E.D.A. eeschema 7.0.6