

ANYCOMPANY INDUSTRIES

Hydraulic Press VX-4400-B Service Manual

Document AC-SM-4400-B
Revision C
Issued 2019-04-18

4 Torque specifications


Values apply to clean, dry threads. Tighten in two stages, in the sequence given in figure 5-1. Re-check after the first 50 hours.

Ref	Fastener	Size	Torque	Tolerance
A	Cylinder head bolt	M16 x 90	45 Nm	+/- 3 Nm
B	Tie rod nut	M20 x 110	62 Nm	+/- 4 Nm
C	Main frame bolt	M24 x 140	110 Nm	+/- 5 Nm
D	Pump flange bolt	M12 x 45	28 Nm	+/- 2 Nm
E	Guard bracket	M10 x 30	18 Nm	+/- 2 Nm

Bolt C secures the frame to the base casting. A reading below the tolerance band requires the bolt to be replaced, not re-torqued.

5 Tightening sequence

Figure 5-1 Main frame bolt pattern, viewed from above

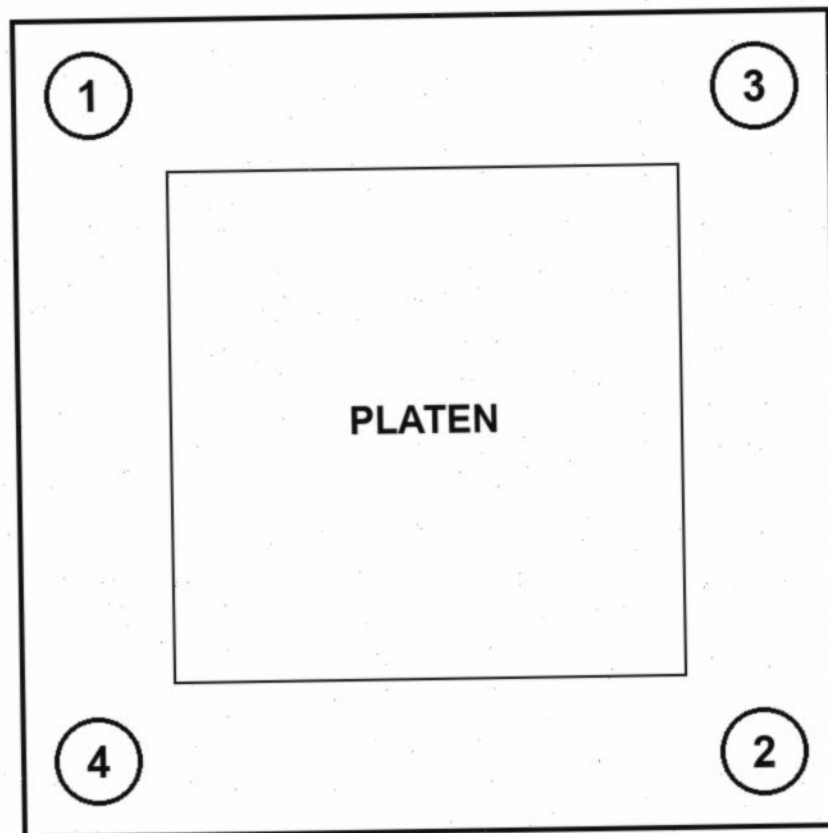

Tighten in the order 1, 2, 3, 4 to 50% of the specified torque, then repeat the same order to the full value.

Bolt positions 1 and 2 are diagonally opposed. Tightening adjacent bolts in sequence will distort the platen.

6 Service limits and intervals

WARNING

Relieve hydraulic pressure to 0 bar and lock out the pump before loosening any fastener listed in section 4. Stored pressure can move the platen with the guard removed.

Item	Interval
Hydraulic oil change	2000 h or 12 months
Main frame bolt re-check	1000 h
Seal kit replacement	6000 h
Pressure relief valve test	12 months

Maximum working pressure is stated on the machine nameplate and must not be exceeded during testing.