



Training Guide

VisualDVR and VisualOverlay

Document: Guide-VisualDVR and Overlay Training-003.docx

003	Menu updates	BP-J	13/05/2009
002	Added Serial data input	BP-J	29/10/2008
001	First Issue	PME	15/08/2008
Revision	Comment	Author	Date

Contents

1	VisualDVR Versions	5
2	Typical VisualDVR System Configuration	6
3	Video Data Storage Options	7
3.1	Approximate Storage Capacity Requirements	7
4	Configure Video/Audio Input.....	8
4.1	Windows Media Video (WMV) Recorder	8
4.2	MPEG-2 Recorder	12
5	VisualDVR Screen Display	13
5.1	VisualDVR Single Channel Display	13
5.2	VisualDVR Dual Channel Display	14
5.3	VisualDVR Quad Channel Display	15
5.4	Survey Data Input and Display.....	15
5.5	Alarm Display	15
5.6	Status Bar Information	16
7	Basic Video Recording	19
7.1	Start/Stop Recording	19
7.2	Select Destination for Video recording in Project Tree index	19
7.3	Create a Still Image or Clip During Recording.....	21
7.4	Dive Log – Event Entry During Recording	21
8	Black Box Recording Mode	23
8.1	To Start Black-Box Recording	23
8.2	To Stop Black-Box Recording	24
9	Setup VisualOverlay	25
9.1	Quick Start: Screen Overview	25
9.2	Quick Start: Configure an Overlay.....	26
10	Copying Video to DVD/USB Disks	31
10.1	Automated Copying.....	31
10.2	Automated Copying to DVD	32
10.3	Manual Copying	32
11	Playing Video.....	32
11.1	Select a Video File	32
11.2	Play the Selected Video.....	33




11.3	Playback Speed	34
11.4	Pause Playback.....	34
11.5	Stop Playback	35
11.6	Playing Video with <i>VisualReview</i>	35
A	Support	36

1 **VisualDVR** VERSIONS

- **VisualDVR** Single Channel Recorder
- **VisualDVR** Single Channel Recorder – Black-box only
- **VisualDVR** Duo 2 Channel Recorder
- **VisualDVR** Duo 2 Channel Recorder – Black-box only
- **VisualDVR** Quattro 3 Channel Recorder
- **VisualDVR** Quattro 3 Channel Recorder – Black-box only
- **VisualDVR** Quattro 4 Channel Recorder
- **VisualDVR** Quattro 4 Channel Recorder – Black-box only

- Available in WMV, MPEG-2 or WMV + MPEG-2 versions

2 TYPICAL *VisualDVR* SYSTEM CONFIGURATION

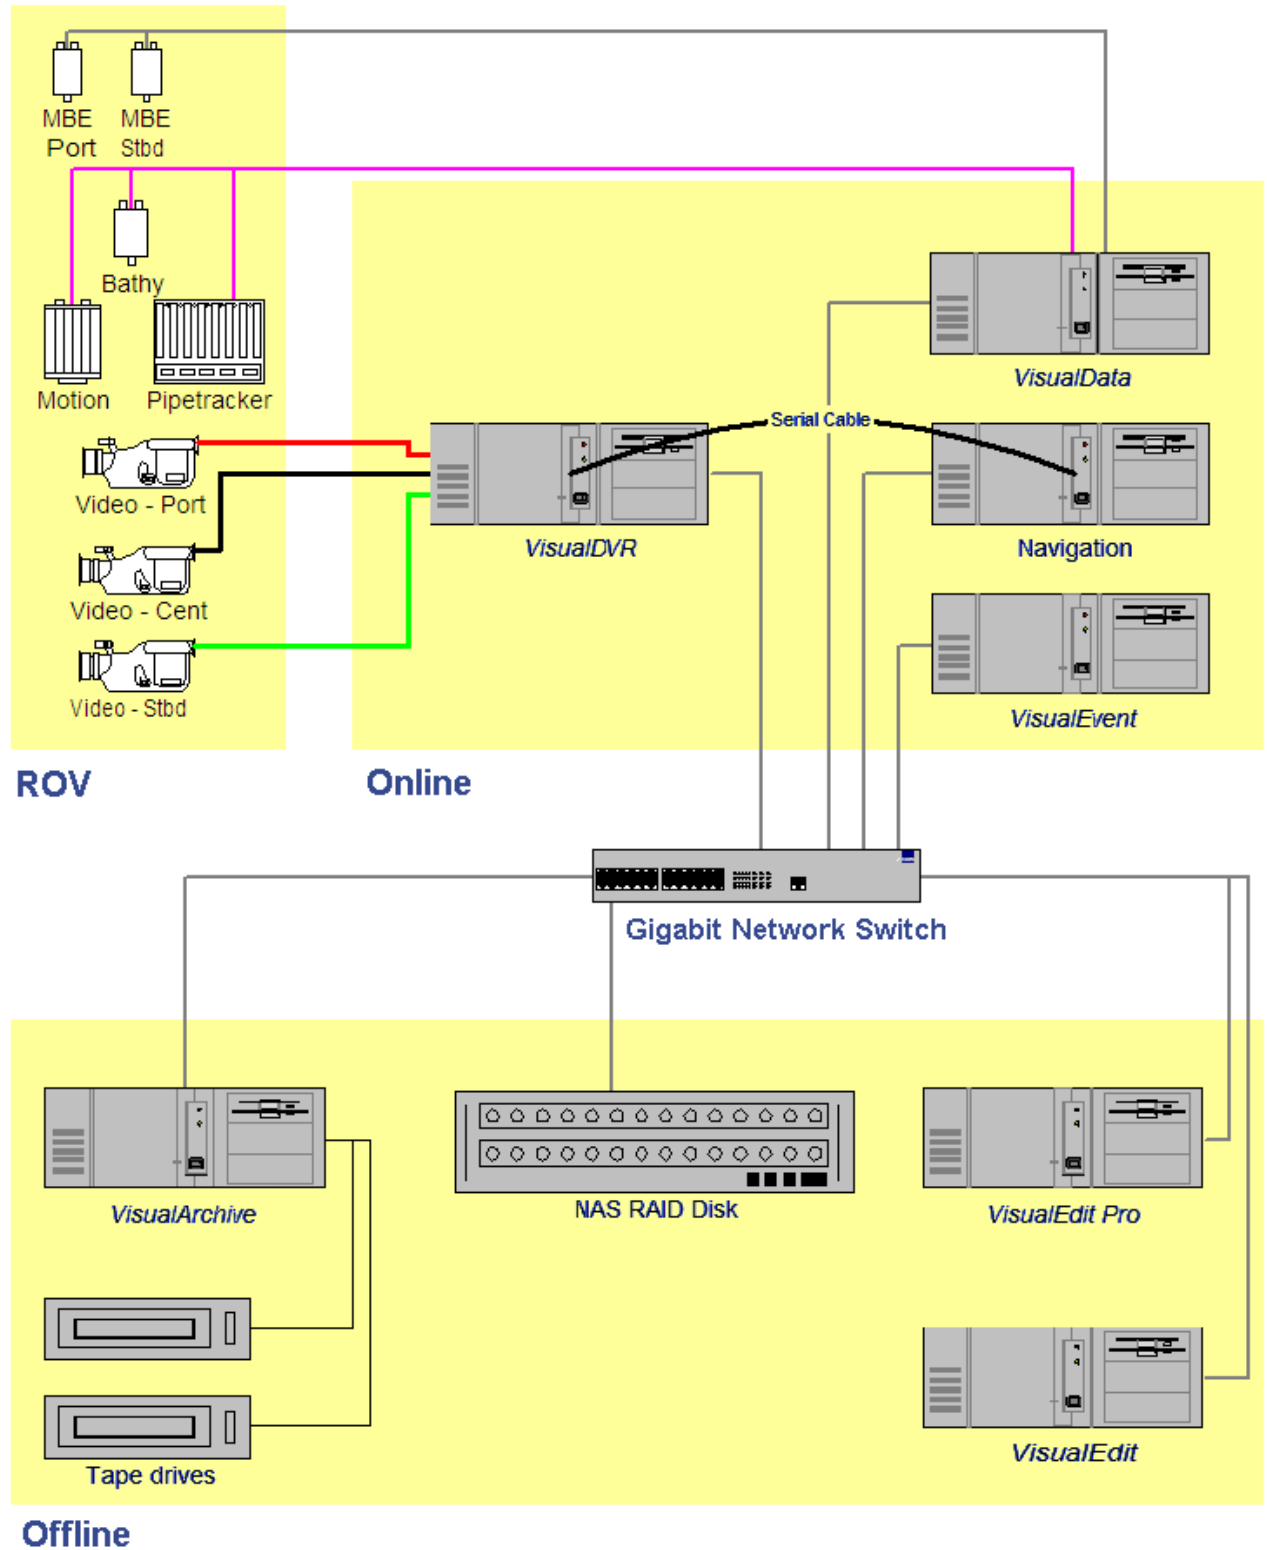

3 VIDEO DATA STORAGE OPTIONS

3.1 Approximate Storage Capacity Requirements

Continuous Video	Single Channel	Two Channels	Three Channels	Four Channels
1 hour recording	1.7 GB	3.4 GB	5.1 GB	6.8 GB
1 day recording	40 GB	80 GB	120 GB	160 GB
1 week recording	280 GB	560 GB	840 GB	1.1 TB
1 month recording	1.2 TB	2.4 TB	3.6 TB	4.8 TB


Approx. Disk capacities	Single Channel	Two Channels	Three Channels	Four Channels
DVD (4.5GB)	2.6 hours	1.3 hours	0.8 hours	0.6 hours
100GB	2.4 days	1.2 days	0.8 day	0.6 day
250GB	6 days	3 days	2 days	1.5 day
400GB	9.6 days	4.8 days	3.2 days	2.4 days
500GB	12 days	6 days	4 days	3 days
750GB	18 days	9 days	6 days	4.5 days
1TB	24 days	12 days	8 days	6 days
2TB	48 days	24 days	16 days	12 days
3TB	72 days	36 days	24 days	18 days
5TB	120 days	60 days	40 days	30 days

Approx. LTO Tape capacities	Single Channel	Two Channels	Three Channels	Four Channels
LTO2 tape (200GB)	4.6 days	2.2 days	0.75 days	1.1 days
LTO3 tape (400GB)	9.3 days	4.6 days	3.1 days	2.3 days
LTO4 tape (800GB)	18.6 days	9.2 days	6.2 days	4.6 days


4 CONFIGURE VIDEO/AUDIO INPUT

4.1 Windows Media Video (WMV) Recorder

This image shows a 3U unit with a single power supply, and a Winnov Videum Duo video capture card. An example of cable connections is shown in section 4.1.1 below. Full details of the Breakout Box or Breakout Cable connections are included in the complete **VisualDVR** user manual which may be obtained by contacting **VisualSoft** as detailed on the final page of this document.

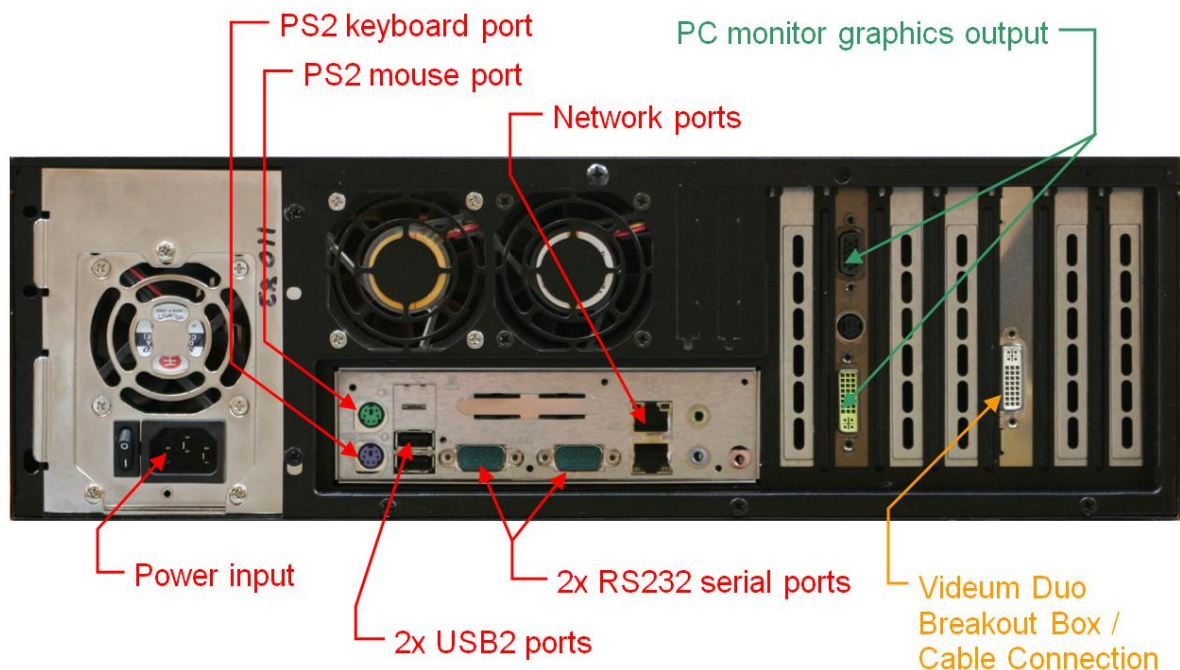


4.1.1 S-Video & Audio Connections for Single Camera with in-built overlay

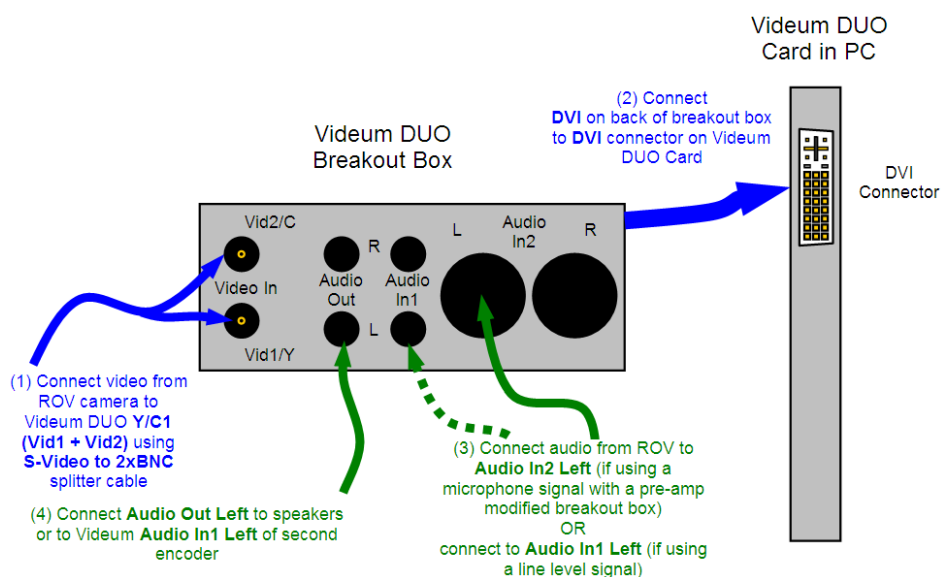


4.1.2 Configure the Video Source

Standby mode

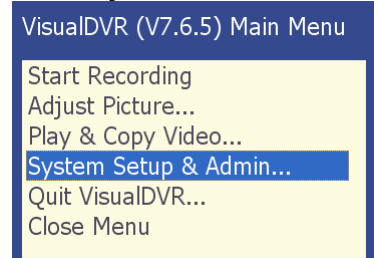

System Setup & Admin Menu

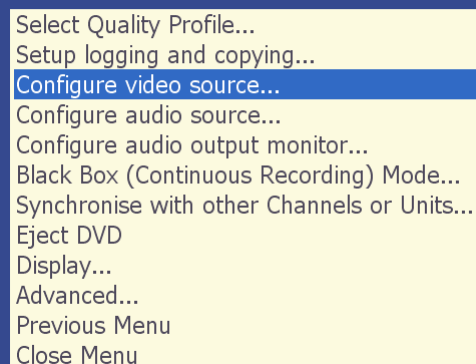

Winnov Videum Duo (Windows Media Video)

Options 1, 2, 3, and 4 are the composite video inputs.

Options Y/C 1 and Y/C 2 are the S-Video inputs.

Winnov Videum Quattro (Windows Media Video)

Options A-Vid1 to A-Vid4 are the composite video inputs of the first breakout cable/box. B-Vid1 to B-Vid4 are the composite inputs of the second cable/ box.

Options A-Y/C 1 and A-Y/C 2 are the S-Video inputs of the first cable or box. B-Y/C 1 and B-Y/C 2 are the S-Video inputs of the second cable or box.



Select Video Input Source

- ☐ 1
- ☐ 2
- ☒ 3
- ☐ 4
- ☐ Y/C 1
- ☐ Y/C 2
- ☐ AUTO-DETECT
- Previous Menu
- Close Menu

Select Video Input Source

- ☐ A-Vid1
- ☐ A-Vid2
- ☒ A-Vid3
- ☐ A-Vid4
- ☐ B-Vid1
- ☐ B-Vid2
- ☐ B-Vid3
- ☐ B-Vid4
- ☐ A-Y/C 1 (Y:A-Vid1 C:A-Vid2)
- ☐ A-Y/C 2 (Y:A-Vid4 C:A-Vid3)
- ☐ B-Y/C 1 (Y:B-Vid1 C:B-Vid2)
- ☐ B-Y/C 2 (Y:B-Vid4 C:B-Vid3)
- ☐ AUTO-DETECT
- Previous Menu
- Close Menu

4.1.3 Configure the Audio Source

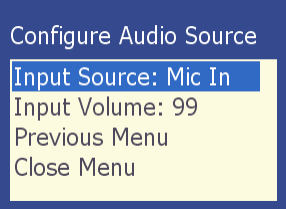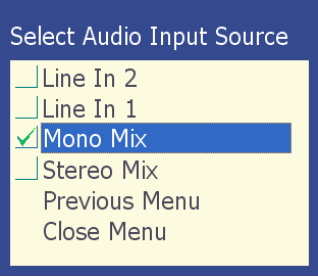Configure audio source...	Opens a menu displaying the current audio source, and volume setting.  Click on the displayed Input Source to open a menu from which it may be changed. Click on the displayed volume to open a slider control to adjust the volume. Winnov Videum Duo (Windows Media Video) The Videum Duo card is usually configured to use the Mono Mix audio option.  Winnov Videum Quattro (Windows Media Video) The Videum Quattro card is usually configured to use the Mono Mix audio option.  Optibase MovieMaker 230 (MPEG-2) This card has no user configurable input options.
---	--

4.2 MPEG-2 Recorder


4.2.1 Optibase MovieMaker 230 Connections

Connect the supplied S-Video to 2x BNC splitter cable to the Comp/Y and C/Pb connectors of the breakout-cable. Be sure to connect Y to Y, and C to C.

If you require audio (in or out) or video preview monitoring, please refer to the diagram below for the relevant connections.

Optibase 230
Breakout Cable

NOTE: Each cable has its name printed on the connector casing.

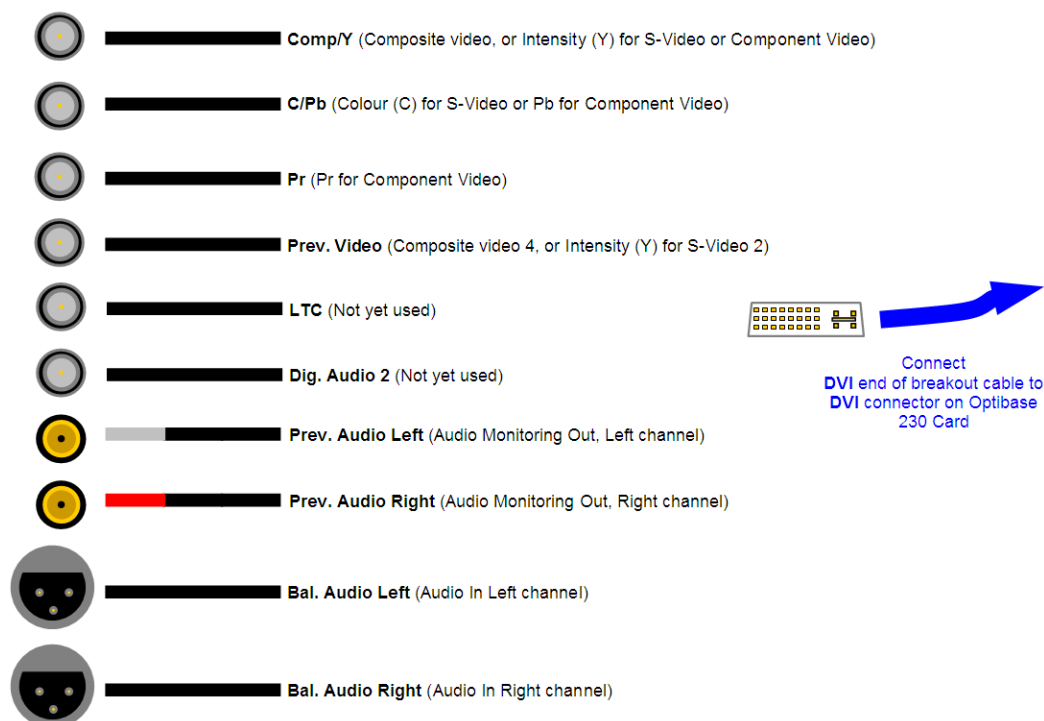

There are no user configurable video/audio source controls for the Optibase MPEG-2 card.

Each Optibase card accepts a single channel of video. Multiple cards may be placed in a single **VisualDVR** unit to provide up to 3 channel recording.

5 VisualDVR SCREEN DISPLAY

The **VisualDVR** has a large video window with a status bar at the bottom. The status bar clearly shows the current operation, video format, audio level and time information. Any menus and prompts are placed temporarily over the video display.

The layout of the video image or images varies according to the number of video channels supported by the installed version of **VisualDVR**.

5.1 VisualDVR Single Channel Display



5.2 VisualDVR Dual Channel Display



The display above shows two video channels. Channel 2 has been selected as the main display. This is done simply by clicking in the small video window on the left to select it for the main display. The >>>> symbol below the Channel 2 box indicates that this picture is shown on the main display.

The other camera is shown as a small video window with a minimal status bar display below it. In the image above Channel 1 is shown to be recording in Black Box mode. The image below shows how the small video window and status bar will appear if Channel 1 is in "Stopped" mode.



5.3 VisualDVR Quad Channel Display

The Quad Channel unit operates in the same way as the Dual Channel unit, with an extra two small video displays on the left.

5.4 Survey Data Input and Display

The Survey Data Display shows the data being received via Serial or Network port. Enable the display of the survey data as follows: Open the **System Setup & Admin...** menu, then select **Display...**. Enable the option for a "Survey Data Window", then click on **Confirm**. Close the menu and you will now see the Survey Data Display positioned immediately above the main video display.

ASFindex	TIMESTAMP	EAST	NORTH	KP	TOP	MSB	PipeId	PITCH	ROLL	HEADING
00:00:45.484	11/12/2007 11:36:47	500038.009	6700032.866	0.051188	97.421	97.885	PipeB	-5.547	0.256	-12.237

Connect a serial cable from your navigation PC to the **VisualDVR** PC, or configure the navigation software to output on a network port.

Configure the connected serial or network source in one of two ways. Either right-click in the Survey data Window and select Serial Input, then Survey Data, or use the menus to select **System Setup & Admin...**, then **Advanced**, and then **Configure Serial Data Input...**.

This opens a configuration page where you should select the Field and Record Delimiters that match your incoming data string, and specify the Field names that describe your data.

5.5 Alarm Display


The Alarm Display shows all warnings and alarms received from this and other **VisualDVR** units. A green bar is used to indicate an error free status. A flashing green bar, indicates error free status of a video recorder that is not currently recording. An amber bar indicates that a warning message has been issued by that application or channel, and a red bar indicates that an alarm message has been issued.

Below the coloured bars is a scrolling list of status, warning and alarm messages, each displayed with the time at which they were issued, and the application or channel that issued the message.

When it is enabled the Alarm Display is positioned across the very top of the screen above the main video display.

Bill-Desktop:VisualDVR_Ch1 "Recording"	Bill-Desktop:VisualDVR_Ch2 "Recording"
11/12/2007 11:36:01, Bill-Desktop:VisualDVR_Ch2, 101, START command received from Bill-Desktop	
11/12/2007 11:36:02, Bill-Desktop:VisualDVR_Ch2, 101, Recording STARTED.	

5.6 Status Bar Information

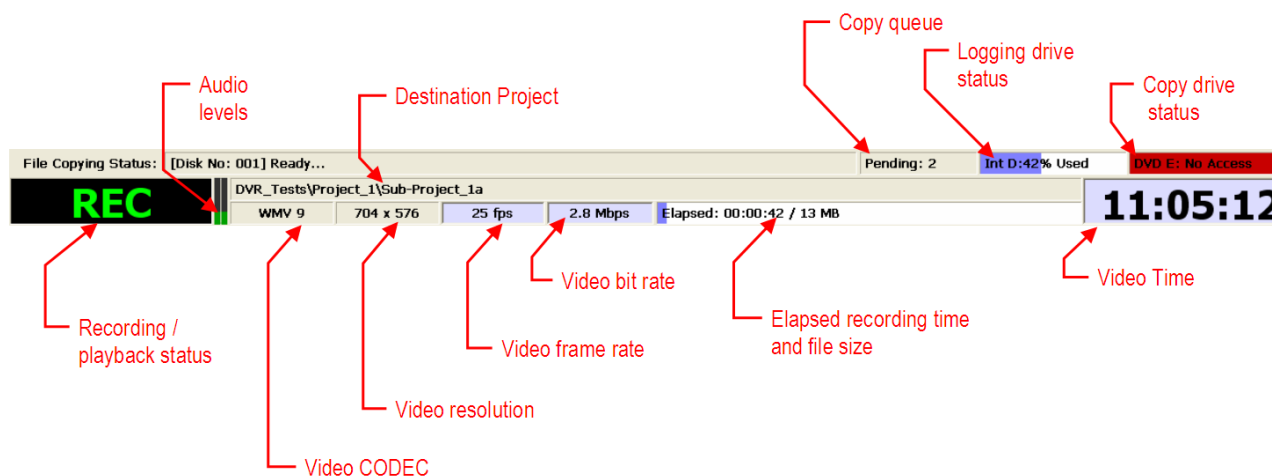

5.6.1 Recording / Playback Status

STOPPED	STOPPED	Black/yellow flashing indicates system is in standby mode.
REC		System is recording video in normal mode.
BlkBox		System is recording video in continuous Black Box mode.
PLAY		A video file is being played.
STOP		Video file playback is paused.
EXITING	EXITING	Black/yellow flashing indicates system is shutting down.

5.6.2 Audio levels

This displays the volume level of the audio channel(s), using a bar that changes colour from green to yellow as the volume rises, and then to red if the level becomes so high that it may result in distortion.

5.6.3 Destination Project

This indicates the selected Project Task or structure component folder in which the recorded data will be saved.

5.6.4 Video CODEC

This shows the user which encoding and compression method has been selected. Typical options are:

WMV 9	Windows® Media version 9
MPEG 2	Motion Picture Experts Group version 2

5.6.5 Video resolution

This shows the chosen video resolution in pixels, in the format width x height.

Typical values are:

768 x 576 Suitable for PC monitors

720 x 576 PAL D1 resolution

704 x 576 PAL D1 cropped resolution – suitable for playback on normal TV monitors.

5.6.6 Video frame rate

This indicates the selected number of frames per second to be encoded. Typical values are 25 fps for PAL or 30 fps for NTSC. Note that the background of this display will become yellow if the frame rate falls significantly below the expected value.

5.6.7 Video bit rate

This indicates the target bit rate for video encoding. Higher bit rates generally indicate higher quality, but also result in larger file sizes. In most cases, increasing the bit rate beyond a certain level will not increase the quality. Typical bit rates are 3 or 4 megabits per second (Mbps), and these provide a generally acceptable quality. For highly specialised surveys this may rise to 6 Mbps. Note that the background of this display will become yellow if the bit rate falls significantly below the expected value.

5.6.8 Elapsed recording time and file size

This shows how long the current recording has been running, and the current size of the file that has been created. The blue progress bar in the background gives an indication of the elapsed time/size as a percentage of the configured file time/size limits.




Elapsed: 00:00:35 / 11 MB

5.6.9 Copy Queue

This indicates the number of files that are queued, waiting to be copied to DVD or an external drive.

5.6.10 Logging Drive Status

This shows the percentage disk usage of the internal logging drive. The blue progress bar in the background gives an indication of used disk space as a percentage of the total available disk space.



Int D:42% Used

5.6.11 Copy Drive Status

This shows the disk usage or other status information for the DVD or external copy destination drive. The blue progress bar in the background gives an indication of used disk space as a percentage of the total available disk space. If the DVD drive has no recordable disk in it, the status will show "No Access".



Ext F: 41% Used DVD E: No Access



5.6.12 Video Time

In recording mode and standby mode this shows the current time on the **VisualDVR** unit. In playback mode it displays the time associated with the currently displayed video, i.e. the time at which it was recorded.


7 BASIC VIDEO RECORDING

7.1 Start/Stop Recording


To **start** video recording, click the left mouse button or Control Wheel on the Main Display window to open the Main menu. The default option is **Start Recording**, so you can simply click a second time to start the recording.

To **stop** video recording, click the left mouse button or Control Wheel on the Main Display window to open the Main menu. The default option is **Start Recording**, so you can simply click a second time to start the recording.

Standby mode

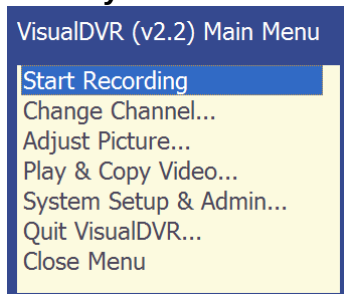



Recording mode

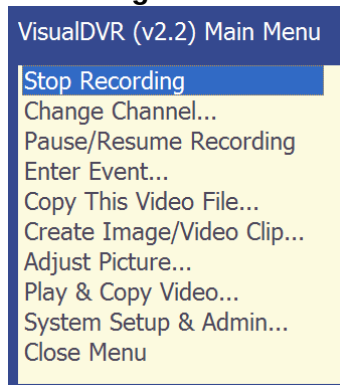



7.2 Select Destination for Video recording in Project Tree index

When searching for video related to a specific pipeline or structure component it is more convenient to search by the component name than by time. **VisualDVR** therefore allows data to be placed in a user-defined hierarchy of folders corresponding to the pipeline or structure and its components.


To Enable Project Tree ON:

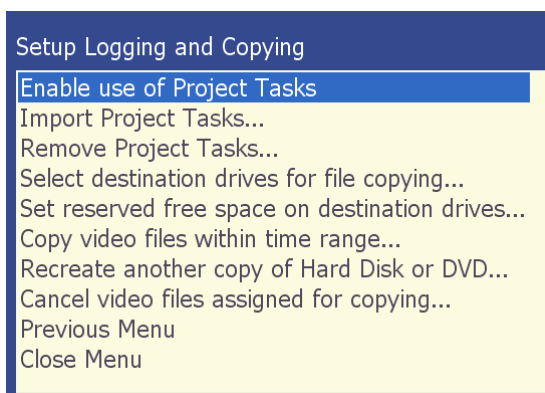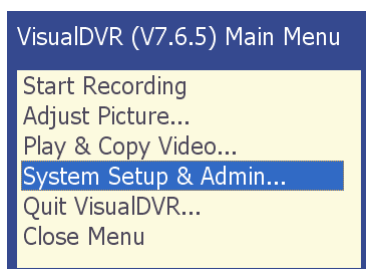

7.2.1 Importing Project Tasks

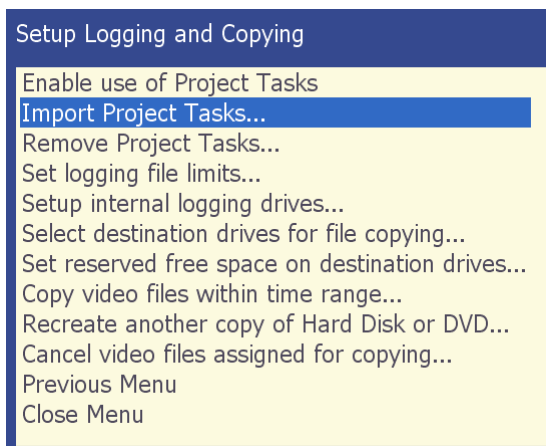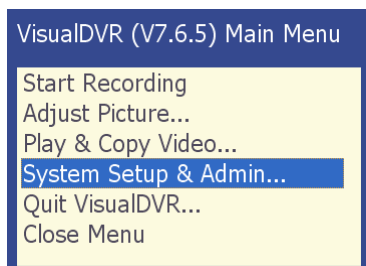

This will open a list of all disk drives on which there is an available **VisualWorks** Project folder. Select the required drive to import from.

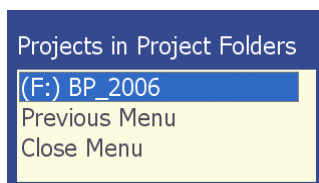


The imported folders will then be displayed as shown above. Select the required logging folder by scrolling to highlight it and then hit the Return key.

Note that importing Project Task folders does not import any data contained in those folders, and does not physically create a folder hierarchy on the logging disk. Instead a configuration file is created in which the hierarchy is saved, and folders are created only on the copy destination (DVD or external drive) as they are used by the logging process. Unused folders in the hierarchy will not be created.

7.2.2 Recording to Project Tasks

To start video recording, click the left mouse button or Control Wheel on the Main Display window to open the Main menu and Select Start Recording

You can now just select the directory to store the new video in from the list:-

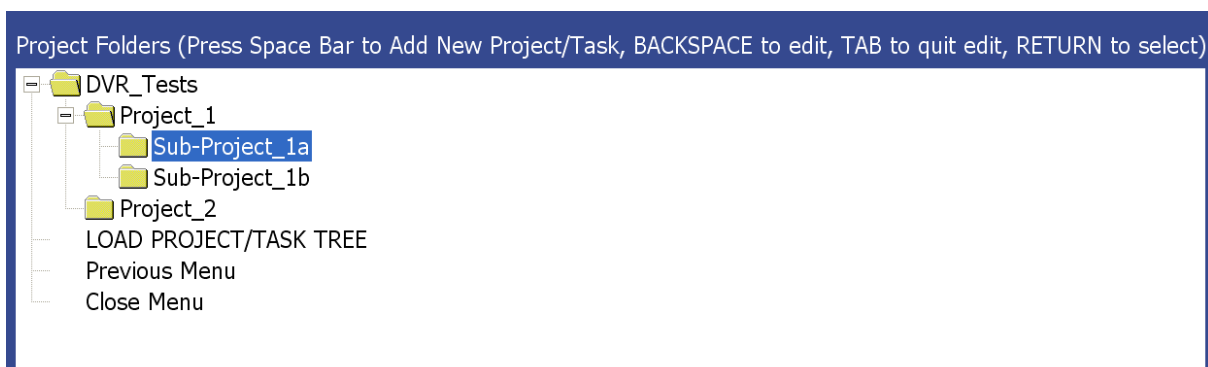

Or you can manually edit/insert new directories: Note the instructions in the blue title bar for editing the folder names and hierarchy:

- Space Bar Add a new Project Task below the highlighted level
 - Backspace Edit the highlighted Project Task name
 - Tab Quit editing the Project Task name
 - Return Select the highlighted Project Task for logging.
 - F5 Get list of open Projects from VisualArchive
-
- Use Windows Explorer to create index in VisualWorks\Project sub-directory

7.3 Create a Still Image or Clip During Recording

7.3.1 Creating a JPEG Image

To create a still image whilst recording select the F2 key: when you finish recording the **VisualDVR** will create a still image jpg picture into the VisualWorks\Clips sub-directory.

To access the Clips directory select the F5 key

7.3.2 Creating a Video Clip

To create a video clip whilst recording select the F3 key to start the video clip creation and then F4 to stop the video clip recording: when you finish recording the **VisualDVR** will create a WMV or MPEG-2 video clip into the VisualWorks\Clips sub-directory.

It is also possible to access these functions through the Main Menu – see the **VisualDVR** User Manual – section 7.3

7.3.3 Viewing Video Stile and Clips


To access the Clips directory select the F5 key

7.4 Dive Log – Event Entry During Recording


VisualDVR allows event data to be logged during video recording to identify and “bookmark” features in the video file. These events may be categorised into different types, and may have text comments added to them. It is also possible to flag any event as being an “Anomaly”.

To log an event while the system is in recording mode press the spacebar, click the Control Wheel or left click with the mouse. This will open the Main Menu.

The Simple Event Entry window has a number of fields and buttons.

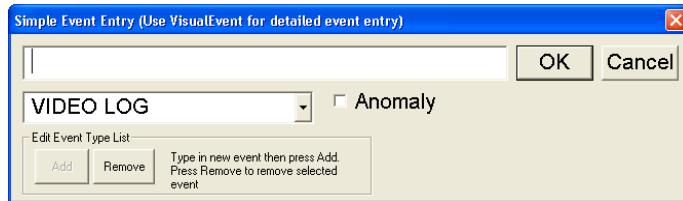

The upper box allows you to enter a detailed comment if required. Below that is a drop-down list of available Event Types.

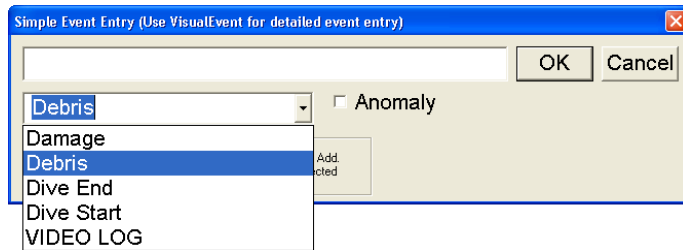

If you want to add extra Event Types to the drop-down list, simply select the drop-down and type the required information then click on the Add button. Entries may be removed from the list by selecting them and clicking on the Remove button. If you tick the Anomaly check box then this will set an anomaly flag.


To log an event, select the appropriate type, enter a comment or description if needed, set the anomaly flag if required, and then click on OK

8 BLACK BOX RECORDING MODE

The Black Box recording mode provides a method of continuously recording video. Black Box video files are kept on the internal system only and are not automatically copied to DVD or external disk drives. The Black Box video files are automatically deleted after a certain time to create space for newer recordings.


8.1 To Start Black-Box Recording

To start Black Box recording mode, open the Main Menu and select **System Setup & Admin...**.

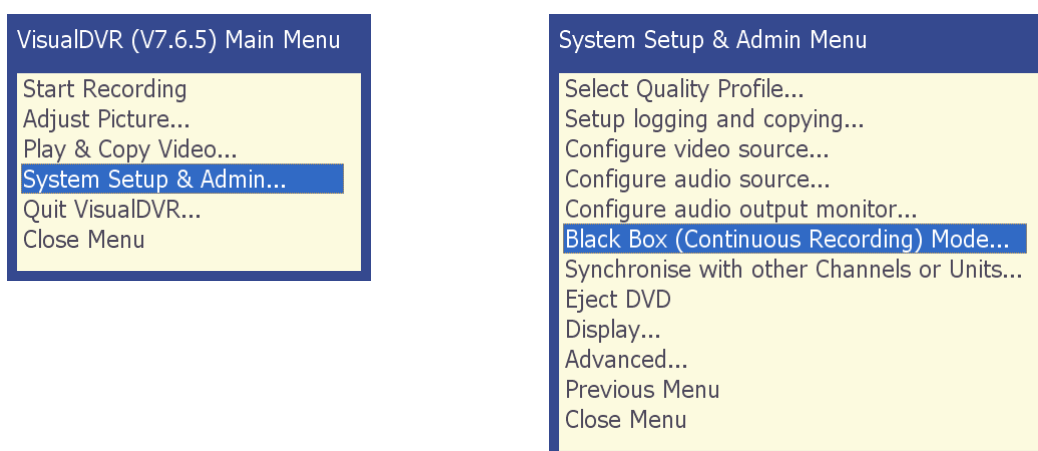

On a single channel system this will prompt you to confirm that you want to enable continuous recording. Select **Yes** to start continuous recording.

On a multi-channel system a menu is opened in which the user may tick the boxes for the channels that are to be recorded in Black Box mode. Select the required Black Box channels and then click on the **Confirm** option to accept the changes before closing the menu.

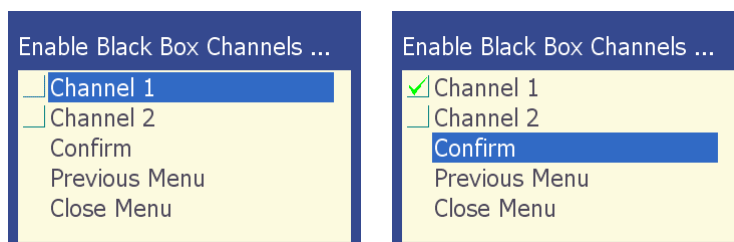

When Black Box recording is active, the Recording/Playback Status display will show BlkBox, as in the example below.





8.2 To Stop Black-Box Recording

To end continuous Black Box recording re-select **Black Box (Continuous Recording) Mode...** from the System Setup & Admin menu. This time you will be prompted “Do you want to DISABLE Continuous Record Mode?”. Select **Yes** to stop continuous recording.

During Black Box recording it is possible to use the normal **Start Recording** and **Stop Recording** commands. In this case the manually created recordings will not be deleted. If automatic copying is enabled the manually created recordings are copied to DVD or external disk drives in the normal way.

9 SETUP *VisualOverlay*


9.1 Quick Start: Screen Overview

To access the *VisualOverlay* setup screen select the F6 key

The left hand pane of the window shows a data tree with the following information:

- A list of the available **Overlay Devices**. For live video overlay you should see a devices called Vitec VM-OSD, Videum Duo or Videum Quatro. To add a new device right click and select New Overlay Device
- A list of available **Screen Layouts**. A list of different layouts may be pre-configured so that you can simply activate the one you want to be displayed.
- A list if available **Items** that can be selected for display on any Screen Layout. These items include any of the data values available to the system, i.e. any survey sensors attached to the VisualWorks system.
- You can also setup Text Labels/Titles and import pictures/logos.

The right hand pane shows a preview display of the configured overlay.

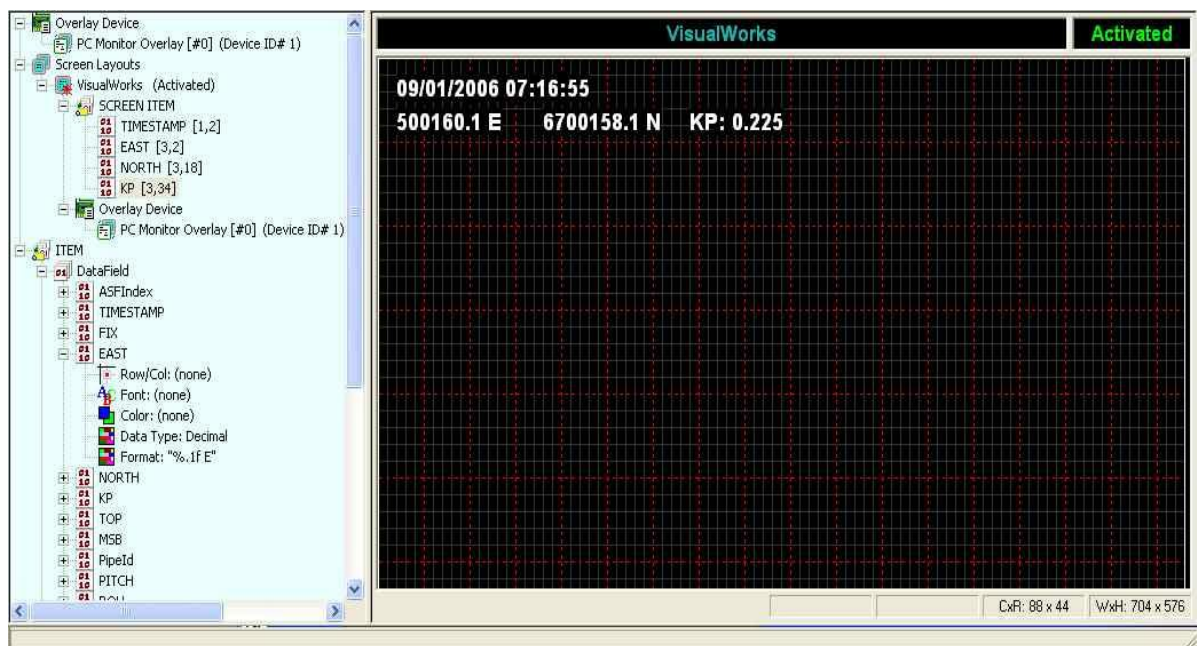

9.2 Quick Start: Configure an Overlay



9.2.1 Add all Overlay Devices that are connected to your system:

An Overlay Device is a hardware device to which a configured overlay may be sent. This may be one of the following:-

- PC monitor overlay
- Vitec VM-OSD overlay card
- Videum Duo encoder/overlay card – there will be 2 overlay channels to add
- Videum Quattro encoder/overlay card – there will be 4 overlay channels to add

The Vitec overlay card takes in a video signal, adds the overlay text and images to it, and outputs a new, combined video signal. This options allows both generation of an overlay for the recorded digital video and an output to an external monitor display

When using a Videum Quattro or Videum Duo card, you should see either four or two overlay devices respectively as shown below.

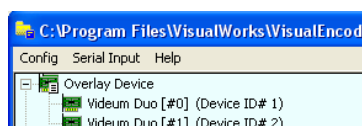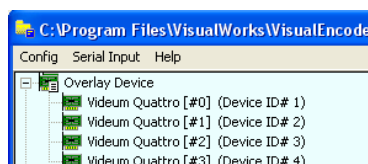


If these devices are not shown automatically, right-click on Overlay Devices and select New Overlay Device. You will then be presented with a list of available devices from which you should select the Videum device and then click on OK.

Next you will see the following screen:



If you select the option to “Open any device available”, the system will automatically select the next Device ID that is not already opened. Otherwise you can select from the drop-down list as shown below. If you select the option to show “Unopened Device IDs only”, the drop-down list will no-longer include devices that are already in use.

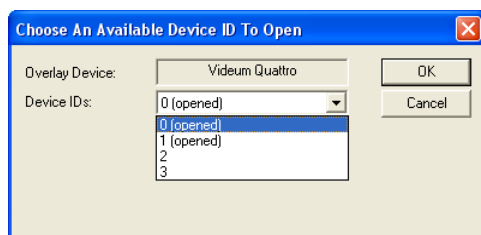

9.2.2 Create a new Screen Layout:

- Create a new Screen Layout by right-clicking on “Screen Layouts” and selecting “New” from the pop-up menu. Give the new layout a name, e.g. VisualWorks.

Figure 1: VisualOverlay Data Tree



A Screen Layout is a configured arrangement of text and image items forming an overlay. Multiple Screen Layouts can be configured and saved, and these may then be Activated or De-Activated as required.


- A Screen Layout is made up of one or more Screen Items, and has one or more Overlay Device associated with it. Select the Data Fields, Labels/Titles, and Pictures that you want to be displayed.

9.2.2.1 Add Screen Items


Screen Items are Data Fields, Labels and Pictures that have been associated with a particular Screen Layout. Each Screen Item has a configured position on the screen and has font, colour, and formatting properties.

An Item may be either a Data Field, a Label, or a Picture. Any available Item may be added to any available Screen Layout. Items may be given user definable names, with the exception of Data Fields, which are named automatically with the names of the serial data string columns.

- Add Items to a Screen Layout by right-clicking on an entry in the Items list and selecting the “Add to Screen(s)” option.

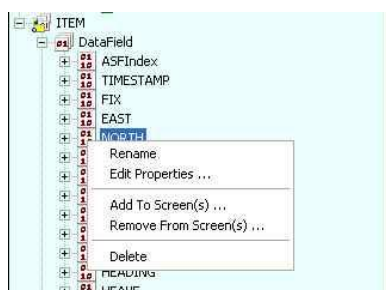

- Data Fields can be formatted to display a prefix and/or suffix, and can be set to a fixed number of decimals. To format a Data Field right-click on it, and select Edit Properties from the pop-up menu.

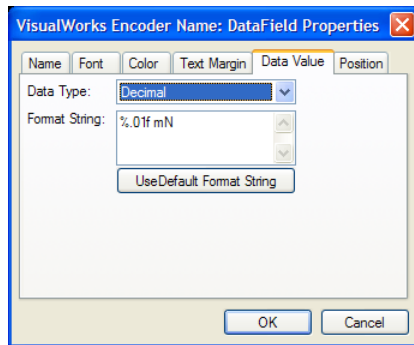Figure 2: Data Field Formatting

The table below shows some examples of Data Field formatting.

Raw data string	Format options	Displayed data
6378975.345678	Data Type: Decimal Format String: "%.1f N"	6378975.3 N
17.26064	Data Type: Decimal Format String: "KP: %.3f"	KP: 17.261
29.12345	Data Type: Decimal Format String: "Depth: %.1f m"	Depth: 29.1 m
23/04/2007	Data Type: DateTime(Local) Format String: "%d/%m/%Y"	23/04/2007
10:23:45	Data Type: DateTime(Local) Format String: "%H %M %S"	10:23:45

- Format these selected Screen Items to be displayed as you would like.


To open the properties settings, right-click on the name of the Screen Layout in the data tree, and select Edit Properties from the pop-up menu. This will open a dialog box with five tabs; Name, Font, Colour, Text Margin and Update Timer. Select each tab and make the required changes, then click the OK button.

Text Font and Colour


You can set a default font and text colour for each Screen Layout, so that as data items are added to the screen they all appear with consistent look.

NOTE: Only the Vitec card supports selection of font type and colour. The Videum cards have a predefined font for which only the size may be changed.

Screen Layout Default Font

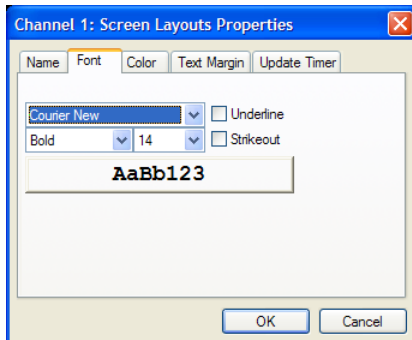

Screen Layout Default Colour

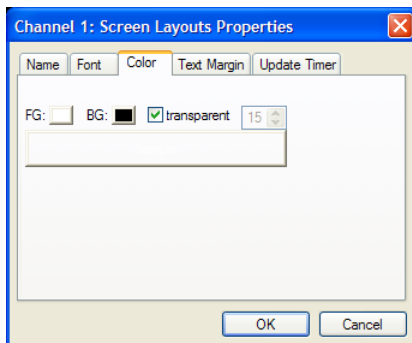


Use the “transparent” option to make the background colour transparent so that your text displays directly over the video picture.

9.2.2.2 Add Overlay Devices to Screen

- Add one or more Overlay Devices to the Screen Layout – right click on the Screen Layout name, and then use the pop-up menu to select “Overlay Devices” and then “Add Overlay Device to Screen”. This will open a dialog box in which you can select one or more devices by ticking the box next to it. Click on OK to accept the choice.

Figure 3: Add Overlay Device to Screen Layout

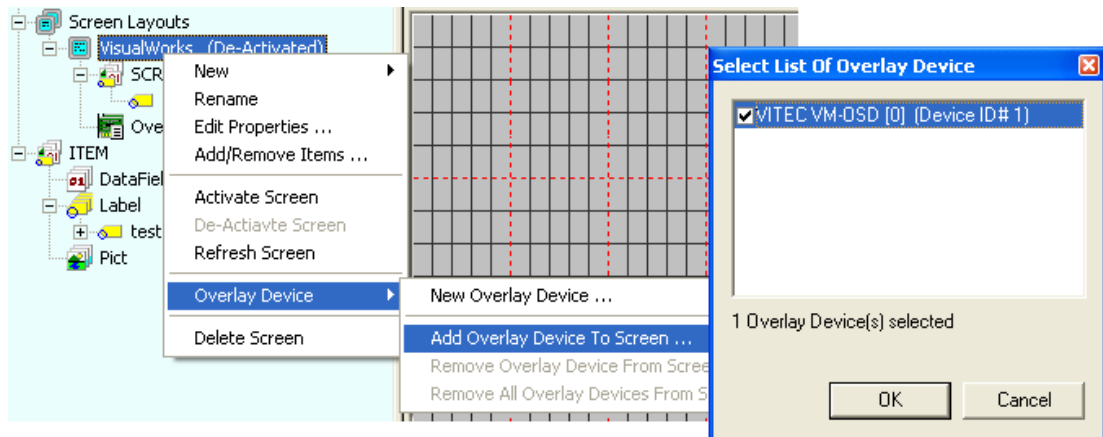


Activate your Screen Layout to appear on the video overlay – right click on your Screen Layout and select Activate Screen. You should now see the overlay in the preview

10 COPYING VIDEO TO DVD/USB DISKS


The procedure for copying files to either a DVD or to an external disk is the same for both. The system can be configured to copy files automatically when they are created, or the user can choose to copy files manually. If a project tree has been imported then the relevant portions of that tree will be created on the destination storage drive as they are used and the video files will be saved to the correct component folder.

10.1 Automated Copying

Open the Main menu, and highlight **System Setup & Admin...**. Click this to enter the Setup menu then click on **Setup logging and copying...**. The first stage is to specify where the video files should be copied to: In the Logging and Copying menu select the option to **Select destination drives for file copying...**.

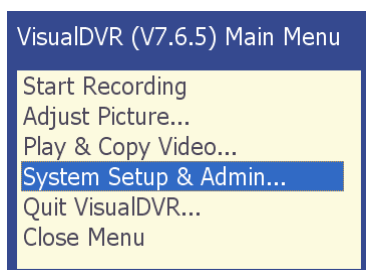

This will open a menu list of destination drives from which you can select one or more drives.

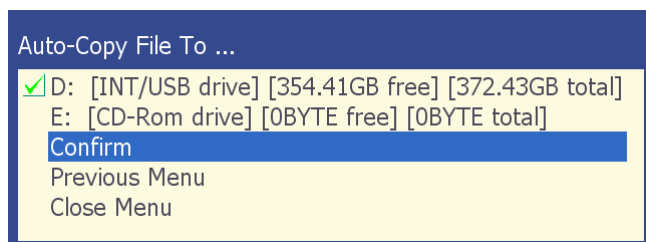

Clicking the mouse or pressing the Control Wheel toggles the selection of the highlighted drive. Select one or more drives and then click on **Confirm** to finalise the selection.

By default, the automatic copying process will copy **all** video files that have not already been copied to the selected destination drive(s). If this is not what you want then you can enter specific time limits for the files that should be copied. From the Logging and Copying menu select the option to **Copy video files within a time range...** and enter a start time and an end time to determine which files must be copied. All files recorded after the chosen start time, and before the end time will be copied.

10.2 Automated Copying to DVD


This works identically to the USB disk copying detailed above – just select the Windows drive letter that corresponds to the DVD writer and put in a blank DVD and the **VisualDVR** will treat it as another digital media to write to

10.3 Manual Copying


See section 11 below.

11 PLAYING VIDEO

To playback a video file, you must first locate the file to be played.

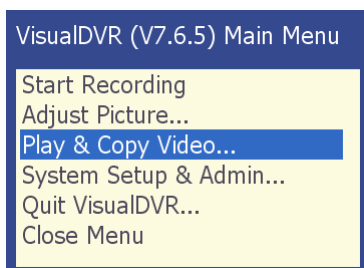


Select a video file by choosing a disk drive :

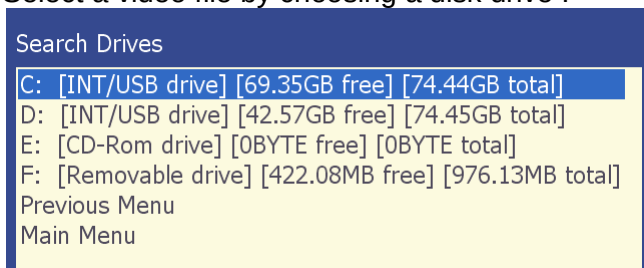

11.1 Select a Video File


Having selected a drive you will see a list similar to the one shown here.

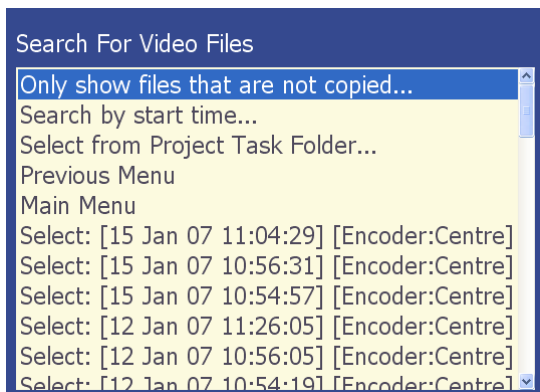

Use the displayed options to find and select a video file for playback.

11.1.1 Find Video Using Date & Time


The **Search by start time...** option can be used to locate a video file recorded at a specified time. Enter the time and date, and then click the OK button to the right.

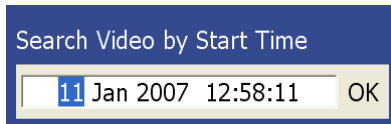

11.1.2 Find Video Using Structure Component, Pipeline or Project Name


Select from Project Task Folder... can be used to locate video that has been linked to a pre-defined project tree.

Expand a branch of the tree to see the video files associated with it. Highlight the required file and click to select it for playback.

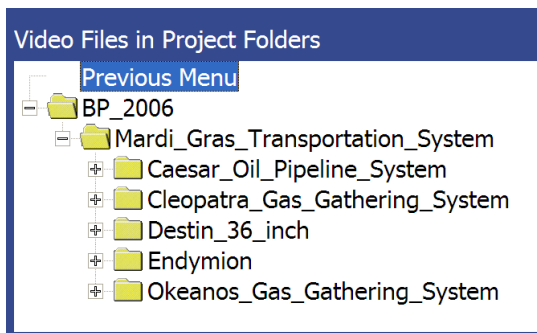


11.1.3 Select an Unassigned Video

The video search tool shows the options listed above, and also includes any video files that were not assigned to Project Tasks when they were recorded. To select one of these, highlight it, and click to select.



11.2 Play the Selected Video

Having located and selected the required video file, you will see the following list of options.

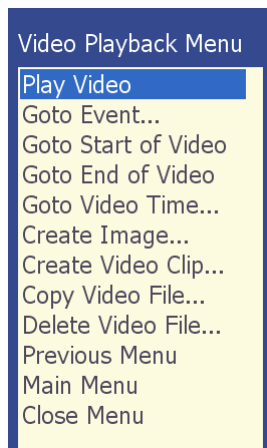


Select the **Play Video** option to start playback of the chosen file.

If Events were logged during video recording, you can jump straight to them and display the relevant video using **Goto Event...**.

Goto Start of Video will jump back to the first frame of the selected video, and **Goto End of Video** will jump to a point two seconds before the final frame of video so that you may then play the end of the file for QC or other purposes.

Goto Video Time... will open a slider control showing the start and end times of the video file at either side, and the currently selected time at the bottom. This allows you to browse through the video using the timestamp. As the slider is moved, the video will jump to the selected time.

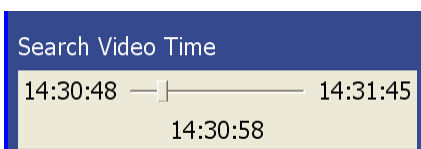

11.3 Playback Speed

While a video file is being played, you can control the playback speed by rotating the Control Wheel to speed up and slow down. The speed can vary from 0 to 10 times normal speed. If the play is stopped and you rotate the Control Wheel anti-clockwise then the video will step backwards. This makes the Control Wheel a very efficient tool to use when reviewing video. The same effect can be achieved using the wheel of a mouse if you have one attached to the **VisualDVR** unit.

11.4 Pause Playback

You can pause video playback by pressing the Control Wheel (or clicking the mouse). While the playback is paused, pressing the Control Wheel opens the Video Playback Menu (shown in section 11.2 above). To resume playback simply select the **Play Video** option.

The Video Playback Menu also includes an option to **Goto Video Time...** as described above. This is used to quickly search the selected video file. By using the wheel to change the current location in the video file, the video picture quickly seeks to the specified time. Play continues when the Control Wheel is pressed to accept the selected position.

11.5 Stop Playback

Video playback is stopped by pressing the Control Wheel or clicking the mouse in the same way as pausing the video playback. To end playback and remove the video from the display, open the Video Playback Menu and select the **Main Menu** option.

11.6 Playing Video with *VisualReview*

As an alternative to the built-in playback functions of **VisualDVR**, video playback and many other functions including extracting video clips/still and copying data onto other disks/DVD can also be performed by the **VisualReview** windows software:

To start **VisualReview** press the Windows key  to bring up the Start Menu and then go to Programs – VisualWorks – VisualReview

Refer to the **VisualReview** User Manual for further details.

A SUPPORT

If you are unable to find the answers to your questions within this User Manual, please contact *VisualSoft* for further help and advice.

VisualSoft Ltd

By Email: support@visualsoft.ltd.uk

By Telephone:

Office Hours:- +44 (0) 1224 766-000

Out of Hours:- +44 (0) 1224 363-999

This is an automated phone system, operating from 17:00 until 08:30 UK time each night, and from 17:00 Friday until 08:30 Monday at weekends. The system will route your call to an on-call support operator.

By Fax: +44 (0) 1224 279-737

Address: **VisualSoft Ltd**
Concorde House
Endeavour Drive
Arnhall Business Park
Westhill
ABERDEEN
AB32 6UF
U.K.

Website: www.visualsoft.ltd.uk