



Vibration Table



Aimil Ltd.

Instrumentation & Technologies

Version
3.0



Aimil Ltd.
Instrumentation & Technologies

AIM - 364
AIM - 365 - 1
AIM - 366 - 1
AIM - 367 - 1

VIBRATING TABLE

Operating Instructions



Vibrating Table

The equipment comprises of the following :

- | | |
|--|--------|
| 1. Main vibrating table | - 1no. |
| 2. Clamp rod with nut | - 1set |
| 3. Mould Clamp | - 1no. |
| 4. Open ended Spanners 30 - 32 `1 oo. | - 1no. |
| 5. Copy of Operating Instructions with General Assembly Drawing. | - 1no. |



Operating Instructions Vibrating Table

Introduction

The Aimil Vibrating Table is specially designed to enable proper compaction of cement concrete while casting specimens for compressive strength determination. The proper compaction of specimens is desirable to achieve consistent cement concrete mixture with neither segregation nor excessive laitance. The vibrating tables come in different capacities with models numbers mentioned in the table below against the size of the vibrating table. All models operate on a 220/230 volts, 1 phase, 50 Hz, AC supply.

Sr. No.	Cat. No.	Table Top Size in mm	Capacity in Kg	Supply
1.	AIM-364	750x750	200	220/230 volts, 1 phase, 50 Hz, AC supply.
2.	AIM-365-1	500x500	140	220/230 volts, 1 phase, 50 Hz, AC supply.
3.	AIM-366-1	1000x2000	500	220/230 volts, 1 phase, 50 Hz, AC supply.
4.	AIM-367-1	1000x1000	250	220/230 volts, 1 phase, 50 Hz, AC supply.

Description

The equipment is illustrated in the General Assembly Drawing and the numbers given against the components of the equipment in the description below pertain to this drawing.

It consists of a vibrator (4) fitted to the bottom of the vibrating table top (5). The vibrations are imparted by off-balance masses rotating on the shaft of a vibrator (4) clamped to the underside of the table top (5).

The dimensions of the table top (5) are as per the table above. The table has stops along its edges to prevent moulds from sliding off the table during operation. A clamping arrangement (7) is provided on the top of the table for clamping the moulds firmly. The maximum load capacity of the the vibration table is as per the table above and it operates on a 220/230 volts, 1 phase, 50 Hz, AC supply.




Setting up

Place the vibrating table near a mains power outlet, that can provide a stable mains supply of 220 V, 50 Hz, single phase. Connect the moulded mains power cable to the power wall outlet.

After preparing the cement concrete mix, place moulds on the vibration table platform. Fill concrete in the mould in layers approximately 50mm deep. In placing each scoopful of concrete, move the scoop (not supplied with the outfit) around the top edge of the mould as the concrete slides from it, in order to ensure a symmetrical distribution of the concrete within the mould. Let each layer be compacted by vibration. The mode and quantum of vibration of the specimen should be nearly the same as those adopted in the actual concreting operation. After compacting the top layer, finish the surface of the concrete level with the top of the mould. (AIM-428 TROWEL can be supplied as an accessory for this purpose at an extra cost). Secure the moulds with the mould clamp by tightening the hex nut, using the open ended spanner, of size 30 -32 supplied along with the vibrating table. Switch ON the mains power outlet, so that the vibrator starts working. Stop the vibration of table by switching off the power from the wall socket and remove the mould from the vibrating table.

Maintenance

Always keep the machine clean, especially the vibrating table top.

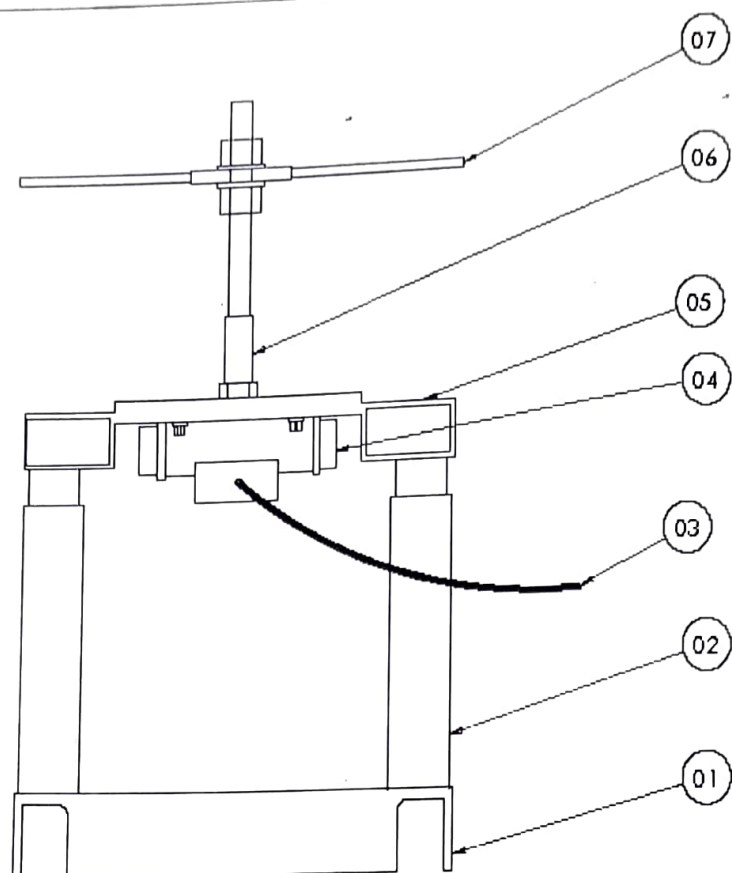


AIM-364,365-1,367-1,VIBRAING TABLE

S.NO.	DESCRIPTION
01	BASE
02	PILLAR
03	MAINS WIRE
04	VIBRATOR



S.NO.	DESCRIPTION
05	TABLE TOP
06	CLAMPING ROD
07	MOULD CLAMP

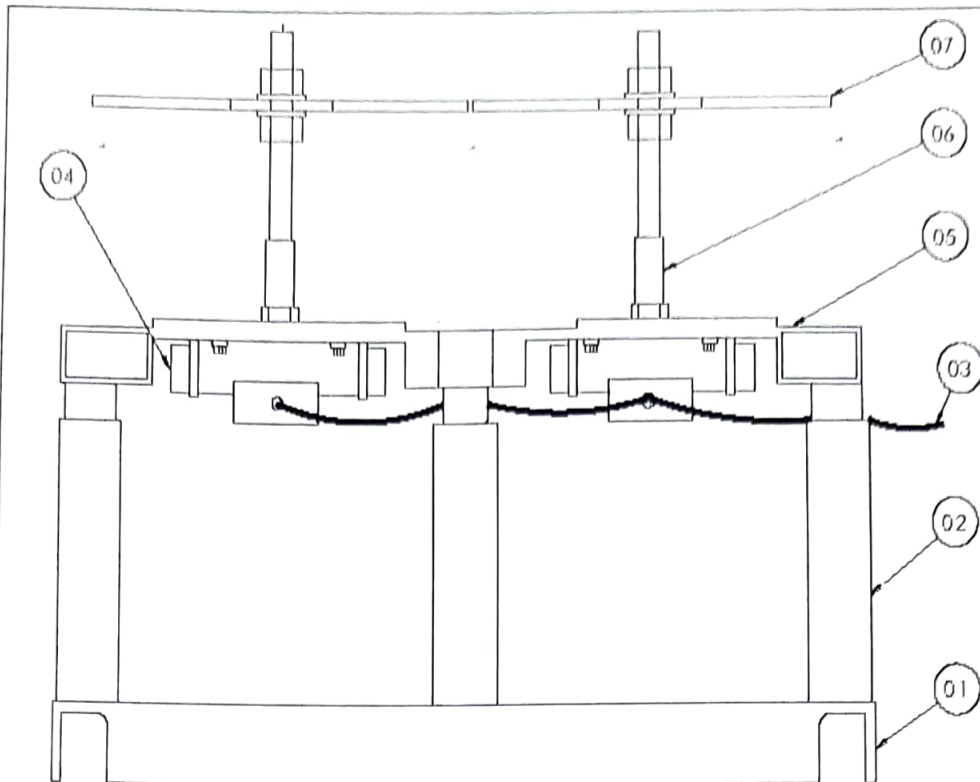

AIM-366-1 VIBRATING TABLE

S.NO.	DESCRIPTION
01	BASE
02	PILLAR
03	MAINS WIRE
04	VIBRATOR

S.NO.	DESCRIPTION
05	TABLE TOP
06	CLAMPING ROD
07	MOULD CLAMP