Pioneer
Car Service Center

USER MANUAL

Service Advisor

Receive the customer, open the job card, raise and send the estimate, record the decision and hand the car back.

- Step 1 · Customer classification
- Step 2 · Vehicle information & issue
- Step 3 · Job card opened
- Step 4 · Inspection & pricing
- Step 5 · Estimate to customer
- Step 6 · Customer decision & work
- Step 7 · Quality check, pickup & closure

Your role at a glance

You are the customer's single point of contact. You open the job card when the car arrives (Steps 1–3), raise the estimate and price the labour (Step 4), send it once the Store has priced the parts and — for external customers — the Supervisor has approved it (Step 5), record the customer's decision (Step 6), and finally call the customer, take payment, issue the gate pass and close the job (Step 7).

Where you fit in the job card workflow

1	2	3	4	5	6	7
Customer classification	**Vehicle information & issue**	**Job card opened**	**Inspection & pricing**	**Estimate to customer**	**Customer decision & work**	**Quality check, pickup & closure**
Service Advisor	Service Advisor	System · Service Advisor	Service Advisor · Technician	Store · Supervisor · Service Advisor	Customer · Team Leader · Technician · Store	Supervisor · Service Advisor

What the system lets you do


- **Step 2** Open job cards and record the vehicle and issue
- **Step 4** Raise and send estimates; price labour
- **Step 6** Record the customer's decision
- **Step 6** Raise material requisitions (request parts)
- **Step 7** Pickup call, payment, gate pass, close the job

In this manual

1 Signing in
2 Your dashboard
3 Open a job card
4 The job card after it is opened
5 Raise the estimate
6 Approval and sending
7 The customer's decision
8 Pickup, payment, gate pass, closing
9 Quick reference

1. Signing in

1. Open the workshop system in your browser (Chrome, Edge or Safari).
2. Type your **username or e-mail** and your **password**, then press **Sign In**.
3. The system opens your dashboard. Your role — **Service Advisor** — is shown at the top right.

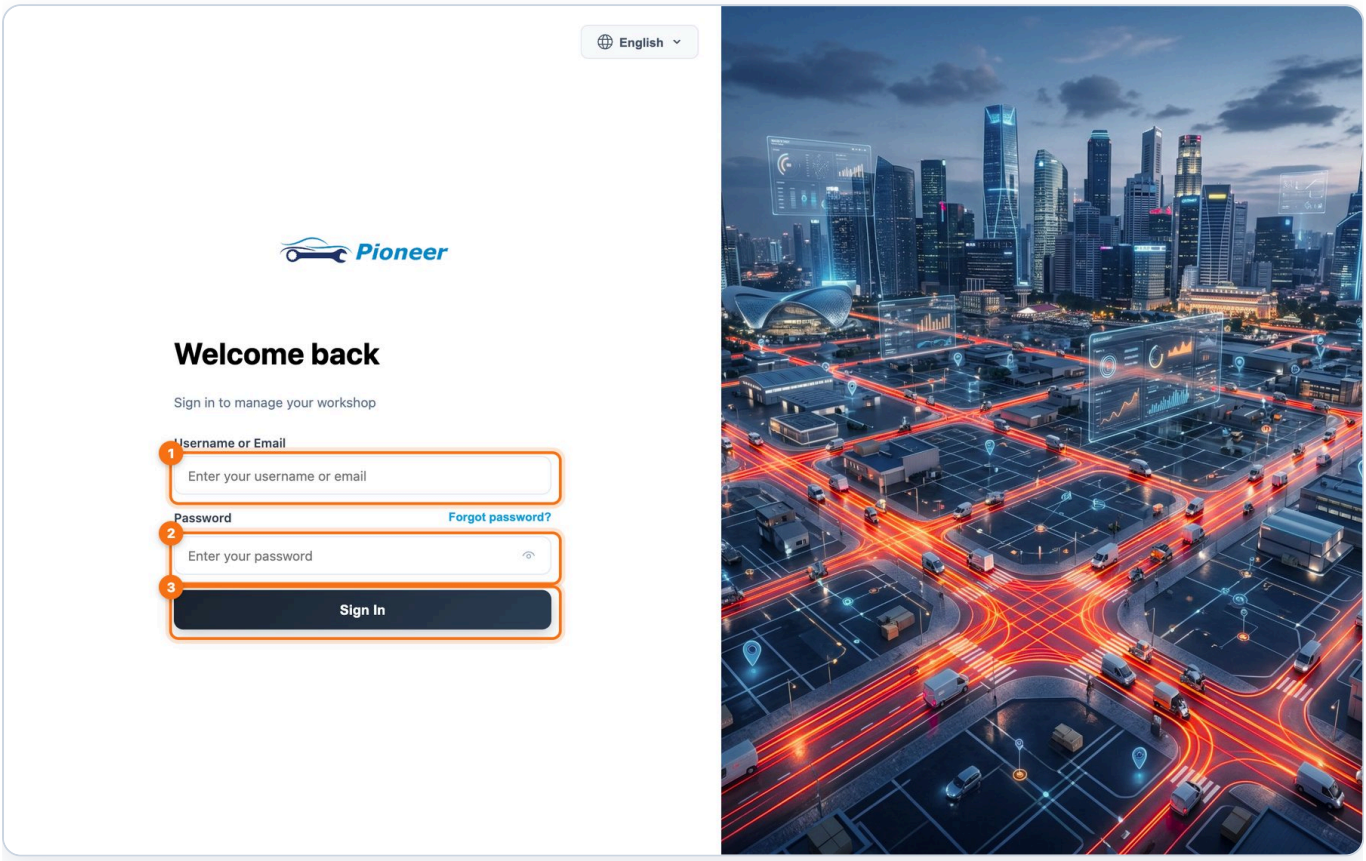


The sign-in page: (1) username or e-mail, (2) password, (3) Sign In.

TIP Use the **EN** button at the top of any page to switch language (Arabic and 10 others). Your choice is remembered on this device.

NOTE Your account is created by the Workshop Manager. Forgot your password? Use **FORGOT PASSWORD?** on the sign-in page or ask the manager to reset it.

2. Your dashboard

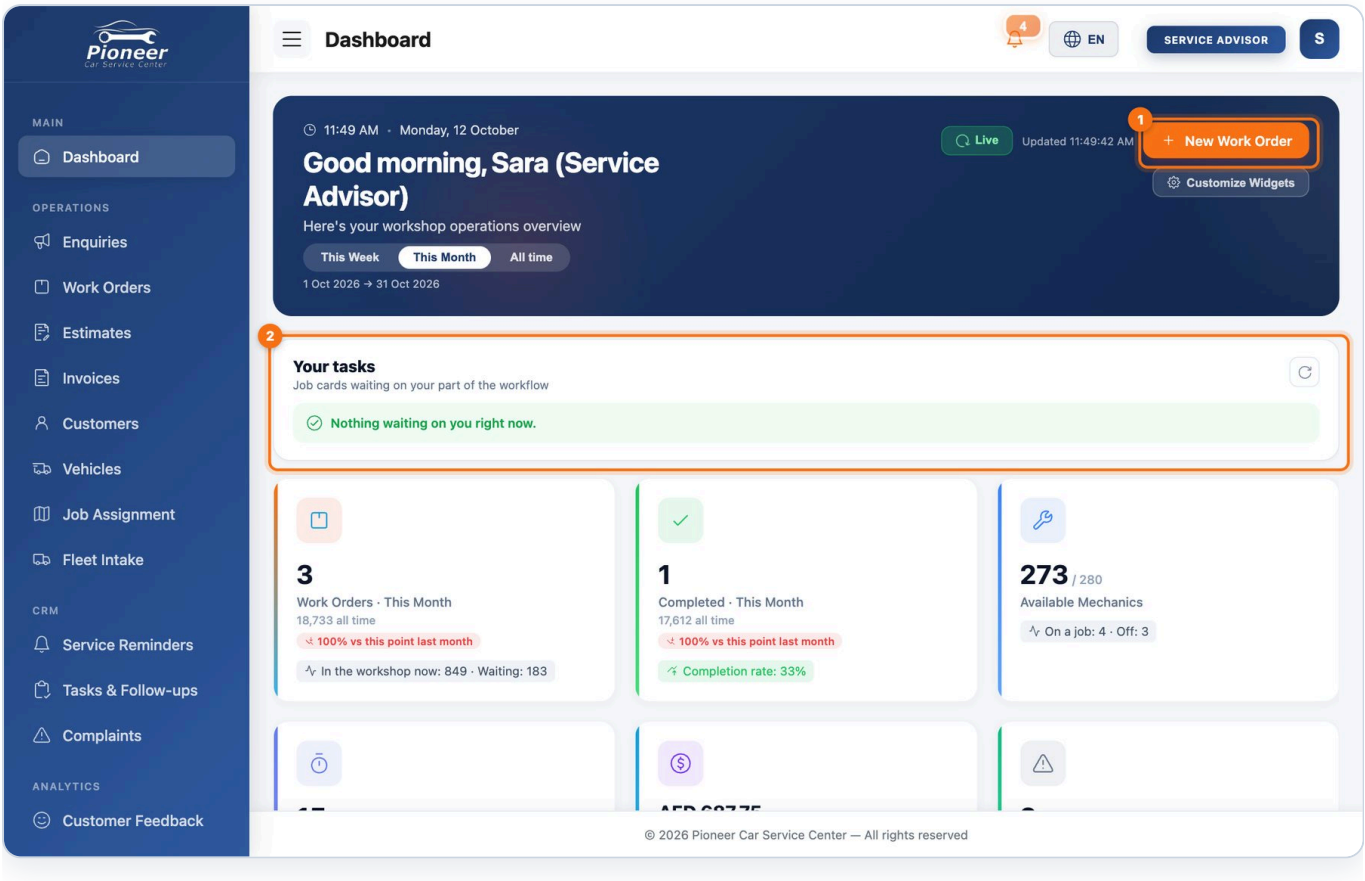


(1) New Work Order opens a job card. (2) Your tasks — what is waiting on you.

The **Your tasks** card on your dashboard lists the job cards waiting on you as Service Advisor: estimates to raise or send, decisions to record and cars ready for delivery. Click any line to open it. The list refreshes every minute; the bell at the top shows new notifications as they arrive.

3. Open a job card STEPS 1–3


When the customer arrives, open a new job card. The wizard has five short pages. Fields marked * are required.

1. Click **New Work Order** on the dashboard (or on the Work Orders page).
2. **Customer (Step 1).** Choose **External** or **Internal** customer. For an existing customer choose **Existing Customer** and search by name, phone, plate or VIN; for a new walk-in choose **Walk-in Customer** and type the name and mobile number. The customer's classification (external / internal and subcategory) decides whether the estimate needs Supervisor approval later.

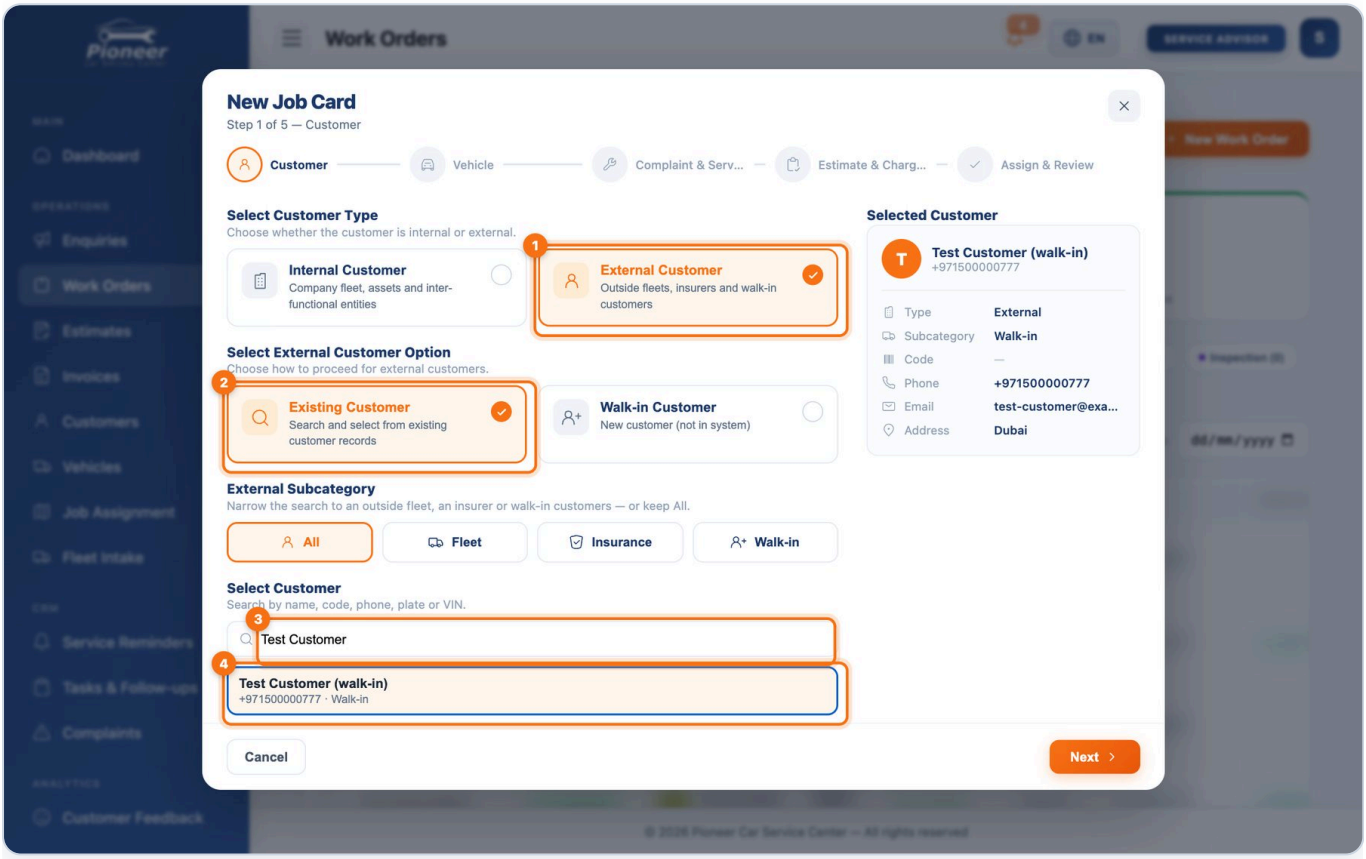


Page 1 — customer type, option, search and the selected customer.

3. **Vehicle (Step 2).** Pick the vehicle (or **Add a new vehicle**) and type the **odometer reading** shown on the dashboard today.

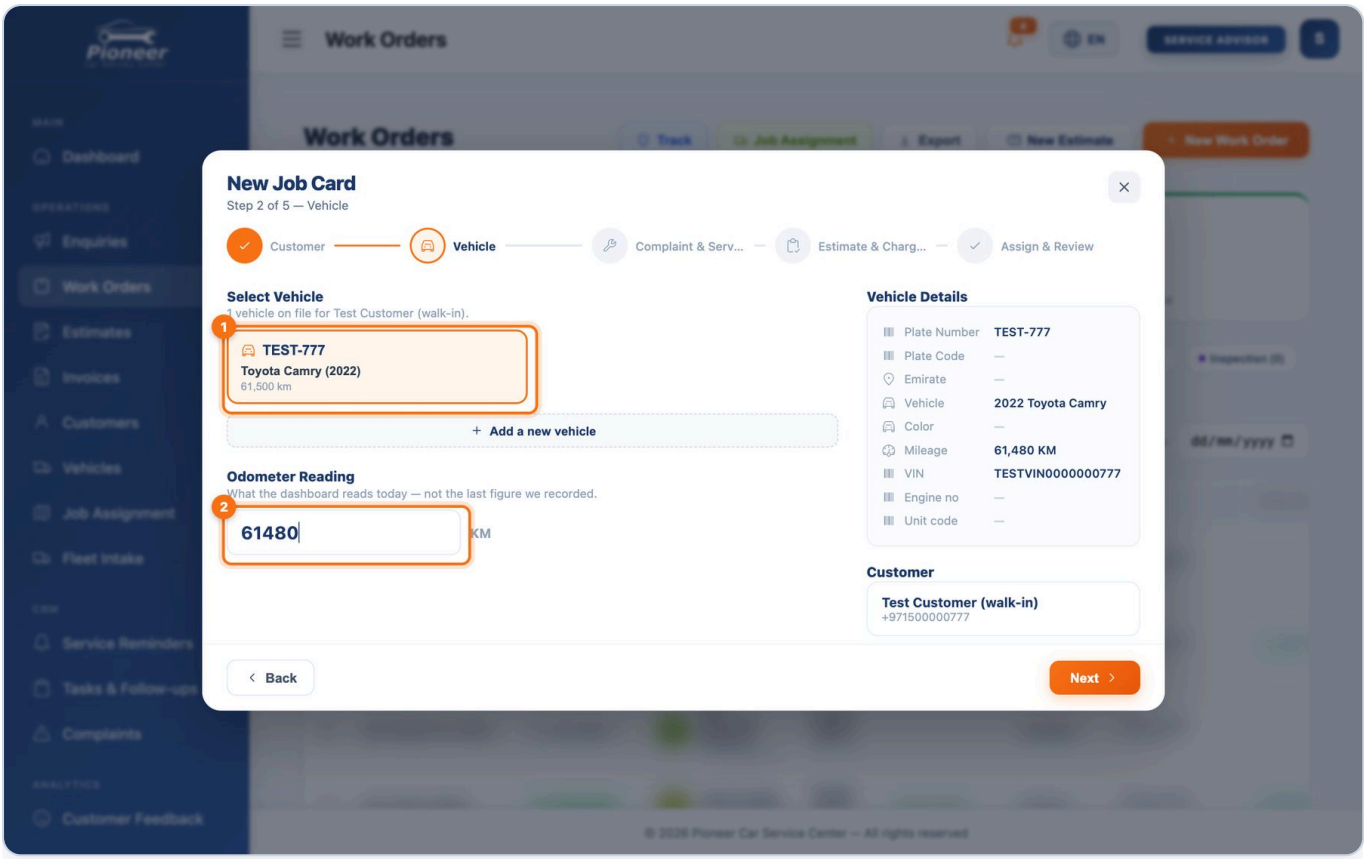

Page 2 — (1) the vehicle, (2) today's odometer reading.


4 **Complaint & service.** Choose the service category and write the customer's complaint in their words. Add notes for the technician if needed.

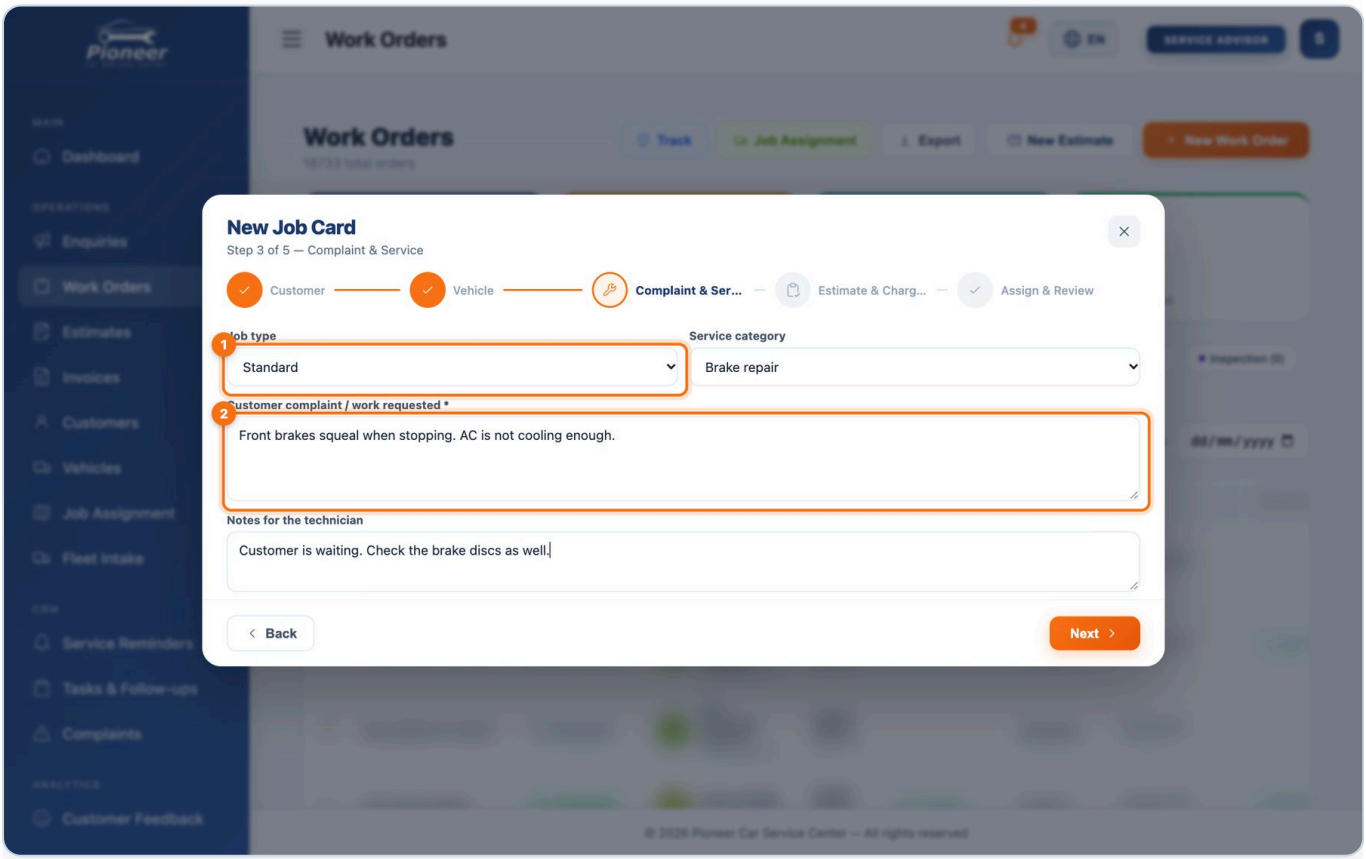

Page 3 — service category and the customer's complaint.

5 **Estimate & charges.** Leave this empty for normal jobs — the estimate is raised in Step 4 after inspection. Use it only for simple jobs priced at the counter.

6 **Assign & review.** Check the summary and press **Create job card**. Technicians are assigned later by the Team Leader.

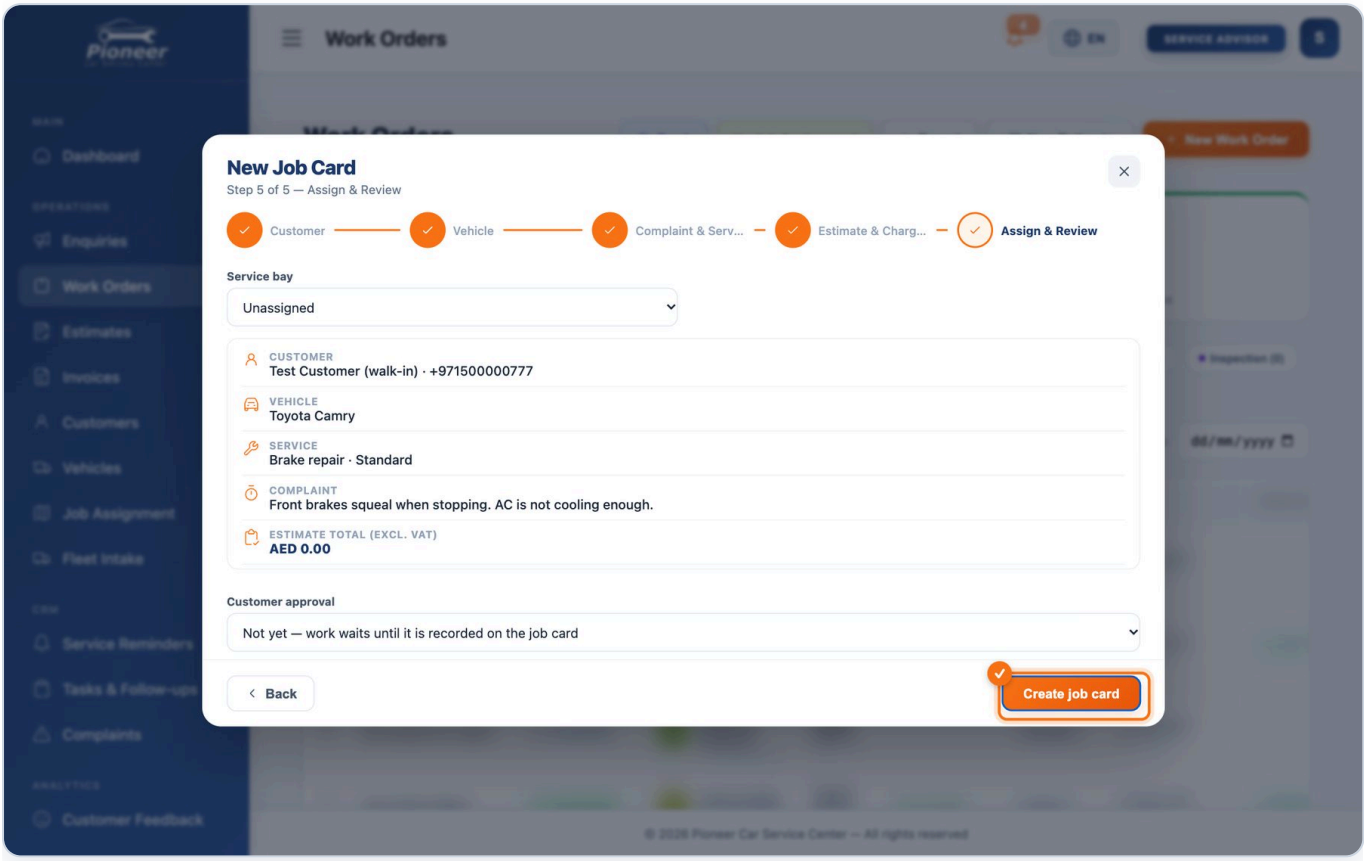


Page 5 — review, then Create job card.

THE SYSTEM CHECKS

Creating the job card automatically opens the **MAIN JOB CARD (JC)** — Step 3 — and notifies the Supervisor and Team Leader that a new request was raised.

4. The job card after it is opened

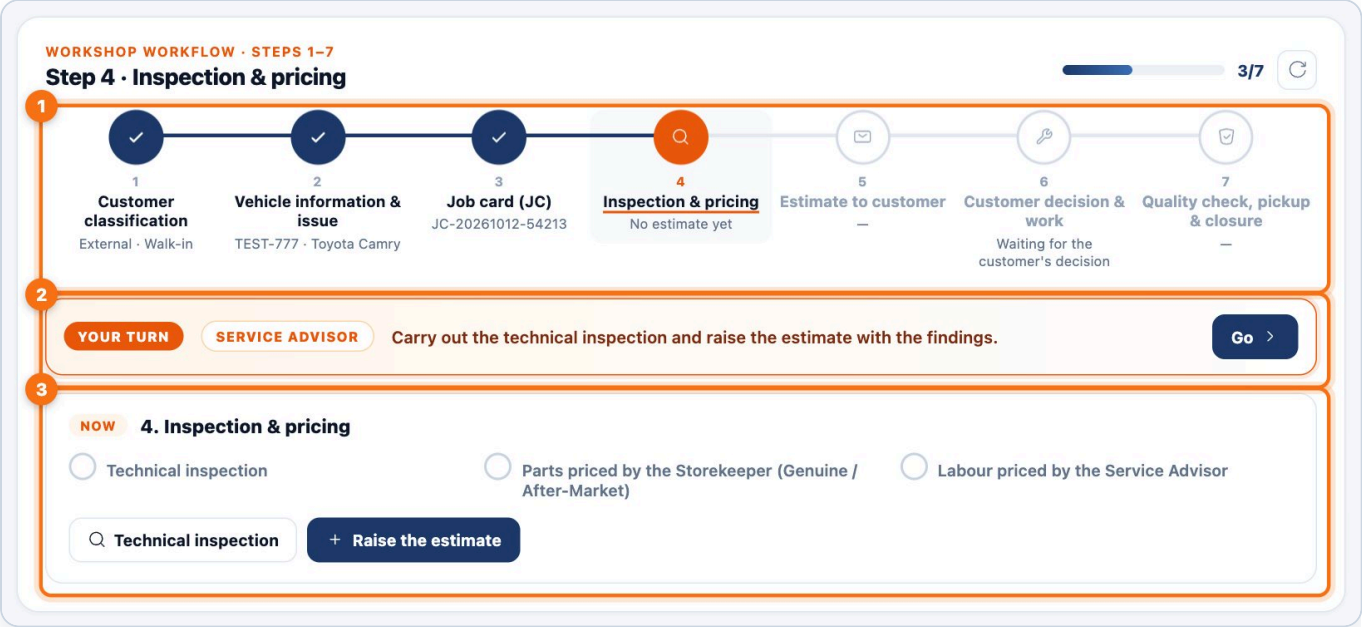

Steps 1–3 are done; the panel shows Step 4 is next and that it is your turn.


Every job card (work order) has a **Workshop workflow** panel at the top. It shows the seven steps, which are done, which one is current and **who acts next**. When the next action is yours, the panel says **Your turn** and the buttons you need are shown. Buttons for other roles' steps are hidden — the system also refuses them if someone tries.

- Click any step in the strip to see its checklist and details.
- **Go** jumps to the step where the next action is.
- The refresh button reloads the panel; it also updates by itself when others act.


5. Raise the estimate STEP 4

After the technical inspection, raise the estimate from the job card. Group the work into **jobs** (for example "Brakes" and "AC"), each with its labour and parts lines.


1. On the job card, open Step 4 and click **Raise the estimate**.
2. For each job type a **job name**, then add a **Labour line** (description, hours, price) and a **Part line** for every part (description, part number, quantity).
3. **Price the labour** — that is your part. **Leave part prices empty**: the Store prices them with a Genuine and an After-Market price.
4. Press **Save & send to the Store for pricing**. The Storekeeper is notified.

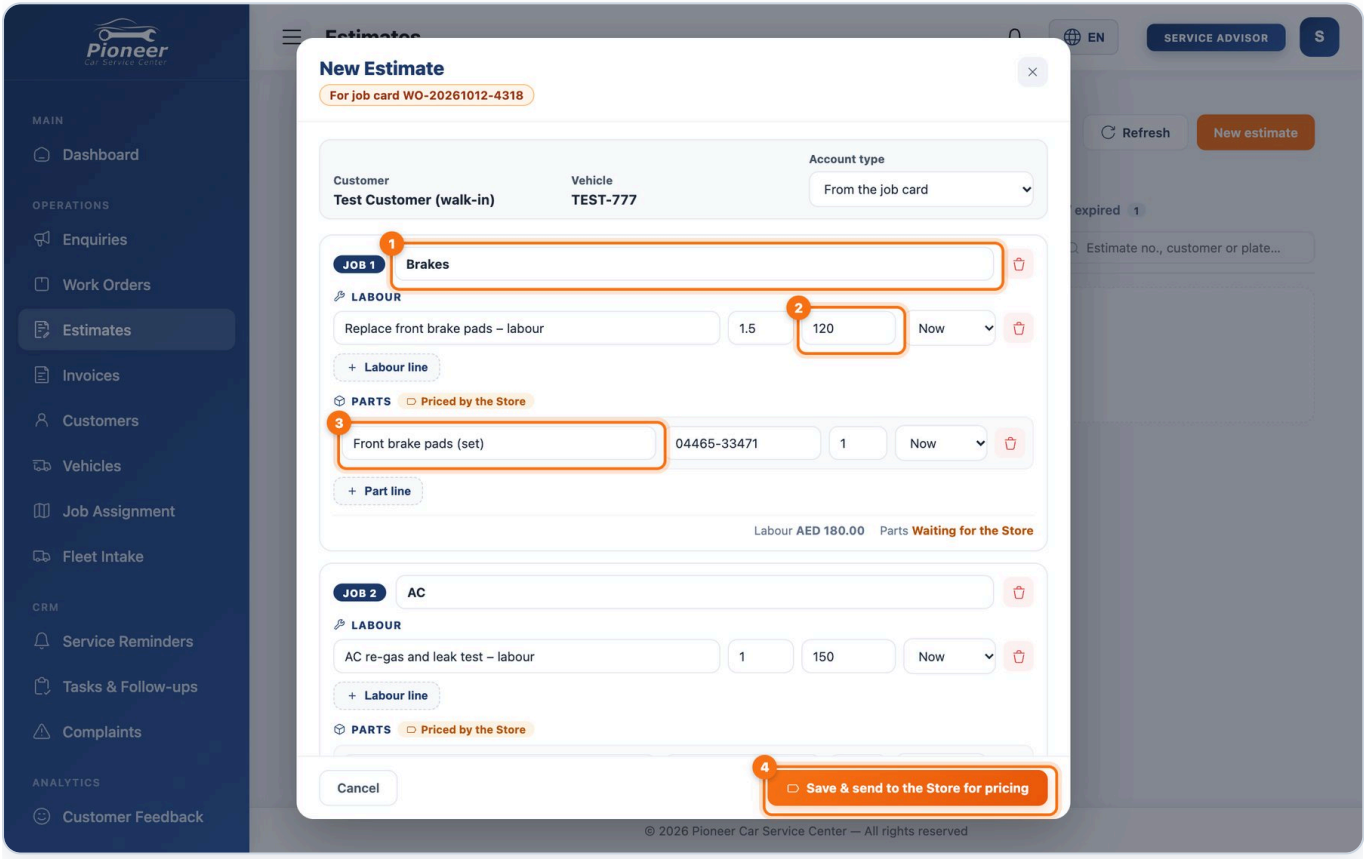

New Estimate — (1) job name, (2) labour price, (3) part line without price, (4) send to the Store.

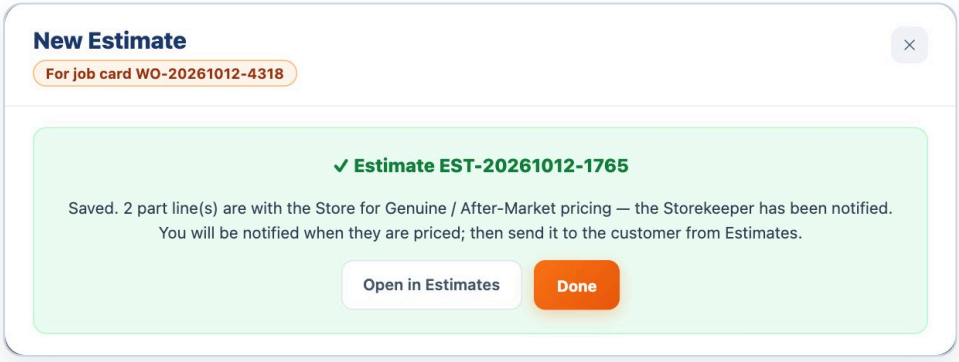

Saved — the Storekeeper has been notified.

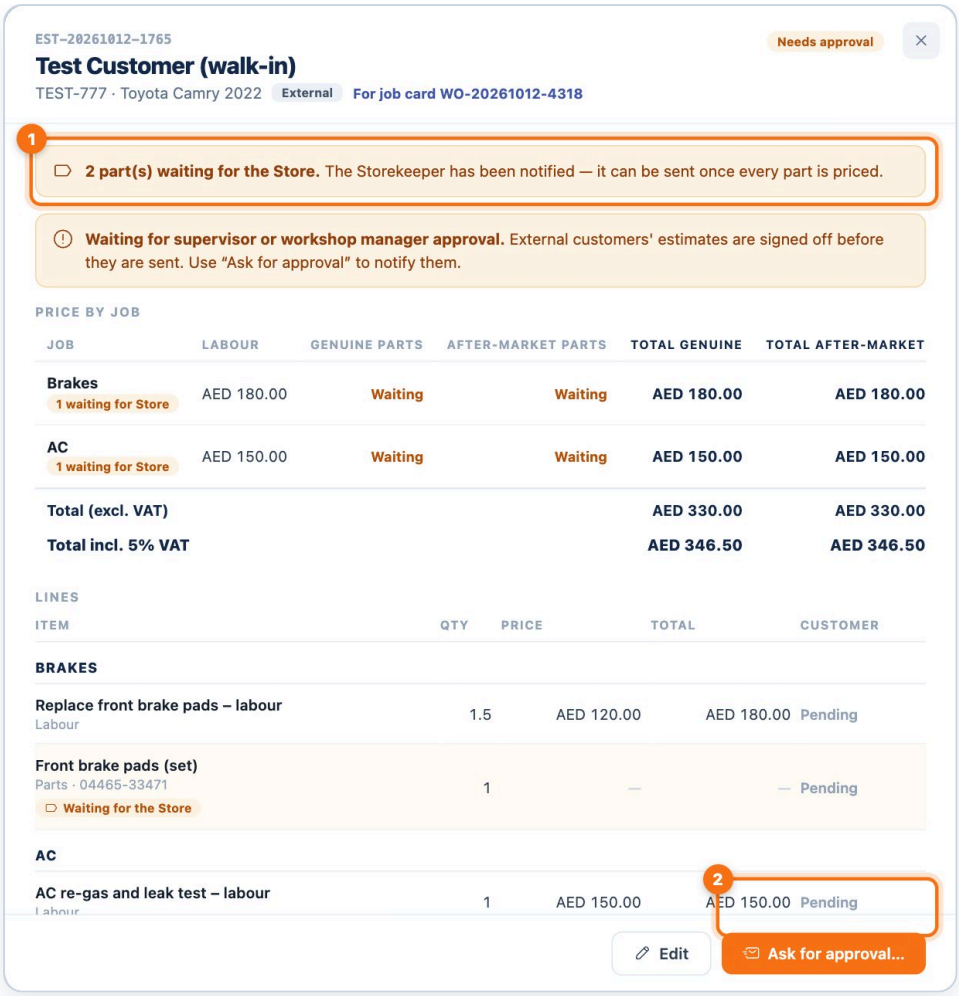


The estimate waits for the Store to price the parts (1). External customers also need approval (2).

THE SYSTEM CHECKS An estimate cannot be sent while any part is unpriced or any labour line has no price.


6. Approval and sending STEP 5

When the Store has priced every part you receive a **Parts priced** notification. Open the estimate from **Your tasks** or the notification.


1. **External customers:** the estimate must be approved by a Supervisor (or the Workshop Manager) first. Press **Ask for approval…** — the Supervisor is notified. Internal customers skip this.
2. Once approved (you are notified), press **Send to customer…**.
3. Choose the **format**: **Format 1 — Genuine**, **Format 2 — After-Market** or **Format 3 — Both** (side by side, the customer chooses per part).
4. Choose **E-mail** or **WhatsApp** and send. With WhatsApp the message opens ready — press Send in WhatsApp.

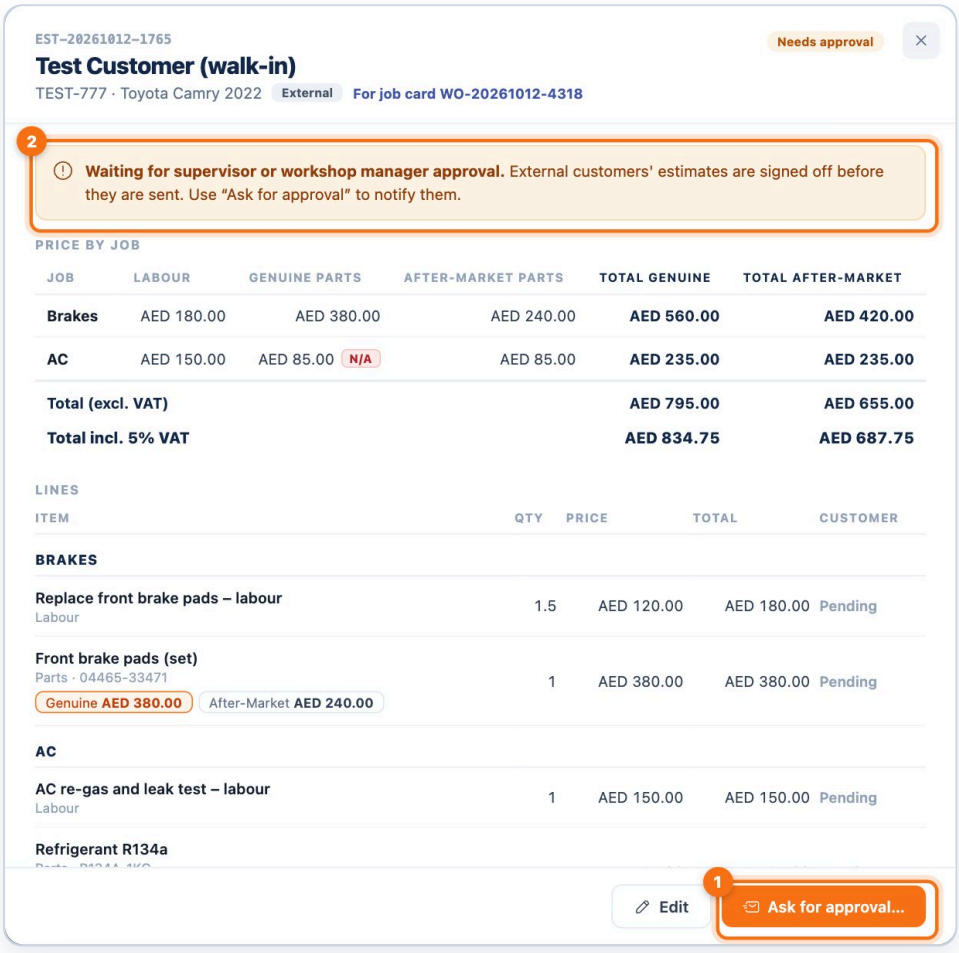

Priced estimate for an external customer — Ask for approval.

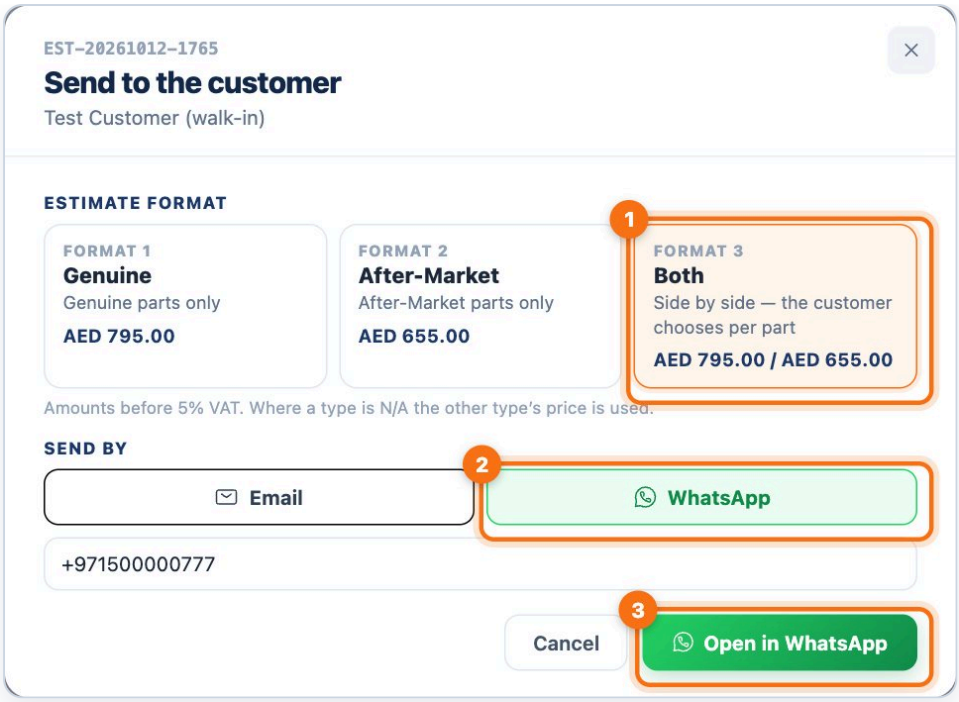


Send to the customer — (1) Format 3 · Both, (2) WhatsApp, (3) send.

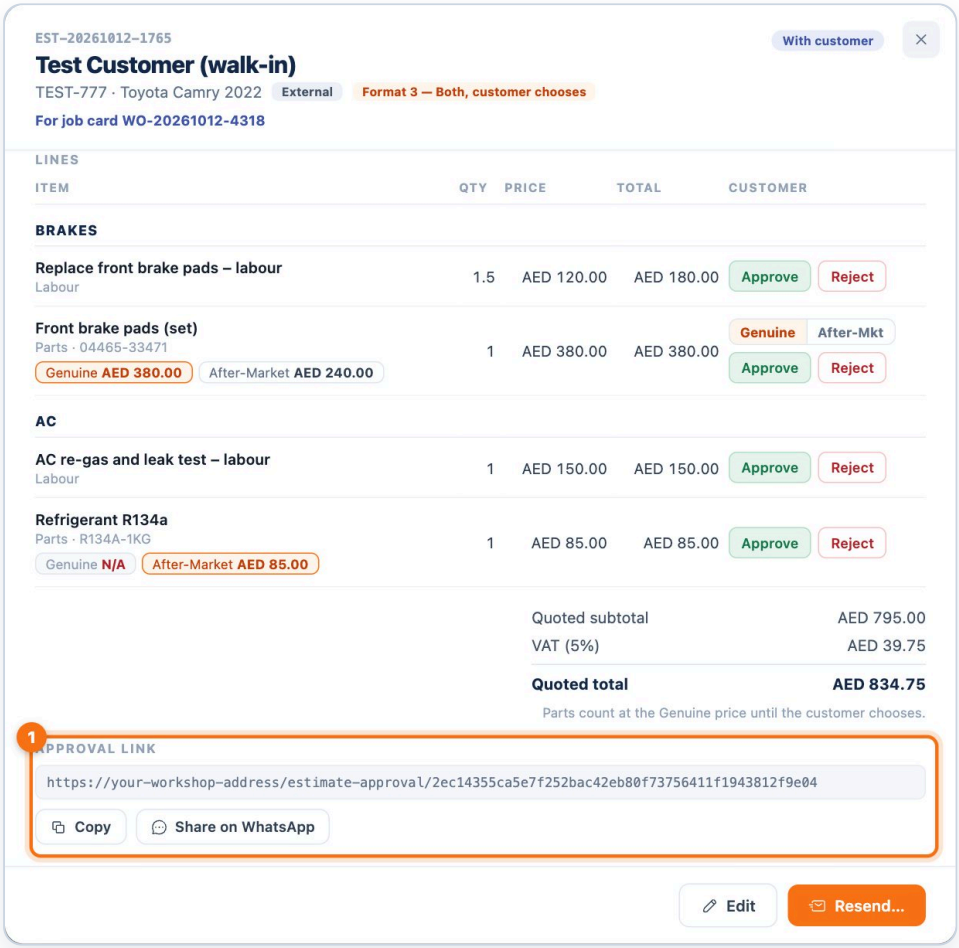


Sent — the approval link (1) can be copied or shared again at any time; Resend sends it again.

7. The customer's decision STEP 6

The customer opens the link on their phone and approves or rejects **each line**; with Format 3 they also choose Genuine or After-Market for each part. No login is needed.

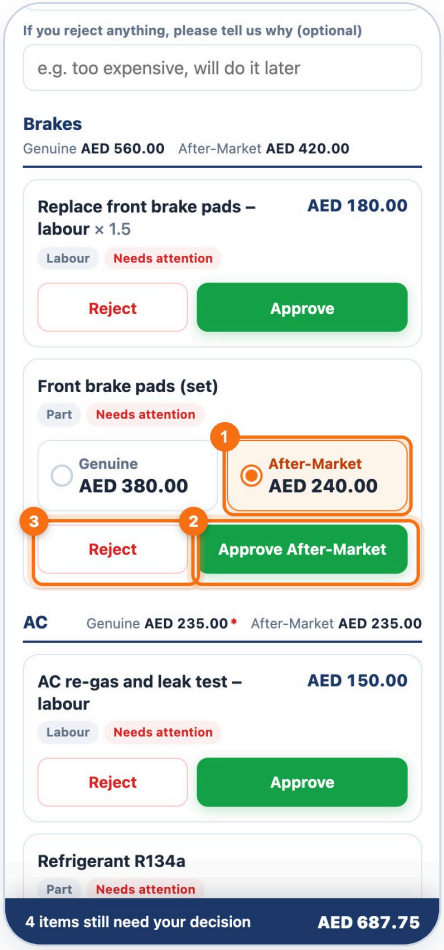


What the customer sees.

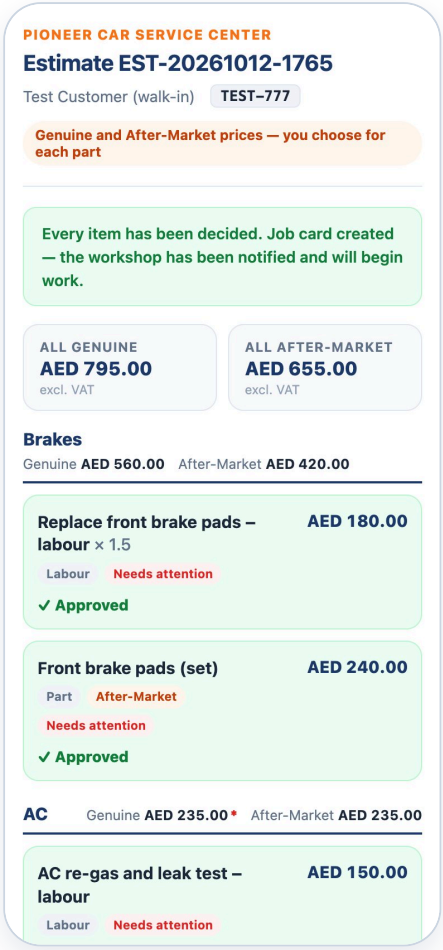

After the customer has decided.


In person or by phone: open the estimate and use the approve / reject buttons on each line yourself.

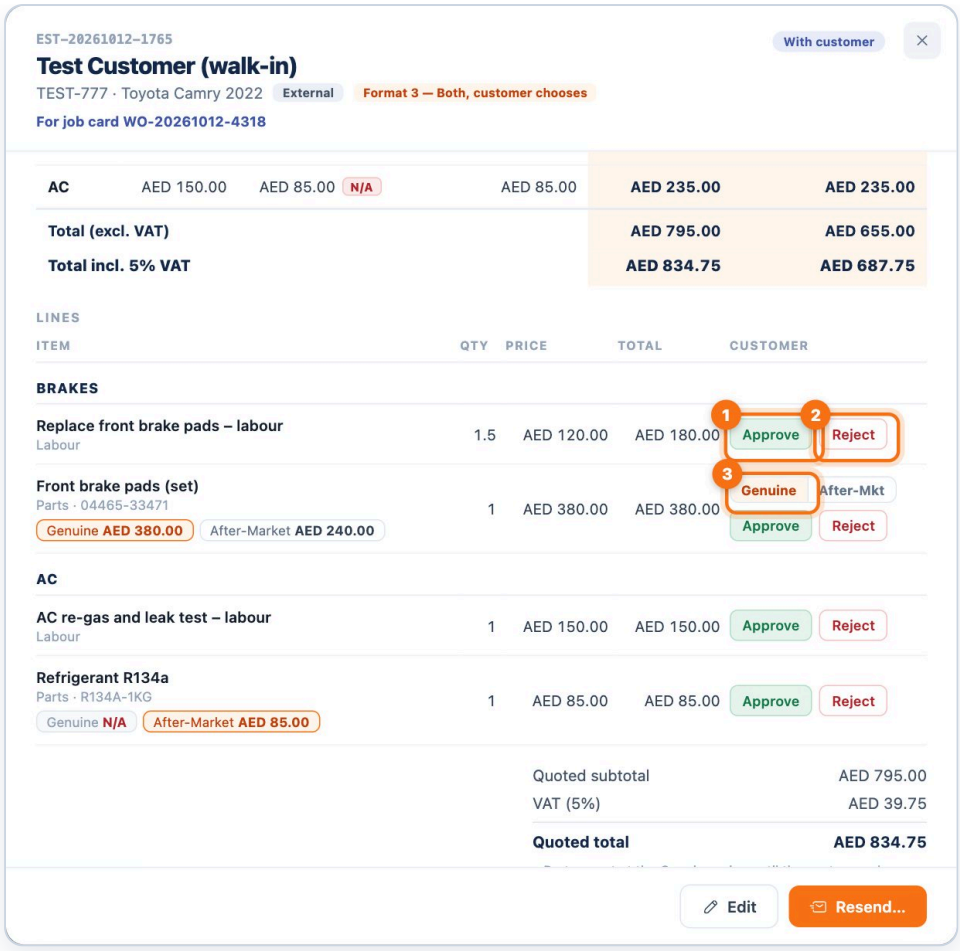

Recording the decision at the counter — (3) Genuine or After-Market, then (1) Approve or (2) Reject each line.

THE SYSTEM CHECKS

When every line is decided, the approved work moves onto the job card automatically. If only some lines were approved, press **Open job card** to continue with the approved part. If the customer rejects everything, the job is closed without work.

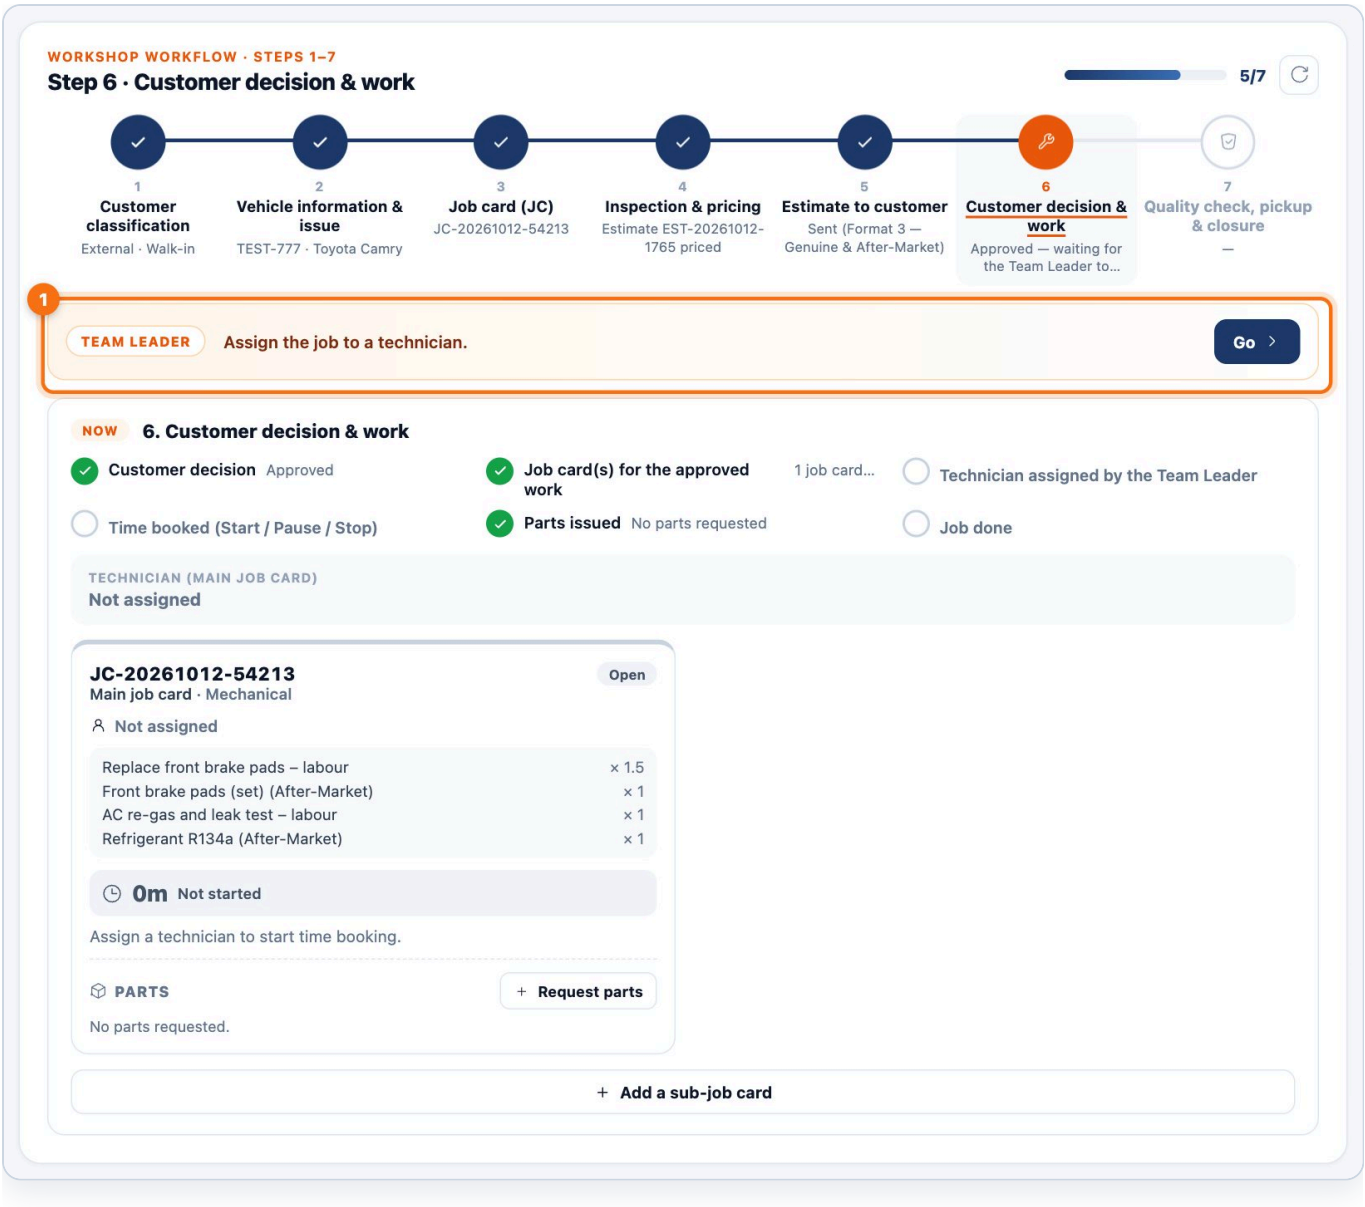


Step 6 on the job card: approved work is waiting for the Team Leader to assign a technician.

8. Pickup, payment, gate pass, closing STEP 7

When the Supervisor passes the quality check you receive **Job completed — ready for delivery**, and the job appears under **Ready for delivery** in Your tasks.



Your tasks — the car is ready for delivery.

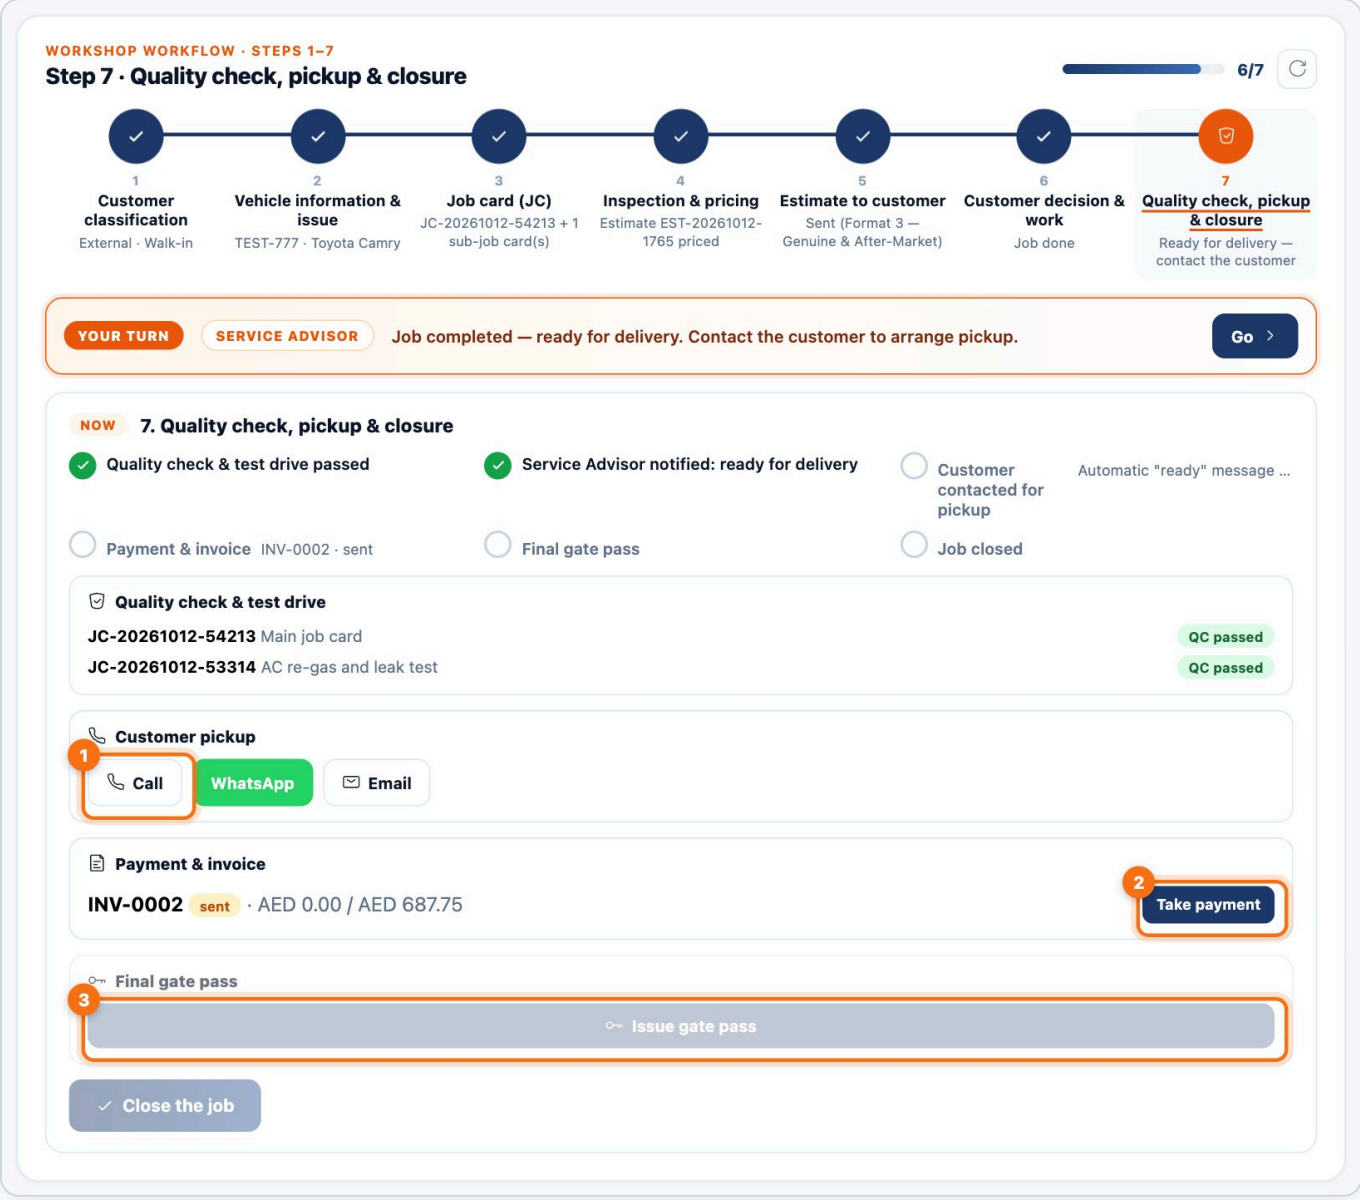


Step 7 on the job card: (1) contact the customer, (2) take payment, (3) gate pass.


1. **Contact the customer.** In Step 7 press **Call** (on a phone it dials) and log the outcome — reached or no answer — and the pickup arrangement. **WhatsApp** and **Email** send the "ready for collection"

message and log the contact by themselves.


2. **Take payment.** The invoice is raised automatically. Press **Take payment**, choose cash, card or bank transfer and record it. Internal / credit customers are billed on account.
3. **Issue the gate pass.** Press **Issue gate pass**, enter the odometer reading out and **Release vehicle**. Print it for the gate.
4. **Close the job.** Press **Close the job** when the vehicle has left.

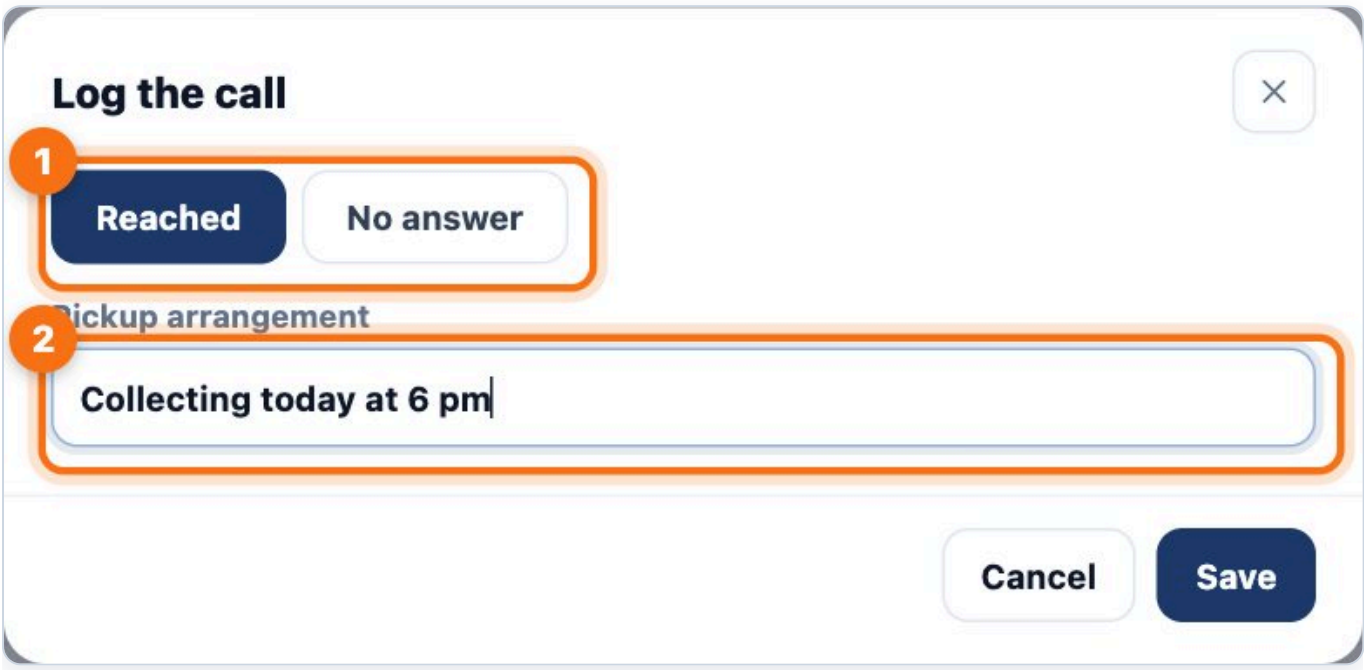


Logging the pickup call.

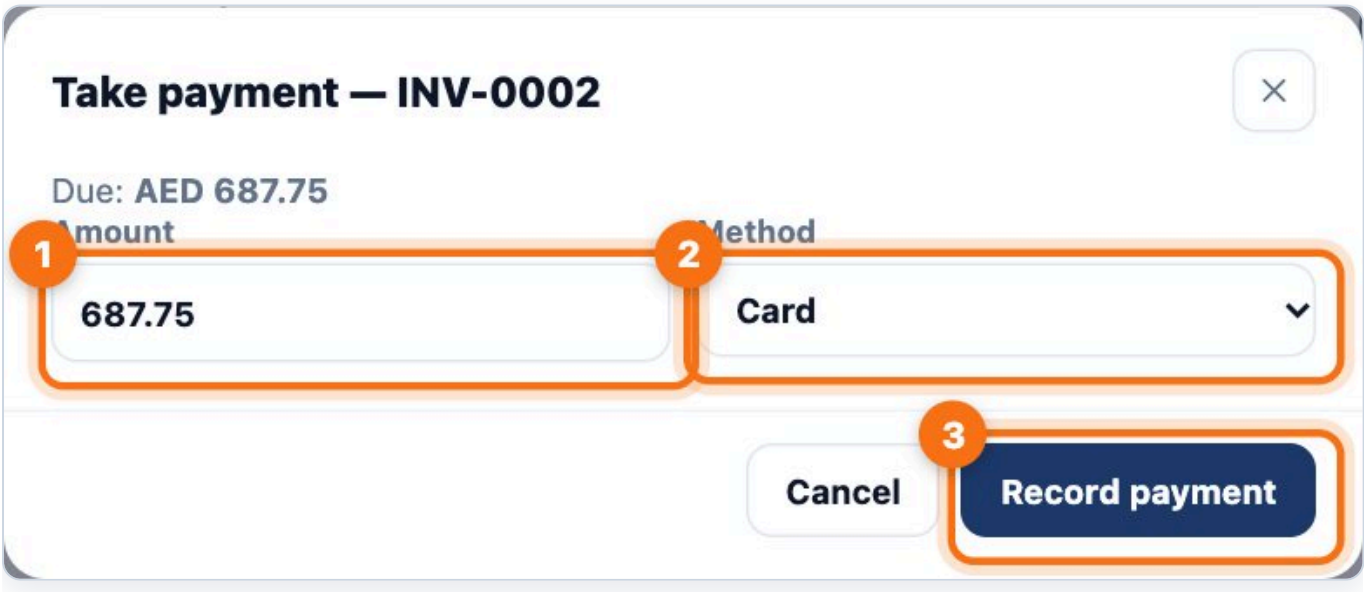

Recording the payment.

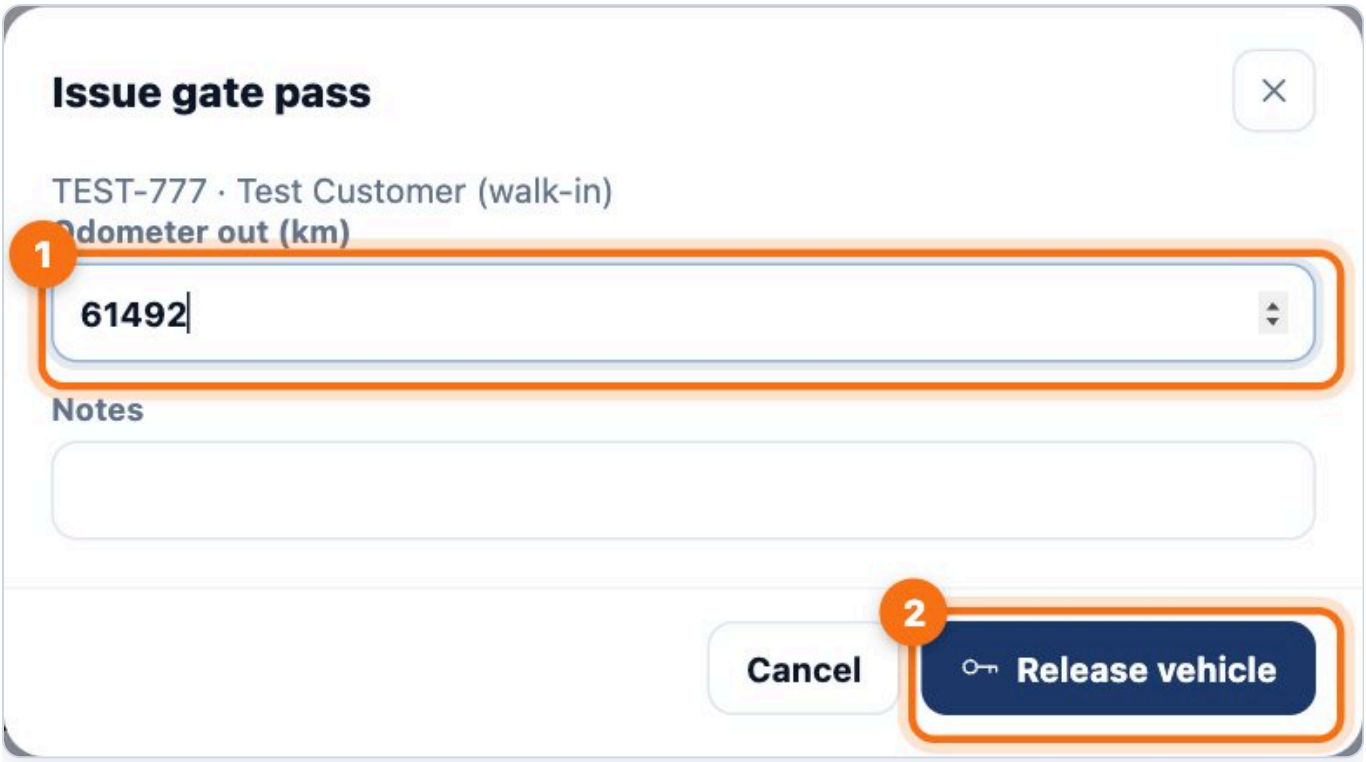


The final gate pass — odometer out, then Release vehicle.

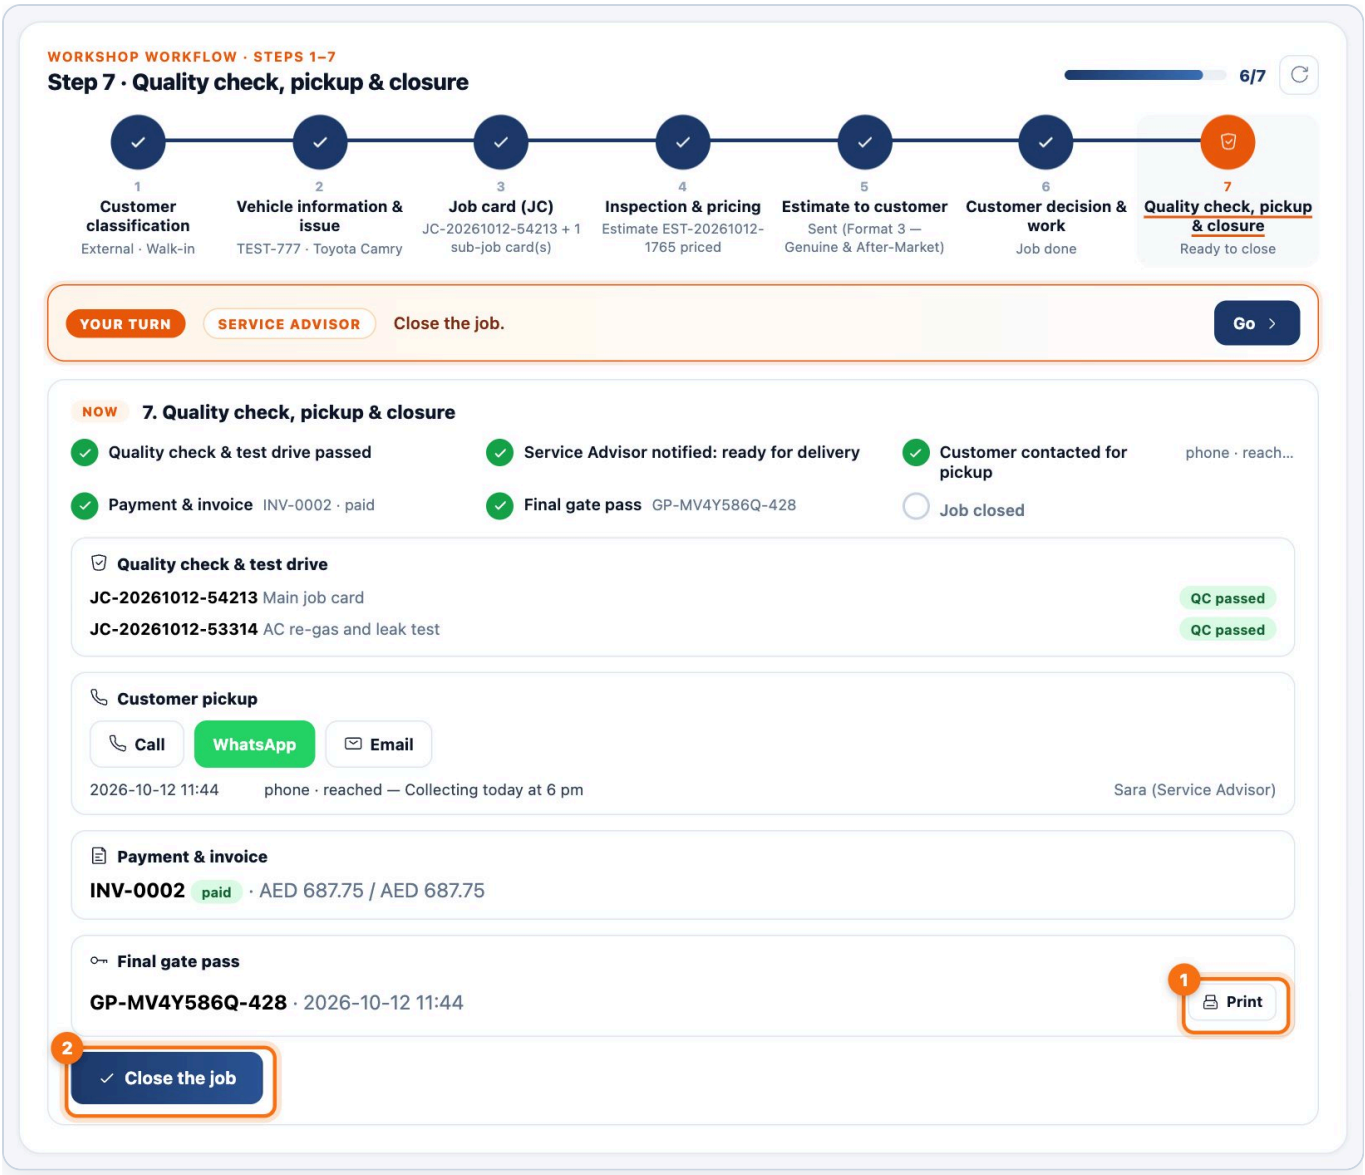

Gate pass issued: (1) print it for the gate, (2) close the job.

THE SYSTEM CHECKS

The gate pass is refused until the quality check has passed **AND** the invoice is paid (or billed on account). The job cannot be closed without the gate pass.

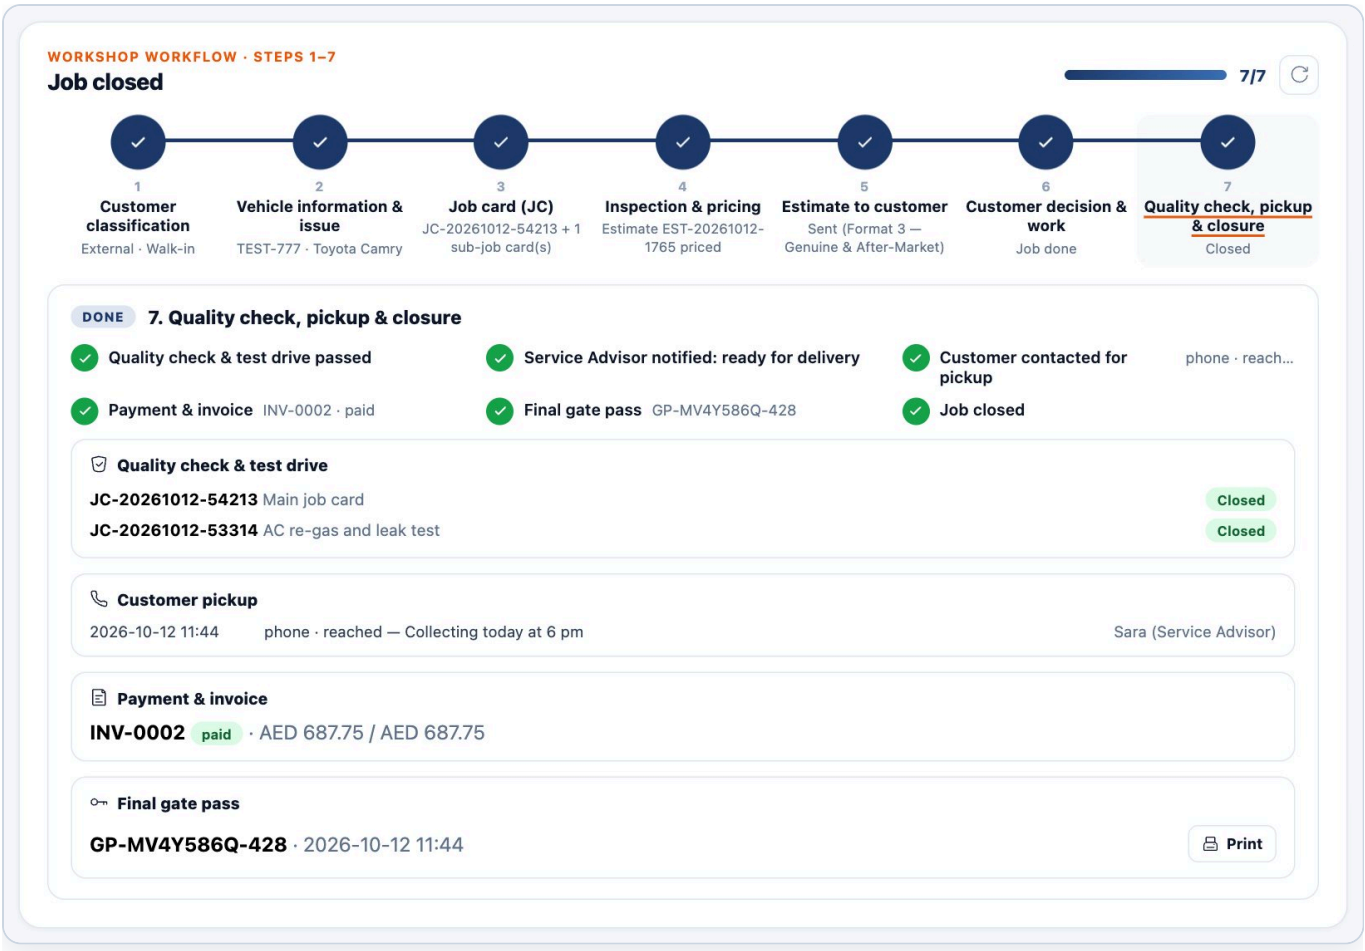

All seven steps done — the job is closed.

9. Quick reference

You want to…	Where	Button
Open a job card	Dashboard / Work Orders	**New Work Order**
Raise an estimate	Job card → Step 4	**Raise the estimate**
Ask for approval (external)	Estimates → the estimate	**Ask for approval…**
Send to the customer	Estimates → the estimate	**Send to customer…**
Record a decision in person	Estimates → the estimate	Approve / Reject on each line
Request parts for a job	Job card → Step 6	**Request parts**
Hand the car back	Job card → Step 7	**Log the call** · **Take payment** · **Issue gate pass** · **Close the job**

Message	Meaning
The Store has not priced every part yet	Wait for the Storekeeper; you will be notified.
Waiting for a manager's approval	External customer: a Supervisor / Workshop Manager approves first.
Gate pass refused — payment	Record the payment first (or bill on account).
Your role can't do this	The step belongs to another role (shown in the message).