Pioneer
Car Service Center

USER MANUAL

Workshop Manager

Oversee every job card, step in at any step, approve estimates and decide who does what in Settings → Roles.

- Step 1 · Customer classification
- Step 2 · Vehicle information & issue
- Step 3 · Job card opened
- Step 4 · Inspection & pricing
- Step 5 · Estimate to customer
- Step 6 · Customer decision & work
- Step 7 · Quality check, pickup & closure

Your role at a glance

As Workshop Manager (or General Manager / owner) you hold **every** workflow responsibility: you can act at any step when someone is away, you approve external estimates like the Supervisor, and you control **who does what** — each role's workflow responsibilities and menu — in **Settings → Roles**.

Where you fit in the job card workflow

1	2	3	4	5	6	7
Customer classification	**Vehicle information & issue**	**Job card opened**	**Inspection & pricing**	**Estimate to customer**	**Customer decision & work**	**Quality check, pickup & closure**
Service Advisor	Service Advisor	System · Service Advisor	Service Advisor · Technician	Store · Supervisor · Service Advisor	Customer · Team Leader · Technician · Store	Supervisor · Service Advisor

What the system lets you do

- **Step 2** Open job cards and record the vehicle and issue
- **Step 4** Raise and send estimates; price labour
- **Step 5** Price parts — Genuine / After-Market / N/A
- **Step 5** Approve estimates for external customers
- **Step 6** Record the customer's decision
- **Step 6** Assign technicians; open sub-job cards
- **Step 6** Book time (Start / Pause / Stop) and mark jobs done
- **Step 6** Raise material requisitions (request parts)
- **Step 6** Check the shelf, issue parts, record expected dates
- **Step 7** Quality check and test drive
- **Step 7** Pickup call, payment, gate pass, close the job

In this manual

1 **Signing in**

2 **Your dashboard**


3 **Following a job through Steps 1–7**

4 **Roles and responsibilities (Settings → Roles)**

5 **Default responsibilities**

1. Signing in

1. Open the workshop system in your browser (Chrome, Edge or Safari).
2. Type your **username or e-mail** and your **password**, then press **Sign In**.
3. The system opens your dashboard. Your role — **Workshop Manager** — is shown at the top right.

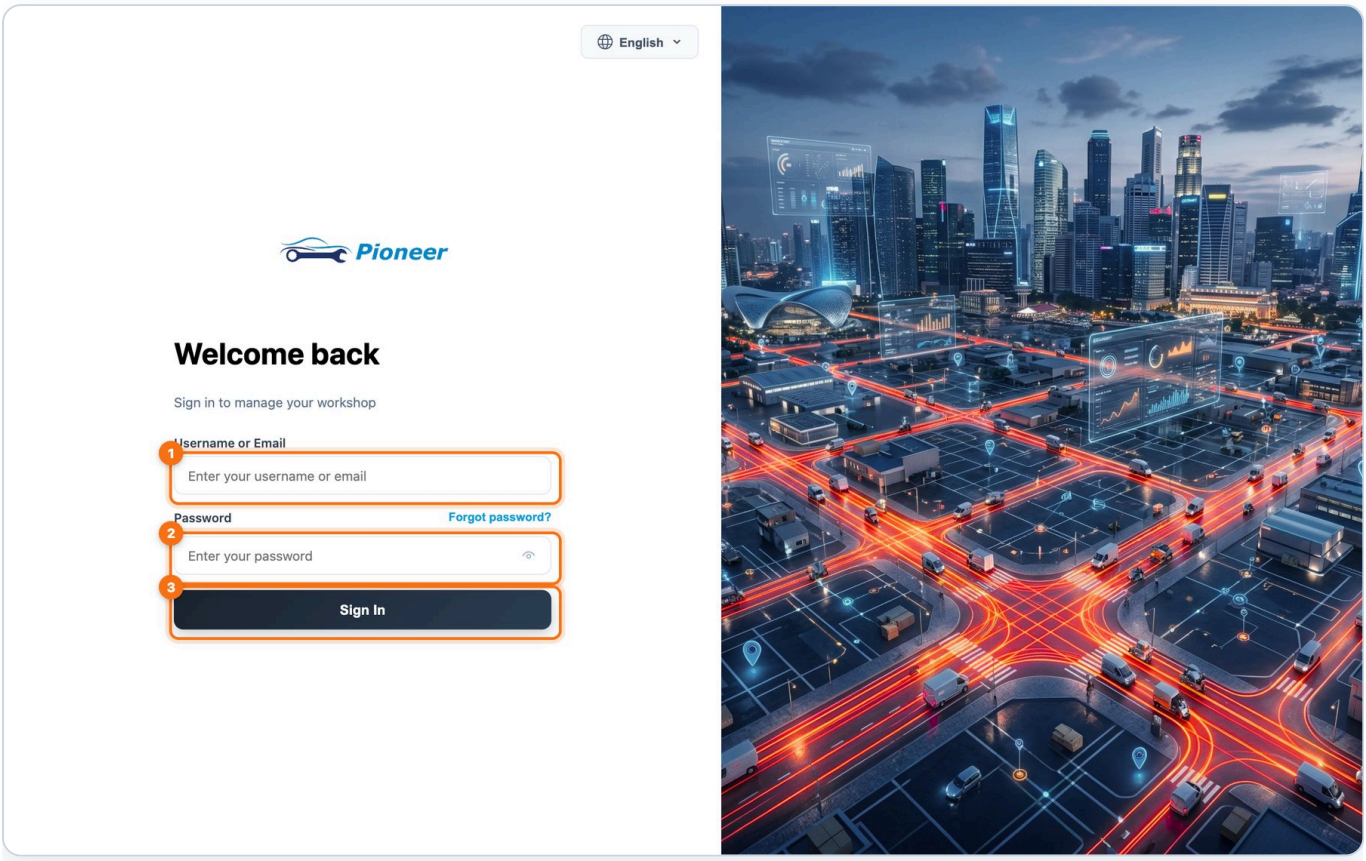


The sign-in page: (1) username or e-mail, (2) password, (3) Sign In.

TIP Use the **EN** button at the top of any page to switch language (Arabic and 10 others). Your choice is remembered on this device.

NOTE Your account is created by the Workshop Manager. Forgot your password? Use **FORGOT PASSWORD?** on the sign-in page or ask the manager to reset it.

2. Your dashboard

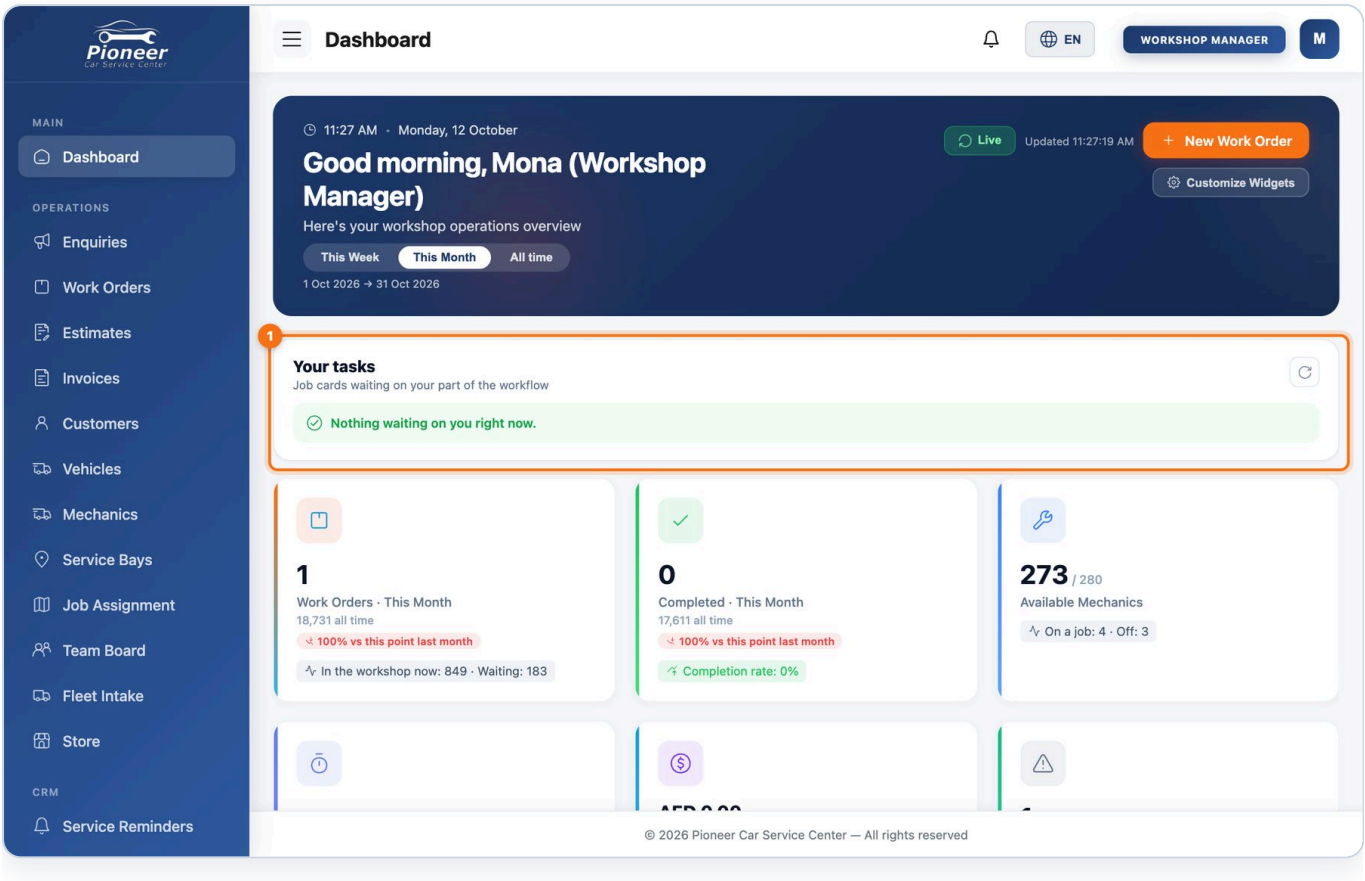


The manager dashboard — your tasks and workshop figures.

Your **Your tasks** card collects everything waiting at any step (parts to price, estimates to approve, assignments, quality checks, deliveries) because you can act on all of them.

3. Following a job through Steps 1–7

Open any job card to see the workflow panel: which steps are done, the current step and who acts next. The full walk-through for each step is in the role manuals; this is the overview.

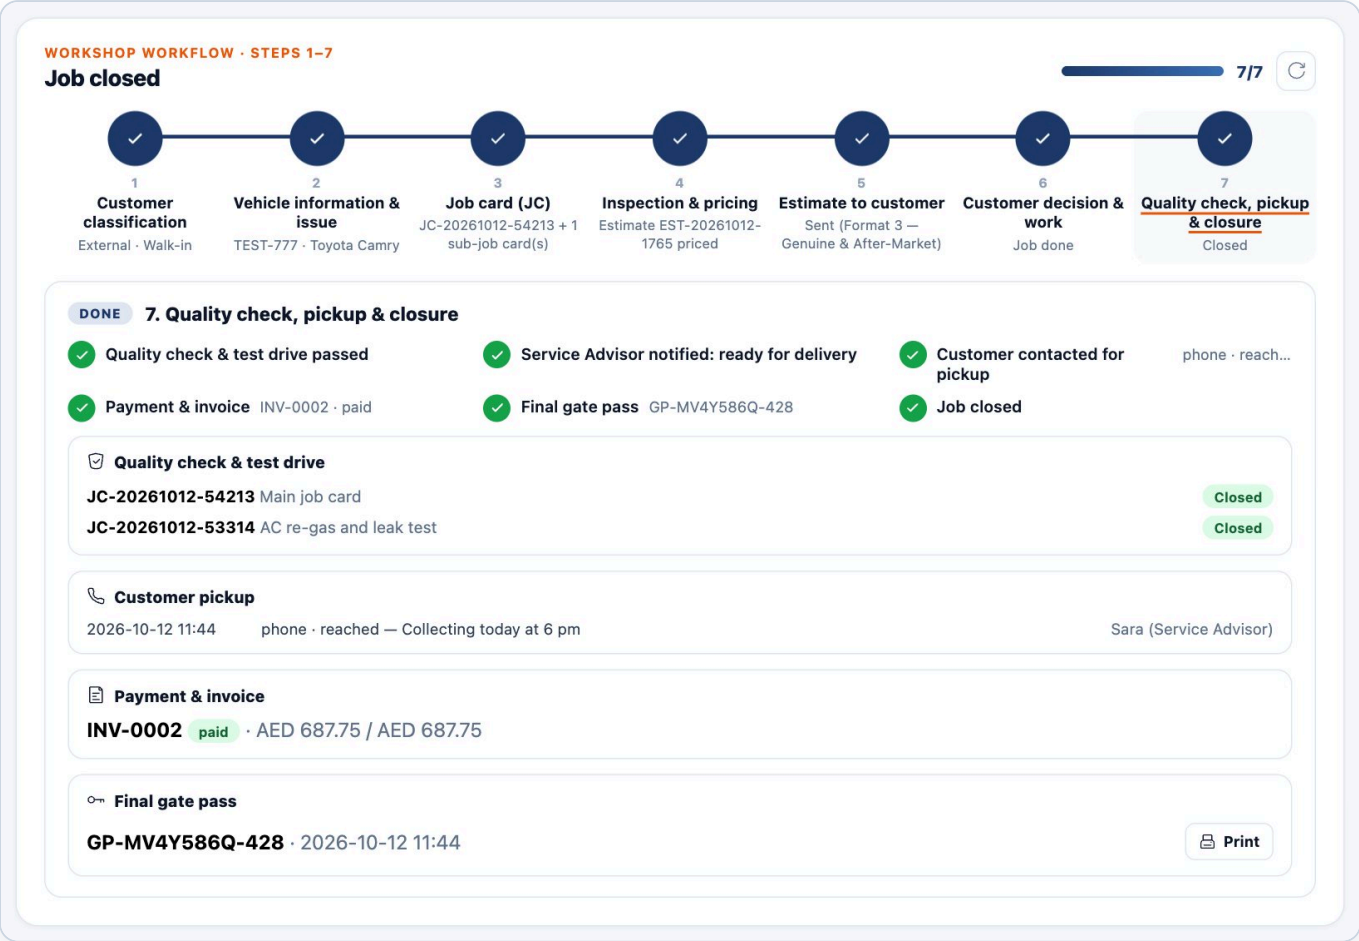


A completed job — all seven steps done.

Step	What happens	Who
1 · Customer classification	External (walk-in / fleet / insurer) or internal	Service Advisor
2 · Vehicle & issue	Vehicle, odometer and the complaint are recorded	Service Advisor
3 · Job card	The main job card opens automatically	System
4 · Inspection & pricing	Estimate raised; labour priced	Service Advisor
5 · Estimate to customer	Store prices parts; Supervisor approves (external); sent as Format 1/2/3	Store · Supervisor · Service Advisor
6 · Decision & work	Customer approves per line; technician assigned; time, parts, sub-job cards	Customer · Team Leader · Technician · Store

Step	What happens	Who
7 · QC & closure	3-point quality check, pickup call, payment, gate pass, closing	Supervisor · Service Advisor


4. Roles and responsibilities (Settings → Roles)

Settings → Roles lists every role with its **workflow responsibilities** (the steps it may act on) and its **menu modules** (the screens it can open).

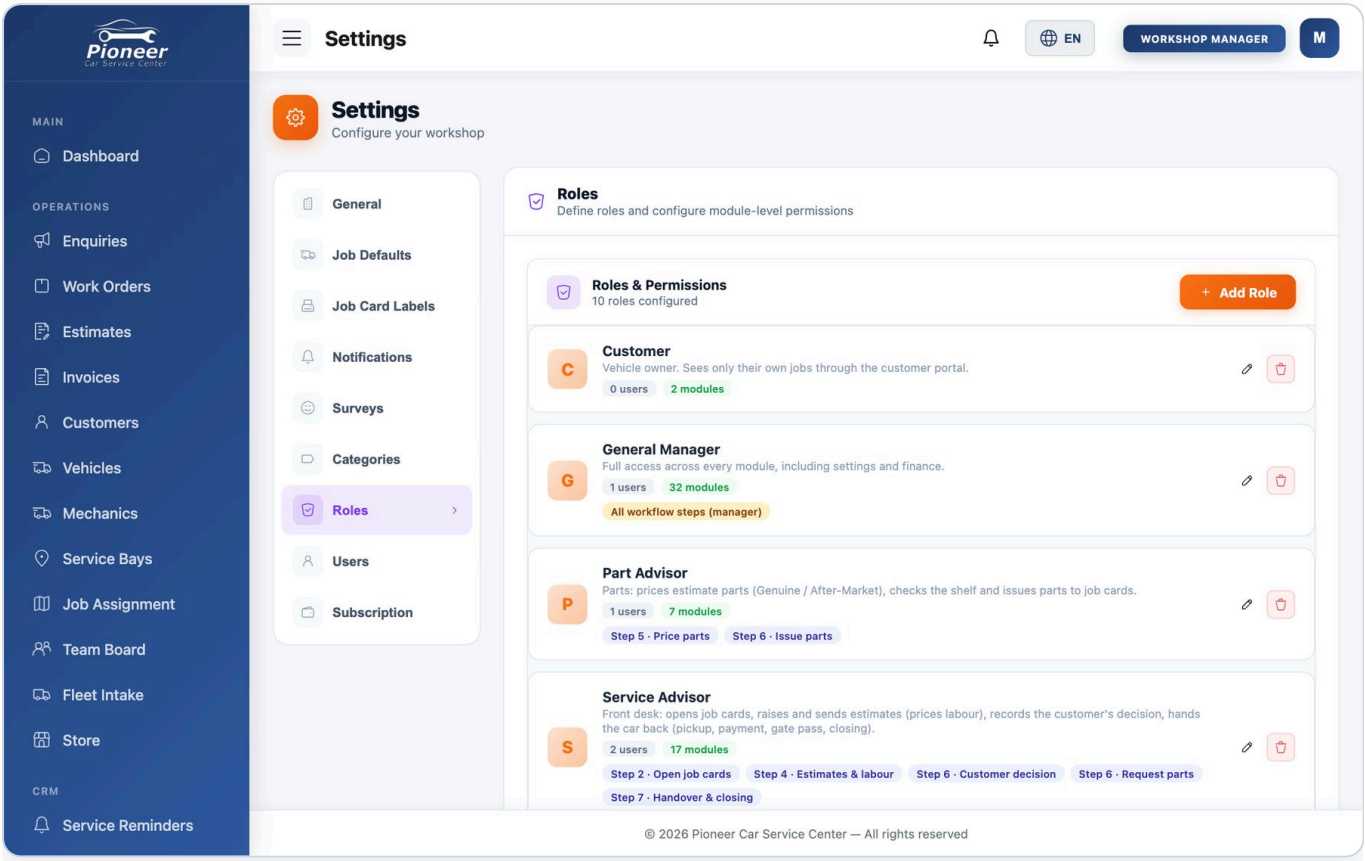

Settings → Roles: each role with its steps.


1. Click the pencil on a role to edit it.
2. Under **Workflow responsibilities**, tick what this role does on a job card. The system enforces it: buttons for unticked steps are hidden and the server refuses them.
3. Under **Module permissions**, tick the menu screens the role can open.
4. Press **Save Changes**. The server applies the new responsibilities straight away; users see their new menu and buttons when they reload the page or sign in again.

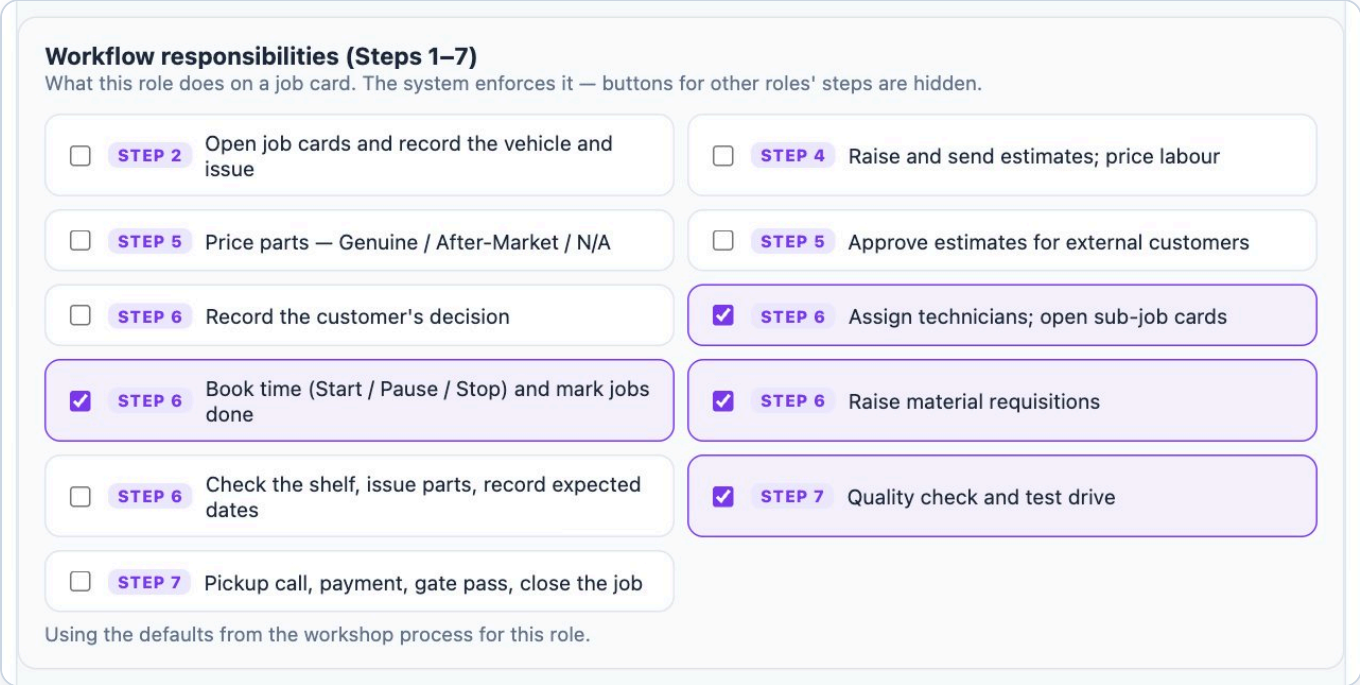

Workflow responsibilities for the Team Leader role.

TIP

A role that has not been changed shows "Using the defaults from the workshop process". Once you change it, **Reset to defaults** brings the defaults back. Managers always hold every responsibility.

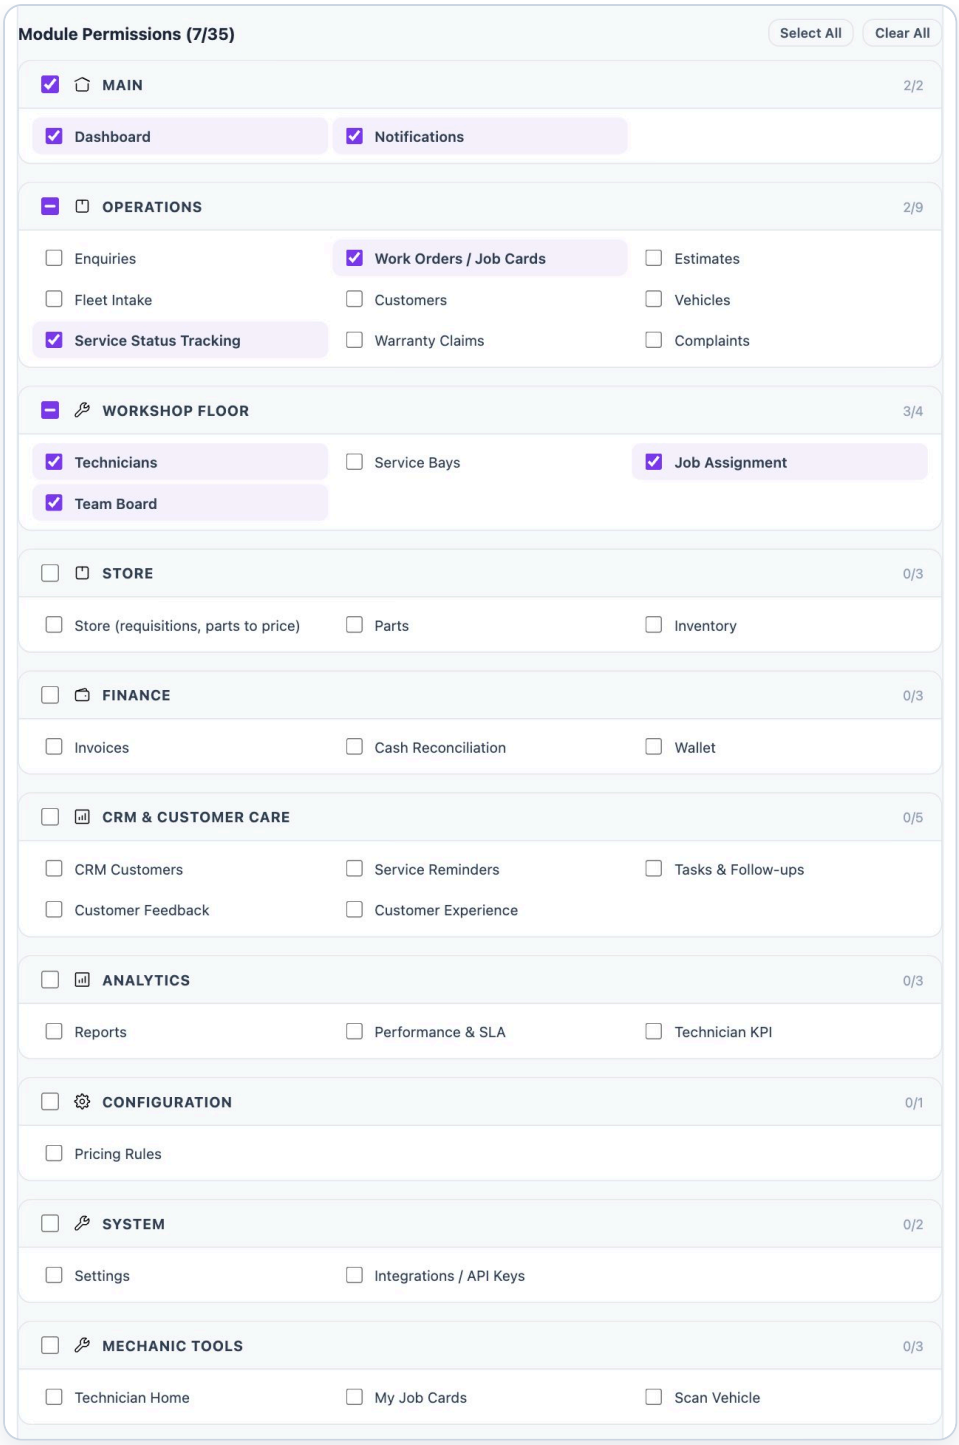

Menu modules for the role.

NOTE

Add users under Settings → Users and give each one a role. A user's role decides their menu, their dashboard tasks and the buttons they see on a job card.

5. Default responsibilities

Responsibility	Step	Held by default
Open job cards and record the vehicle and issue	2	Service Advisor, Supervisor
Raise and send estimates; price labour	4	Service Advisor
Price parts — Genuine / After-Market / N/A	5	Storekeeper, Part Advisor
Approve estimates for external customers	5	Supervisor
Record the customer's decision	6	Service Advisor
Assign technicians; open sub-job cards	6	Team Leader, Supervisor, Workshop Foreman
Book time and mark jobs done	6	Technician, Team Leader, Supervisor, Workshop Foreman
Raise material requisitions	6	Technician, Team Leader, Supervisor, Foreman, Service Advisor
Check the shelf, issue parts, expected dates	6	Storekeeper, Part Advisor
Quality check and test drive	7	Supervisor, Workshop Foreman, Team Leader
Pickup call, payment, gate pass, close the job	7	Service Advisor

Managers (Workshop Manager, General Manager, owner, admin) hold all of them.