

WeatherLink Live Weather Station 2.0.17

Version 2.0.017.0000

Driver

WeatherLink Live Weather Station is a Crestron Home extension driver for current weather conditions and forecast information.

The tile appears on the Home screen and opens the current conditions page.

Notes and Recommendations

Crestron and Crestron Home are trademarks or registered trademarks of Crestron Electronics, Inc. This project is not affiliated with, endorsed by, or sponsored by Crestron Electronics, Inc.

System Requirements and Dependencies

- A compatible Crestron Home processor and supported WeatherLink Live configuration.
- WeatherLink Live Host: optional IP address or hostname for local current conditions.
- OpenWeather API Key: required for forecast data and cloud fallback current conditions.
- Location Name Override: optional title location name.
- Latitude Override and Longitude Override: optional paired coordinates for cloud weather requests.
- Units: Metric, UK, or Imperial.
- Refresh Interval Seconds: persistent current-condition interval from 60 to 86400 seconds, default 300.

Installation/Upgrade Instructions

Install the packaged driver in Crestron Home, add WeatherLink Live Weather Station, and enter its connection settings. WeatherLink Live Host is optional; when local readings are unavailable the driver can use cloud data for fallback current conditions.


Enter the OpenWeather API Key for forecast and cloud fallback. Set Location Name Override only when a different displayed location name is wanted.

Latitude Override and Longitude Override must be supplied together. When both are blank, the driver uses the processor location. Select Metric, UK, or Imperial units, then set Refresh Interval Seconds within the documented range.

End-User Experience

Current conditions


The current conditions page displays temperature, wind, rainfall, pressure, humidity and the data source. Values use the selected unit system. Select Next Week Forecast to open the forecast page. Close the page to return to Home.

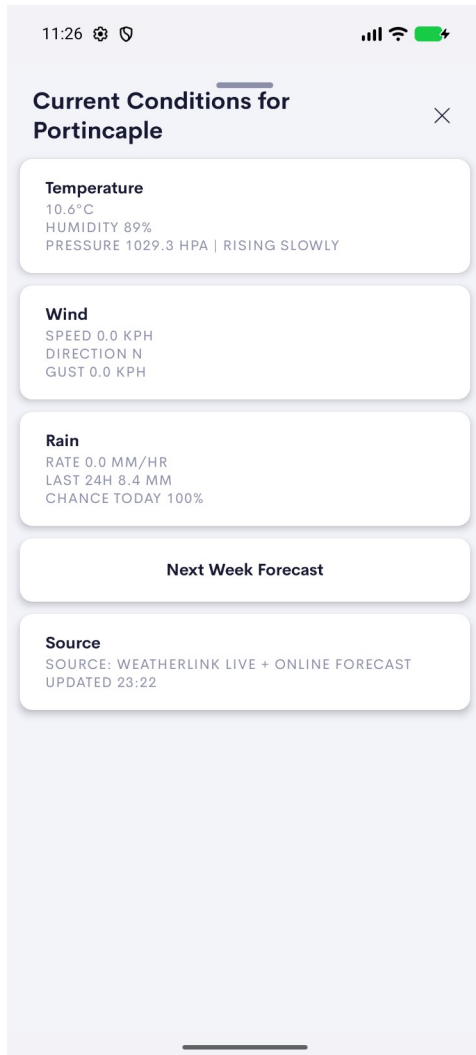

Current conditions from WeatherLink Live, with humidity, pressure, wind and rainfall. Example readings are shown.

Weekly forecast

The weekly forecast page displays a summary and seven daily entries, including the weather description, high and low temperature, and chance of rain. The bottom of the page shows the forecast update time and OpenWeather attribution. Scroll when needed to see the remaining entries. Close the forecast to return to current conditions.

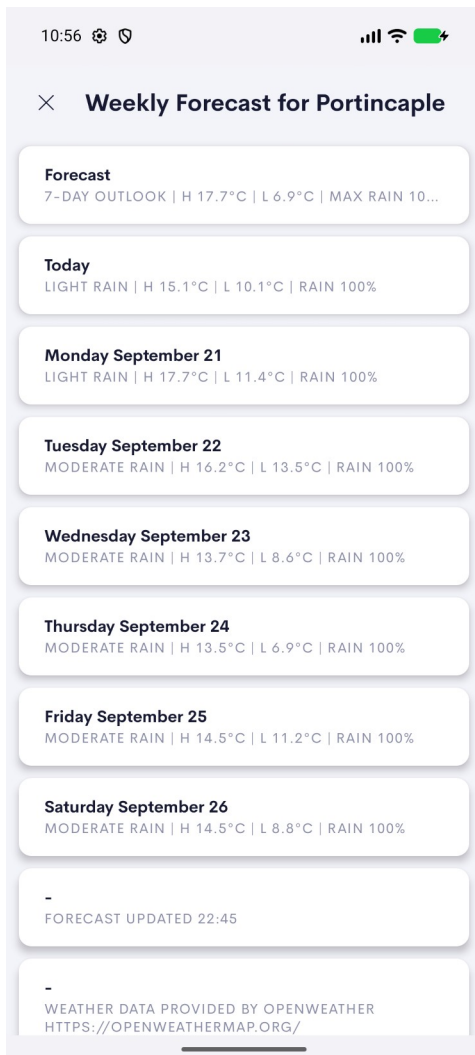

Weekly forecast with daily weather, temperatures and rain probability. Example readings are shown.

Limitations/Known Issues

Forecast and cloud fallback depend on network access and the configured OpenWeather service. The Home tile is not shown on room screens.

Online status describes available current-weather data. A working cloud fallback can keep the driver online while the local station is unreachable. If current-weather retrieval fails with no usable fallback, the driver goes offline and retains any last available readings with a failed-update status. Online status returns after a successful current-weather refresh. A forecast-only failure does not make fresh local current conditions offline.

Supported Features

- Local WeatherLink Live current conditions when available.
- Forecast information and cloud fallback current conditions.

- Metric, UK, and Imperial unit selections.

Test Environment

Observed test environment: CP4-R (hardware version 2), processor firmware 2.8000.00057, and Crestron Home Android app 4.11.1+pr on an Android 16 emulator (API level 36). Current conditions were obtained from one WeatherLink Live unit; forecast data came from OpenWeather. The weather-device firmware version was not recorded.

Build environment: .NET SDK 10.0.401 targeting .NET Framework 4.7.2, Crestron Driver SDK runtime references 27.0.24, and ManifestUtil 29.0.10. The screenshots illustrate the interface; their weather readings are examples and change over time.

Supported Models

WeatherLink Live provides local current conditions. The package declares WeatherLink Live Weather Station as its model and WeatherLink Live as its supported series; no additional models are declared. OpenWeather supplies forecast data and optional fallback current conditions.

Contact Information

Support: <https://github.com/oznetmaster/WeatherLinkLiveCrestronDriver>

Version History

2.0.17: Corrected offline reporting when current-weather sources fail, retained last readings during failures, and preserved online status for fresh local conditions when only forecast retrieval fails.

2.0.16: Corrected displayed pressure, cloud fallback wind speed and imperial rainfall units. Updated embedded help, dependency notices and package resource loading.

Licensing and Copyright Information

MIT License with Commons Clause. Copyright (c) 2026 Neil Colvin. The complete driver license, including the Commons Clause condition and system-integration exception, is reproduced in THIRD-PARTY-NOTICES.txt inside the package.

The merged components include WeatherLinkLiveLibrary, SimpleWeatherClient, Newtonsoft.Json, log4net, Microsoft compatibility libraries and Hafner compatibility attributes. They retain their own licenses and copyright notices; the package notice file includes the reviewed texts and identifies the component versions.

Support and source: <https://github.com/oznetmaster/WeatherLinkLiveCrestronDriver>