


PACK FUSE, MANUAL SWITCH, CHG/DSG PROTECTION FETs

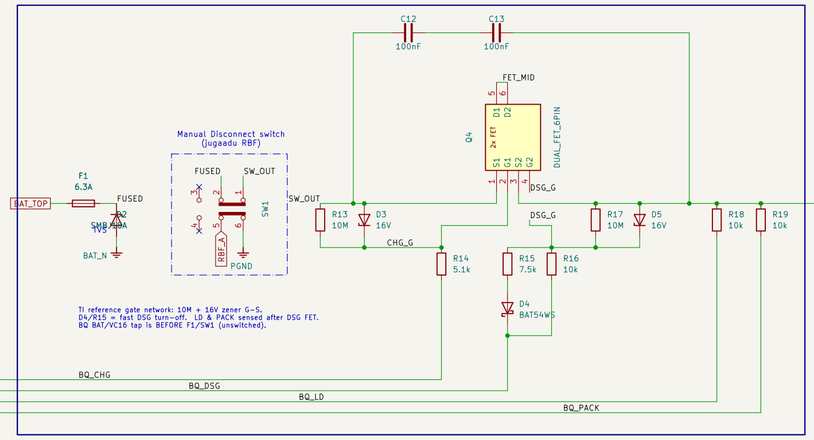


DEPLOY INHIBIT

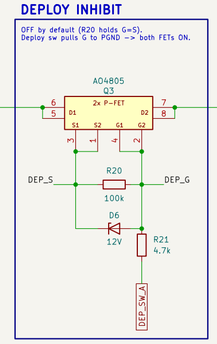


PACK OUTPUT

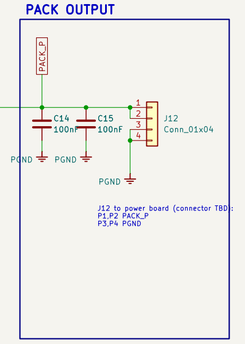


BMS BQ76952

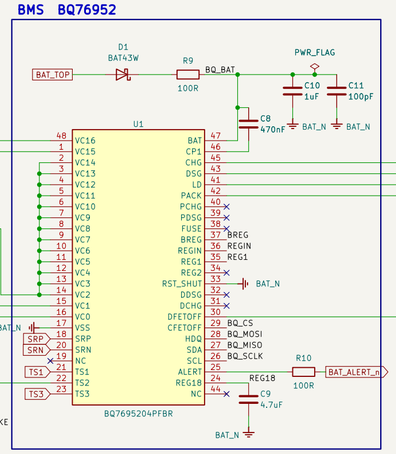


CELL TAP RC FILTER

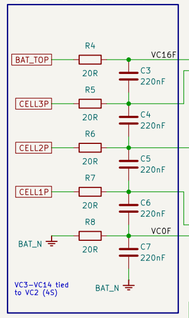



CURRENT SENSE to BMS

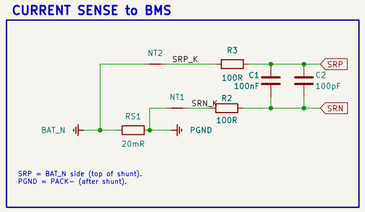


TEST POINTS

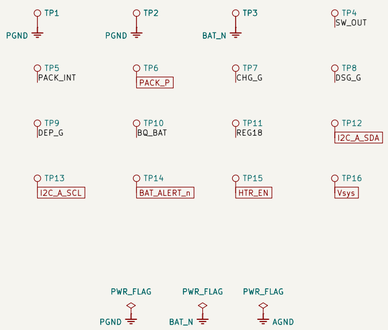

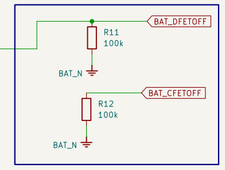


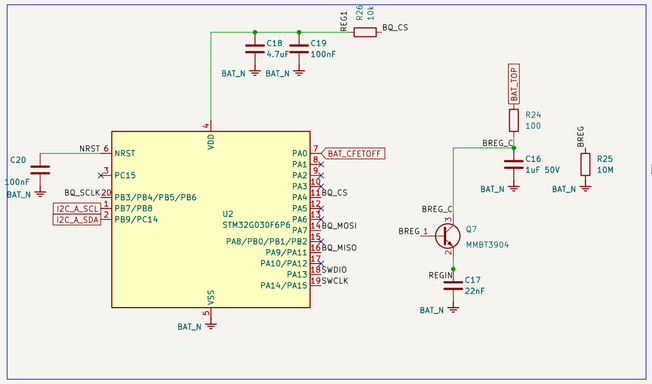


Dep switch




BATTERY HEATER (Vsys–fed)

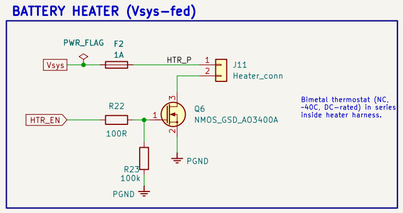


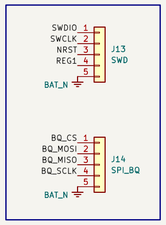


THERMISTORS (NTC 10k)

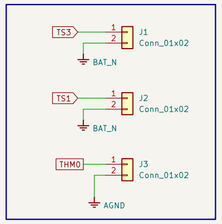

BATTERY PACK 4S2P (off–board, not on BOM)

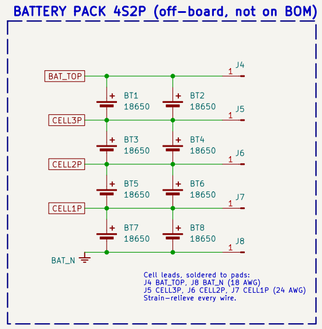

PC/104 STACK H1 / H2

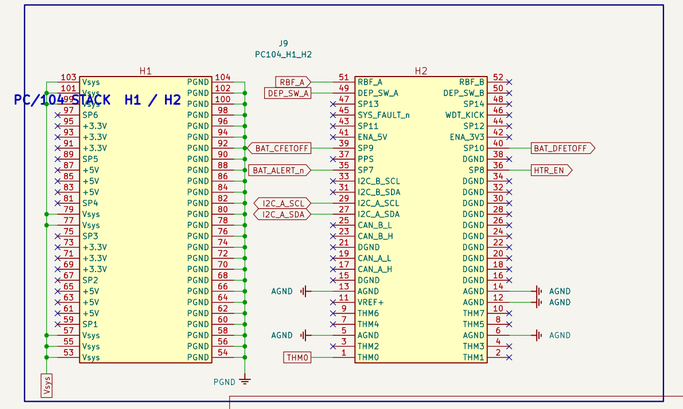

NOTES

1. Power path: BAT_TOP > F1 > SW1 > Q4 CHG > FET_MID > Q4 DSG > PACK_INT > Q3 deploy inhibit > PACK_P > J12.
   BQ BAT and VC16 are tapped at BAT_TOP before F1/SW1 (unswitched).
2. BAT_N (= BQ VSS) exists only on the cell side of RS1. PGND = PACK– = stack PGND. RS1 is the only link.
3. No DGND link on this board: I2C / FET–off lines reference PGND through the EPS star point.
4. Deploy inhibit: Q3 OFF by default. DEP_SW_A > R21 > J10 deploy switch > PGND turns it ON. SW1 pole 2 drives RBF_A.
5. Stack spares: SP7 BAT_ALERT_n, SP8 HTR_EN, SP9 BAT_CFETOFF, SP10 BAT_DFETOFF. EPS NTC on THM0/AGND.
6. RS1 20 mOhm: OCC 4 A = 80 mV, OCD1 6 A = 120 mV, SCD 8.75 A = 175 mV. BQ config is RAM–only: EPS writes it every boot.
7. Open: SW1 off–board wiring, J12 stacking connector. Verify AO4805 pinout on the parts bought (clones differ).

Sheet: /
File: main_battery.kicad_sch

Title:

Size: A2 | Date: | **Rev:**
KiCad E.D.A. 10.0.6 | Id: 1/1