



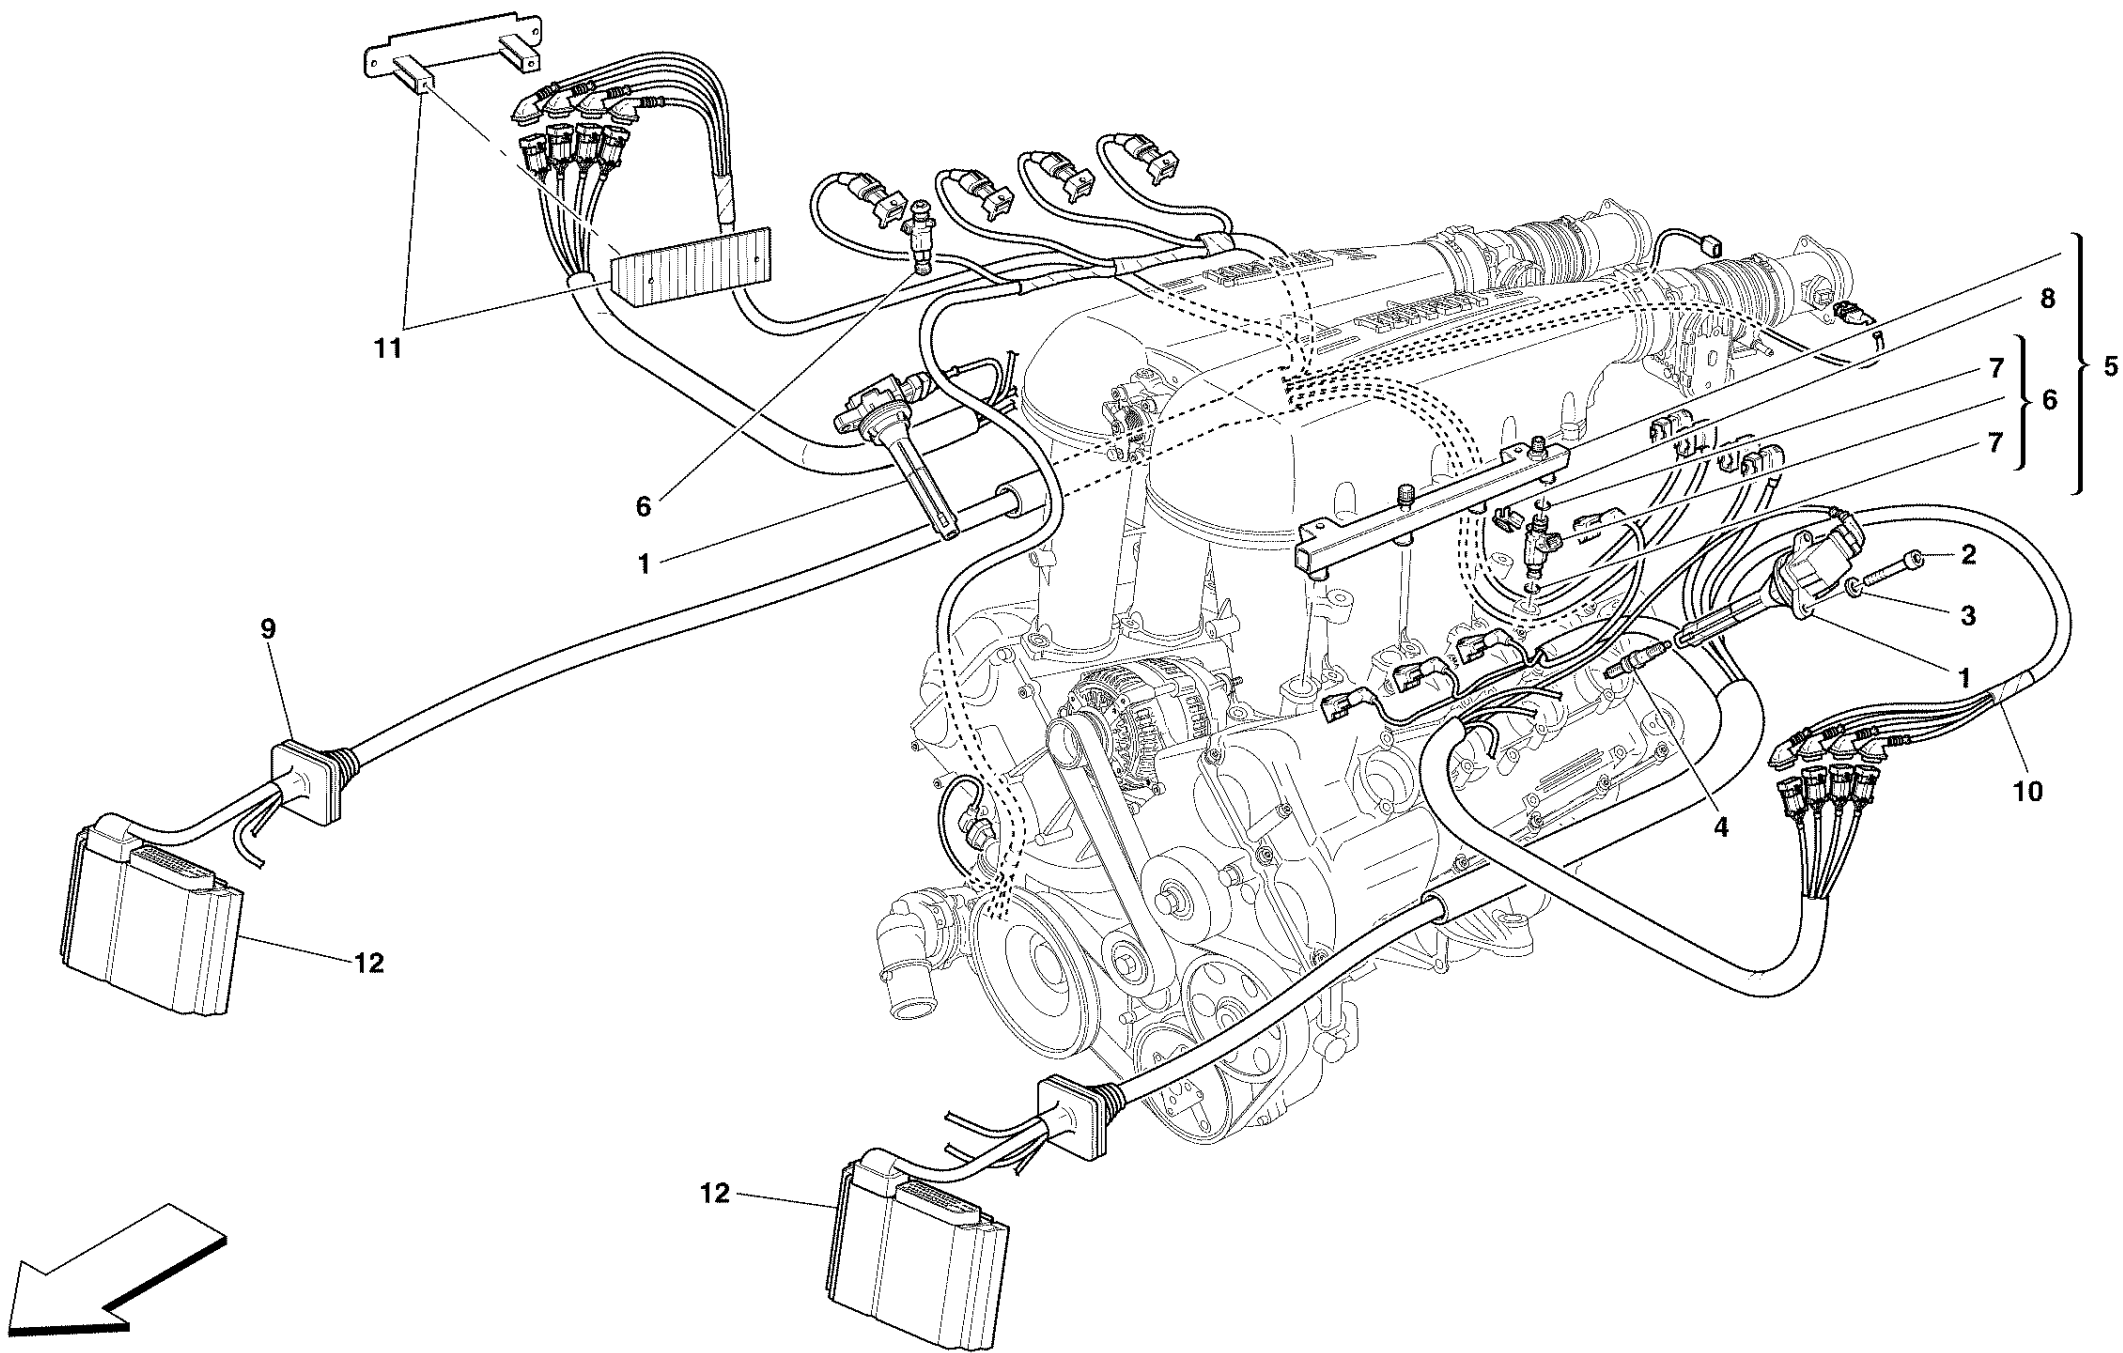


F430 - 7 - INJECTION DEVICE - IGNITION

1	188504	4	SINGOL IGNITION COIL -For cylinder 1,2,7,8-
1	186914	4	SINGOL IGNITION COIL -For cylinder 3,4,5,6-
2	201599	16	SCREW
3	11197774	16	WASHER
4	192637	8	SPARK PLUG
5	191392	1	R.H. COMPLETE FUEL TUBE WITH ELECTRO-INJECTORS
5	191390	1	L.H. COMPLETE FUEL TUBE WITH ELECTRO-INJECTORS
6	191393	8	ELECTRO-INJECTOR
7	133902	4	GASKET
8	144730	8	INJECTORS RETAINING CLIP
9	202974	1	R.H. SIDE INJECTION CONNECTING CABLES
10	204427	1	L.H. SIDE INJECTION CONNECTING CABLES
11	201732	1	R.H. REAR PANEL
11	201733	1	L.H. REAR PANEL
12	199217	1	CONTROL UNIT IGNITION -Not for F1-
12	199215	1	CONTROL UNIT IGNITION -Valid for F1-

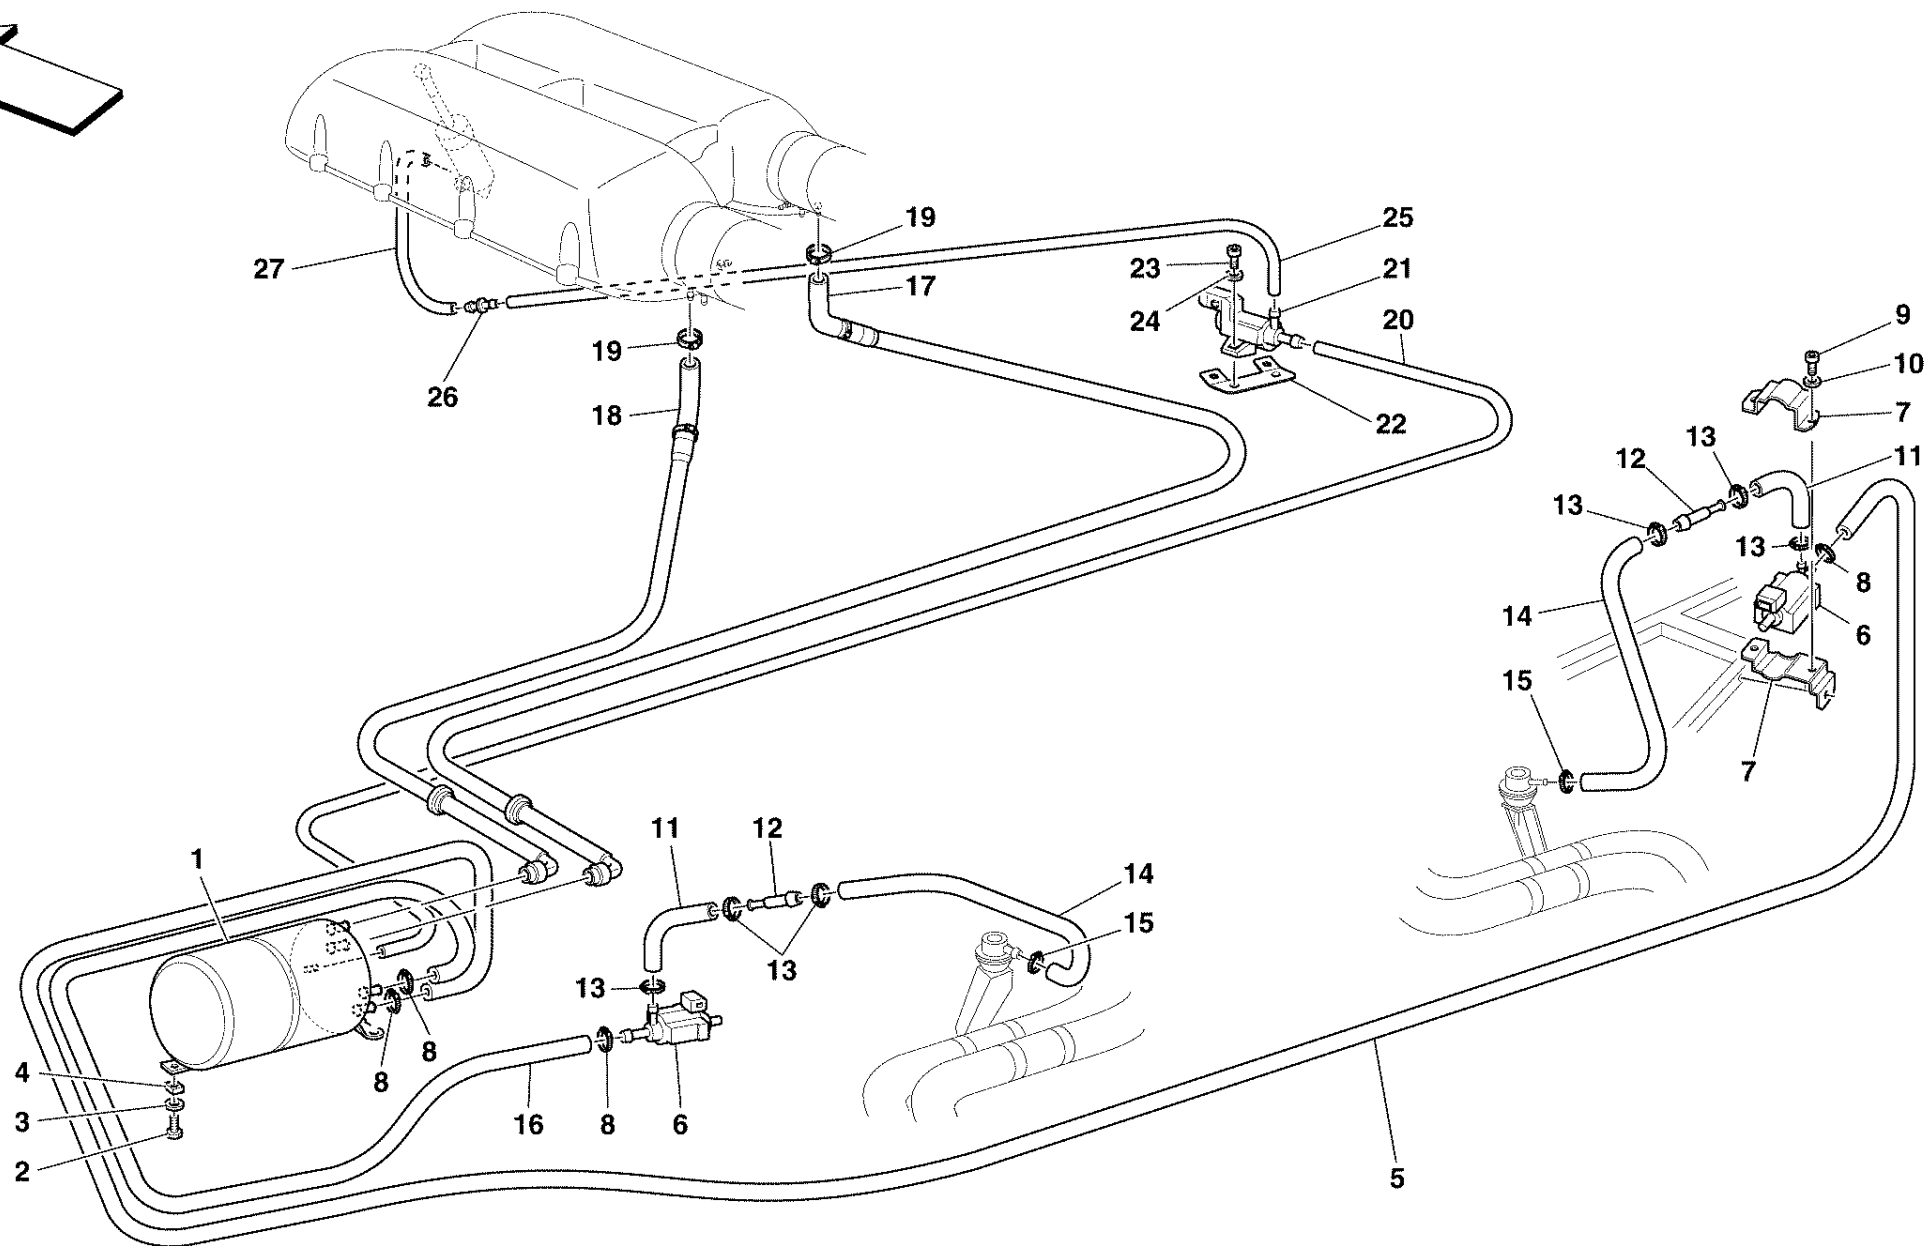


F430 - 8 - PNEUMATICS ACTUATOR SYSTEM

1	207624	1	DEPRESSION ACCUMULATION TANK
2	10902224	3	SCREW
3	12601274	3	WASHER
4	12639724	3	WASHER
5	210352	1	PIPE FROM TANK TO R.H. SOLENOID VALVE
6	178309	2	SOLENOID VALVE
7	178515	2	SOLENOID VALVE SUPPORT
8	13432170	4	COLLAR FOR SLEEVE
9	14302924	4	SCREW
10	127492	4	WASHER
11	178552	2	RUBBER HOSE
12	178369	2	UNION
13	13432270	6	COLLAR FOR SLEEVE
14	147121	2	RUBBER HOSE
15	171406	2	COLLAR FOR SLEEVE
16	210351	1	PIPE FROM TANK TO L.H. SOLENOID VALVE
17	210200	1	COMPLETE R.H. DEPRESSION PIPE
18	210201	1	COMPLETE L.H. DEPRESSION PIPE
19	13432070	2	COLLAR FOR SLEEVE
20	124406	1	PIPE FROM TANK TO SOLENOID VALVE
21	184363	1	SOLENOID VALVE
22	200111	1	BRACKET
23	14304124	2	SCREW
24	12544174	2	WASHER
25	118502	1	PIPE FROM SOLENOID VALVE TO UNION
26	178491	1	UNION
27	168248	1	PIPE FROM UNION TO ACTUATOR

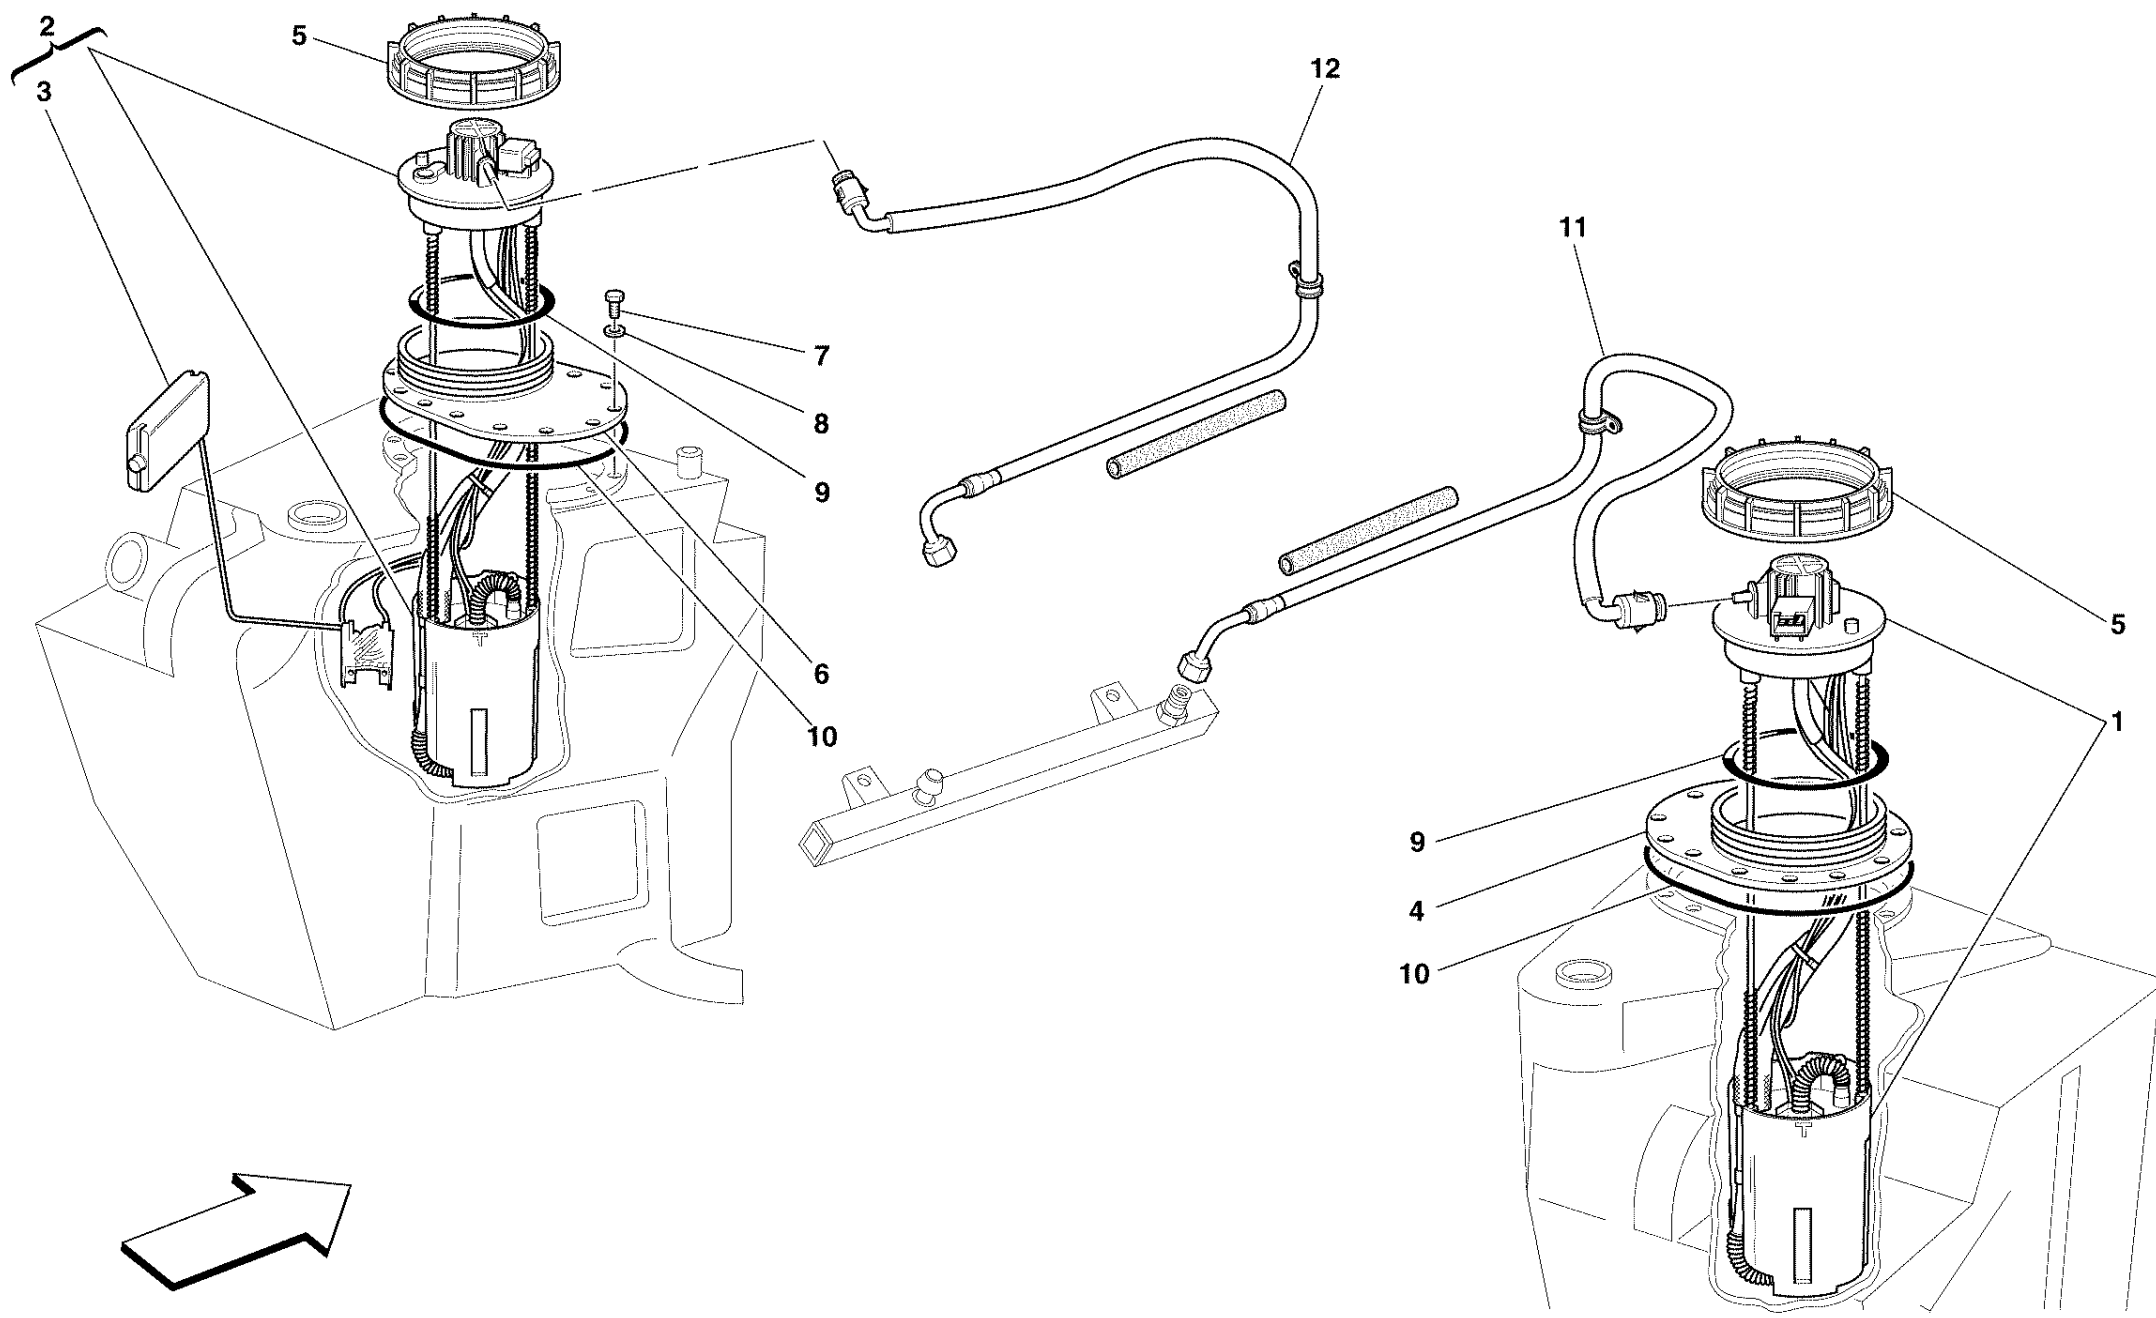


F430 - 9 - FUEL PUMPS AND PIPES

1	195805	1	R.H. COMPLETE FUEL PUMP
2	195804	1	L.H. COMPLETE FUEL PUMP AND FUEL LEVEL INDICATOR
3	196124	1	FUEL LEVEL INDICATOR
4	196100	1	R.H. PUMP SUPPORT COVER
5	181682	2	RING NUT
6	196101	1	L.H. PUMP SUPPORT COVER
7	10977624	26	SCREW
8	12601174	26	WASHER
9	181681	2	GASKET
10	196834	2	O.R. GASKET
11	208831	1	R.H. CONNECTION PIPE
12	208829	1	L.H. CONNECTION PIPE

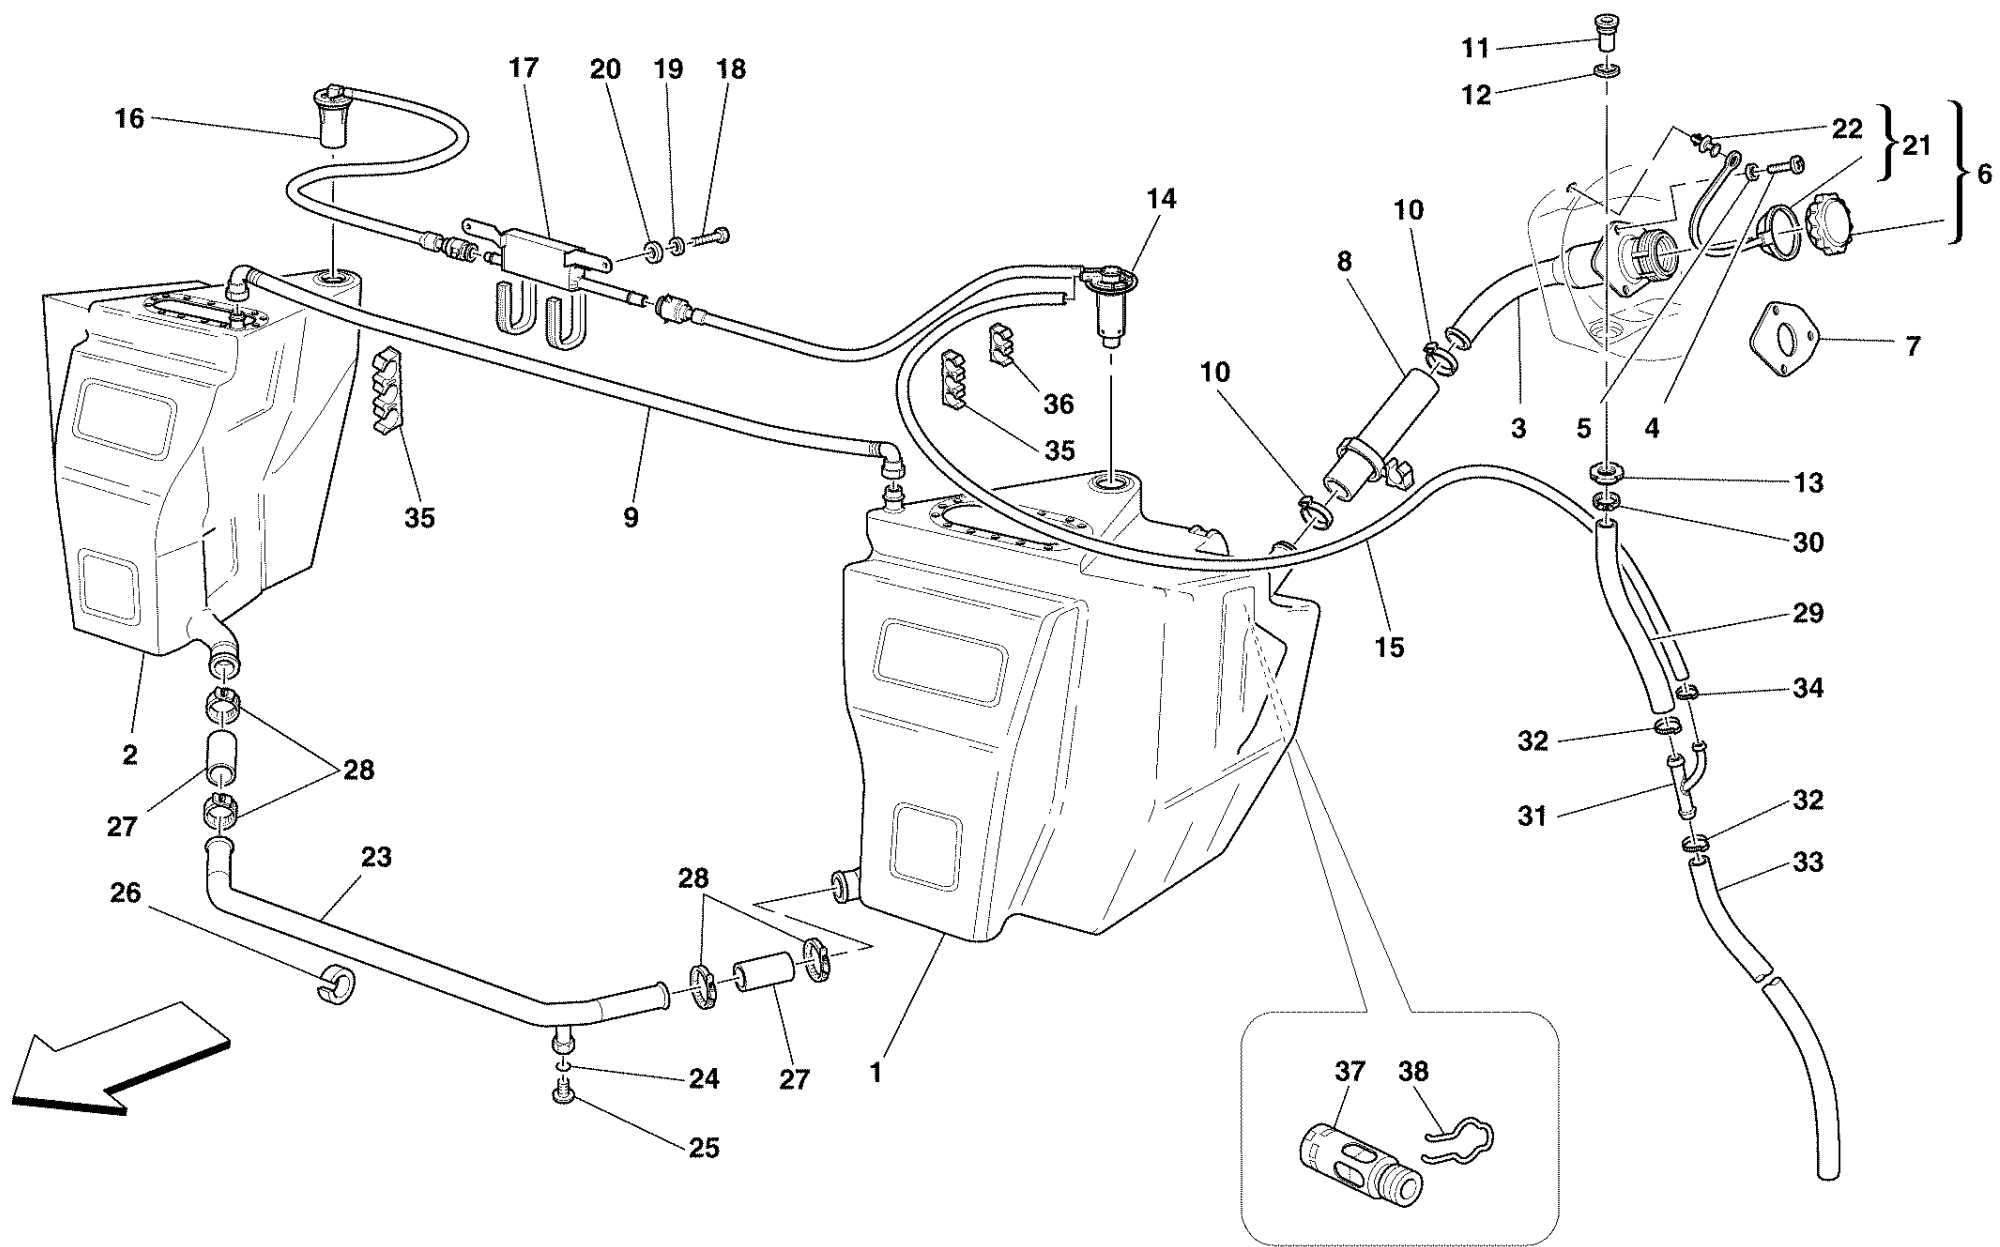


F430 - 10 - FUEL TANKS AND UNION

1	195895	1	L.H. FUEL TANK
2	195891	1	R.H. FUEL TANK
3	203516	1	UNION
4	64686900	3	SCREW
5	10615474	3	WASHER
6	190469	1	COMPLETE PLUG
7	172899	1	GASKET
8	198481	1	UNION-TANK CONNECTING PIPE
9	207054	1	TANKS AIR BELL CONNECTION PIPE
10	170127	2	ELASTIC COLLAR
11	64872000	1	SLEEVE
12	65064500	1	GASKET
13	104919	1	RING NUT
14	208895	1	L.H. VALVE WITH PIPE
15	211283	1	RUBBER HOSE
16	208894	1	R.H. VALVE WITH PIPE
17	209010	1	DISAREATOR
18	62940900	2	SCREW
19	127494	2	WASHER
20	10523424	2	WASHER
21	196949	1	COMPLETE RING
22	186172	1	RETAINER
23	203788	1	TANKS CONNECTION PIPE
24	123622	1	GASKET
25	148045	1	THREADED PLUG
26	177437	6	RUBBER THICKNESS
27	196299	2	RUBBER HOSE
28	180957	4	SCREW COLLAR
29	213294	1	PIPE FROM PAN TO 3-WAY
30	177553	1	CLAMP
31	195439	1	3-WAY UNION
32	178052	2	CLAMP
33	213295	1	PIPE FROM 3-WAY TO BOTTOM
34	13432270	1	ELASTIC COLLAR
35	183098	1	FLEXIBLE CLIP
36	140727	2	FLEXIBLE CLIP
37	181929	1	ON-OFF VALVE
38	181930	1	CLIP

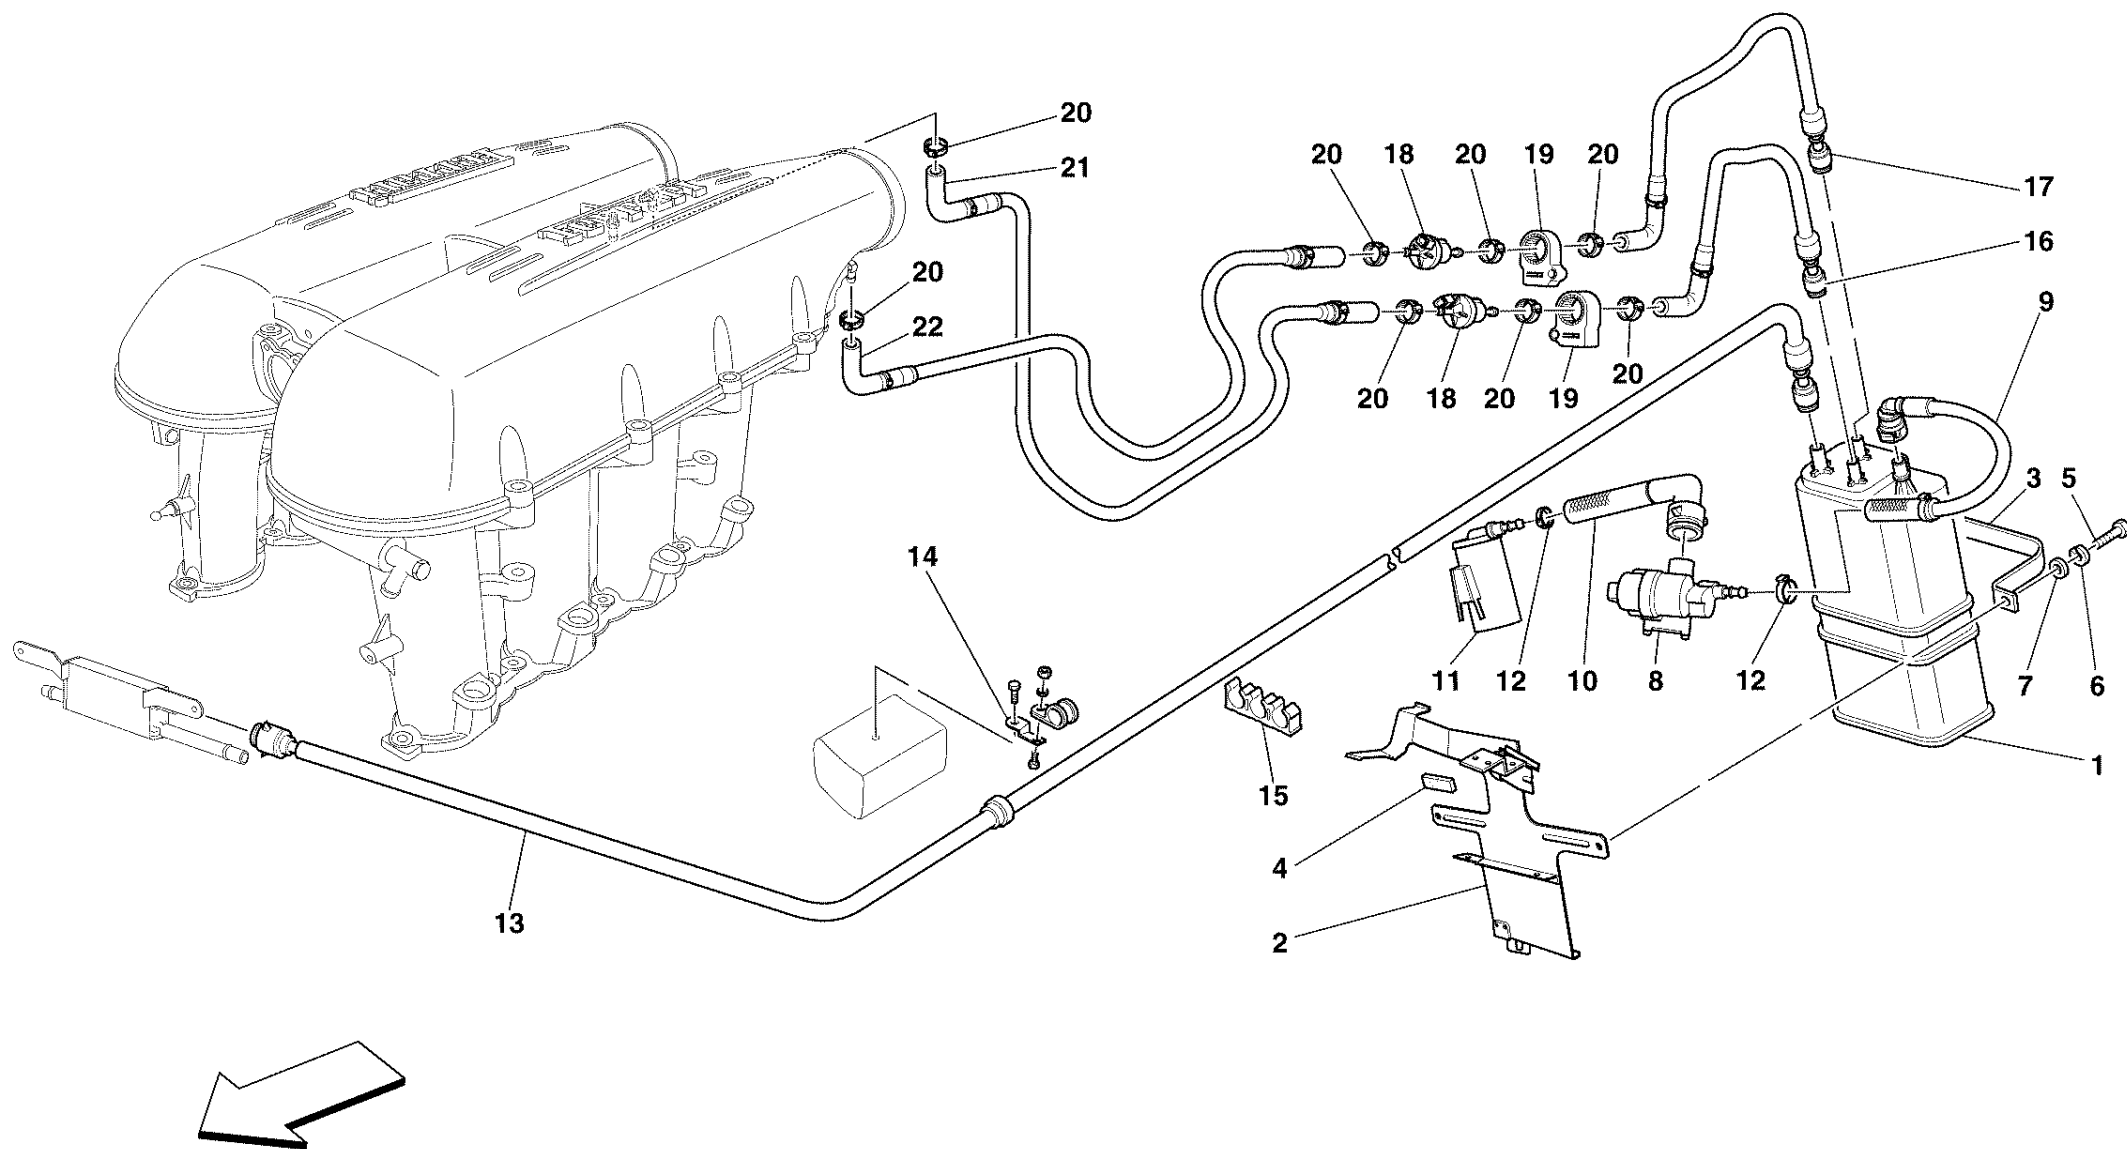


F430 - 12 - ANTIEVAPORATION DEVICE

1	206762	1	FUEL VAPOR FILTER
2	209664	1	FILTER FIXING BRACKET
3	209665	1	BRACKET
4	180638	2	RUBBER THICKNESS
5	10902124	2	SCREW
6	12639724	2	WASHER
7	127494	2	WASHER
8	202968	1	DIAGNOSIS PUMP
9	210789	1	COMPLETE TUBE WITH UNION
10	195288	1	COMPLETE TUBE WITH UNION
11	183221	1	FILTER FOR OBD PUMP
12	13000390	2	SCREW COLLAR
13	192879	1	TUBE FROM DISAREATOR TO FILTER
14	211358	1	BRACKET
15	180972	1	SPRINGS
16	192883	1	PIPE FROM FILTER TO R.H. WASHING VALVE
17	192882	1	PIPE FROM FILTER TO L.H. WASHING VALVE
18	162412	2	WASHING VALVE
19	174623	2	BUFFER FOR SUPPORT
20	13432070	8	COLLAR FOR SLEEVE
21	197689	1	COMPLETE R.H. TUBE WITH UNIONS
22	197688	1	COMPLETE L.H. TUBE WITH UNIONS

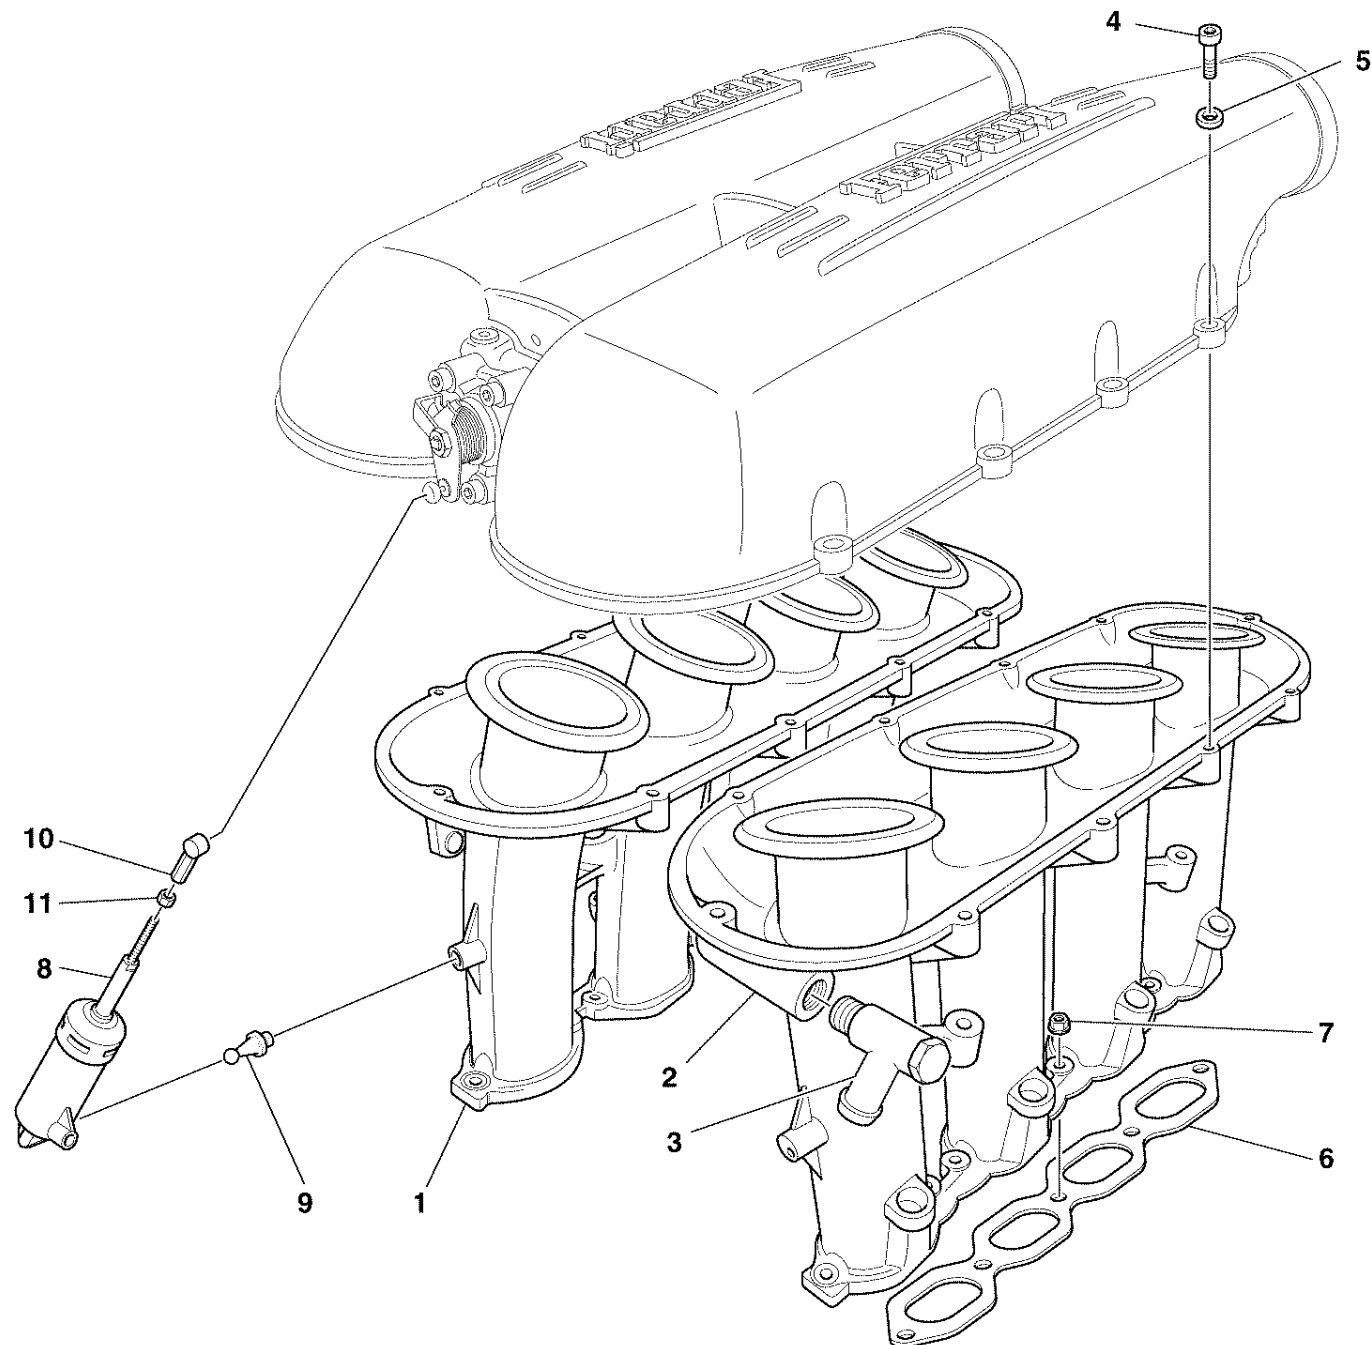


F430 - 13 - AIR INTAKE MANIFOLD

1	197755	1	R.H. SUCTION MANIFOLD
2	197756	1	L.H. SUCTION MANIFOLD
3	124342	1	UNION
4	14305424	8	SCREW -M6x25-
4	14305824	4	SCREW -M6x40-
4	14309224	8	SCREW -M6x65-
5	11197774	20	WASHER
6	199403	2	GASKET
7	159601	16	NUT
8	173594	1	ACTUATOR
9	191230	1	PIN
10	184532	1	END
11	15896211	1	NUT

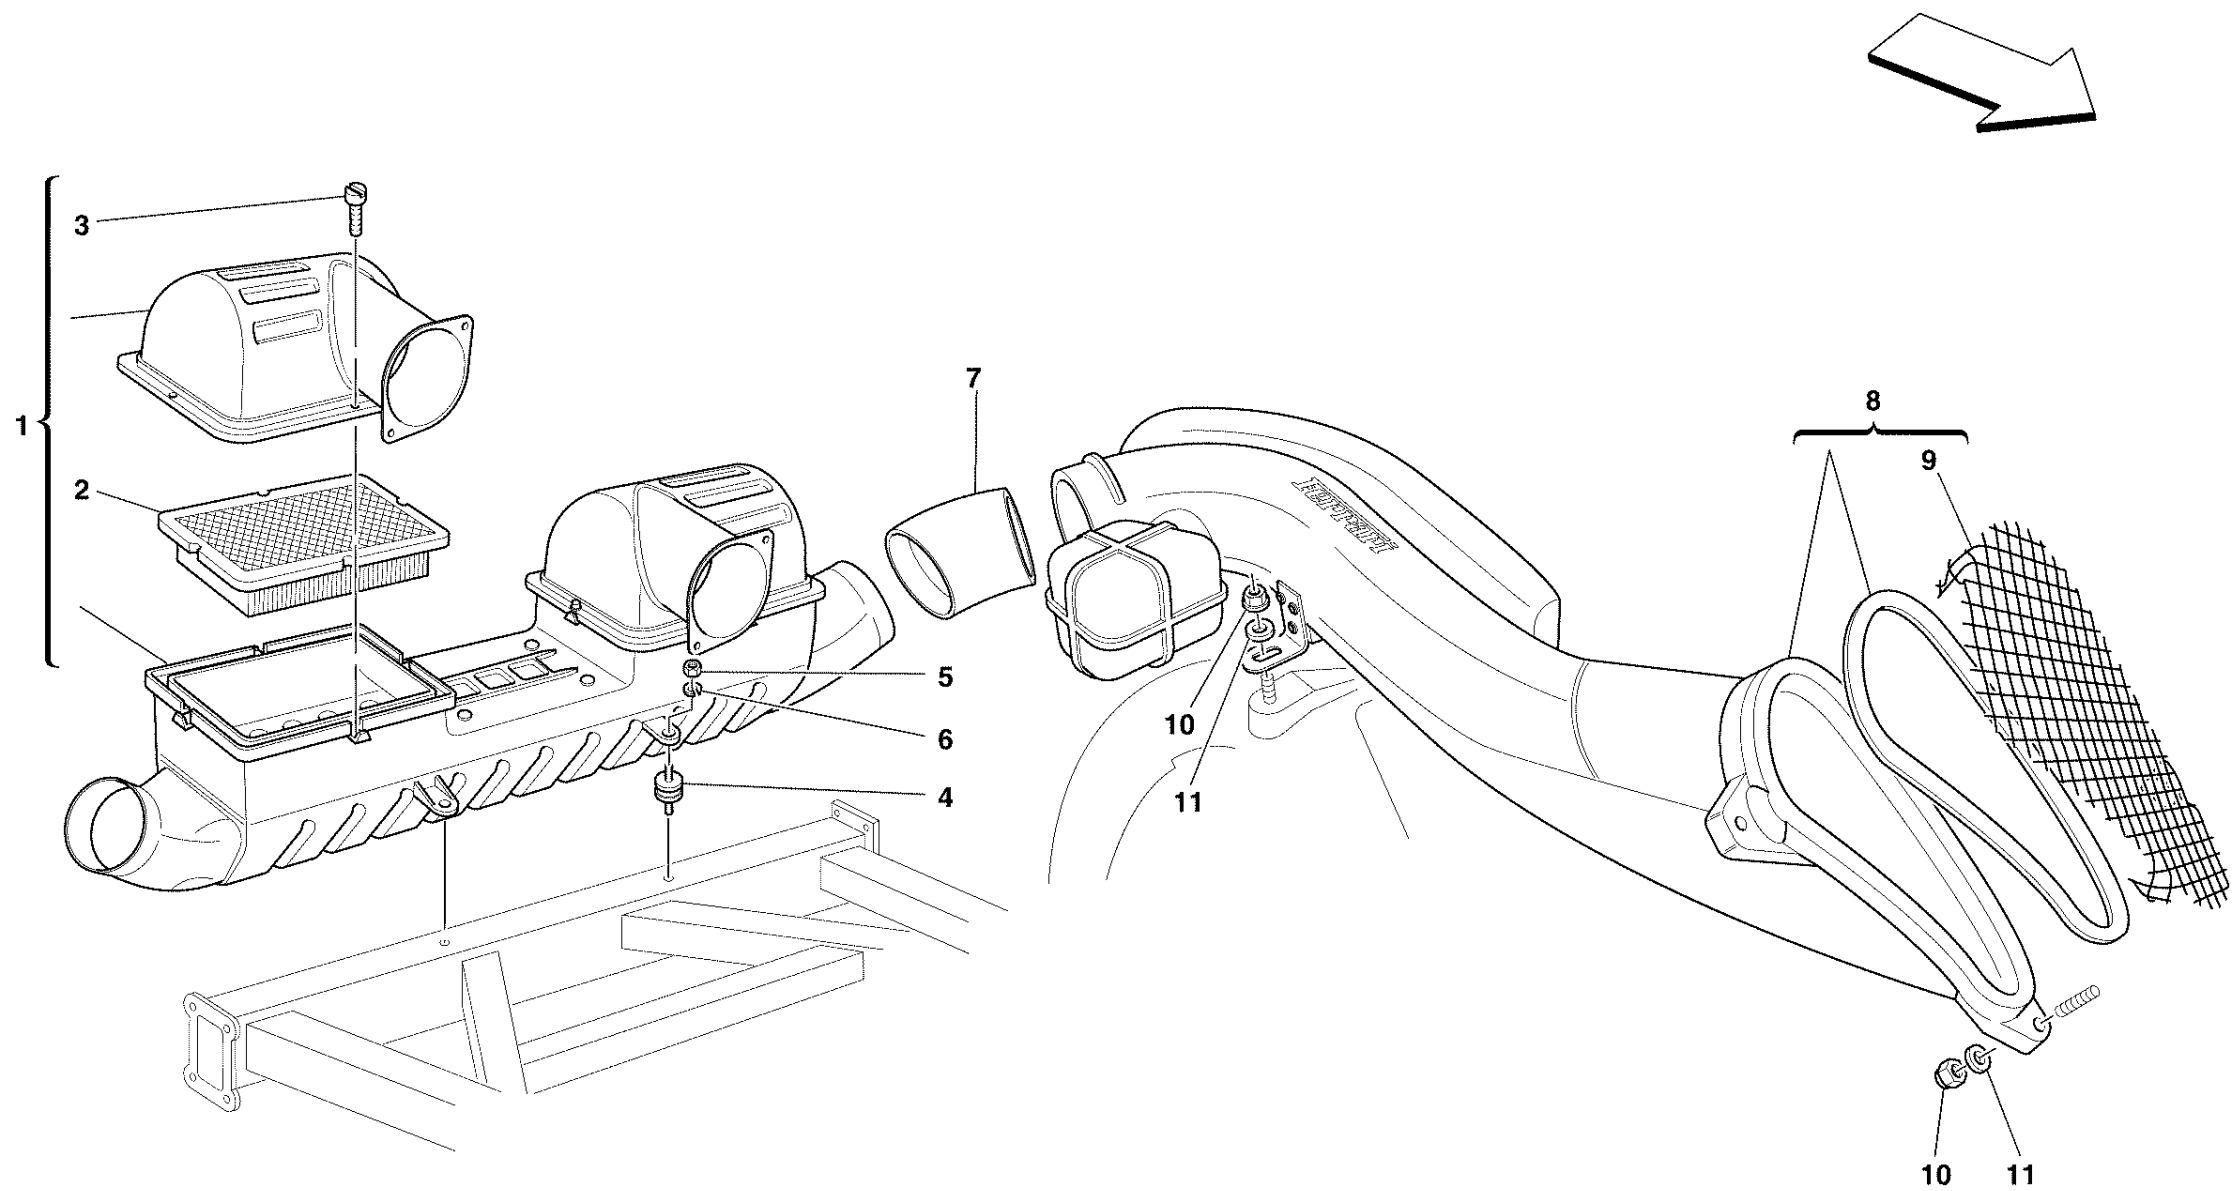


F430 - 14 - AIR INTAKE

1	191204	1	COMPLETE FILTER BOX -In aluminium-
1	212208	1	COMPLETE FILTER BOX -In carbon-
2	191206	2	AIR FILTER
3	157757	8	SCREW
4	142202	4	PAD
5	15896214	4	NUT
6	12643724	4	WASHER
7	207497	1	SLEEVE
8	213771	1	L.H. AIR INLET
8	213769	1	R.H. AIR INLET
9	63580500	2	COMPLETE GRILL
10	113647	8	NUT
11	14496324	8	WASHER

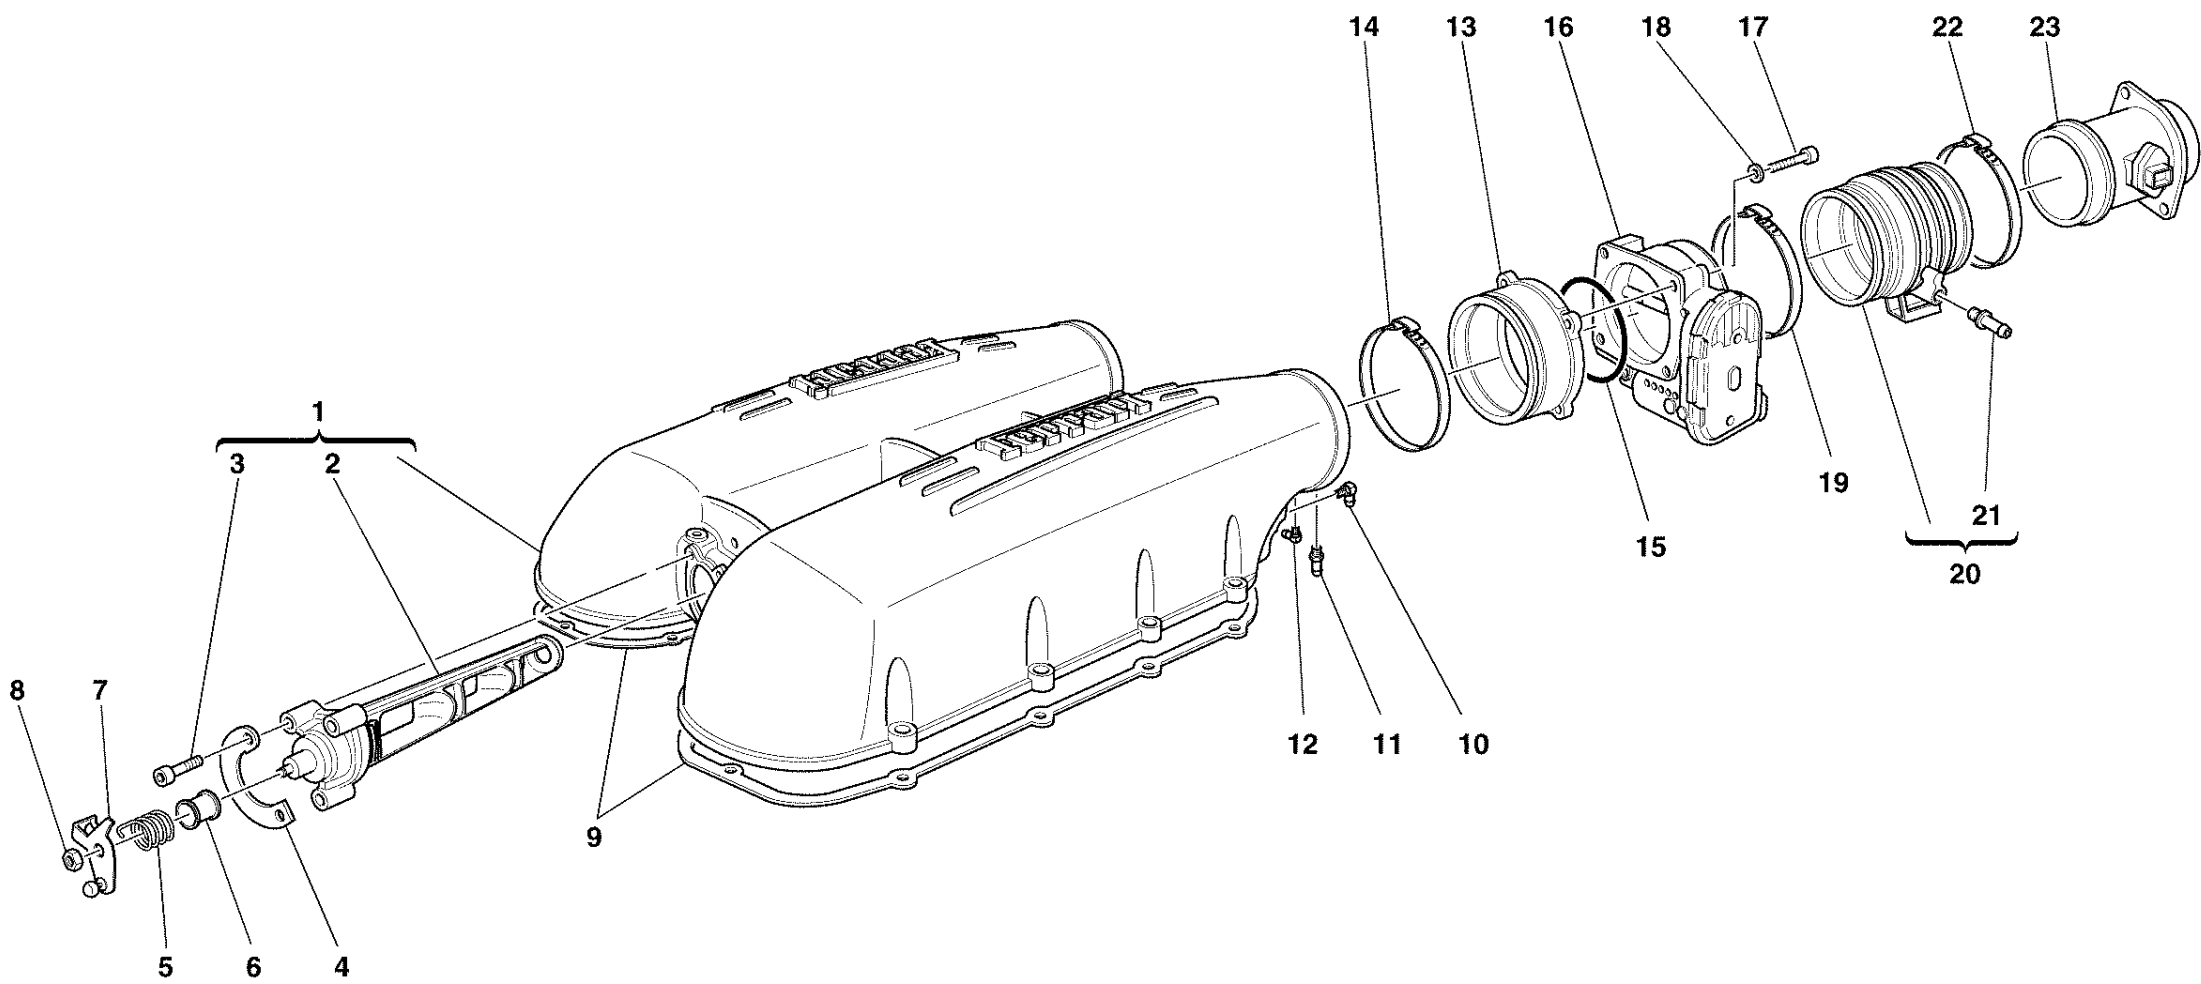

F430 - 15 - AIR INTAKE MANIFOLD COVER

1	209506	1	SUCTION MANIFOLD COVER
2	204237	1	ROLLING DRUM
3	14305624	3	SCREW
4	204873	1	SAFETY PLATE
5	197761	1	SPRING
6	205123	1	BUSHING
7	203401	1	DRUM CONTROL LEVER
8	177613	1	NUT
9	212507	2	GASKET
10	174818	2	UNION
11	210194	2	UNION
12	128016	2	UNION
13	195206	2	SPACER
14	190151	2	CLAMP
15	150302	2	O.R. GASKET
16	179912	2	THROTTLE HOLDER
17	14305924	8	SCREW
18	12639724	8	WASHER
19	180046	2	CLAMP
20	205092	1	R.H. SLEEVE
20	205095	1	L.H. SLEEVE
21	209132	2	UNION
22	177981	2	CLAMP
23	181120	2	AIR FLOW METER

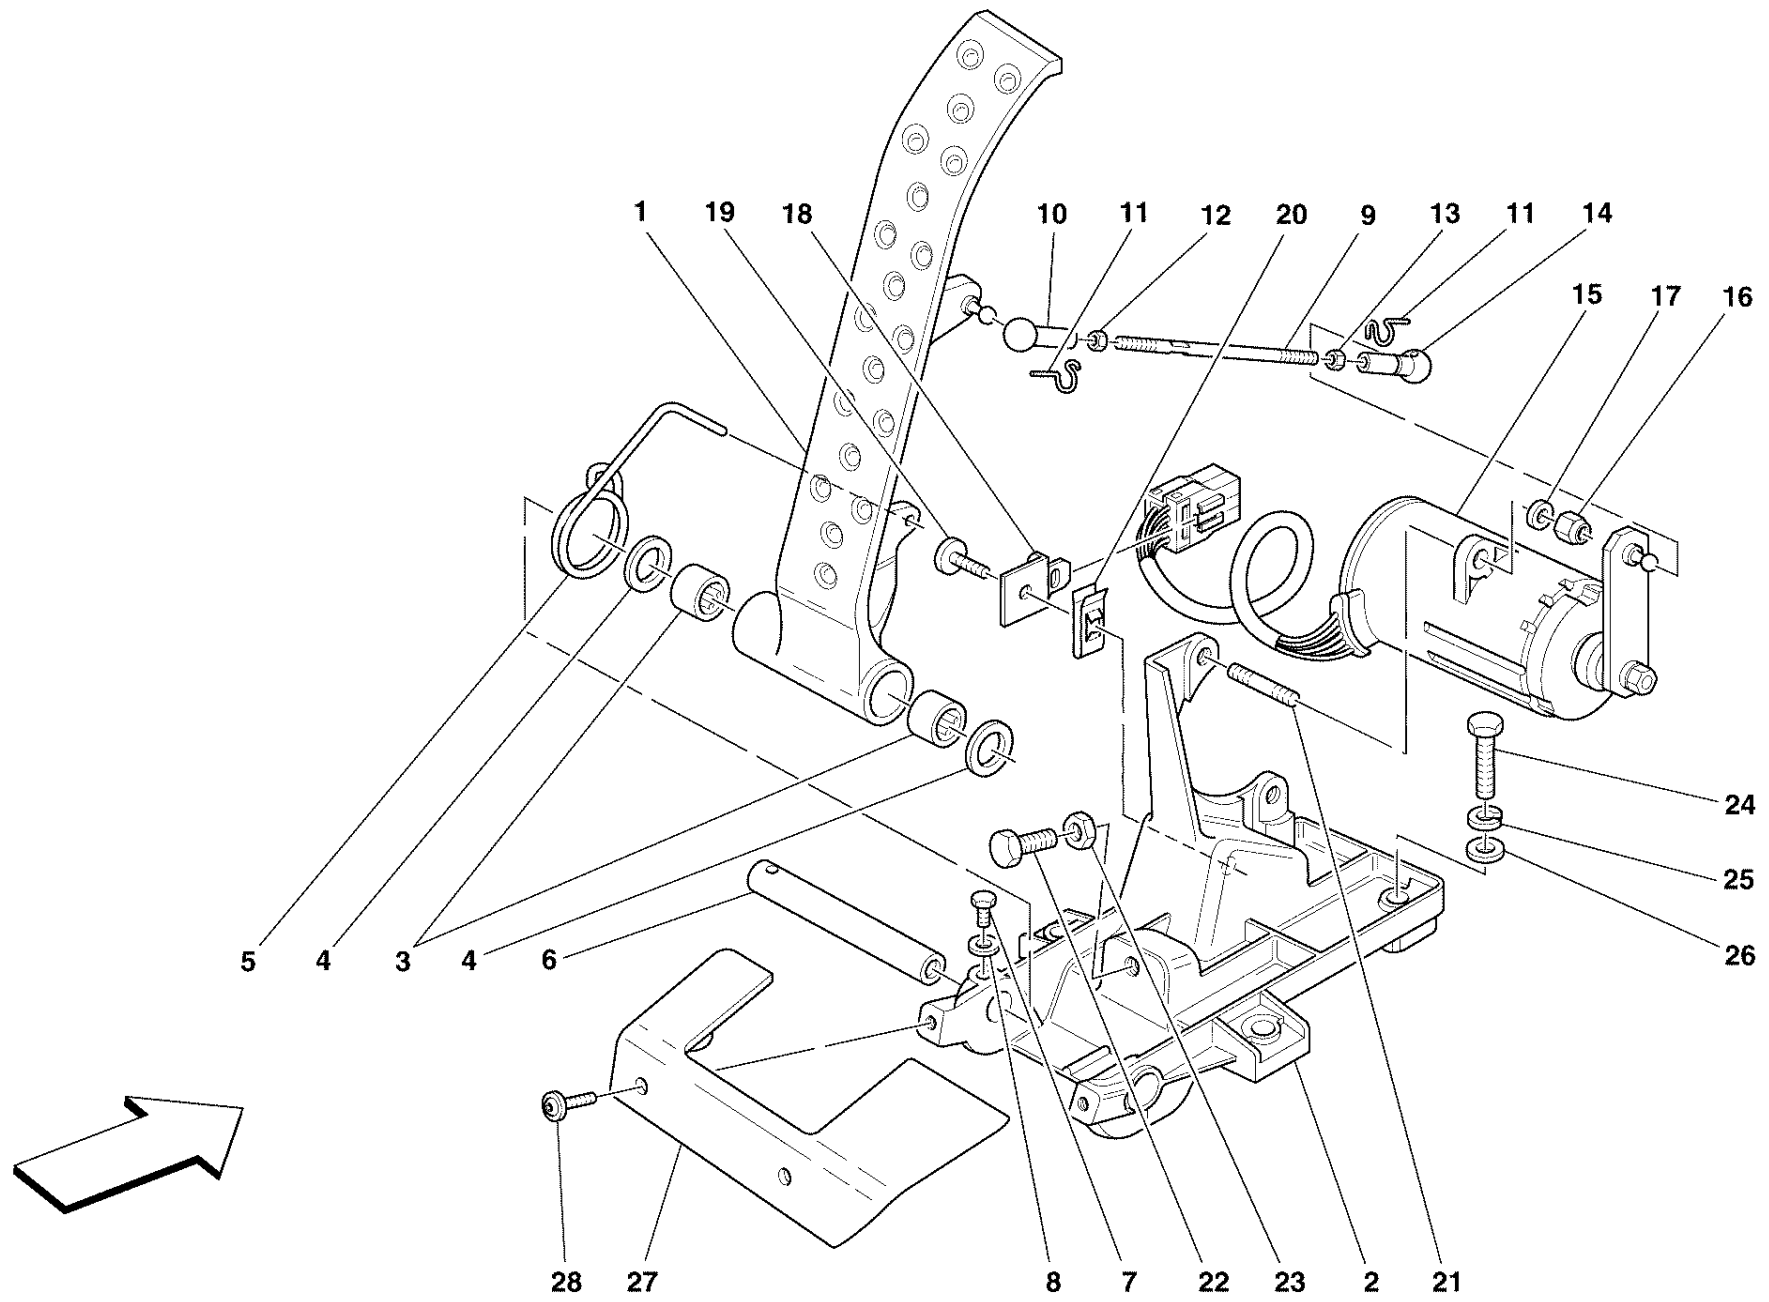

F430 - 16 - ELECTRONIC ACCELERATOR PEDAL

1	196180	1	ACCELERATOR PEDAL
2	185452	1	ACCELERATOR PEDAL SUPPORT
3	101677	2	ROLLER BEARING
4	157115	2	WASHER
5	175351	1	RETUTN SPRING FOR PEDAL
6	171468	1	ROLLER CAGE RACE
7	10977524	1	SCREW
8	12601174	1	WASHER
9	171466	1	PUSH ROD
10	173999	1	BALL JOINT HEAD
11	174001	2	CLIP
12	15896470	1	NUT
13	105586	1	L.H. THREADED NUT
14	174000	1	BALL JOINT HEAD
15	170038	1	ACCELERATOR PEDAL POTENTIOMETER
16	102948	2	NUT
17	10519424	2	WASHER
18	170925	1	BRACKET FOR CONNECTOR FIXING
19	14071911	1	SCREW
20	14371274	1	BRACKET
21	11500324	2	STUD
22	16043621	1	SCREW
23	16102314	1	NUT
24	10902624	3	SCREW
25	127494	3	WASHER
26	14496424	3	WASHER
27	65709100	1	ACCELERATOR PEDAL COVER
28	65752800	2	SCREW