

Safety Notes



- Please read the following notes carefully because they include important safety information about the installation, usage, and maintenance of this product.
- Always make sure that the voltage of the outlet to which you are connecting this product is within the range stated on the decal or rear panel of the fixture.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- Always install this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the unit's housing are blocked.
- Always disconnect this product from the power source before cleaning it or replacing fuse.
- Make sure to replace the fuse with another of the same type and rating
- If mounting this product overhead, always secure it to a fastening device using a safety cable.
- The maximum ambient temperature (Ta) is 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Always avoid direct eye exposure to the light source when this fixture is on.

Technical parameters

Light source	54*4W(RGBW 4-in-1)
Lifespan	50000 hours
Power supply	AC 100 ~ 240V / 50Hz-60 Hz
Rating power	120W
Max Slave Qty	100V AC/8 220V AC/16
Play mode	Auto/Sound/DMX/Master-slave
Channel	4/8
N.W.	2KG

Button Instruction

To access the control panel functions, use the four buttons located underneath the display.



Button	Function
<MENU>	Press it to find an operation mode or to back out of the current menu option
<UP>	Use it to scroll up the list of options or to find a higher value
<DOWN>	Use it to scroll down the list of options or to find a lower value
<ENTER>	Use it to activate a menu option or a selected value

Menu Function Instruction


No.	Menu			Description	Default
1	d001	d001-d512	4Channel mode	DMX512 address setup	001
2	A001	A001-A512	8Channel mode	DMX512 address setup	001
3	r000	000-255	Red dimming	Red dimming,from dark to bright	255
4	G000	000-255	Green dimming	Green dimming,from dark to bright	255
5	b000	000-255	Blue dimming	Blue dimming,from dark to bright	255
6	U000	000-255	White dimming	White dimming,from dark to bright	255
7	FH01	00-99	Strobe speed	Strobe,speed from slow to fast	99
8	CL01	01-08	Built-in color	Eight color outputs	08
9	Ct01	01-09	High CRI color	9 High CRI colors (Color temperature from 2800K to 8000K)	01
10	CC99	00-99	Colors jump	Colors jump,from slow to fast	95
11	DE99	00-99	Colors fade	Colors fade,from slow to fast	95
12	CP99	00-99	Colors pulse	Colors pulse,from slow to fast	95
13	SU09	01-09	Sound		09
14	CrV	CrV1-CrV4	Dimmer curve	1.Linear 2.Square Law 3.Inverse Square Law 4.S-curve	Linear
15	FAn	FAn1-FAn2	Fan mode	1.Auto 2.Studio	Auto

4/8 Channel mode menu


4CH	8CH	Value	Function
/	CH 1	000-255	General dimming 0%-100%
CH 1	CH 2	000-255	Red dimming 0%-100%
CH 2	CH 3	000-255	Green dimming 0%-100%
CH 3	CH 4	000-255	Blue dimming 0%-100%
CH 4	CH 5	000-255	White dimming 0%-100%
/	CH 6	000-255	Strobe speed From slow-fast
/	CH 7	Effect	
		0-10	Dimming 0%-100%
		011-050	9 High CRI colors (color temperature from 2800K to 8000K)
		051-100	Color output
		101-150	Jump change
		151-200	Colors fade
		201-250	Pulse transform
		251-255	Sound control
/	CH 8	Control	
		000-010	Reserve
		011-020	Dimmer curve: Linear
		021-030	Dimmer curve: Square Law
		031-040	Dimmer curve: Inverse Square Law
		041-050	Dimmer curve: S-curve
		051-060	Fan mode1: Auto
		061-070	Fan mode2: Studio
		071-080	Reserve
		081-255	CH7 Effect speed 0%-100%

Dimmer curve


Linear

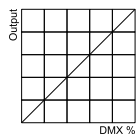

Square Law

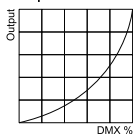

Inverse Square Law

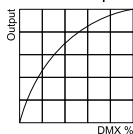

S-curve

