

REMOTE CONTROLLER

Press mode key until Iron or **IroF** is displayed; then press Up or Down button to choose Iron. Press **ENTER** to confirm.

To switch off the lights:

Press OFF on the remote control. All the lights will turn off until the button ON is pressed [1].

Manual colour control

You can set R/G/B colours with the remote by pushing either the Red <R> button for red, the Green <G> button for green, the Blue button for blue [3].


Each colour intensity is then adjustable using the Light Up and Down [2] buttons

Preset colour mode:

Press one of the twelve preset colours on the remote control [4]. No dimming possible with preset colours.

AUTO/SOUND on the IRC.

Press one of the four buttons to choose between the different auto programs. [5]

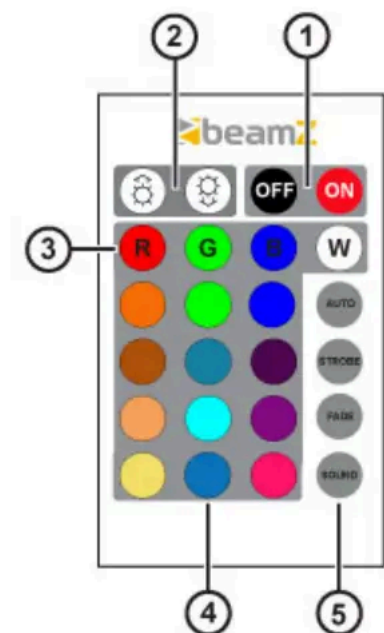

FIXTURE CLEANING

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Make sure the area below the installation place is free from unwanted persons during servicing
- Housings, fixations and installations spots(ceiling, truss, suspensions) should be totally free from any deformation
- The mains cables must be in impeccable condition and should be replaced immediately when even a small problem is detected
- In order to protect the fixture from overheat the cooling fans (if any) and ventilation openings should be cleaned monthly.
- The interior of the fixture should be cleaned annually using a vacuum cleaner or air-jet.
- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every month. Clean the internal optics at least every 30/60 days.

ATTENTION: We strongly recommend internal cleaning to be carried out by qualified worker!

