

DJ and piano console

Design package for the carpenter. Version 1.7, 28 September 2026. All dimensions in centimetres unless marked mm. Light natural oak, matte oiled.

One piece, 185 cm wide, that holds a DJ set-up on top at standing height, a stage piano on a pull-out tray at seated height, about 160 records in two end columns, books in two open compartments, two drawers with a power niche between them, and two studio monitors on caps at the top of the columns. The middle section floats 20 cm above the floor so a sustain pedal and feet fit underneath.

Key dimensions

Item	Value
Overall	185 wide × 50 deep × 130 high (caps). DJ surface at 100. Footprint is the same at every height: the caps are flush with the columns.
Bay (between wings)	145 wide. Gear span 145, keyboard tray 141.2 overall including aprons, keyboard 133.
Wings	20 wide each, 16.4 clear inside, full height to 127, cap 20 × 50 × 3 on top.
Keyboard tray	Top face 63, underside 61.2, extension 40, tray 137.6 × 42. Key tops about 74 (piano height).
Recess	20 clear, full bay width, open to the wall.
Depth budget	43.2 usable inside the bay, 1.8 back panel, 5 chase. Wings use the full depth (48.2 inside).
Panel thickness	18 mm carcass, 30 mm top and caps, 15 mm drawer boxes.
Storage	About 160 records in the wings (six openings, 6 mm per sleeve; 190 if mostly single sleeves), two book compartments of 71.6 cm, two drawers. Each book compartment holds about 110 more LPs if wanted.
Weight, empty	Roughly 120 to 130 kg. Loaded with records, books and gear about 250 kg. Spread over the two wings and the floating bay.

What goes where

Zone	Height (cm)	Contents
Speaker caps	127 to 130	Two 5-inch monitors on isolation pads, one per wing. Cap 20 × 50 cm, 30 mm oak, flush with the column on every side. A KRK Rokit 5 (18.5 wide) leaves 7 mm each side.
DJ surface	100 (top 97 to 100)	Turntable, XDJ-700, Xone:92, XDJ-700 left to right, within a 145 cm span, 2 cm back from the front edge. Cable slot 115 × 6 cm behind the gear, wide enough for plugs and the XDJ power bricks.
Drawer band	81.8 to 97	Two flush drawers of 58.7 cm (cables and adapters left, headphones right) with a 24 cm power niche between them: push-to-open door, strip and wall-wart bricks inside, open at the back into the cable chase.
Keyboard slot	63 to 80	Pull-out tray, top face at 63 cm, 40 cm extension on heavy-duty slides. Keyboard 133 × 35 × 12 stowed inside, 5 cm air above it.
Book compartments	21.8 to 61.2	Two openings 71.6 wide × 39.4 tall × 33.2 deep, one adjustable shelf each. Front plane set back 10 cm from the console face for seated shin clearance. Still takes a 31.4 cm LP sleeve, with 1.8 cm to spare.
Recess	0 to 20 (to 61.2 at the front)	Open across the whole bay and through to the wall: sustain pedal and feet when seated, toe space when standing. The front 10 cm stands open right up to the tray underside, so the shins clear the shelving.
Wing columns	7.8 to 127	Three openings per wing, 16.4 wide × 38.5 tall × 48.2 deep, records spine-out, about 27 per opening at 6 mm each, about 160 in total.

Ergonomics

- Seated at the keyboard: tray at 63 cm puts the key tops at about 74 cm, the same as an acoustic piano. Clear height under the tray is 61.2 cm; use a stool of 44 to 46 cm. The tray extends 40 cm so the knees sit under the tray and the feet and pedal go into the 20 cm recess. Nothing projects below the tray at the front. The book zone is set back 10 cm from the front plane, so the shins clear it: a seated player's shins cross the height of the bay bottom panel, 21.8 cm, about 1 cm in front of where its edge used to stand, so the clearance at that pinch goes from about 1 cm to about 11.
- Standing at the decks: surface at 100 cm, mixer faders at about 111 cm. Toes go under the floating bay.
- Speakers: cap tops at 130 cm put a 5-inch monitor's tweeter at about 152 cm, a little below standing ear height; the isolation pads add a slight upward tilt. Toe them in toward the centre.
- Cables: everything on the top drops through the slot into the 5 cm chase and straight into the power niche behind the drawer band, where the switched strip and the wall-wart bricks sit at standing height. The keyboard's mains lead and the pedal cable share the chase through the cutout behind the tray; leave a 60 cm slack loop for the tray travel. The strip's own lead runs down the chase to the wall socket.

Gear layout on the top


Device	W × D × H (cm)	Position from left wing inner face (cm)
Turntable	45.3 × 35.3 × 16.2	3 to 48.3
XDJ-700	21.8 × 30.6 × 11.1	54.3 to 76.1
Xone:92	32 × 35.8 × 10.7	82.1 to 114.1
XDJ-700	21.8 × 30.6 × 11.1	120.1 to 141.9

Positions assume a Technics-size turntable (45.3 × 35.3), an Allen & Heath Xone:92 and two Pioneer XDJ-700 with 6 cm gaps and 3 cm end margins. Re-measure your own units before fixing anything; the slot and top do not depend on it.


Variants left open

- Speaker caps: the earlier 24 cm cap overhanging 4 cm inward was dropped on 14 September 2026; a flush 20 cm cap is enough for a KRK Rokit 5. Widen the cap only if the speakers change.
- Record capacity: wings widened from 14.5 to 20 cm on 14 September 2026 (185 cm overall), about 160 records at 6 mm per sleeve. Each book compartment holds about 110 more LPs if wanted.
- Wall shelf for the speakers later: the caps can be left off and the wings capped at 100 cm, which turns the piece into a plain 185 × 100 box.


1. Front elevation

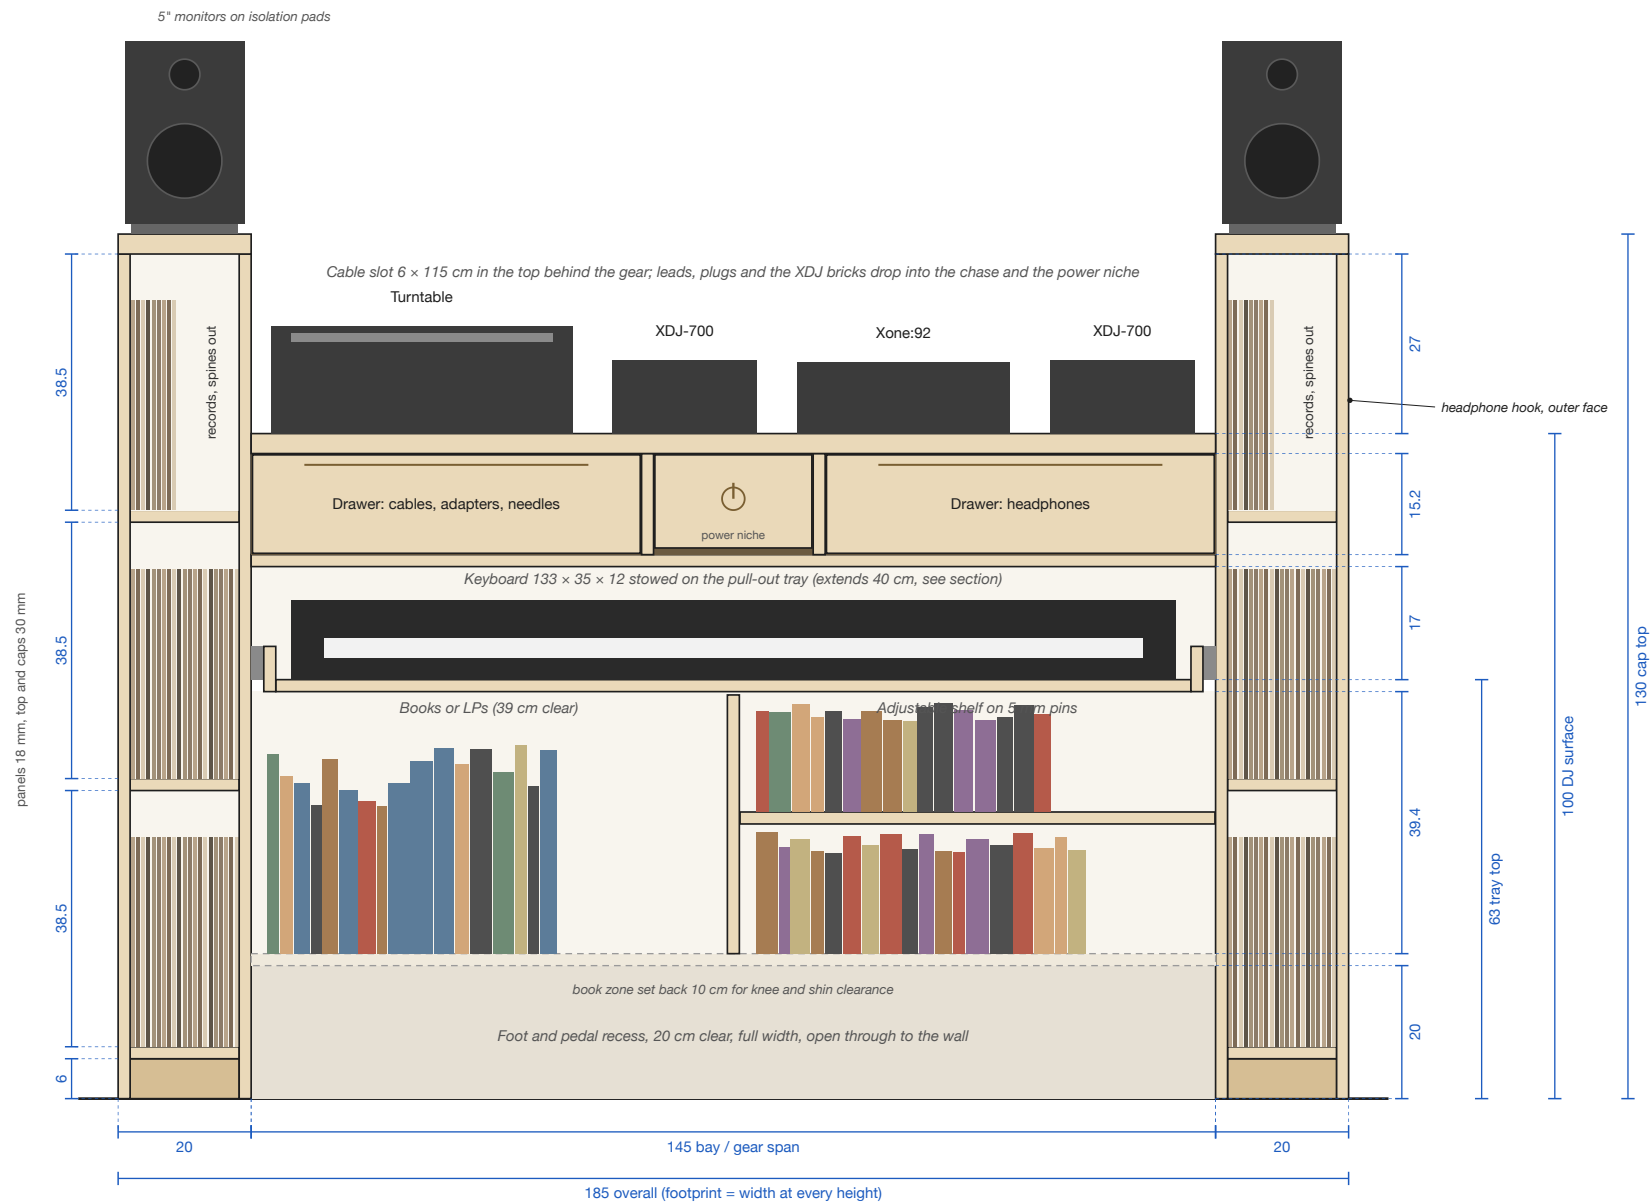


2. Side section through the bay, cut through the power niche and the mixer, looking toward the right wing

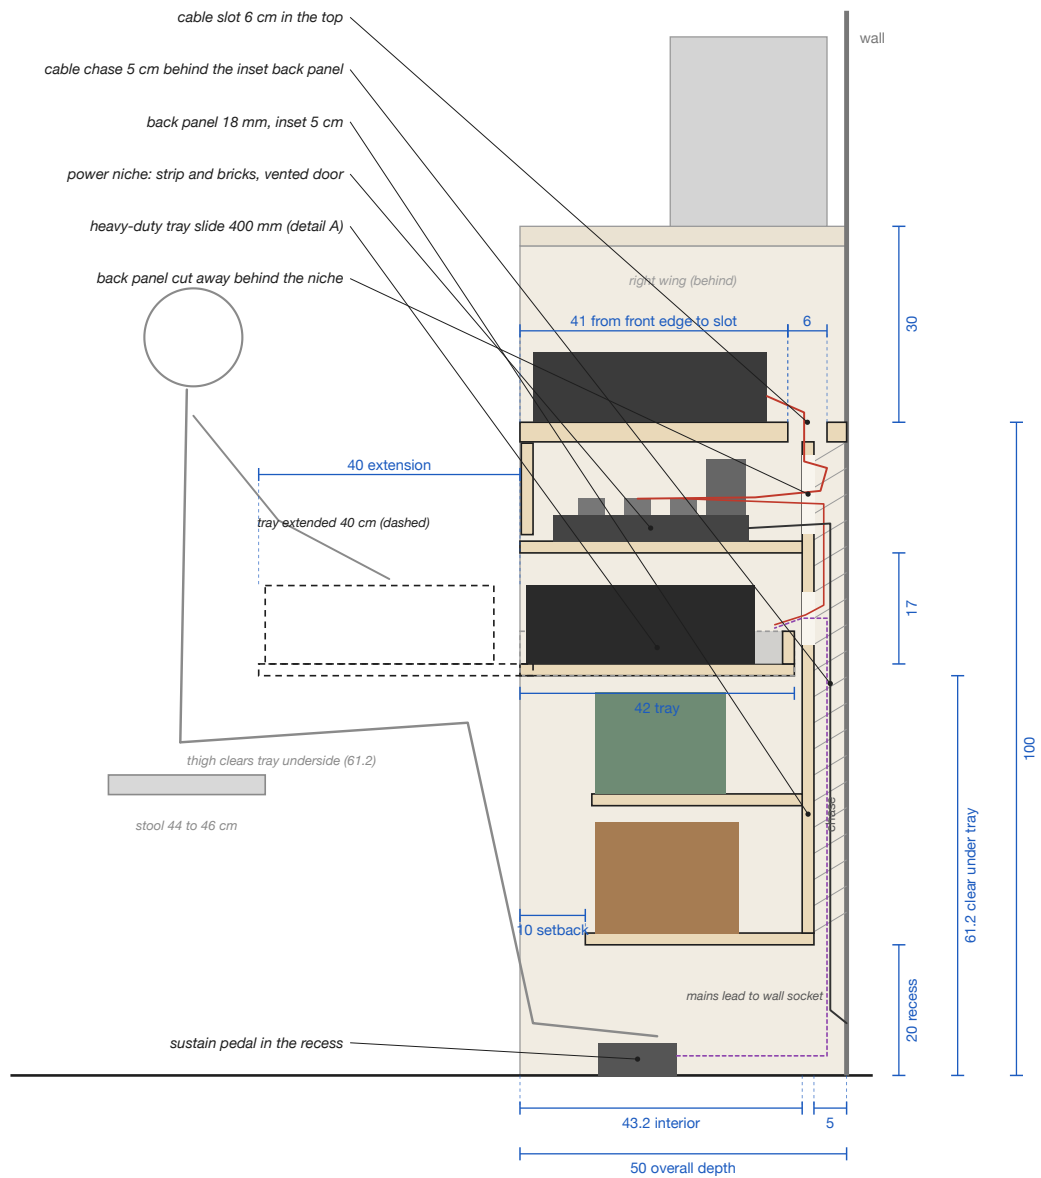

3. Plan of the top

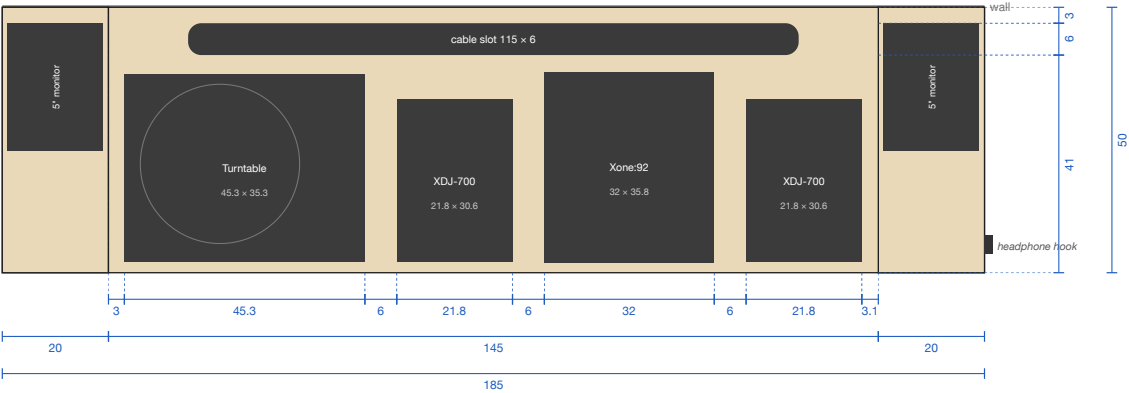

4. Detail A: tray edge, slide and apron (section looking from the front, left side)

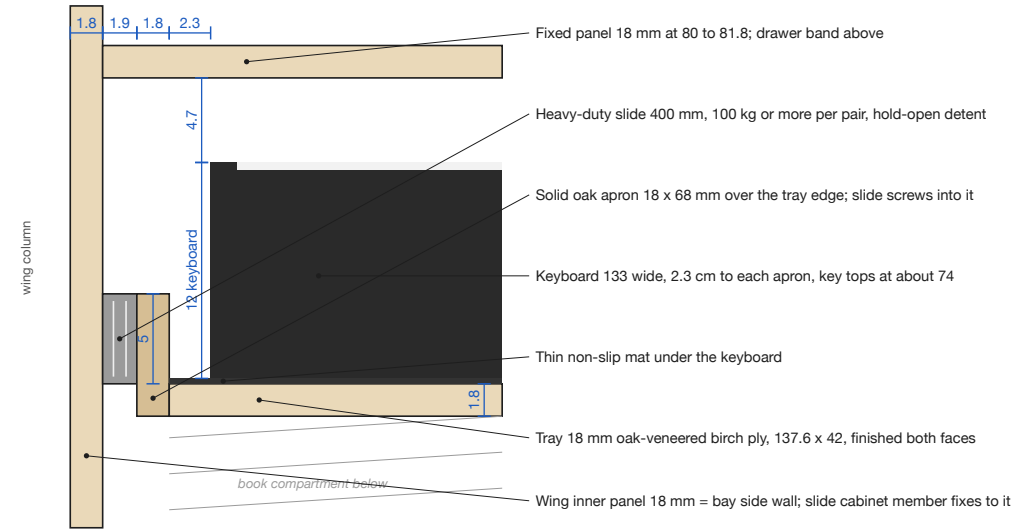

Parts list

Group	Part	Qty	Size L × W (cm)	Thk (mm)	Material	Notes
Wings	Wing side panel	4	127 × 50	18	Oak-veneered birch ply, front edge lipped	Floor to cap underside. Inner pair is also the bay side wall. Grain vertical.
Wings	Wing bottom shelf	2	48.2 × 16.4	18	Oak-veneered ply	Top face at 7.8 cm (plinth 6 cm below).
Wings	Wing fixed shelf	4	48.2 × 16.4	18	Oak-veneered ply, front edge lipped	Two per wing, giving three openings of 38.5 cm clear.
Wings	Wing back panel	2	119.2 × 16.4	18	Oak-veneered ply	Flush with the rear edge (no chase in the wings).
Wings	Wing plinth board	2	16.4 × 6	18	Solid oak	Set back 3 cm from the front.
Wings	Speaker cap	2	50 × 20	30	Solid oak	Same footprint as the column, flush on every side. Screwed from below through the wing panels.
Bay	Top	1	145 × 50	30	Solid oak, or 30 mm veneered board with 30 mm oak lipping	Routed cable slot 115 × 6 cm, 41 cm from the front edge, centred, ends rounded r 3. Passes plugs and the XDJ bricks.
Bay	Bay bottom panel	1	145 × 35	18	Oak-veneered ply, front edge lipped	Top face at 21.8 cm. Front edge set back 10 cm from the front plane for shin clearance; the recess is therefore open from the floor to the tray underside across that 10 cm. Carries the books; stiffened by the divider and the back panel, no rail underneath.
Bay	Fixed mid panel	1	145 × 43.2	18	Oak-veneered ply, front edge lipped	Top face at 81.8 cm. Ceiling of the keyboard slot, floor of the drawer band.
Bay	Bay back panel	1	145 × 75.2	18	Oak-veneered ply	Inset 5 cm. Cutout 20 × 8 cm behind the tray at 66 to 74 cm; cutout 24 × 12 cm behind the niche at 83 to 95 cm.
Bay	Book zone divider	1	33.2 × 38.9	18	Oak-veneered ply, front edge lipped	Centred. Glued and screwed to bottom and back panel along its length; 5 mm gap under the tray.
Bay	Drawer band divider	2	43.2 × 15.2	18	Oak-veneered ply, front edge lipped	Frame the 24 cm power niche. Optional 6 × 4 cm pass-through at the rear of each for a charging lead.
Bay	Power niche door	1	23.6 × 14	18	Solid oak, grain continuous with the drawer fronts	Flush inset, concealed hinges, push-to-open latch. 14 cm in the 15.2 cm opening; the 1 cm vent gap is all taken at the bottom edge.
Bay	Adjustable shelf	2	71.4 × 32.2	18	Oak-veneered ply, front edge lipped	One per book compartment, on 5 mm pins.
Bay	Drawer front	2	58.3 × 14.8	18	Solid oak (grain running across both fronts)	Flush inset, 2 mm gaps, finger pull routed under the top edge.
Bay	Drawer box	2	40 deep × 12 high, width per runner spec	15	Birch ply, 6 mm bottom	For the 58.7 cm openings, sized to the runners. Notch the niche-side wall 6 × 4 cm at the rear if the pass-through is used.
Tray	Keyboard tray panel	1	137.6 × 42	18	Oak-veneered birch ply, both faces	Underside is visible from the book compartments: finish it. Front edge lipped.
Tray	Tray side apron	2	42 × 6.8	18	Solid oak	Covers the tray edge (1.8) and rises 5 cm above it. Slide drawer member screws into it.
Tray	Tray rear rail	1	137.6 × 5	18	Solid oak	On the tray top along the rear edge, doweled to the aprons. Stops racking.
All	Solid oak lipping	~28 m	5 × 18 mm		Solid oak	All exposed ply edges.

Hardware

Item	Qty	Specification
Keyboard tray slides	1 pair	Heavy-duty full-extension ball-bearing, 400 mm, rated 100 kg or more per pair, with hold-open detent. Accuride 3634 (400 mm) or Fulterer FR 5000 (400 mm). Side mount at 63 to 68 cm.
Drawer runners	2 pairs	Full-extension undermount with soft close, 400 mm, 40 kg class. Blum Movento 760H4000S with Blumotion, or Hettich Actro 5D.
Shelf pins	8	5 mm steel, two adjustable shelves. 32 mm pitch; rows 13.7 and 39.5 cm back from the console face, 37 mm in from the compartment's faces.
Levelling feet	8	M8 adjustable glides, 15 to 25 mm, two per wing side panel, hidden behind the plinth boards.
Anti-tip brackets	2	One per wing, concealed, fixed to the wall. Recommended: the wings are 130 cm tall with speakers on top.
Speaker isolation pads	2	IsoAcoustics ISO-155 or Auralex MoPAD, set with a slight upward tilt toward the standing position.
Headphone hook	1	Black steel or oak, on the outer face of the right wing at about 105 cm.
Power strip	1	6-way with switch, up to 40 cm long, or two 4-way strips side by side. Lies on the niche floor with sockets facing up; bricks stand on it. Niche is 24 wide × 15.2 tall × 48.2 deep including the chase.
Niche door hardware	1 set	Two concealed hinges (Blum Clip top or similar) and a push-to-open latch (Blum Tip-On): no handle. Its 1 cm vent gap goes at the bottom edge.
Cable slot brush strip	1 (optional)	Black brush grommet strip 115 cm, for a 60 mm slot, to line the slot.
Drawer pass-through grommets	2 (optional)	Rubber or oak-lined 60 × 40 mm grommets in the drawer-band dividers, for charging leads from the strip into the drawers.
Non-slip mat	1	Thin rubber or EVA sheet, about 133 × 35 cm, under the keyboard.
Carcass fixings	as needed	8 mm dowels and glue at all visible joints; concealed confirmat screws where hidden (behind drawers and tray). Slide screws per manufacturer.
Finish	about 1 L	Osmo Polyx-Oil 3062 Matt, two coats, or Rubio Monocoat Oil Plus 2C Pure (about 350 ml). Natural oak tone, no stain.

Materials and finish

- Carcass: 18 mm oak-veneered birch plywood, A/B crown-cut veneer, every exposed edge lipped with 5 mm solid oak. Grain vertical on the wing panels, horizontal on the long panels and continuous across the two drawer fronts.
- Top and speaker caps: 30 mm solid European oak from glued-up boards. If movement is a concern, 30 mm veneered blockboard with 30 mm solid oak lipping.
- Solid oak for the drawer fronts, tray aprons, rear rail and plinth boards.
- Quantities: about 7.5 m² of 18 mm oak-veneered birch ply (three 250 × 125 sheets with waste), about 1 m² of 30 mm solid oak for the top and caps, plus solid oak for aprons, rail, drawer fronts, plinths and lipping. The carpenter should re-check against their stock sizes.
- Finish: natural light oak, no stain. Sand to 150/180 grit, two coats of Osmo Polyx-Oil 3062 Matt (or Rubio Monocoat Oil Plus 2C Pure). Finish every part, including the tray underside, before final assembly. Hardware in black.

Construction notes

1. Build the two wings first as closed columns (open front) $20 \times 50 \times 127$. Their inner panels are the bay side walls, so drill them for the tray slides (cabinet member at 63 to 68 cm, 1.5 cm from the front) and for the bay panel fixings before assembly.
2. Tie the wings together with the bay panels: bottom (top face 21.8), fixed mid panel (top face 81.8), top (97 to 100) and the back panel. Dowels and glue at visible joints; concealed confirmats behind the drawers and the tray where they will not be seen.
3. The bay bottom spans 145 cm with no leg. The book divider is glued and screwed along its full length to the bottom and back panels, and the back panel is glued along the rear edge: together they act as the stiffeners. Do not add a rail under the front edge; the recess must stay 20 cm clear.
4. Set the bay bottom panel, the book divider and both adjustable shelves back 10 cm from the front plane. The panel's front edge is unsupported and unlippped at 21.8; lip it and ease it, it is at shin height.
5. The bay back panel is inset 5 cm to form the cable chase. It is open at the bottom into the recess and closed at the sides by the wing panels and at the top by the top. The wing back panels are flush with the rear edge.
6. Rout the slot in the top before finishing: 115×6 cm, 41 cm from the front edge, centred on the bay, ends rounded, edges eased. Six centimetres lets the XDJ-700 power bricks and Schuko plugs pass without turning. Optional brush strip.
7. Keyboard tray: side-mounted heavy-duty slides above the tray surface, screwed into the solid oak aprons (detail A, drawing 4). Confirm the keyboard's actual footprint and connector positions before cutting the tray and the back-panel cutout.
8. Drawers on undermount runners with flush inset fronts, 2 mm gaps, finger pull routed under the top edge. Run the grain across both fronts and the niche door as one board.
9. Power niche: cut the back panel away behind it (24×12 cm at 83 to 95) so niche and chase are one space. Door on concealed hinges with a push latch, 14 cm tall in the 15.2 cm opening so a 1 cm gap is left at the bottom for air. The strip lies on the mid panel with sockets up; leads from the slot and from the keyboard arrive through the chase. Optional: a 6×4 cm hole through each divider at the rear, with a matching notch in the drawer side, lets a lead from the strip charge headphones or a phone inside the drawers; leave a 45 cm loop for the drawer travel. Bricks stay in the niche.
10. Adjustable shelves on 5 mm pins, holes at 32 mm pitch. Set the two rows out from the book compartment's own front and back faces, 37 mm in from each, not from the front of the carcass: the compartment starts 10 cm back, so the rows fall 13.7 and 39.5 cm behind the console's front face, 25.8 cm apart. Finish the underside of the tray: it is the ceiling of the book compartments.
11. Level on the eight feet so the tray runs true, then fix each wing to the wall with a concealed anti-tip bracket.

Concept render

Computer-generated view built from the drawing geometry (Three.js). Materials, lighting and gear details are indicative; the drawings govern.

