



MCP

Copyright: Copyright (C) 1999-2026 M.A.T. SA

MIRKA III, INFOCARINA i57 III PROTOCOL SPECIFICATION

Status: Final release
Release: 1.1.12

TABLE OF CONTENTS

1.	Purpose of this document	5
2.	Goals	5
3.	Design approach and compatibility issues	5
3.1.	Further information	6
4.	Communications line	6
5.	Protocol layers discussion	6
6.	Common rules	7
6.1.	Model of data interchange	7
6.2.	States of protocol	8
6.2.1.	States definition -> Enquire state	9
6.2.2.	States definition -> Verify acknowledge	9
6.2.3.	States definition -> Acknowledge state	9
6.2.4.	States definition -> Packet transmittance state	10
6.2.5.	States definition -> Packet reception state	10
6.3.	Packet purpose and structure	10
6.3.1.	Packet verification - Error detection	11
6.3.2.	Fields - discussion	12
6.3.3.	Fields - classes	13
6.3.4.	Fields - types in detail	13
7.	Online protocol	15
8.	Command protocol	15
8.1.	Command protocol packets	16
8.1.1.	A more detailed form of command protocol request packet	16
8.1.1.1.	Request code	16
8.1.1.2.	Request packet data fields	16
8.1.2.	A more detailed form of command protocol reply packet	17
8.1.2.1.	Reply code section	17
8.1.2.2.	Status section	17
8.1.2.2.1.	Device status.....	17
8.1.2.2.2.	Fiscal status.....	19
8.2.	Command packets groups	21
8.2.1.	Read ECR identification [a]	21
8.2.2.	Read PLU info & stats [p]	23
8.2.3.	Read DPT info [d]	25
8.2.4.	Read Clerk info [c]	29

8.2.5.	Read Payment info [y]	32
8.2.6.	Read ECR parameters [s]	35
8.2.7.	Program PLU [P]	43
8.2.8.	Program DPT (Department) [D]	45
8.2.9.	Program Clerk [C]	49
8.2.10.	Program payment type [Y]	52
8.2.11.	Program ECR Parameters [S]	55
8.2.12.	Program header [H]	63
8.2.13.	Program footer [F]	67
8.2.14.	Program scrolling message [M]	70
8.2.15.	Item sale [3]	71
8.2.16.	Discount/Markup [4]	75
8.2.17.	Payments in receipt/cash in/cash out [5]	77
8.2.18.	Set client name [2]	80
8.2.19.	Cancel receipt [+]	81
8.2.20.	Read transaction totals [9]	82
8.2.21.	Read daily totals [0]	84
8.2.22.	Open cash in/out transaction [6]	86
8.2.23.	Issue report [x]	88
8.2.24.	Clear statistics [8]	90
8.2.25.	Read Device status [?]	91
8.2.26.	Read Real Time Clock [t]	92
8.2.27.	Program Real Time Clock [T]	93
8.2.28.	Device write [7]	94
8.2.29.	Drawer open [q]	96
8.2.30.	Printer feed [w]	97
8.2.31.	Sales ticket [m]	98
8.2.32.	Read version/device info [v]	99
8.2.33.	Display Scroll-Line message [o]	101
8.2.34.	Program DISCOUNT/ MARKUP [u]	102
8.2.35.	Read Discount/ Markup [V]	104
8.2.36.	Read PLU info/stats by code [h]	106
8.2.37.	Program VAT rates [b]	108
8.2.38.	Set receipt comment text [j]	110
8.2.39.	Read last fiscal data [i]	112
8.2.40.	Read VAT rates [e]	114
8.2.41.	Read keyboard [B]	116
8.2.42.	Program keyboard [G]	117

8.2.43.	Program Bitmap [\$]	123
8.2.44.	Program Category [R]	124
8.2.45.	Read Category [Q]	125
8.2.46.	Program Client [!]	126
8.2.47.	Read customer's data from memory [%]	129
8.2.48.	Print Graphical Barcode [[]]	132
8.2.49.	Read Footer [K]	135
8.2.50.	Read Header info [O]	140
8.2.51.	Program header [L]	146
8.2.52.	Program footer [#]	151
8.2.53.	Read Scrolling Message Information [^]	155
8.2.54.	Program PLU with barcode [A]	156
8.2.55.	Read Fiscal File Info [g]	158
8.2.56.	Print fiscal report (Date to Date) [f]	160
8.2.57.	Print fiscal report (Z to Z) [z]	161
8.2.58.	Get Last LCD Data[(]	162
8.2.59.	Set Pressed Key [)]	163
8.2.60.	No send to LCD [W]	164
8.2.61.	Calculate Subtotal [U]	165
8.2.62.	Set active clerk [1]	166
8.2.63.	Print SD report [@]	167
8.2.64.	Program Ticket [*]	168
8.2.65.	Read information for daily sold PLU [k]	169
8.2.66.	General Read [,]	171
8.2.67.	General Programming [\]	179
8.2.68.	Programming GSIS settings []]	186
8.2.69.	Program Bmp Position [~]	188
8.2.70.	Read Bmp information [I]	189
8.2.71.	Program start/end/in receipt/cash in-out comments [l]	190
8.2.72.	Read start/end/in receipt/cash in-out comments [E]	195
8.2.73.	Set/Unset Online-protocol [n]	200
8.2.74.	Read Fiscal Record [r]	201
8.2.75.	Sale of a coupon [Z]	213
8.2.76.	Receipt Counter [X]	214
8.2.77.	Services Activation [>]	216
8.2.78.	Set/Get Invoice's Parameters [;]	217
8.2.79.	Set/Get Tables ["]	220
8.2.80.	Table Open/Close/Return/Transfer/Report [&]	222

8.3. Command Protocol ERRORS.....	232
9. Updates.....	242

CONFIDENTIAL

1. Purpose of this document

The purpose of this document is to provide the necessary specification to software designers interested in communicating with fiscal ECR/POS models.

This document assumes that the reader is familiar with basic communication concepts, such as transmittances, receptions, timeouts, etc. Also assumes that the reader is familiar with fiscal POS/ECR functioning and procedures.

2. Goals

The developer will have all necessary information for implementing all protocol layers, thus be able to:

- Keep track of all transaction operations (sales, voids, refunds etc.)
- Expand the available local database of items to arbitrary numbers
- Perform the ECR/POS configuration (setup) remotely
- Issue receipts and all reports via protocol commands

3. Design approach and compatibility issues

Developers should take into consideration future additions or expansions to this specification. The goal is that an application designed using an older revision specs will function correctly in newer revision protocol.

In order to do so, the developers *must* check responses only for the presence of the known information and 'quietly' discard the information that is unknown. The designers of this protocol guarantee that the extensions of this protocol will not alter the position or the type of the information (unless absolutely unavoidable). Extra fields will always be added to the right of the reply strings. Specifically, these are the rules that deliver the highest compatibility:

- a) Check the protocol version number. This information guarantees safety towards new commands. For example (hypothetically):

In protocol revision '01.02' and higher the command '#' is supported, so reading a revision '01.00' indicates that the command '#' will fail.

- b) Always assume correct a reply that has more fields than expected.

For example:

Reply expected: `"/1/AAAAA/BBBB/CCCC/"`

Reply received: `"/1/AAAAA/BBBB/CCCC/DDDDD"`

(Field 'DDDDD' is unexpected, but should not generate an Error because all the expected fields are present. So this field *should* be silently discarded.)

- c) Always assume correct a 'FLAGS' field that is longer than expected.

For example:

Reply expected: `"/1001001001/"`

Reply received: `"/1001001001001/"`

(Three extra bits in the 'FLAGS' field are unexpected. The application must discard them without generating Errors).

- d) It is an excellent design approach not to be very strict with numerical ranges or string lengths expected. This guarantees that the application will be compatible with other ECR/POS devices that use this protocol, but having different resources to operate with. For example, an ECR/POS having more memory is probable to support a wider local item base, reporting higher index numbers. Or, a different printer mechanism may limit, for example, a header line length. Having a flexible design promises maximum compatibility with different hardware requiring very little (or no) changes to application source code.

3.1. Further information

The implementers are encouraged to study and/or use parts of code examples which are part of this document. Also they must keep informed of any changes in this specification due to the status of this document. Suggestions from developers may or may not influence details of the document until it reaches 'final' status.

4. Communications line

The ECR/POS communicates with host computer via an asynchronous serial line of the RS-232C recommended standard. The serial line parameters are:

- Baud rate: 9600 baud
- Parity: none
- Data: 8
- Stop: 1
- Flow control: none

Note that because there is no flow control, only the RX/TX/GND signals are required for the cable configuration. The maximum length of cable is described in the 232C recommended standard for this baud rate. It is highly recommended that the maximum length is not exceeded to prevent drops in communication rate and undesirable re-transmittances due to Errors, or in worst case a total communication failure. When cable distance is unavoidably long, an extender may be used.

5. Protocol layers discussion

There are two different needs which the ECR/POS satisfies with two separate protocol layers. The first is the need of keeping track of the POS activity and the extension of the local database of items. The second is the need to use the ECR/POS as a terminal device which we can call 'fiscal printer'.

The protocol layers for these needs respectively are:

- The 'online' protocol layer (It will be referred as 'online protocol')
- The 'command' protocol layer (It will be referred as 'command protocol')

Note that there is no such case where both layers are active at the same time due to the nature of the needs each layer deals with. To be clearer, the online protocol is required when it is desired to observe the POS device's activity when the operator of the ECR/POS issues receipts or any other document with it. The command protocol is required when is desired to use the device with a host computer application that issues the receipts and reports to the ECR as a fiscal printer.


Although these two layers cannot coexist at the same time of POS operation, switching between them is allowed anytime. As expected, communication rules and procedures that layers use are the same.

A major difference between the online and command protocol is the origin of the communication. In the online protocol, the communication starts from the POS/ECR in contrast with the command protocol where the communication starts by the host computer.

6. Common rules

6.1. Model of data interchange

Both protocol layers share a common model of interchanging data with the host. The next scheme describes this model:

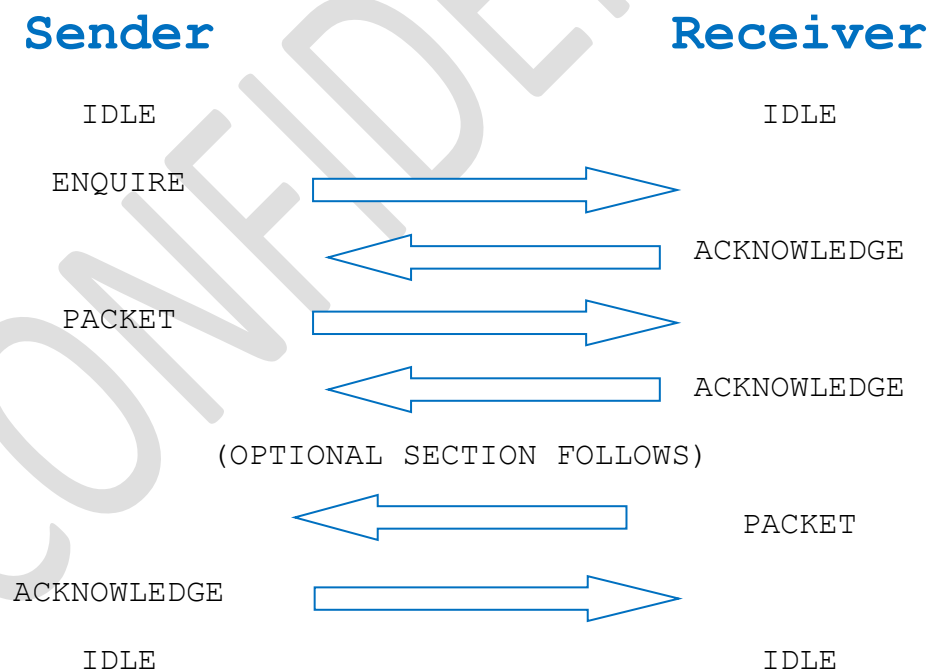

This scheme although describes the typical flow of data between the two communicating devices (POS and host computer) does not include any other situation such as Errors in transmittance, re-transmittance etc. Note also that the 'sender' will be the ECR/POS and the 'receiver' will be the host in online protocol. In the command protocol, the 'sender' will be the host and the 'receiver' will be the ECR/POS.

Observe that this model includes two different packet transmittances, one from sender to receiver and one from receiver to sender. In the paragraphs to follow we will call the first packet 'request packet' and the second one 'reply packet' for simplicity. Reply packets are always sent by the ECR/POS when receiving command protocol requests. Also reply packets may be sent in special cases by the host computer at online protocol.

6.2. States of protocol

For a better understanding of the previous paragraph and the communication flow, we can define states which communication 'sides' will enter.

- **Idle state**
This is the state before any communication attempt takes place.
- **Enquire state**
The sender that wishes to initiate communication sends an inquiry to the receiver. The process of sending this inquiry is the enquire state so only the sender enters this state.
- **Acknowledge state**
The receiver will enter this state right after receiving an inquiry or after the verification of a request packet. The sender will enter this state after the verification of a reply packet.
- **Verify acknowledge state**
The sender or receiver will enter this state after an enquire state or a packet transmittance state. The process of waiting the other end's positive or negative response is to verify acknowledge state.
- **Packet transmittance state**
The sender will enter this state to transmit a request packet and the receiver to transmit a reply packet.
- **Packet reception state**
The receiver enters this state after acknowledging the sender's enquire to get the request packet. The sender will enter this state right after verifying a positive acknowledge from the receiver, and only if the specific protocol case requires a reply packet.

Considering the above, the state flow for the sender and the receiver in a typical communication attempt will be:

Sender	Receiver
Idle	Idle
Enquire state / Verify ack. State	Acknowledge state
Packet transmittance state	Packet reception state
Verify acknowledge state	Acknowledge state
Packet reception state	Packet transmittance state
Acknowledge state	Verify acknowledge state
Idle	Idle

6.2.1. States definition -> Enquire state

The enquire state is actually the transmittance of a single ASCII control code ENQ [CC1] by the sender. Doing this, the sender has concluded the enquire state. The purpose of this state is to find out if the receiver is able to reply, without flooding the communication line with too much data. After sending the ENQ code, the sender must wait for a response from the receiver, entering verify acknowledge state (see 6.2.2). It is highly recommended to clear the receiving buffer before entering an enquire state, so discarding any accidental data previously received in the serial communication's receive buffer, especially in cases where serial communication is interrupt driven.

Some synchronization needs may also require that before sending the ENQ code, hosts should send the CAN (cancel) [CC1] control code to cancel any waiting states in the ECR/POS side.

6.2.2. States definition -> Verify acknowledge

The verify acknowledge state is the reception of a response code which indicates that an action from one side has been accepted by the other. For this to work, the ASCII control codes ACK and NAK [CC1] are used to mean positive or negative acknowledgement respectively. In this state the sender or the receiver enters in the following cases:

- after an enquire state by the sender
- after a request packet transmittance by the sender
- after a reply packet transmittance by the receiver

In any of the above cases, the side which is in the verify acknowledge state must either accept ACK or NAK as valid responses within some specific time window. Any other received control values should be treated as NAK.

On reception of an ACK, the host must leave the verify acknowledge state and proceed to the next state, if any. This means that the previous state was successfully processed by the other side of the communication. On reception of a NAK, the host must leave the verify acknowledge state and repeat once more the previous state. For example, if the verify acknowledge state was for a previous enquire state, the enquire state must be repeated. If the request packet was not acknowledged, the packet must be retransmitted.

To prevent infinite communication loops, each of these cases mentioned are limited to a specific re-transmittance count, which, when reached, indicates that the communication attempt causing the re-transmittances was unsuccessful and further communication is not possible for some reason. The possible reasons for such a failure may be:

- Disconnection of serial cable
- Host computer or ECR/POS fatal Error
- Too noisy communication line

6.2.3. States definition -> Acknowledge state

The acknowledge state is the transmittance of either ACK or NAK control codes after a previous enquire or packet reception. ACK must be transmitted when the enquiry is accepted or the packet is verified successfully. This is 'positive acknowledge'. NAK must be transmitted when the enquiry must be either delayed or rejected, or if the

packet failed checksum verification. This is 'negative acknowledge'. Hosts must not transmit any other codes except ACK, NAK and CAN in this state.

6.2.4. States definition -> Packet transmittance state

This state is the transmittance of either a request or a reply packet by the sender and the receiver respectively. Packets in both cases follow the rules described in a later paragraph [see 6.3]. On completion of the packet transmittance, the sender or receiver advances to the next state, if any. During the packet transmittance state, the sender or receiver may also transmit control codes which will be transparent for the packet data, i.e. they will not be included in the data section of the packet.

6.2.5. States definition -> Packet reception state

The packet reception state is the process of receiving a request or reply packet. The sender will enter this state when receiving a reply packet and the receiver when receiving a request packet. Packet reception is initiated with the reception of the STX control code [CC1]. Any reception of data before the reception of STX must be silently discarded. Packet reception is terminated with the reception of ETX control code [CC1]. Any data after the termination code (ETX) do not belong to this state. See next paragraph for packet handling and structure.

6.3. Packet purpose and structure

The actual communication data in both protocol layers are encapsulated in a 'packet'. As described above, there are request packets and reply packets. In simple words, request packets contain instructions that the sender wishes the receiver to follow or plain information. Reply packets are information which describe how receiver followed the instructions and/or plain information.

Request packets are always sent by the sender. Reply packets are always sent by the receiver. Request and reply packets have the same basic structure in both online and command protocol layers but differ in their contents.

The packet structure is the following:

STX	Data	ETX
-----	------	-----

Notice that the actual data is between STX and ETX fields which are simply the ASCII control codes STX and ETX [CC1]. By ASCII definition, the STX/ETX control codes indicate the start of data transmittance and the end of data transmittance respectively. Any valid octet between the STX and ETX is considered 'data' octet. Valid data octets must be between values '32' and '255' (decimal). Octets lower than '32' are considered 'control' codes [1] and MUST be interpreted specially. Valid data octets are forming the complete data section. Control codes are NOT part of the data and this also applies for the STX/ETX control codes.

The length of the data section is variable, due to its multifunctioning purpose. ECR/POS is able to accept data up to 250 octets of data in a single packet. Hosts MUST be able to accept at least the same amount of data in a single packet. ECR/POS will discard any further data if this limit is reached producing a negative acknowledge to the host.

Inside the data section of a packet, request or reply, are 'data fields':

Data				
Field 1	Field 2	Field 3		Field N

Data fields form the total of the data section of a packet. Each field's size may vary. For this reason, a 'special' data character is defined to function as 'field separator'. In both protocol layers, the field separator character is the slash '/' (ASCII character 47 decimal, 057 octal, 2F hexadecimal). ECR/POS interprets this character as 'start of next field'. Host application has to do the same. As a result of this character's special meaning, hosts MUST NOT include this character as part of field data but only as field separator. The reason for this is that the ECR/POS will incorrectly treat it as field separator and count one extra field in the packet, probably also shifting all other fields by one position to the right.

Fields vary in size and content. Various types of fields are described in a later paragraph in detail.

6.3.1. Packet verification - Error detection

To ensure that a request or reply packet was received with no Errors, both layers use a special field: the checksum. Checksum is always the last field in the packet in all cases of packet transmittances. It also must be separated from the previous field using the slash (/). Checksums are always a 2-digit decimal values and represent the module 100 of the 8-bit sum of all data octets in the packet except any control codes or the 2-digits checksum itself but including the field separators. All field separators are calculated in the checksum.

Example checksum calculation function in 'C':

```
BYTE CalcChecksum(BYTE *packet)
{
    BYTE sum = 0;
    int checklength = strlen(packet) - 2;
    while(checklength--) sum += (BYTE) (*packet++);
    return( (sum % 100) );
}
```

Example checksum calculation function in pseudo code:

```
Function Calculate_Checksum( parameter data_packet ) Returns BYTE
Begin
    Declare CALCSUM, I as BYTE
    CALCSUM = 0
    For I = 0 to stringlength( data_packet ) - 2 Do
        CALCSUM = CALCSUM + ASCII( data_packet[ I ] )
    Next I
```

```


CALCSUM = CALCSUM mod 100
Return CALCSUM
End

```

The receiver of the packet must calculate this checksum locally, compare it with the transmitter's checksum and, if found equal, the packet is valid and a positive acknowledgement must be sent. Otherwise the packet was corrupted and a negative acknowledgement must be sent. The checksum will always be a numeric, 2-digit field in range 00-99.

Data section				
Layer fields				Checksum
Field 1	Field 2	Field 3		CC

Remembering the state paragraphs above, negative acknowledgements in packet receptions cause re-transmittances of the packet. The scheme that follows describes one such case where the packet failed checksum verification twice and succeeded in the third:

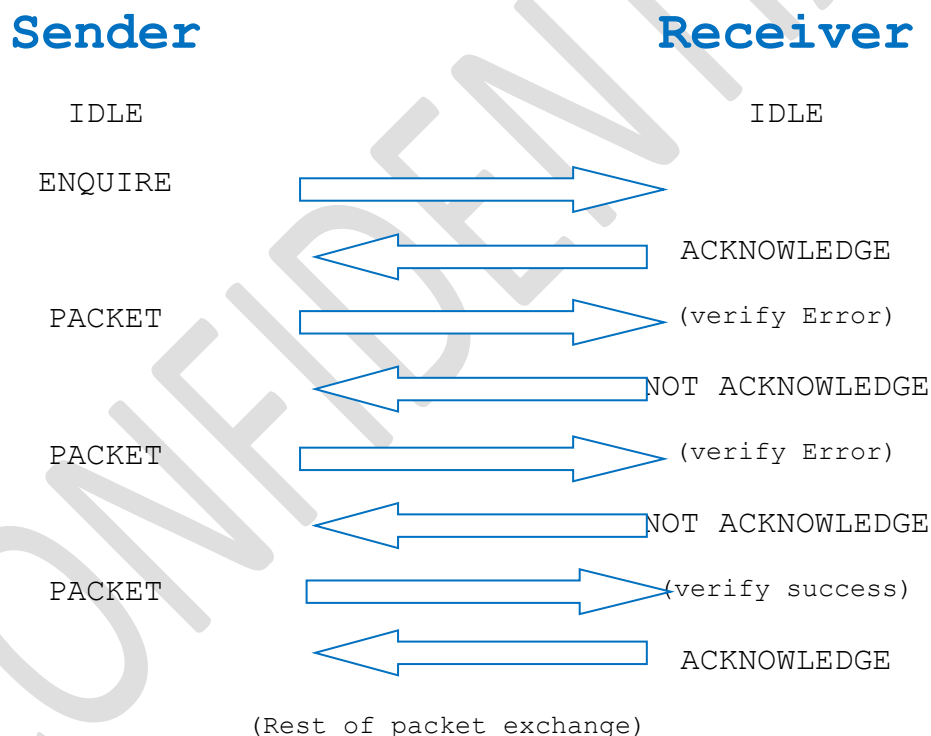

6.3.2. Fields - discussion

As already mentioned, fields are the building blocks of a data packet. In this paragraph we will examine all available types of fields and their basic restrictions and requirements.

In both layers, there are only two classes of fields: the string class and the numeric class. Further 'type' labelling was necessary to be defined in order to document each type's ranges and restrictions. Understanding those is essential because when out of

'type' range fields are sent will be rejected by the ECR/POS on further packet processing.

Although fields of certain class and type have a range, the specific packet may REQUIRE a lower range for successful. Keeping this in mind, applying fields to a packet should be done following this scheme:

- Apply class restrictions checks
- Apply type restrictions and range checks
- Apply packet's specification for field's restrictions and range

6.3.3. Fields - classes

As mentioned, field classes are either string or numeric. These are the attributes of each class.

String class:

- Can contain any character of value 32 to 255 (decimal) except slash ('/')
- Can be of zero to any length that does not exceed the maximum packet size

Numeric class:

- Can contain any numeric character, a decimal point
- Can contain any 'A' to 'F' digit if hexadecimal (*)
- Can contain a minus as a first character
- Can have a total length of zero to 12 characters

(*) Hexadecimal values are only sent at command protocol reply packets for device status map and fiscal status map fields.

6.3.4. Fields - types in detail

Field types are used as a method of generating or recognizing specific or generic fields for a use in a packet. The list that follows defines the ranges and restrictions of the specific types.

INTEGER type	
Class:	Numeric
Value range:	'-999999' to '999999'
Digit range:	1 to 6 digits
Notes:	Fields of this type must not contain any decimal part or decimal point. This type is usually used as a counter field or an index.

DATE6 type	
Class:	Numeric
Value range:	'010199' to '311240'
Digit range:	When required, must be 6 digits. When optional, may not be sent at all.
Notes:	Specifies a date. Date format is DDMMYY.

DATE8 type	
Class:	Numeric
Value range:	'01011999' to '31122040'
Digit range:	When required, must be 8 digits. When optional, may not be sent at all.
Notes:	Specifies a date. Date format is DDMMYYYY.

TIME type	
Class:	Numeric
Value range:	'000000' to '235959'
Digit range:	When required, must be 6 digits. When optional, may not be sent at all.
Notes:	Specifies a time. Time format is HHMMSS.

FLAGS type	
Class:	Numeric
Value range:	'0' to '1' or '2' for each flag in field
Digit range:	When required, must be as long as the packet requires. When optional, may not be sent at all.
Notes:	Flags type is used to minimize packet fields where a single "true"/"false" or "yes"/"no" type of information must be passed for various attributes. In case of '2' the specific digit should be ignored.

AMOUNT type	
Class:	Numeric
Value range:	'-999999999.99' to '999999999.99'
Digit range:	1 to 12 total 0 to 8 integer part 0 to 2 decimal part
Notes:	AMOUNT is usually used to specify prices, discounts, payment values, totals, etc. When used to specify payments, this type will always be expressed in the active note (i.e.: drachmas or euro)

QTY type	
Class:	Numeric
Value range:	'-99999.999' to '99999.999'
Digit range:	1 to 10 total 0 to 5 integer part 0 to 3 decimal part
Notes:	QTY is used to specify quantities of any kind.

RATE type	
Class:	Numeric
Value range:	'0.000000' to '9999.999999'
Digit range:	1 to 11 total 0 to 4 integer part 0 to 6 decimal part
Notes:	RATE is used to specify currencies of foreign notes or euro to drachmas rate and vice versa

PERCENT type	
Class:	Numeric
Value range:	"0.00" to "100.00"
Digit range:	1 to 6 total 0 to 3 integer part 0 to 2 decimal part
Notes:	PERCENTAGE is used to specify a discount percentage, a markup percentage etc.

STRING type	
Class:	String
Value range:	-
Character range:	1 to 240 (if not exceeding max packet size)
Notes:	A normal string

7. Online protocol


Not Available.

8. Command protocol

The command protocol is initiated by the host computer, when the host wants to instruct the ECR/POS to process a specific command. Due to the number of commands this layer supports, they can be grouped as:

- Request information commands
- Setup commands
- Fiscal printer commands
- System commands

The model of the communication the command protocol follows is this:

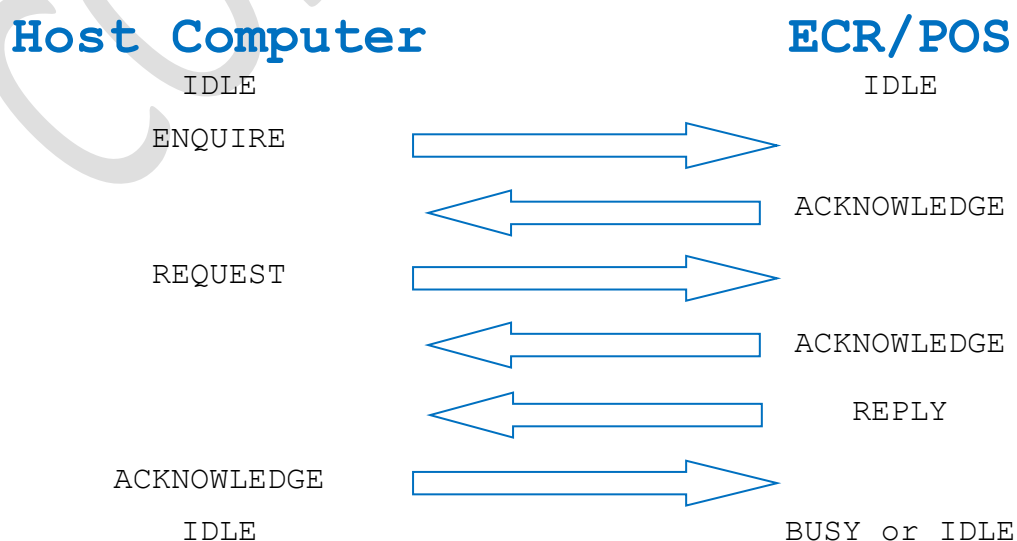

8.1. Command protocol packets

In the command protocol there are always both packets present in the communication: the request packet and the reply packet. The general form of the request and reply packets follow this model:

Request packet: [Request code] <[Request data]> [checksum]

Reply packet: [Reply code] / [status fields] / <[Reply data]> [checksum]

In request packets, the request data are not always required (notice that 'request data' are inside <>). Additionally in reply packets, the reply data are not always present. All other sections are always present.

8.1.1. A more detailed form of command protocol request packet

Data		
	Optional Section	
Request code	Field 1 / Field 2 / Field 3 / ... / Field N	Checksum

This defines 3 sections of a request packet:

- The request code section
- The data field section
- The checksum section

8.1.1.1. Request code

In online protocol packets we dealt with 'packet descriptor' which was a special field for identifying the packet type. In command protocol, the first field is called 'request code' and has the same functionality, although the request code is now sent to the ECR/POS rather than received by it. The request code is always a simple STRING field of one character fixed length.

8.1.1.2. Request packet data fields

Data fields are not always required in all command's request packets. When not a requirement, data fields section is totally omitted, and the checksum section follows directly after the request code.

8.1.2. A more detailed form of command protocol reply packet

Packet Data			
		Optional Section	
Reply code	Status	Field 1 / Field 2 / ... / Field N	Checksum

This defines 4 sections of a reply packet:

- The reply code section
- The status section
- The data field section
- The checksum section

8.1.2.1. Reply code section

Reply code is a single numeric field of 2 hexadecimal characters identifying the result of the command execution by the ECR/POS. A zero reply code ('00') indicates that the command has been executed successfully. A non zero reply code indicates an Error in command execution. Error codes returned are explained in detail in a later section. Receiving a nonzero reply code means that the command has NOT been executed. Receiving a zero reply code means that the command has been or will be successfully executed. Commands that require very little time to be executed, such as information retrieve, will be executed before the reply packet is transmitted. This is because the reply packet data fields depend on the command execution itself. Commands that take long time to execute, such as report issuing, will be only checked, a reply packet will be sent, and then will be executed.

8.1.2.2. Status section

Status is a section consisting of two numeric 2-character hexadecimal fields:

Device status	Fiscal status
---------------	---------------

Status section is returned by the ECR/POS to reflect the hardware & fiscal firmware states which must be considered by the host application.

8.1.2.2.1. Device status

Device status informs the host application of some hardware related events of the ECR/POS. The byte that this field forms must be mapped in bits in this way:

MSB				LSB			
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
CUTTER	TMOUT	FFULL	PCONN	BATWARN	PP.END	EJREP	BUSY

Bit 0: Device busy

This bit when set to '1' indicates that the ECR/POS is currently busy executing a previous command or other task. When busy, the ECR/POS may execute some noncritical commands and refuse to execute others replying an Error 'Device busy -- Unable to execute' (See Error codes).

The host must check this bit (requesting a 'status') before issuing any critical commands, or, must keep sending the command until the command is executed (or failed by other reason). BUSY state is a temporary state but, due to very different tasks the ECR/POS may cause the BUSY state, the time which the BUSY flag will be found set is varying from a few milliseconds to few minutes. A host may inform the user after (for example) one minute that the device is busy in other task and ask for a 'retry' or 'cancel' of the requested operation. An example in which a BUSY flag will be set for long time is a fiscal report issuing: When the host (or the ECR/POS user) requests a fiscal report with many records, the report will take long time to finish, thus keeping the BUSY flag set for long. It is highly recommended though that a host should NOT produce a 'device busy' Error message to the application user before (at least) twenty (20) seconds. It is also recommended that the host application must allow the user to cancel or retry the operation.

Bit 1: Electronic Journal Report Printing

This bit indicates that (when set to one) the ECR/POS printing an Electronic Journal report. From application point of view, this is a temporary state like BUSY and the host must keep sending the command until the command is executed (or failed by other reason).

Bit 2: Printer Paper End

This bit indicates (when set to one) that the printer is out of paper, and must be replaced before the previous task has completed its printing duty. Usually, when this flag is set, the 'device busy' flag may be set also, if a previous command that used the printer caused the paper end Error. So, it is recommended that the paper end bit MUST be checked before the busy bit. Host application may inform the user of the need to insert a new role of paper to the printing mechanism. After doing so, this bit will be cleared and the command (that detected the paper end) may be retransmitted normally.

Bit 3: Battery warning

This bit indicates (when set to one) that the printing device is not responding to printing commands. Recommended action is to power off the printer and on again and retry the command. If the problem persists, the ECR/POS needs to be serviced.

Bit 4: Printer offline

This bit indicates (when set to one) that the printing device is not responding to printing commands. Recommended action is to power off the printer and on again and retry the command. If the problem persists, the ECR/POS needs to be serviced.

Bit 5: Fiscal file full or closed

This bit indicates (when set to one) that the printing device is not responding to printing commands. The cause can be one of the following two:

- One of the fiscal files, for example the fiscal file used to store daily data after a 'Z' closure report, is now full
- Fiscal memory is closed by the user after send to GSIS the request and receive the successful response.

When this happens, the ECR/POS is unable to issue receipts, reports of any kind except the fiscal periodical report. So, when the host detects this, it must not try to issue receipts or do any other printing.

Bit 6: Printer timeout

This bit indicates (when set to one) that the printing device is not responding to printing commands. This may be caused by printer's cover which may be open. User must check the cover and close it to continue printing operations. If this is not caused by an open cover and persists after a power off - power on, then the ECR/POS must be serviced.

Bit 7: Cutter Error

This bit indicates (when set to one) that the printing device is not responding to printing commands. Recommended action is to power off the printer and on again and retry the command. If the problem persists, the ECR/POS needs to be serviced.

Example: Assume device status field is '41'. This hexadecimal value, when converted to binary will be '00010001'. The '1's mean that the printer is offline (bit 4) and the device is busy (bit 0).

8.1.2.2.2. Fiscal status

Fiscal status is a 2-digit numeric hexadecimal field which informs the host about several states of the fiscal firmware inside the ECR/POS. The byte that this field forms must be mapped in bits in this way:

MSB				LSB			
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
EJOPEN	COUT	CIN	PAYM	---	TROPEN	DAYOPEN	DROPEN

Bit 0: Drawer is open

This flag indicates that the drawer is open.

Bit 1: Day is open

This flag indicates that there is an open day in the ECR/POS. This means that one or more receipts or reports have been issued after a Z clearing report. The day open flag will be zero after the issuing of a Z report and before printing anything else, reports or receipts. A 'day' is defined in the fiscal firmware as the period between two Z closures.

Bit 2: Transaction (Receipt) Open

This flag is indicating that a receipt is currently in 'open' state in the ECR/POS. The flag will be set even if the receipt is in 'payment' state. When this bit is set, information related to an open receipt is valid. An application can prevent Errors in

commands by detecting this bit. For example, a command 'issue Z report' will fail if this bit is set.

Bit 3: (Reserved)

Bit 4: Transaction in Payment

This flag indicates that ECR/POS has an open receipt in payment state. If it is set, the bit 2 (transaction open) will be also set.

Bit 5: Cash in open

This flag indicates that a cash in receipt is open

Bit 6: Cash out is open

This flag indicates that a cash in receipt is open

Bit 7: Electronic Journal Report Open.

This flag indicates that ECR/POS has an electronic journal report in progress.

Example: Assume fiscal status field is '16'. This hexadecimal value, when converted to binary will be '00010110'. The '1's mean that the ECR/POS has a day in open state (bit 1), a receipt is open (bit 2) and the open receipt is in payment state (bit 3).

8.2. Command packets groups

8.2.1. Read ECR identification [a]

This command returns information about which ECR/POS unit is communicating with.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	a	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"a/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'a' for this command.	
REPLY PACKET	TOTAL FIELD COUNT		DATA FIELD COUNT		EXAMPLE REPLY			
	9 (Counting reply code, status & checksum)		5 (Without reply code, status & checksum)		(reply code) (status) "00000001/1/ABC/ARM POS /V1R1T1 /" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	ECR Registration number	INTEGER	Default	It is the official ECR/POS registration number and it is not programmable. This number is unique to each ECR/POS.	
			FIELD 2	ECR number	INTEGER	1-2 digits	The programmable number of the ECR/POS assigned.	

	FIELD 3	Registration owner letters	STRING	Fixed, 3 chars	The ECR's registration characters.
	FIELD 4	ECR MODEL	STRING	Default	The ECR's Model.
	FIELD 5	ECR Firmware Version	STRING	Default	The ECR's Firmware version.

CONFIDENTIAL

8.2.2. Read PLU info & stats [p]

This command will return all information about a programmed PLU.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	p	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"p/101/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'p' for this command.	
			FIELD 2	PLU number / PLU search code (2 cases)	INTEGER -STRING	Default	It is the PLU index to read	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	16 (Counting reply code, status & checksum)	12 (Without reply code, status & checksum)		(reply code)(status) "0000000000000001/EIΔOE-00001/001/1/1.00/1.25/12.00/13/499.000/ 0.000/0.00/1001000/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	PLU search code	STRING	Fixed, 15 chars	The search key for this PLU		
		FIELD 2	PLU description	STRING	Fixed, 20 chars	The description for this PLU		
		FIELD 3	PLU department	INTEGER	Default	The department number holding this PLU		

	FIELD 4	PLU index	INTEGER	Default	The index in internal RAM of the PLU in Item database.
	FIELD 5	PLU price 1	AMOUNT	Default	The first price for this PLU
	FIELD 6	PLU price 2	AMOUNT	Default	The second price for this PLU
	FIELD 7	PLU maximum price	AMOUNT	Default	The maximum valid price for this PLU
	FIELD 8	PLU points	INTEGER	Default	The points for this PLU
	FIELD 9	PLU current stock	QTY	Default	The current stock available for this PLU
	FIELD 10	PLU sold quantity	QTY	Default	The current sold quantity of this PLU
	FIELD 11	PLU total sales	AMOUNT	Default	The current PLU total sales
	FIELD 12	PLU settings	FLAGS	Fixed, 7 digits	The flag settings for PLU are mapped as follows (left to right) (1:YES and 0:NO): 1st = PLU is available for sale 2nd = Receipt will be closed 3rd = Print double height 4th = Item has open price 5th = Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th = Unit Quantity 7th = Print PLU's department

8.2.3. Read DPT info [d]

This command will return all information about a programmed DPT.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	d	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"d/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'd' for this command.	
			FIELD 2	DPT number	INTEGER	Default	It is the DPT index to read	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	20 (Counting reply code, status & checksum)	16 (Without reply code, status & checksum)		(reply code) (status) "TMHMA-01 /1/9/0.20/19.00/0.00/100100/0.000/ 0.00/45.000/363.76/1/3/0/0/0/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	DPT description	STRING	Fixed, 20 chars	The description for this DPT		
		FIELD 2	DPT vat rate code	INTEGER	Fixed 1 digit, range 1-5	The code of the vat rate of this DPT (1=A, 2=B, ...)		
		FIELD 3	Category Code	INTEGER	Default	The Category Code the DPT belongs to		
		FIELD 4	DPT's 1 st price	AMOUNT	Default	The 1 st price for this DPT		

	FIELD 5	DPT maximum price	AMOUNT	Default	The maximum valid price for this DPT
	FIELD 6	DPT's 2 nd price	AMOUNT	Default	The 2 nd price for this DPT
	FIELD 7	DPT settings	FLAGS	Fixed, 6 digits	The flag settings for DPT are mapped as follows (left to right) (1:YES and 0:NO): 1st = DPT is available for sales 2nd = DPT will close receipt 3rd = Print double height 4th = DPT has open price 5th = Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th = Unit quantity
	FIELD 8	DPT sold quantity	QTY	Default	The current sold quantity of this DPT
	FIELD 9	DPT total sales	AMOUNT	Default	The current DPT total sales
	FIELD 10	Accumulated DPT sold quantity	QTY	Default	The accumulated sold quantity of this DPT
	FIELD 11	Accumulated DPT total sales	AMOUNT	Default	The accumulated DPT total sales
	FIELD 12	DPT type	INTEGER	Default	The current DPT type (Income Classification Category Type from AADE): 0 = Product 1 = Merchandise 2 = Services 3 = Fixed Asset 4 = Other Income

					5 = Third Party 6 = Fee 7 = Other Tax
	FIELD 13	DPT income type	INTEGER	Default	The current DPT income type (Income Classification Value Type from AADE). When Income Classification Category Type is: Product (0), Merchandise (1), Services (2), Fixed Asset (3), Other Income (4), the Income Classification Value Type is always 3 - E3_561_003 (Retail Sales of Products and Services). When Income Classification Category Type is Third Party (5), the Income Classification Value Type is always 4 - E3_881_002 (Retail Sales for Third Party). When Income Classification Category Type is Fee (6), the Income Classification Value Type could be 1-22 (AADE Fee Categories). When Income Classification Category Type is Other Tax (7), the Income Classification Value Type could be 1-30 (AADE Other Tax Categories).

	FIELD 14	DPT VAT Exemption Category	INTEGER	Default	Exemption Category: 0 = No exemption (VAT not 0%) 1-31=Exemption category according to myDATA table 8.3 (VAT 0%)
	FIELD 15	General esend Fee category	INTEGER	Default	0: Disable 1: Enable, department sales accumulated to send the total net amount in esend at Z.
	FIELD 16	Additional VAT Category	INTEGER	Default	When Department VAT category is 4 - D Vat Rate - this field is the category of additional VATs (1-10).

8.2.4. Read Clerk info [c]

This command will return all information about a programmed clerk.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	C	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"c/9/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'c' for this command.	
			FIELD 2	Clerk number	INTEGER	1-2 digits	It is the clerk index to read	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	15 (Counting reply code, status & checksum)	11 (Without reply code, status & checksum)		(reply code) (status) "12345/CLERK /0/01111111/11111111/1/10.00/0.00/0.00/0/11100000/" (checksum) DESCR.				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Clerk access code	STRING	Fixed, 5 chars	The clerk's programmed access code		
		FIELD 2	Clerk description	STRING	Fixed, 20 chars	The clerk's programmed description		
		FIELD 3	Clerk access rights type	INTEGER	1 digit	0= ADMIN 1= SUPERUSER		

					2= USER
	FIELD 4	Clerk flags	FLAGS	Fixed, 8 digits	The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1st = Clerk has access to X reports 2nd = Clerk has access to Z reports 3rd = Clerk has access to VAT programming 4th = Clerk has access to Discount/Markup programming 5th = Clerk has access to Header/Footer programming 6th = Clerk has access to PAYMENTS programming 7th = Clerk has access to DPT programming 8th = Clerk has access to PLU programming
	FIELD 5	Clerk flags	FLAGS	Fixed, 8 digits	The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1st = Clerk has full access to sales 2nd = Clerk has full access to reports 3rd = Clerk has full access to programming 4th = Clerk has access to general parameters 5th = Clerk can issue CASHIN/OUT 6th = Clerk can DISCOUNT/MARKUP 7th = Clerk can REFUND

					8 th = Clerk can VOID a sale
	FIELD 6	Receipt Number	INTEGER	Default	The total number of clerk's issued receipts.
	FIELD 7	Clerk daily Sales Amount	AMOUNT	Default	The TOTAL daily sales amount of clerk.
	FIELD 8	CASH IN daily amount	AMOUNT	Default	The TOTAL daily cash in amount of clerk.
	FIELD 9	CASH OUT daily amount	AMOUNT	Default	The TOTAL daily cash out amount of clerk.
	FIELD 10	Clerk as waiter	INTEGER	1 digit	0= Clerk 1= Waiter
	FIELD 11	Clerk flags 3	FLAGS	Fixed, 8 digits	The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1 st = Clerk has full access to show daily totlas 2 nd = Clerk has access to reports 3 rd = Clerk has full access to issue Cancel/Credit receipts 4 th - 8 th = '0'

8.2.5. Read Payment info [y]

This command will return all information about a programmed payment.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	y	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"y/2/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'y' for this command.	
			FIELD 2	Payment code	INTEGER	1-2 digits	The payment code	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	16 (Counting reply code, status & checksum)	12 (Without reply code, status & checksum)		(reply code) (status) "KAPTA-1 /KAPT/1/100000000/1/0.00/0.00/0.00/0.00/ /9999999.99/0" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Payment description	STRING	Fixed, 15 chars	The payment's programmed type description		
		FIELD 2	Payment shorthand description	STRING	Fixed, 4 chars	A shorthand description, for example 'KAPT'		
		FIELD 3	The discount/markup code	INTEGER	0-2 digits	The discount/markup code		

	FIELD 4	Payment type flags	FLAGS	Fixed, 9 digits	The flag settings for PAYMENT are mapped as follows (left to right) (1:YES and 0:NO): 1st = Active Payment 2nd = Show payment type in scroll key menu 3rd = Auto Discount/Markup 4th = Input payment amount 5th = CASHOUT is allowed 6th = CASH IN is allowed 7th = Print Subtotal 8th = Change can be given 9th = Payment comments
	FIELD 5	Credit Type	INTEGER	Fixed, 1 digit	The Credit type code: 0 = Cash, 1 = Card, 2 = Cheque, 3 = Pending, 4 = IRIS
	FIELD 6	Payment daily sum	AMOUNT	Default	It is the daily sum of this payment
	FIELD 7	Payment cash ins	AMOUNT	Default	It is the sum of cash ins for the specific payment type
	FIELD 8	Payment cash outs	AMOUNT	Default	It is the sum of cash outs for the specific payment type
	FIELD 9	Payment total sum	AMOUNT	Default	It is the total sum of this payment
	FIELD 10	Payment comments	STRING	0 - 30 chars	A Comment line for this payment

	FIELD 11	Maximum payment amount	AMOUNT	Default	Maximum allowed amount for this payment
	FIELD 12	Payment Timeout	INTEGER	1-3 digits	210-300: Timeout while communicate with EFTPOS, only for IRIS payment type. 0: for all other payment types

CONFIDENTIAL

8.2.6. Read ECR parameters [s]

This command will return various ECR/POS parameters programmed.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	S	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"s" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 's' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	50 (Counting reply code, status & checksum)	46 (Without reply code, status & checksum)		(reply code) (status) "01110000100000001010000000010/10/997981320/69/68///1/0/0/0/999999.99/ 99999.990/9999999.99/99999999.99/1/MHXANH-1 /6/10/500/10/1/2/0/5/1/1/29/29/29/29/29/29/29/29/27/27/27/27/27/27/27/27/27/27/27/27/3/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Setup Flags	FLAGS	Fixed, 27 digits	The flag settings for ECR SETUP are mapped as follows (left to right) (1:YES and 0:NO): 1 st = Print departments on X report 2 nd = Clear PLU stats on Z report 3 rd = Return to sales mode after Z report		

					4th = Print DPT's VAT analysis on Z report 5th = Print total quantity on receipt 6th = Print PLU barcode on receipt 7th = Check of PLU stock 8th = Print VAT analysis 9th = Opening Drawer 10th = Sound when opening Drawer 11th = Barcode of weighted PLUs 12th = Actual PLU code (1:7 digits, 0:5 digits) 13th = Default sales unit (1:1, 0:0,01) 14th = Active On-Line 15th = DATE/TIME format (1:detailed, 0:DD/MM/YY) 16th = Display DATE/TIME instead of an advertising message 17th = Card key acts as: 0: a second payment type 1: a scroll menu of payments 18th = Print type of PAYMENT (1:Double Height, 0:Bold) 19th = PLU Search (1:Index, 0:Barcode) 20th = send ACK to barcode scanner 21st = close receipt after sale from scale 22nd = Subtotal on 2nd line of LCD
--	--	--	--	--	--

					23 rd = Allow sale PLU with different prices in same receipt 24 th = Coupon search (1:Index, 0:Barcode) 25 th = disable barcode scanner on error 26 th = FILE search (ONLINE) (1:internal database, 0:external database) 27 th = request for citizen card number before closing the receipt
	FIELD 2	Number of active Clerks	INTEGER	Default	Number of active Clerks
	FIELD 3	Tax Id Number	STRING	Fixed, 9 chars	Tax Id Number
	FIELD 4	Barcode Enable Code	INTEGER	Default	Code for enable barcode scanner
	FIELD 5	Barcode Disable Code	INTEGER	Default	Code for disable barcode scanner
	FIELD 6	Barcode ACK	INTEGER	Default	ACK code for barcode scanner
	FIELD 7	Barcode NAK	INTEGER	Default	NAK code for barcode scanner
	FIELD 8	Scale Type	INTEGER	Default	Type of scale
	FIELD 9	Printout of ECR name and/or clerk name	INTEGER	Default	0: none, 1:ECR NAME, 2:CLERK, 3:ECR NAME & CLERK
	FIELD 10	Clerk Change Type	INTEGER	Default	Clerk Change Type: 0 = free 1 = after Z 2 = after receipt

	FIELD 11	Selection the time the drawer to be opened	INTEGER	Default	0:START, 1:END, 2:PAYMENT
	FIELD 12	Maximum sale price	AMOUNT	Default	The programmed maximum for item price
	FIELD 13	Maximum sale quantity	QTY	Default	The programmed maximum quantity of a sale
	FIELD 14	Maximum receipt total	AMOUNT	Default	The programmed maximum receipt total
	FIELD 15	Maximum daily sales total	AMOUNT	Default	The programmed maximum daily sales total
	FIELD 16	ECR/POS number (id)	INTEGER	1-2 digits	The programmed ECR/POS number (not the registration number).
	FIELD 17	ECR/POS id string	STRING	1-8 chars	A programmed string for ECR/POS identification
	FIELD 18	Intensity of Printer	INTEGER	1-2 digits	Intensity of Printer (1-10)
	FIELD 19	The PROTOCOL queue lines	INTEGER	1-2 digits	The PROTOCOL queue lines (max 80 lines)
	FIELD 20	Protocol Wait Time	INTEGER	1-4 digits	Print queue lines after this time (max 3000 milliseconds)
	FIELD 21	Line Spacing	INTEGER	1-2 digits	Line spacing (max 10)
	FIELD 22	Port 1 Type	INTEGER	Default	Device type of port 1: 0:not used 1:cmd protocol
	FIELD 23	Port 2 Type	INTEGER	Default	Device type of port 2: 0:not used 1:cmd protocol

					2:barcode scanner 3:scale 4:external LCD 5:external keyboard 6:kitchen printer
	FIELD 24	Port 3 Type	INTEGER	Default	Device type of port 2: 0:not used 1:cmd protocol 2:barcode scanner 3:scale 4:external LCD 5:external keyboard 6:kitchen printer
	FIELD 25	Port 1 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400 4: 57600 5:115200 6:230400
	FIELD 26	Port 2 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400

					4: 57600 5:115200 6:230400
	FIELD 27	Port 3 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400 4: 57600 5:115200 6:230400
	FIELD 28	Pricing leading code for barcodes (#1)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 29	Pricing leading code for barcodes (#2)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 30	Pricing leading code for barcodes (#3)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 31	Pricing leading code for barcodes (#4)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 32	Pricing leading code for barcodes (#5)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 33	Pricing leading code for barcodes (#6)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.

	FIELD 34	Pricing leading code for barcodes (#7)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 35	Pricing leading code for barcodes (#8)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 36	Pricing leading code for barcodes (#9)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 37	Weighting leading code for barcodes (#1)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 38	Weighting leading code for barcodes (#2)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 39	Weighting leading code for barcodes (#3)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 40	Weighting leading code for barcodes (#4)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 41	Weighting leading code for barcodes (#5)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 42	Weighting leading code for barcodes (#6)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 43	Weighting leading code for barcodes (#7)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.

	FIELD 44	Weighting leading code for barcodes (#8)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 45	Weighting leading code for barcodes (#9)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 46	Company Type	INTEGER	0-1 digit	Type of Company: 0 = Restaurant 1 = Butcher Shop 2 = Hotel/Rental Rooms 3 = General Retail

8.2.7. Program PLU [P]

This command is used to program a PLU into the ECR/POS. All fields except the request code (field 1) and the PLU number (field 2) are optional. When not provided, the information in the PLU will not be updated.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST				
	P	12 (Counting request code & checksum fields)	10 (Without request code & checksum fields)		"P/100/123456789012345/PLU_DESCR./1/2.00/100.00/3.00/10/999999/1001100/" (checksum)				
			DESCRIPTION		TYPE	LENGTH	NOTES		
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'P' for this command.		
			FIELD 2	PLU index	INTEGER	1-5 digits	The PLU number (index) to program		
			FIELD 3	PLU search code	STRING	0-15 chars	The PLU search code (or barcode).		
			FIELD 4	PLU description	STRING	1-20 chars	The PLU description printed in receipts		
			FIELD 5	PLU department	INTEGER	Default	The department which the PLU belongs		
			FIELD 6	PLU's 1 st item price	AMOUNT	Default	PLU's 1 st item price		
			FIELD 7	PLU's item maximum price	AMOUNT	Default	PLU's item maximum price		
			FIELD 8	PLU's 2 nd item price	AMOUNT	Default	PLU's 2 nd item price		
			FIELD 9	PLU Points (promotion)	INTEGER	Default	PLU Points (promotion)		
			FIELD 10	PLU's current stock	QTY	Default	The stock for this PLU		

		FIELD 11	PLU flags	FLAGS	Fixed, 7 digits	The flag settings for PLU are mapped as follows (left to right) (1:YES and 0:NO): 1st = PLU is available for sale 2nd = Receipt will be closed 3rd = Print double height 4th = Item has open price 5th = Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th = Unit Quantity 7th = Print PLU's department
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.8. Program DPT (Department) [D]

This command is used to program a DPT into the ECR/POS. All fields except the request code (field 1) and the DPT number (field 2) are optional. When not provided, the information in the DPT will not be updated. Departments cannot be programmed when a day is open in the ECR/POS. Issue a Z report before the department programming to ensure success.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	D	17 (Counting request code & checksum fields)	14 (Without request code & checksum fields)		"D/10/DPT_10/1/1/2.00/100.00/3.00/100000/1////////" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'D' for this command.	
			FIELD 2	Department number (index)	INTEGER	Default	The department number to program	
			FIELD 3	Department description	STRING	1-30 chars	A description for this department	
			FIELD 4	Department VAT category	INTEGER	0-1 digits, range 1-5	The VAT category this department belongs (1='A', 2='B', ...)	
			FIELD 5	Category Code	INTEGER	Default	The DPT's Category Code	
			FIELD 6	DPT's 1 st price	AMOUNT	Default	The 1 st price for this DPT	
			FIELD 7	DPT maximum price	AMOUNT	Default	The maximum valid price for this DPT	
			FIELD 8	DPT's 2 nd price	AMOUNT	Default	The 2 nd price for this DPT	

	FIELD 9	Department flags	FLAGS	Fixed, 6 digits	The flag settings for DPT are mapped as follows (left to right) (1:YES and 0:NO): 1st = DPT is available for sales 2nd = DPT will close receipt 3rd = Print double height 4th = DPT has open price 5th = Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th = Unit quantity
	FIELD 10	Department type	INTEGER	0-1 digit	The DPT's type (Income Classification Category Type from AADE): 0 = Product 1 = Merchandise 2 = Services 3 = Fixed Asset 4 = Other Income 5 = Third Party 6 = Fee 7 = Other Tax
	FIELD 11	Department income type	INTEGER	0-2 digit	The DPT's income type (Income Classification Value Type from AADE). When Income Classification Category Type is: Product (0), Merchandise (1), Services (2), Fixed Asset (3), Other Income (4),

					the Income Classification Value Type is always 3 - E3_561_003 (Retail Sales of Products and Services). When Income Classification Category Type is Third Party (5), the Income Classification Value Type is always 4 - E3_881_002 (Retail Sales for Third Party). When Income Classification Category Type is Fee (6), the Income Classification Value Type could be 1-22 (AADE Fee Categories). When Income Classification Category Type is Other Tax (7), the Income Classification Value Type could be 1-30 (AADE Other Tax Categories).
	FIELD 12	DPT VAT Exemption Category	INTEGER	0-2 digits	Exemption Category: 0 = No exemption (VAT not 0%) 1-31=Exemption category according to myDATA table 8.3 (VAT 0%)
	FIELD 13	General esend Fee category	INTEGER	0-1 digit	0: Disable 1: Enable, department sales accumulated to send the total net amount in esend at Z. When Income Classification Category Type is Fee, allowed only

						Income Classification Value Type FC_18 - FC_22.
		FIELD 14	Additional VAT Category	INTEGER	0-2 digits	When Department VAT category is 4 - D Vat Rate - this field is the category of additional VATs (1-10).
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY			
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.			

8.2.9. Program Clerk [C]

This command programs a clerk in the ECR/POS. All fields except the request code and the clerk number are optional. When not provided, the information in the clerk will not be updated.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	C	10 (Counting request code & checksum fields)	8 (Without request code & checksum fields)		"C/2/APAP/12345/1/11010011/10010111/0/11100000/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'C' for this command.	
			FIELD 2	Clerk number (index)	INTEGER	1-2 digits, range 1-10	The clerk number to program	
			FIELD 3	Clerk description	STRING	0 or 16 chars	The clerk string that is printed in receipts	
			FIELD 4	Clerk access code	STRING	0 or 5 chars	The clerk access code	
			FIELD 5	Clerk access rights type	INTEGER	1 digit	0= ADMIN 1= SUPERUSER 2= USER	
			FIELD 6	Clerk flags	FLAGS	Fixed, 8 digits	The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1 st = Clerk has access to X reports 2 nd = Clerk has access to Z reports	

					3rd = Clerk has access to VAT programming 4th = Clerk has access to Discount/Markup programming 5th = Clerk has access to Header/Footer programming 6th = Clerk has access to PAYMENTS programming 7th = Clerk has access to DPT programming 8th = Clerk has access to PLU programming
	FIELD 7	Clerk flags	FLAGS	Fixed, 8 digits	The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1st = Clerk has full access to sales 2nd = Clerk has full access to reports 3rd = Clerk has full access to programming 4th = Clerk has access to general parameters 5th = Clerk can issue CASHIN/OUT 6th = Clerk can DISCOUNT/MARKUP 7th = Clerk can REFUND 8th = Clerk can VOID a sale
	FIELD 8	Clerk as waiter	INTEGER	0-1 digit	0= Clerk

					1 = Waiter
		FIELD 9	Clerk flags 3	FLAGS	Fixed, 8 digits
					The flag settings for CLERK are mapped as follows (left to right) (1:YES and 0:NO): 1st = Clerk has full access to show daily totlas 2nd = Clerk has access to reports 3rd = Clerk has full access to issue Cancel/Credit receipts 4th - 8th = Not Used
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.10. Program payment type [Y]

This command programs a payment type in the ECR/POS. All fields except the request code and the payment number are optional. When not provided, the information in the payment type will not be updated.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST		
	Y	12 (Counting request code & checksum fields)	10 (Without request code & checksum fields)	"Y/5/card_5/CARD///100010010/1////" (checksum)		

DESCRIPTION		TYPE	LENGTH	NOTES
FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'Y' for this command.
FIELD 2	Payment type code	INTEGER	1 - 2 digits	The payment type code
FIELD 3	Payment type description	STRING	1 to 15 chars	The payment type's description
FIELD 4	Payment type shorthand description	STRING	1 to 4 chars	The payment type's shorthand description, for example: "CARD" for payment with credit card.
FIELD 5	Not Used	AMOUNT	Default	Not Used
FIELD 6	Payment Discount/Markup Code	INTEGER	0-2 digits	The code of Discount/Markup for this payment
FIELD 7	Payment flags	FLAGS	Fixed, 9 digits	The flag settings for PAYMENT TYPE are mapped as follows (left to right) (1:YES and 0:NO): 1 st = Active Payment

					2 nd = Add this payment in payment's scroll menu 3 rd = Auto Discount/Markup 4 th = Must enter payment amount 5 th = Can be used in payout (cash out) 6 th = Can be used in receive on account (cash in) 7 th = Print Subtotal before payment 8 th = Payment can give change 9 th = Print payment comments
	FIELD 8	Credit Type	INTEGER	0-1 digits	Credit Payment type: 0 = Cash, 1 = Card, 2 = Cheque, 3 = Pending, 4 = IRIS
	FIELD 9	Payment comments	STRING	1 to 30 chars	Payment Comment line
	FIELD 10	Maximum payment amount	AMOUNT	Default	Maximum allowed amount for this payment
	FIELD 11	Payment timeout	INTEGER	0-3 digits	Timeout while communicate with EFTPOS, only for IRIS payment type (210-300 seconds).
	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		

REPLY PACKET	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.
-------------------------	---	--	---

CONFIDENTIAL

8.2.11. Program ECR Parameters [S]

This command programs various 'setup' information in the ECR/POS. All fields are optional so the host can selectively modify specific fields.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	S	44 (Counting request code & checksum fields)	42 (Without request code & checksum fields)		"S/111111011102220001000101001/10/1000/100/10000/10000/2/MAT R&D/29/29/29/29/29/29/29/29/29/27/27/27/27/27/27/27/27/27/1// /7/////////40/100/10/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'S' for this command.	
			FIELD2	Setup flags	FLAGS	Fixed, 27 digits	The flag settings for ECR parameters are mapped as follows (left to right) (1:YES and 0:NO): 1st = Print departments on X report 2nd = Clear PLU stats on Z report 3rd = Return to sales mode after Z report 4th = Print DPT's VAT analysis on Z report 5th = Print total quantity on receipt 6th = Print PLU barcode on receipt 7th = Check of PLU stock 8th = Print VAT analysis	

					9th = Opening Drawer 10th = Sound when opening Drawer 11th = Barcode of weighted PLUs 12th = Actual PLU code (1:7 digits, 0:5 digits) 13th = Print type of PAYMENT (1:Double Height, 0:Bold) 14th= PLU search0 search (1:Index, 0:Barcode) 15th = Allow sale PLU with different prices in same receipt 16th = Coupon search (1:Index, 0:Barcode) 17th = Card key acts as: 0: a second payment type 1: a scroll menu of payments 18th =Default sales unit (1:1, 0:0,01) 19th = Active On-Line 20th = send ACK to barcode scanner 21st= disable barcode scanner on error 22nd= DATE/TIME format (1:detailed, 0:DD/MM/YY) 23rd= Display DATE/TIME instead of an advertising message
--	--	--	--	--	--

					24 th = show sales subtotal in second LCD line 25 th = FILE search (ONLINE) (1:internal database, 0:external database) 26 th = close receipt after sale from scale 27 th = request for citizen card number before closing the receipt
FIELD 3	Active Clients	INTEGER	1-2 digits	Number of active clients	
FIELD 4	Maximum sale price	AMOUNT	Default	Maximum acceptable price of one item sale	
FIELD 5	Maximum sale quantity	QTY	Default	Maximum acceptable quantity of one item sale	
FIELD 6	Maximum receipt total	AMOUNT	Default	Maximum receipt total	
FIELD 7	Maximum daily sales total	AMOUNT	Default	Maximum daily sales total	
FIELD 8	ECR/POS number (id)	INTEGER	0 - 3 digits	The ECR/POS number (not the registration number)	
FIELD 9	ECR/POS id string	STRING	0 - 8 chars	An additional string for ECR/POS identification	
FIELD 10	Pricing leading code for barcodes (#1)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.	
FIELD 11	Pricing leading code for barcodes (#2)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.	

	FIELD 12	Pricing leading code for barcodes (#3)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 13	Pricing leading code for barcodes (#4)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 14	Pricing leading code for barcodes (#5)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD15	Pricing leading code for barcodes (#6)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 16	Pricing leading code for barcodes (#7)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 17	Pricing leading code for barcodes (#8)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 18	Pricing leading code for barcodes (#9)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains price information.
	FIELD 19	Weighting leading code for barcodes (#1)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 20	Weighting leading code for barcodes (#2)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 21	Weighting leading code for barcodes (#3)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.

	FIELD 22	Weighting leading code for barcodes (#4)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 23	Weighting leading code for barcodes (#5)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 24	Weighting leading code for barcodes (#6)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 25	Weighting leading code for barcodes (#7)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 26	Weighting leading code for barcodes (#8)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 27	Weighting leading code for barcodes (#9)	INTEGER	1-2 chars	A leading code for barcodes to indicate that the barcode contains Weight information.
	FIELD 28	TIN	STRING	9 chars	Taxpayer Identification Number
	FIELD 29	Printout of ECR name and/or clerk name	INTEGER	Default	0:none, 1:ECR NAME, 2:CLERK, 3:ECR NAME & CLERK
	FIELD 30	Clerk Change Type	INTEGER	Default	Clerk Change Type: 0 = free 1 = after Z 2 = after receipt
	FIELD 31	Selection of the time the drawer to be opened	INTEGER	Default	0:START 1, 1:END, 2:PAYMENT
	FIELD 32	Intensity of Printer	INTEGER	1-2 digits	Intensity of Printer (1-10)

	FIELD 33	Port 1 Type	INTEGER	Default	Device type of port 1: 0:not used 1:cmd protocol
	FIELD 34	Port 2 Type	INTEGER	Default	Device type of port 2: 0:not used 1:cmd protocol 2:barcode scanner 3:scale 4:external LCD 5:external keyboard 6:kitchen printer
	FIELD 35	Port 3 Type	INTEGER	Default	Device type of port 2: 0:not used 1:cmd protocol 2:barcode scanner 3:scale 4:external LCD 5:external keyboard 6:kitchen printer
	FIELD 36	Port 1 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400 4: 57600 5:115200

					6:230400
FIELD 37	Port 2 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400 4: 57600 5:115200 6:230400	
FIELD 38	Port 3 Baud Rate	INTEGER	Default	Baud Rate 0: 2400 1: 9600 2: 19200 3: 38400 4: 57600 5:115200 6:230400	
FIELD 39	Scale Type	INTEGER	0-1 digit	Scale type	
FIELD 40	The PROTOCOL queue lines	INTEGER	1-2 digits	The PROTOCOL queue lines (max 80 lines)	
FIELD 41	Protocol Wait Time	INTEGER	1-4 digits	Print queue lines after this time (max 3000 milliseconds)	
FIELD 42	Line Spacing	INTEGER	1-2 digits	Line spacing (max 10)	
FIELD 43	Company Type	INTEGER	0-1 digit	Types of Company:	

					0 = Restaurant 1 = Butcher Shop 2 = Hotel/Rental Rooms 3 = General Retail
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.12. Program header [H]

This command programs the header in the ECR/POS. Lines that will not be passed in the command will not be printed. To program a blank line, the host must pass the line filled with spaces. The lines provided for header will NOT be centred automatically.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	H	18 (Counting request code & checksum fields)	16 (Without request code & checksum fields)		"H/1/LINE1/1/LINE2/1/LINE3/1/LINE4/1/LINE5/1/LINE6/1/LINE7/1/LINE8/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'H' for this command.	
			FIELD 2	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal	
			FIELD 3	Header line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
			FIELD 4	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing	

					1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 5	Header line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 6	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 7	Header line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 8	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 9	Header line 4	STRING	0-32 (0-16) chars	The text data for each line.

					Only 16 characters can be printed in case of double width characters
	FIELD 10	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 11	Header line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 12	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 13	Header line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 14	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height

					2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 15	Header line 7	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 16	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 17	Header line 8	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.13. Program footer [F]

Programs the footer in the ECR/POS. Lines that will not be passed in the command will not be printed. To program a blank line, the host must pass the line filled with spaces. The lines provided for footer will NOT be centred automatically.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	F	14 (Counting request code & checksum fields)	12 (Without request code & checksum fields)		"F/1/LINE1/1/LINE2/1/LINE3/1/LINE4/1/LINE5/1/LINE6/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'F' for this command.	
			FIELD 2	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold	
			FIELD 3	Footer line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
			FIELD 4	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height	

					4 = Bold
	FIELD 5	Footer line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 6	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 7	Footer line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 8	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 9	Footer line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 10	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width

					3 = Double width and height 4 = Bold
	FIELD 11	Footer line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 12	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 13	Footer line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.14. Program scrolling message [M]

This command programs a message in the ECR/POS which will be scrolled left to right when the ECR/POS is idle.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	M	6 (Counting request code & checksum fields)	4 (Without request code & checksum fields)		"M/MAT ADVANCED TECHNOLOGY/1/0/10/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'M' for this command.	
			FIELD 2	Message	STRING	0-96 chars	The scrolling message to program	
			FIELD 3	Flag for show scrolling message	INTEGER	0 - 1 digits	0:inactive, 1:active scrolling message	
			FIELD 4	Flag for show Date-Time	INTEGER	0 - 1 digits	0:do not show Date-Time, 1:show Date-Time instead of scrolling message	
			FIELD 5	Time before show message	INTEGER	0-3 digits	Seconds to start scrolling the message (or Date-Time) Range 10-900 seconds.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.15. Item sale [3]

This command belongs to the fiscal printer commands. It is used to sale an item remotely. If a transaction is not open, the ECR/POS will open it. Not all fields in this command are optional.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	3	12 (Counting request code & checksum fields)	10 (Without request code & checksum fields)		"3/S/TEST/EXTRA DESCR./1.00/5.00/1/6.50/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '3' for this command.	
			FIELD 2	Operation	STRING	Fixed, 1 character	The operation code must be one of the following: 'S' for positive sale 'V' for void (negative) sale 'R' for refund 'I' for open Invoice 'C' for Return (only Restaurant ECRs) 'P' for Credit	
			FIELD 3	Item description/Client TIN	STRING	1-20 chars	The description of the item in all cases except the operation 'I', where this field is used as client Tax Identification Number (Required)	

	FIELD 4	Sale extended description line/Client Email	STRING	0-20 chars	An extra information line printed below the 'sale' line in all cases except the operation 'I', where this field used as the client email to send the issued invoice (If the that choice is enabled) (Optional)
	FIELD 5	Sales quantity/ Send Invoice to	QTY	Default	The item sale quantity in all cases except operation 'I', where this field is used as the type of send for Invoice to be issued: 0 = only Printer 1 = only Email 2 = both Printer and Email (Required)
	FIELD 6	Item unit price	AMOUNT	Default	The item's unit price for the sale (Required)
	FIELD 7	Department owning item/ Invoice Type	INTEGER	0-2 digits	The item's department number in all cases except operation 'I', where this field is used as the type of myDATA Invoice to be issued: 1 = Products Sales Invoice 2 = Merchandises Sales Invoice 3 = Services Provision Invoice 4 = Products Credit Invoice 5 = Merchandises Credit Invoice 6 = Services Provision Credit Invoice

					7 = Accommodation Tax Invoice 8 = Accommodation Services Receipt (Optional)
	FIELD 8	Item Vat rate/Hotel category	AMOUNT	Default	-All cases except operation 'I': The VAT rate that applies to this item. This rate MUST be equal to the rate which the department of this item corresponds to. If this field is empty, the rate is equal to the plu's department rate. Operation 'I': (Optional)
	FIELD 9	Accommodation category	INTEGER	0-1 digit	The category of the accommodation: 1 = Hotel 1-2 star 2 = Hotel 3 stars 3 = Hotel 4 stars 4 = Hotel 5 stars 5 = Rental rooms/Apartments (Optional)
	FIELD 10	Accommodation start date	DATE6	Fixed, 6 digits	Accommodation start date, only for operation 'I' and Invoice type 7 or 8. (Optional)
	FIELD 11	Accommodation end date	DATE6	Fixed, 6 digits	Accommodation end date, only for operation 'I' and Invoice type 7 or 8. (Optional)

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

CONFIDENTIAL

8.2.16. Discount/Markup [4]

This command is for issuing discounts or markups to the ECR/POS. A transaction must be open.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	4	8 (Counting request code & checksum fields)	6 (Without request code & checksum fields)		"4/1.00/disc/extra descr./0/0/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '4' for this command.	
			FIELD 2	Amount of operation/Percentage of operation	AMOUNT	Default	The amount or percentage of the discount/markup operation.	
			FIELD 3	The operation description	STRING	0-16 chars	Optional string for description of operation. If not passed, the DEFAULT string (programmed in the ECR/POS's setup) will be used.	
			FIELD 4	Operation extended description	STRING	0-20 chars	Optional string for additional information printing of the operation. Prints one additional line below the operation printing lines.	
			FIELD 5	Operation code	INTEGER	Fixed, 1 digit, range 0-1	The operation code must be one of the following: 0 = Discount 1 = Markup	

	FIELD 6	Operation mode	INTEGER	Fixed, 1 digit, range 0-1	The operation mode specifies where the operation will take place: 0 = Do the operation in the Last item sold 1 = Do the operation in receipts current subtotal
	FIELD 7	Amount/Percentage specifier	INTEGER	Fixed, 1 digit, range 0-1	This field specifies whether the field 1 is a percentage or the field 1 is an amount. 0 = Percentage, 1 = Amount
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.17. Payments in receipt/cash in/cash out [5]

This command is used in 3 cases:

- In receipts (positive)*
- In cash in (positive)*
- In cash out (negative)*

When a receipt is open, this command will force the ECR/POS firmware state to enter payment mode.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST		
	5	9 (Counting request code & checksum fields)	7 (Without request code & checksum fields)		`5/1/10.00/EXTRA DESCR.//CARD/` (checksum)		
			DESCRIPTION		TYPE	LENGTH	NOTES
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '5' for this command.
			FIELD 2	Payment type (index)	INTEGER	1-2 digits	The payment code. Send '99' as code to get the status of last payment transaction. Reply status: 0 = Successfully complete last payment transaction. 1 = Last EFTPOS transaction in progress. 2 = Error in last EFTPOS payment transaction (Error before start the transaction in EFTPOS).

					3 = Error in last EFTPOS payment transaction. (Error received from EFTPOS)
	FIELD 3	Payment Amount	AMOUNT	Default	The amount for the payment (must be zero for cash in/out)
	FIELD 4	Payment description	STRING	0-20 chars	An optional string for extended description of the payment. This line will be printed after the actual payment lines.
	FIELD 5	N.A.	RATE	Default	Not Available
	FIELD 6	Payment extended description	STRING	0-20 chars	The description of the payment. The payment description is used only when the payment type (field 2) is higher than 1 (not cash payment), else this field is ignored.
	FIELD 7	EFTPOS number	INTEGER	0-2 digit	The number of EFTPOS that will be used to complete the payment. The EFTPOS must be already assigned to this payment type. (Optional)
	FIELD 8	EFTPOS Transaction type	INTEGER	0-1 digit	EFTPOS transaction type: 1 = Purchase 2 = Instalments Purchase 3 = Preauth-completion 4 = Mail Order (Optional)

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

CONFIDENTIAL

8.2.18. Set client name [2]

This command is for searching online for a client description.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	2	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"2/CUSTOMER ID/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '2' for this command.	
			FIELD 2	Client description	STRING	1-30 chars	A description for a client printed in the receipt.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.19. Cancel receipt [+]

This command is for cancelling an open legal receipt which is not in payment state. The ECR/POS will remove any record keeping for this receipt and will terminate it.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	+	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"+" (checksum) "+//98/" (checksum) "+/1/99/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '+' for this command.	
			FIELD 2	Cancel Receipt Number	INTEGER	0-5 digits	Number of daily receipt to be cancelled. (only in case 99) (optional)	
			FIELD 3	Type	INTEGER	0-2 digits	98 = Start Credit Receipt 99 = Cancel a Daily Receipt (optional)	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.20. Read transaction totals [9]

This command is used for getting the current transaction totals when a receipt is currently open. If a receipt is not open, the transaction totals will be zero.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	9	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"9/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '9' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	11 (Counting reply code, status & checksum)	7 (Without reply code, status & checksum)		(reply code) (status) "100.00/200.00/300.00/400.00/500.00/17/1500.00/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Receipt Accumulators (VAT A)	AMOUNT	Default	Receipt's sums belonging to VAT A category		
		FIELD 2	Receipt Accumulators (VAT B)	AMOUNT	Default	Receipt's sums belonging to VAT B category		
		FIELD 3	Receipt Accumulators (VAT C)	AMOUNT	Default	Receipt's sums belonging to VAT C category		
		FIELD 4	Receipt Accumulators (VAT D)	AMOUNT	Default	Receipt's sums belonging to VAT D category		

	FIELD 5	Receipt Accumulators (VAT E)	AMOUNT	Default	Receipt's sums belonging to VAT E category
	FIELD 6	Receipt number	INTEGER	1-6 digits	The open receipt's number When a receipt is not open, it indicates the last receipt's number.
	FIELD 7	Transaction Total	AMOUNT	Default	The amount that requires payment before the transaction can be closed. If the receipt is not in payment state, this amount equals to the sum of all VAT accumulators. When the receipts is in payment state, it shows the amount remain to be paid.

8.2.21. Read daily totals [0]

This command is used to read the daily totals accumulated in one day.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	0	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '0' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	15 (Counting reply code, status & checksum)	11 (Without reply code, status & checksum)		(reply code)(status) "1.00/4.00/3.00/12.00/5.00/25.00/7/2/2.00/1.00/100.00/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Daily VAT A	AMOUNT	Default	Daily sums belonging to VAT A category		
		FIELD 2	Daily VAT B	AMOUNT	Default	Daily sums belonging to VAT B category		
		FIELD 3	Daily VAT C	AMOUNT	Default	Daily sums belonging to VAT C category		
		FIELD 4	Daily VAT D	AMOUNT	Default	Daily sums belonging to VAT D category		

	FIELD 5	Daily VAT E	AMOUNT	Default	Daily sums belonging to VAT E category
	FIELD 6	Daily total	AMOUNT	Default	Daily total sum (the sum of fields 1 to 5)
	FIELD 7	Receipt number	INTEGER	1-6 digits	The total number of legal receipts.
	FIELD 8	Illegal receipt number	INTEGER	1-6 digits	The total number of illegal receipts.
	FIELD 9	Voids total	AMOUNT	Default	The sum of all voids during the day
	FIELD 10	Refunds total	AMOUNT	Default	The sum of all refunds during the day
	FIELD 11	Cancel total	AMOUNT	Default	The sum of all cancels during the day

8.2.22. Open cash in/out transaction [6]

This command is for opening a cash-in or prepayment (in communication with an already paired EFTPOS) or cash-out transaction to the ECR/POS. This must be done prior to sending any payment commands to the ECR. A legal receipt or a cash-in / cash out transaction must not be open. After successful open of either cash-in or cash-out, host may issue 'payment' commands. Issuing a payment command with zero value will close the cash-in/out transaction.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	6	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"6/1/" (checksum) "6/1/1/ABC0001/" (checksum) "6/1/2/" (checksum) "6/1/3/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '6' for this command.	
			FIELD 2	Cash in / Cash out type	INTEGER	Fixed, 1 digit	The type can be: 0 = Open Cash in transaction 1 = Open Cash out transaction	
			FIELD 3	Prepayment Type	INTEGER	0-1 digits	0 = Cash In 1 = Prepayment for Invoice 2 = Prepayment for Tax Free 3 = Prepayment for other cases	
			FIELD 4	Prepayment Invoice Number	STRING	1-8 chars	Optional field for Invoice number, in case of Prepayment for Invoice.	

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

CONFIDENTIAL

8.2.23. Issue report [x]

This command is used to issue the standard reports supported by the ECR.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	x	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"x/1///" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'x' for this command.	
			FIELD 2	Report type	INTEGER	2 digits, range 1-11, 17	The report type can be: 1 = X sales total report 2 = Drawer report 3 = PLU report 4 = Daily Department report 5 = Statistic Department report 6 = Clerk report 7 = Z closure report 8 = Statistics report 9 = Items List 10= Successful transfer on Z 11= Unsuccessful transfer on Z 17= Copy of last Z	

	FIELD 3	Start number	INTEGER	0 - 5 digits	The Clerk number to begin the clerk's report or the PLU number to begin Item list. Leave blank for the other options of Field 2
	FIELD 4	End number	INTEGER	0 - 5 digits	The Clerk number to end the clerk's report or the PLU number to end Item list. Leave blank for the other options of Field 2
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.24. Clear statistics [8]

This command is used to clear statistic accumulators and counters

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	8	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"8/2/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '8' for this command.	
			FIELD 2	File no	INTEGER	Fixed, 1 digit	The file to clear. Can be: 0 - for PLU statistics 1 - for DPT statistics 2 - for generic statistics 3 - for Payments statistics 4 - ALL statistics 5 - for Clerks statistics	
			FIELD 3	Type	INTEGER	Fixed, 1 digit	In case of file 2 (clear generic statistics), type: 0 - Clear All Statistics 1 - Clear Statistics per Hour 2 - Clear Statistics per Day 3 - Clear Statistics per Month	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.25. Read Device status [?]

This command is used to retrieve the status of the ECR/POS. Because this status information is always sent in the reply packet, the status command doesn't need any additional information to receive or return.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	?	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"?/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '?' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.26. Read Real Time Clock [t]

This command will is used to read the ECR's/POS's real time clock.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	t	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"t/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 't' for this command.	
REPLY PACKET	TOTAL FIELD COUNT		DATA FIELD COUNT		EXAMPLE REPLY			
	6 (Counting reply code, status & checksum)		2 (Without reply code, status & checksum)		(reply code)(status) "250213/160913/"(checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	System date	DATE6	Fixed, 6 digits	The current date in ECR/POS	
			FIELD 2	System time	TIME	Fixed, 6 digits	The current time in ECR/POS	

8.2.27. Program Real Time Clock [T]

This command is used to program the ECR/POS real time clock (i.e.: time and date). For this command to succeed, the 'clock' jumper must be short, otherwise the command will fail. Also, the date must not be prior to the last fiscal record's date.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST		
	T	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"T/110313/161800/" (checksum)		
			DESCRIPTION		TYPE	LENGTH	NOTES
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'T' for this command.
			FIELD 2	System date	DATE6	Default	The date to set in RTC (Real time clock)
			FIELD 3	System time	TIME	Default	The time to set in RTC
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY			
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.			

8.2.28. Device write [7]

This command is used to print user messages to display or to the printer.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	7	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"7/0/1/text/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '7' for this command.	
			FIELD 2	Device code	INTEGER	Fixed, 1 digit, range 0-2	The device to which the message will be printed 0 = Print to Display 1 = Print to 'Receipt & Journal' stations	
			FIELD 3	Printing type	INTEGER	Fixed, 2 digits range 0-14	The printing style for the device requested. For Display, types can be: 1 - Print to 1 st line only 2 - Print to 2 nd line only 3 - Print to 1 st line and clear 2 nd For printer, types can be: 1 or 6 - Normal print 2 or 7 - Double height 3 or 8 - Double width	

					4 or 9 - Double width and height 5 or 10- Bold With numbers 11 up to 14 the bitmaps 1 up to 4 are printed respectively.
	FIELD 4	Print line	STRING	0-32 chars	The line to send to the selected device For display, the line may be up to 16 characters For printer, the line may be up to 30 characters with close receipt and up to 20 characters inside an open receipt.
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.29. Drawer open [q]

This command is for remotely forcing the drawer to open.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	q	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"q//" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'q' for this command.	
			FIELD 2	NOT USED				
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.30. Printer feed [w]

This command defines the number of lines for feeding the printer.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	W	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"w/1/2/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'w' for this command.	
			FIELD 2	Station number	INTEGER	1 digit	1 = Receipt station	
			FIELD 3	Feed count	INTEGER	1 digit, range 1-9	Number of lines to feed the selected station	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.31. Sales ticket [m]

This command is for use ticket in sales.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	m	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"m/2.00/TICKET DESCRIPTION/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'm' for this command.	
			FIELD 2	Ticket price	AMOUNT	Default	Ticket price	
			FIELD 3	The ticket description	STRING	0-15 chars	The ticket description	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.32. Read version/device info [v]

This command will return version information for protocol and firmware of the ECR/POS. Also returns the device capabilities.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	V	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"v/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'v' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	15 (Counting reply code, status & checksum)	11 (Without reply code, status & checksum)		(reply code) (status) "V1 R1 T1 /V1 R1 T1 /87/50000/60/10/10/10/8/5/20/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Firmware revision	STRING	16 chars	The ECR/POS firmware version.		
		FIELD 2	Protocol revision	STRING	16 chars	The ECR/POS protocol version.		
		FIELD 3	Key's total number	INTEGER	1-5 digits	Maximum keys		
		FIELD 4	Total PLU's number	INTEGER	1-5 digits	Maximum plus		
		FIELD 5	Total DPT's number	INTEGER	1-5 digits	Maximum departments		
		FIELD 6	Total's payment's number	INTEGER	1-5 digits	Maximum payments		

	FIELD 7	Total's clerk's number	INTEGER	1-5 digits	Maximum clerks
	FIELD 8	Total Discount/Markups number	INTEGER	1-5 digits	Maximum disc/markups
	FIELD 9	Total Header Lines	INTEGER	1-5 digits	Header lines
	FIELD 10	Fixed Number	INTEGER	Fixed 1 digit	Fixed number '5'
	FIELD 11	Total's category number	INTEGER	Default	Maximum Category number

8.2.33. Display Scroll-Line message [o]

This command displays the Scroll-Line message.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	0	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"0/TEST MESSAGE/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request Code	STRING	Fixed 1 character	Must be '0' for this command.	
			FIELD 2	Advertising Message	STRING	0-96 chars	Scrolling message	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.34. Program DISCOUNT/ MARKUP [u]

This command programs a DISCOUNT/ MARKUP

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	u	12 (Counting request code & checksum fields)	10 (Without request code & checksum fields)		"u/5/Discount5/1/1/0/1//10.00/20.00/20.00/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'u' for this command.	
			FIELD 2	Discount's /Markup Number	INTEGER	1 - 2 digits	The Discount/markup number to be programmed	
			FIELD 3	Description	STRING	0 - 25 chars	The Discount/markup description	
			FIELD 4	Flag discount/markup	INTEGER	0 - 1 digits	0 for discount, 1 for markup	
			FIELD 5	Flag price/percentage	INTEGER	0 - 1 digits	0 for price, 1 for percentage	
			FIELD 6	Flag sales/subtotal/both	INTEGER	0 - 1 digits	0 for sales, 1 for subtotal, 2 for both	
			FIELD 7	Flag active	INTEGER	0 - 1 digits	0 for inactive, 1 for active	
			FIELD 8	N.A.	INTEGER	0 - 1 digits	N.A.	
			FIELD 9	Amount/percentage for discount/markup	AMOUNT	Default	Amount/percentage for discount/markup	

		FIELD 10	Maximum price	AMOUNT	Default	The maximum price
		FIELD 11	Maximum percentage	PERCENT	0 - 6 digits	Maximum percentage
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.35. Read Discount/ Markup [V]

Read Discount/ Markup.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	V	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"V/10/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'V' for this command.	
			FIELD 2	Number	INTEGER	1 - 2 digits	The Discount/markup number	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	16 (Counting reply code, status & checksum)	12 (Without reply code, status & checksum)		(reply code) (status) "EKП-AYE-10 /1/1/0/0/0.00/99999.99/100.00/0.00/0.00/0/0/" (checksum)"				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Discount/Markup description	STRING	16 chars	The discount/Markup description		
		FIELD 2	Flag discount/markup	INTEGER	1 digit	0 for discount, 1 for markup		
		FIELD 3	Flag price/percentage	INTEGER	1 digit	0 for price , 1 for percentage		
		FIELD 4	Flag sales/subtotal/both	INTEGER	1 digit	0 for sales, 1 for subtotal, 2 for both		

	FIELD 5	Flag active	INTEGER	1 digit	0 for inactive, 1 for active
	FIELD 6	Amount/percentage for discount/markup	AMOUNT	Default	Amount/percentage for discount/markup
	FIELD 7	Maximum price	AMOUNT	Default	The maximum price
	FIELD 8	Maximum percentage	PERCENT	Default	Maximum percentage
	FIELD 9	Daily totals of discount/markup	AMOUNT	Default	Daily total of discount/markup
	FIELD 10	Total amount for discount/markup	AMOUNT	Default	Total amount for discount/markup
	FIELD 11	Daily Times for discount/markup	INTEGER	Default	Total number of daily discount/markup
	FIELD 12	Total Times for discount/markup	INTEGER	Default	Total number of discounts/markups

8.2.36. Read PLU info/stats by code [h]

This command will return all information about a programmed PLU.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	h	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"h/123456789012345/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'h' for this command.	
			FIELD 2	PLU search code	STRING	15 chars	It is the PLU code to search & reply	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	16 (Counting reply code, status & checksum)	12 (Without reply code, status & checksum)		(reply code) (status) "123456789012345/EIAOΞ-00001 /001/1/1.00/0.00/999999.99/0/999996.990/0.000/0.00/1001000/" checksum				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	PLU search code	STRING	15 chars	The search code for this PLU		
		FIELD 2	PLU description	STRING	Fixed, 20 chars	The description of this PLU		
		FIELD 3	PLU department	INTEGER	Fixed, 3 digits	The department number holding this PLU		
		FIELD 4	PLU index	INTEGER	Default	The index of PLU in database.		

	FIELD 5	PLU price 1	AMOUNT	Default	The 1 st price for this PLU
	FIELD 6	PLU price 2	AMOUNT	Default	The 2 nd price for this PLU
	FIELD 7	PLU maximum price	AMOUNT	Default	The maximum valid price for this PLU
	FIELD 8	PLU points	INTEGER	Default	The points for this PLU
	FIELD 9	PLU current stock	QTY	Default	The current stock available for this PLU
	FIELD 10	PLU sold quantity	QTY	Default	The current sold quantity of this PLU
	FIELD 11	PLU total sales	AMOUNT	Default	The current PLU total sales
	FIELD 12	PLU settings	FLAGS	Fixed, 7 digits	The flag settings for PLU parameters are mapped as follows (left to right) (1:YES and 0:NO): 1st= Item is available for sales 2nd= Item will close receipt 3rd= Print double height 4th= Item has open price 5th= Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th= Sale as a unit quantity 7th= Print PLU's department

8.2.37. Program VAT rates [b]

This command is used to program the VAT rates of the ECR/POS. For this command to succeed, a day must not be open. Important notice: max 50 changes available.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST		
	b	8 (Counting request code & checksum fields)	6 (Without request code & checksum fields)	"b/6.50/13.00/23.00/36.00/" (checksum)		
			DESCRIPTION	TYPE	LENGTH	NOTES
			FIELD 1 Request code	STRING	Fixed, 1 character	Must be 'b' for this command.
			FIELD 2 Vat A rate	AMOUNT	0-5 digits, range 0-100	The VAT A rate to program.
			FIELD 3 Vat B rate	AMOUNT	0-5 digits, range 0-100	The VAT B rate to program.
			FIELD 4 Vat C rate	AMOUNT	0-5 digits, range 0-100	The VAT C rate to program.
			FIELD 5 Vat D rate	AMOUNT	0-5 digits, range 0-100	The VAT D rate to program.
			FIELD 6 Vat E rate	AMOUNT	0-5 digits, range 0-100	The VAT E rate to program.
			FIELD 7 Exemption Reason	INTEGER	0-2 digits	The tax exemption reason for VAT E 0%. Accepted values are 1-31 and corresponds to the

					AADE Vat Exemption Category Table.
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

CONFIDENTIAL

8.2.38. Set receipt comment text [j]

This command is used to set comments that will be printed at the start/end of the receipt (up to 6 lines for start comments and up to 3 lines for end comments). These comments will be active only for the current receipt or the next receipt (if none is currently open).

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	j	9 (Counting request code & checksum fields)	7 (Without request code & checksum fields)		"j/COMMENT 1/COMMENT 2/COMMENT 3/COMMENT 4/COMMENT 5/COMMENT 6/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'j' for this command.	
			FIELD 2	The 1st comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 3	The 2nd comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 4	The 3rd comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 5	The 4th comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 6	The 5th comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 7	The 6th comment line to be printed	STRING	0-32 chars	The actual text that will be printed.	
			FIELD 8	Comments Type	Integer	Fixed, 1 digit	0= Start Receipt Comments will be active only for the current receipt or the next receipt	

					1= End Receipt Comments will be active only for the current receipt or the next receipt
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

CONFIDENTIAL

8.2.39. Read last fiscal data [i]

This command returns a packet with the accumulated sums of the fiscal memory.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	i	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"i/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'i' for this command.	
REPLY PACKET	TOTAL FIELD COUNT		DATA FIELD COUNT		EXAMPLE REPLY			
	12 (Counting reply code, status & checksum)		8 (Without reply code, status & checksum)		(reply code) (status) "250213/153000/1041/148/29.98/18.28/9.53/3.36/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Last Z date	DATE6	Fixed, 6 digits	It is the date of the last Z closure stored in fiscal memory	
			FIELD 2	Last Z time	TIME	Fixed, 6 digits	It is the time of the last Z closure stored in fiscal memory	
			FIELD 3	Last Z number	INTEGER	Default	It is the number of the last Z closure stored in fiscal memory	

	FIELD 4	Total receipts counter	INTEGER	Default	The progressive number of all legal receipts recorded in the Fiscal Memory
	FIELD 5	Fiscal accumulated totals (VAT A)	Amount	Default	Accumulated sums stored in fiscal memory (VAT A)
	FIELD 6	Fiscal accumulated totals (VAT B)	Amount	Default	Accumulated sums stored in fiscal memory (VAT B)
	FIELD 7	Fiscal accumulated totals (VAT C)	Amount	Default	Accumulated sums stored in fiscal memory (VAT C)
	FIELD 8	Fiscal accumulated totals (VAT D)	Amount	Default	Accumulated sums stored in fiscal memory (VAT D)

8.2.40. Read VAT rates [e]

This command is used to retrieve the current vat rates programmed into the ECR/POS.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	e	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"e/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	.Fixed, 1 character	Must be 'e' for this command.	
REPLY PACKET	TOTAL FIELD COUNT		DATA FIELD COUNT		EXAMPLE REPLY			
	10 (Counting reply code, status & checksum)		6 (Without reply code, status & checksum)		(reply code) (status) "6.50/13.00/23.00/36.00/0.00/27/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Vat A rate	AMOUNT	0-5 digits, range 0-100	The VAT A rate that is programmed.	
			FIELD 2	Vat B rate	AMOUNT	0-5 digits, range 0-100	The VAT B rate that is programmed.	
			FIELD 3	Vat C rate	AMOUNT	0-5 digits, range 0-100	The VAT C rate that is programmed.	
			FIELD 4	Vat D rate	AMOUNT	0-5 digits, range 0-100	The VAT D rate that is programmed.	

	FIELD 5	Vat E rate	AMOUNT	0-5 digits, range 0-100	The VAT E rate that is programmed.
	FIELD 6	Exemption Reason	INTEGER	0-2 digits	The tax exemption reason for VAT E 0%. Accepted values are 1-31 and corresponds to the AADE Vat Exemption Category Table.

8.2.41. Read keyboard [B]

Reads the keyboard (internal or external USB)

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	B	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"B/2/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'B' for this command.	
			FIELD 2	Number	INTEGER	1 - 3 digits	The keyboard code number	
			FIELD 3	Keyboard Type	INTEGER	0-1 digits	0 = Internal Keyboard 1 = External USB Keyboard	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	6 (Counting reply code, status & checksum)	2 (Without reply code, status & checksum)		(reply code) (status) "151/151/" (checksum)"				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Function for Level 1	INTEGER	Default	Function number in first level for requested key		
		FIELD 2	Function for Level 2	INTEGER	Default	Function number in second level for requested key		

8.2.42. Program keyboard [G]

This command programs the keyboard (internal or external USB)

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	G	6 (Counting request code & checksum fields)	4 (Without request code & checksum fields)		"G/30/1/102/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'G' for this command.	
			FIELD 2	Number	INTEGER	1 - 3 digits	The keyboard code number	
			FIELD 3	The keyboard level	INTEGER	Fixed 1 digit	The keyboard level, range 0-1	
			FIELD 4	The function id	INTEGER	1 - 5 digits	The function id, it can be one of the following:	
					KEY			ID
					Zero			1
					One			2
					Two			3
					Three			4
					Four			5
					Five			6

	Six	7
	Seven	8
	Eight	9
	Nine	10
	Key (Not Programmable)	11
	Feed Paper	12
	Show Date-Time on LCD	13
	Open Drawer	14
	Cancel (Not Programmable)	15
	Void	16
	Previous Void	17
	Refund	18
	Cancel Receipt	19
	Cash In	20
	Cash Out	21
	Subtotal (Print on Paper)	22
	PLU Code	23
	Department Code	24
	Discount/Markup Code	25
	Payment Code	26

	Clerk Code (Lock/Change)	27
	Client Code	28
	Multiply	29
	Dot	30
	Double Zero	31
	Shift (Not Programmable)	32
	Right	33
	Left	34
	Return DEFAULT Value (for Program.)	35
	Clear String (for Program.)	36
	Delete Character (for Program.)	37
	Battery status	41
	Print Daily Z	42
	Print Daily X	43
	Print Department Statistics	44
	Change Language (Greek/English)	45
	Change lower/capital letters (for Programming)	46
	Select WEB SERVICE	47
	Report of open tables	48

	Open Invoice	50
	MULTI FUNCTION KEY	51
	3 Comment Lines (Print on Paper)	52
	3 Comment Lines (end of the receipt)	53
	6 Comment Lines (beginning of the receipt)	54
	Subtotal (on LCD)	55
	Print Copy of last Receipt	56
	Save new PLU	57
	Select Price	58
	Request Price	59
	Un-limit sale	60
	Citizen card	64
	Close Table	66
	Code of special cash outs	67
	Client coupon	68
	Receipt in English	69
	Blue Box	70
	Open Table	71
	Copy of Invoice	72

	Cancel Invoice	73
	Transfer Table	74
	Table Return	75
	Service Provision Receipt	76
	ECR Connect	77
	Send Pending myDATA invoices	78
	Cancel Previous Daily Receipt	79
	Open Credit Receipt	80
	Waiter Code (Lock/Change)	82
	Ticket 1	130
	Ticket 2	131
	Coupon	132
	WEB SERVICES	90-99
	Payments	100-109
	Discount/Markups	120-129
	Departments	151-210
	Special Cash Outs	310-329
	Tables	351-651
	PLUs	2001-52000

	FIELD 5	Keyboard Type	INTEGER	0-1 digits	0 = Internal Keyboard 1 = External USB Keyboard
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.43. Program Bitmap [\$]

This command programs the Bitmap

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	\$	7 (Counting request code & checksum fields)	5 (Without request code & checksum fields)		"\$/1/128/128/15/f0a0fe...../" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '\$' for this command.	
			FIELD 2	The Bmp index number	INTEGER	Fixed 1 digit	The Bmp index number	
			FIELD 3	The width	INTEGER	1-3 digits	The width	
			FIELD 4	The height	INTEGER	1-3 digits	The height	
			FIELD 5	The line index	INTEGER	1-3 digits	The line index	
			FIELD 6	Description	STRING	0 - 128 chars	The Bmp data	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.44. Program Category [R]

This command programs a Category number and its description

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	R	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		"R/5/CATEGORY 5/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'R' for this command.	
			FIELD 2	Category Number	INTEGER	Default	The Category's index number	
			FIELD 3	Category Description	STRING	0-20 chars	The Category's description	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.45. Read Category [Q]

Read a Category's number and description

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	Q	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"Q/15/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'Q' for this command.	
			FIELD 2	Category index	INTEGER	Default	Category index	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	5 (Counting reply code, status & checksum)	1 (Without reply code, status & checksum)		(reply code) (status) "CATEGORY 15/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Description	STRING	Default	It is the description of the requested category		

8.2.46. Program Client [!]

Sets the Client's description.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	!	30 (Counting request code & checksum fields)	28 (Without request code & checksum fields)		"!/1/123456789/CLIENT_TEST////A/B/C/D//1////////COMPANY-1/COMPANY-2/PROFESSION-1/PROFESSION-2/ADDRESS-1/CITY/2105695042/DOY/12133/aaa@bbb.com" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '!' for this command.	
			FIELD 2	Client Index	INTEGER	1-5 digits	The index of client	
			FIELD 3	Client Code	STRING	Fixed 11 chars	Client's code 11 characters	
			FIELD 4	Client Description	STRING	max 20 chars	Field for client description	
			FIELD 5	Client Maximum Bonus	INTEGER	0-5 digits	Maximum points of Bonus	
			FIELD 6	Client Bonus	INTEGER	0-5 digits	The Points of Bonus	
			FIELD 7	Discount Amount	AMOUNT	Default	Amount of discount	
			FIELD 8	1 st Client comment line	STRING	0-32 chars	1 st Client comment	
			FIELD 9	2 nd Client comment line	STRING	0-32 chars	2 nd Client comment	

	FIELD 10	3 rd Client comment line	STRING	0-32 chars	3 rd Client comment
	FIELD 11	4 th Client comment line	STRING	0-32 chars	4 th Client comment
	FIELD 12	Discount Type	INTEGER	0-1 digit	Discount type when client points reached maximum of points 0: Amount Discount 1: Percentage Discount
	FIELD 13	Active Client	INTEGER	0-1 digit	0: Inactive client 1: Active client
	FIELD 14	Coupon type	INTEGER	0-1 digit	1: discount coupon 2: plu coupon
	FIELD 15	Plu index	INTEGER	0-5 digits	Index of linked gift plu
	FIELD 16	Comments of coupon	STRING	0-32 chars	Comments of coupon line 1
	FIELD 17	Comments of coupon	STRING	0-32 chars	Comments of coupon line 2
	FIELD 18	Comments of coupon	STRING	0-32 chars	Comments of coupon line 3
	FIELD 19	Reserved field (0)			
	FIELD 20	Company line 1	STRING	0-48 chars	Company line 1
	FIELD 21	Company line 2	STRING	0-48 chars	Company line 2

	FIELD 22	Profession line 1	STRING	0-48 chars	Profession line 1
	FIELD 23	Profession line 2	STRING	0-48 chars	Profession line 2
	FIELD 24	Address line 1	STRING	0-48 chars	Address line 1
	FIELD 25	City	STRING	0-48 chars	City
	FIELD 26	Telephone	INTEGER	0-12 digits	Telephone
	FIELD 27	DOY	STRING	0-40 chars	DOY
	FIELD 28	Postal Code	STRING	0-10 chars	Postal Code
	FIELD 29	Email	STRING	0-40 chars	Email address
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.47. Read customer's data from memory [%]

This command is used to read an active customer's data.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	%	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)		%/1234567897/50/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '%' for this command.	
			FIELD 2	Client code	STRING	0-11 chars	The customer code (P.IVA)	
			FIELD 3	Client number (index)	INTEGER	0-3 digits	The customer index.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	30 (Counting reply code, status & checksum)	26 (Without reply code, status & checksum)		(reply code) (status) 123456789 /CLIENT_TEST /0/0.00/0/A /B/C/D/1/1/0/0////COMPANY-1/COMPANY-2/PROFESSION-1/PROFESSION-2 / ADDRESS-1/CITY/2105695042/DOY/12133/AAA@BBB.COM" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Client Code	STRING	Fixed 11 chars	Client's code		
		FIELD 2	Client Description	STRING	max 20 chars	Field for client description		

	FIELD 3	Client Bonus	INTEGER	0-5 digits	The Points of Bonus
	FIELD 4	Discount Amount	AMOUNT	Default	Amount of discount
	FIELD 5	Client Maximum Bonus	INTEGER	0-5 digits	Maximum points of Bonus
	FIELD 6	1 st Client comment line	STRING	0-32 chars	1 st Client comment
	FIELD 7	2 nd Client comment line	STRING	0-32 chars	2 nd Client comment
	FIELD 8	3 rd Client comment line	STRING	0-32 chars	3 rd Client comment
	FIELD 9	4 th Client comment line	STRING	0-32 chars	4 th Client comment
	FIELD 10	Discount Type	INTEGER	0-1 digit	Discount type when client points reached maximum of points 0: Amount Discount 1: Percentage Discount
	FIELD 11	Active Client	INTEGER	0-1 digit	0: Inactive client 1: Active client
	FIELD 12	Coupon type	INTEGER	0-1 digit	1: discount coupon 2: plu coupon
	FIELD 13	Plu index	INTEGER	0-5 digits	Index of linked gift plu
	FIELD 14	Comments of coupon	STRING	0-32 chars	Comments of coupon line 1
	FIELD 15	Comments of coupon	STRING	0-32 chars	Comments of coupon line 2
	FIELD 16	Comments of coupon	STRING	0-32 chars	Comments of coupon line 3
	FIELD 17	Company line 1	STRING	0-48 chars	Company line 1
	FIELD 18	Company line 2	STRING	0-48 chars	Company line 2
	FIELD 19	Profession line 1	STRING	0-48 chars	Profession line 1

	FIELD 20	Profession line 2	STRING	0-48 chars	Profession line 2
	FIELD 21	Address line 1	STRING	0-48 chars	Address line 1
	FIELD 22	City	STRING	0-48 chars	City
	FIELD 23	Telephone	INTEGER	0-12 digits	Telephone
	FIELD 24	DOY	STRING	0-40 chars	DOY
	FIELD 25	Postal Code	STRING	0-10 chars	Postal Code
	FIELD 26	Email	STRING	0-40 chars	Email address

8.2.48. Print Graphical Barcode [[]]

It prints a graphical Barcode on top of the receipt. It also prints above or below the graphical barcode, the data of this barcode

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST			
	[	8 (Counting request code & checksum fields)	6 (Without request code & checksum fields)	"[/10/3/2/67/12/8033706780046/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '[' for this command.
			FIELD 2	Height of the Graphical Barcode	INTEGER	1-3 digits	This is the Height of the Graphical Barcode expressed in a number of dots. It can only take values from 10-200. In case of QRCODE accepted values are 16, 24, 32 and 40.
			FIELD 3	Width of the Graphical Barcode	INTEGER	1 digit	This is the Width of the Graphical Barcode expressed in the density of dots It can only take quantized values from 1-3
			FIELD 4	Printing position of the Graphical Barcode data	INTEGER	1 digit	This is the Printing position of the bar code number 0=Data are not printed 1=TOP of the graphic 2=BOTTOM of the graphic 3=TOP&BOTTOM of graphic

	FIELD 5	Graphical Barcode printing code	INTEGER	2 digits	This is the Graphical Barcode printing code. The following printing codes are supported: 65=UPC-A 66=UPC_2_SUPL 67=JAN13 (EAN13) 68=JAN8 (EAN8) 69=CODE39 70=UPC_5_SUPL 73=CODE128 99=QRCODE
	FIELD 6	Graphical Barcode printing LENGTH	INTEGER	Default	This is the Graphical Barcode printing length according to the selected printing code. The appropriate lengths according to the supported printing codes are as following UPC-A Fixed n=11 UPC_2_SUPL Fixed n=2 JAN13 (EAN13) Fixed n=12 JAN8 (EAN8) Fixed n=7 CODE39 Can be changed 1<n>127 UPC_5_SUPL Fixed n=5 CODE128 Can be changed 2<n>127 QRCODE 1<n>250
	FIELD 7	Graphical Barcode Data	STRING	1-129 chars	The Graphical Barcode data. The length must be according to the restrictions of field 6

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

CONFIDENTIAL

8.2.49. Read Footer [K]

This command will return all information about the footer.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	K	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"K/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'K' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4-23 (Counting reply code, status & checksum)	0-19 (Without reply code, status & checksum)		(reply code) (status) "6/FOOTER LINE 1/0/0/FOOTER LINE 2/1/0/FOOTER LINE 3/2/1/FOOTER LINE 4/0/2/FOOTER LINE 5/0/3/FOOTER LINE 6/0/2/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Number of active footer lines	INTEGER	0-1 digits	Number of active footer lines		
		FIELD 2	1 st Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters		
		FIELD 3	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing		

					1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 4	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as: 0 = Center 1 = Left 2 = Right
	FIELD 5	2 nd Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 6	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 7	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as: 0 = Center 1 = Left 2 = Right
	FIELD 8	3 rd Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters

	FIELD 9	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 10	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as: 0 = Center 1 = Left 2 = Right
	FIELD 11	4 th Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 12	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 13	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as: 0 = Center 1 = Left 2 = Right

	FIELD 14	5 th Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 15	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 16	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as: 0 = Center 1 = Left 2 = Right
	FIELD 17	6 th Footer line	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 18	Footer line printing types	INTEGER	0-1 digit	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 19	Alignment of Footer line.	INTEGER	0-1 digit	The printing align for each footer line is as:

					0 = Center 1 = Left 2 = Right
--	--	--	--	--	-------------------------------------

CONFIDENTIAL

8.2.50. Read Header info [O]

This command will return all information about the header.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	O	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"O/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'O' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4-29 (Counting reply code, status & checksum)	1-25 (Without reply code, status & checksum)		(reply code) (status) "8/HEADER LINE 1/0/1/HEADER LINE 2/1/0/HEADER LINE 3/2/0/HEADER LINE 4/0/0/HEADER LINE 5/0/0/HEADER LINE 6/0/3/HEADER LINE 7/0/4/HEADER LINE 8/0/1/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Number of active header lines	INTEGER	1 digit	Number of active header lines		
		FIELD 2	Header line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters		
		FIELD 3	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing		

					1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
FIELD 4	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right	
FIELD 5	Header line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 6	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold	
FIELD 7	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right	
FIELD 8	Header line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	

	FIELD 9	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 10	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
	FIELD 11	Header line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 12	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 13	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right

	FIELD 14	Header line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 15	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 16	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
	FIELD 17	Header line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 18	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 19	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as:

					0 = Center 1 = Left 2 = Right
FIELD 20	Header line 7	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 21	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold	
FIELD 22	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right	
FIELD 23	Header line 8	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 24	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height	

					4 = Bold
	FIELD 25	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right

CONFIDENTIAL

8.2.51. Program header [L]

Programs the header in the ECR/POS. Lines that will not be passed in the command will not be printed. To program a blank line, the host must pass the line filled with spaces. The lines provided for header will NOT be centred automatically.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	L	26 (Counting request code & checksum fields)	24 (Without request code & checksum fields)		"L/0/HEADER LINE 1/0/1/HEADER LINE 2/1/0/HEADER LINE 3/2/0/HEADER LINE 4/0/0/HEADER LINE 5/0/0/HEADER LINE 6/0/3/HEADER LINE 7/0/4/HEADER LINE 8/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'L' for this command.	
			FIELD 2	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold	
			FIELD 3	Header line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
			FIELD 4	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right	

	FIELD 5	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 6	Header line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 7	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
	FIELD 8	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 9	Header line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 10	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right

	FIELD 11	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 12	Header line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 13	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
	FIELD 14	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 15	Header line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 16	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right

	FIELD 17	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 18	Header line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 19	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
	FIELD 20	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 21	Header line 7	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 22	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right

	FIELD 23	Header line printing types	INTEGER	0-1 digits	The printing type for each header line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 24	Header line 8	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 25	Alignment of Header line.	INTEGER	0-1 digits	The printing align for each header line as: 0 = Center 1 = Left 2 = Right
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.52. Program footer [#]

Programs the footer in the ECR/POS. Lines that will not be passed in the command will not be printed. To program a blank line, the host must pass the line filled with spaces. The lines provided for footer will NOT be centred automatically.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	#	22 (Counting request code & checksum fields)	18 (Without request code & checksum fields)		"#/0/FOOTERLINE 1/0/0/FOOTERLINE 2/1/0/FOOTERLINE 3/2/1/FOOTERLINE 4/0/2/FOOTERLINE 5/0/3/FOOTERLINE 6/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '#' for this command.	
			FIELD 2	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold	
			FIELD 3	Footer line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
			FIELD 4	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right	

	FIELD 5	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 6	Footer line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 7	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right
	FIELD 8	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 9	Footer line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 10	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right

	FIELD 11	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 12	Footer line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 13	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right
	FIELD 14	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 15	Footer line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 16	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right

	FIELD 17	Footer line printing types	INTEGER	0-1 digits	The printing type for each footer line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold
	FIELD 18	Footer line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 19	Alignment of Footer line.	INTEGER	0-1 digits	The printing align for each footer line as: 0 = Center 1 = Left 2 = Right
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.53. Read Scrolling Message Information [^]

This commands reads the scrolling message.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	^	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"^/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '^' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)		(reply code)(status) "0/0/15/MAT ADVANCED TECHNOLOGY/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Active Scrolling Message	INTEGER	Default	0= Inactive Scrolling Message 1= Active Scrolling Message		
		FIELD 2	Show date-time instead of message.	INTEGER	Default	0= Inactive Show date-time 1= Active Show date-time		
		FIELD 3	Time before show message.	INTEGER	0-3 digits	Time before show message.		
		FIELD 4	Scrolling Message	STRING	1-96 chars	Scrolling Message		

8.2.54. Program PLU with barcode [A]

This command is used to program a PLU into the ECR/POS. All fields except the request code (field 1) and the PLU code (field 2) are optional. When not provided, the information in the PLU will not be updated.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST				
	A	11 (Counting request code & checksum fields)	9 (Without request code & checksum fields)		"A/123456789012345/TEST_PLU/1/1.00/100.00/2.00/5/999999/1001100/" (checksum)				
			DESCRIPTION		TYPE	LENGTH	NOTES		
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'A' for this command.		
			FIELD 2	PLU search code	STRING	0-15 chars	The PLU search code (or barcode) to program		
			FIELD 3	PLU description	STRING	1-20 chars	The PLU description printed in receipts		
			FIELD 4	PLU department	INTEGER	Default	The department which the PLU belongs		
			FIELD 5	PLU price 1	AMOUNT	Default	The 1 st price for this PLU		
			FIELD 6	PLU maximum price	AMOUNT	Default	The maximum valid price for this PLU		
			FIELD 7	PLU price 2	AMOUNT	Default	The 2 nd price for this PLU		
			FIELD 8	PLU points	INTEGER	Default	Points of this PLU		
			FIELD 9	PLU current stock	QTY	Default	The current stock available for this PLU		

		FIELD 10	PLU settings	FLAGS	Fixed, 7 digits	The flag settings for PLU parameters are mapped as follows (left to right) (1:YES and 0:NO): 1st= Item is available for sales 2nd= Item will close receipt 3rd= Print double height 4th= Item has open price 5th= Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th= Sale as a unit quantity 7th= Print PLU's department
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

8.2.55. Read Fiscal File Info [g]

Read information for selected fiscal file.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	g	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"g/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'g' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	64 (Counting reply code, status & checksum)	60(12x5) (Without reply code, status & checksum)		Reply the following fields for each Fiscal File (reply code)(status) "0/0/50/0/0/1/88/1000/0/88/2/88/1000/0/88/3/0/200/0/0/4/0/50/0/0/5/9 5/3700/0/95/6/1/2/0/1/7/1/2/0/1/8/1/2/0/1/9/1/2/0/1/10/0/2/0/0/11/95 /1850/0/95/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Fiscal File	INTEGER	Fixed, 1 digit	Number of Fiscal File: 0 - HEADER 1 - CMOS ERROR 2 - TECHNICIAN INTERVENTION 3 - Flash Damage 4 - VAT Changes		

					5 - Transfers 6 - ENABLE KEY 7 - TIN 8 - GSIS KEY 9 - Company Type 10 - End of FM 11 - Z
	FIELD 2	Fiscal File Count Records	INTEGER	Default	Fiscal File Count Records
	FIELD 3	Fiscal File Total Records	INTEGER	Default	Fiscal File Total Records
	FIELD 4	Fiscal File Bad Records	INTEGER	Default	Fiscal File Bad Records
	FIELD 5	Fiscal File Good Records	INTEGER	Default	Fiscal File Good Records

8.2.56. Print fiscal report (Date to Date) [f]

This command prints Fiscal report from start Date to end Date.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	f	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"f/150213/160213/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'f' for this command.	
			FIELD 2	Start Date	DATE6	Fixed, 6 digits	The start date of report.	
			FIELD 3	End Date	DATE6	Fixed, 6 digits	The end date of report.	
			FIELD 4	Type of printing report	INTEGER	0-1 Digit	Print detailed (1) or summary (0) fiscal report.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.57. Print fiscal report (Z to Z) [z]

This command prints Fiscal report from start Z number to end Z number.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	Z	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"z/155/166/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'z' for this command.	
			FIELD 2	Start Z Number	INTEGER	1 - 4 digits	The start Z number of report.	
			FIELD 3	End Z Number	INTEGER	1 - 4 digits	The end Z number of report.	
			FIELD 4	Type of printing report	INTEGER	0-1 Digit	Print detailed (1) or summary (0) fiscal report.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.58. Get Last LCD Data[()]

This command is used to read the current LCD data.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	(	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"(/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '(' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	5 (6) (Counting reply code, status & checksum)	1 (2) (Without reply code, status & checksum)		Reply the following fields for each Fiscal File (reply code)(status) ">ΠΩΛΗΣΕΙΣ / /" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	1 st Current LCD Line Data	STRING	0-16 chars	1 st Current LCD Line Data		
		FIELD 2	2 nd Current LCD Line Data	STRING	0-16 chars	2 nd Current LCD Line Data		

8.2.59. Set Pressed Key [)]

This command is used to simulate the press of a key.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	)	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		")/118/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be ')' for this command.	
			FIELD 2	Key code	INTEGER	Default	99999: Return to sales from menu, else the code of a key function, look at command [G] for the list of supported function codes.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.60. No send to LCD [W]

This command is used to disable the show in LCD until the end of a receipt or press key.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	W	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"W/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'W' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.61. Calculate Subtotal [U]

This command calculates the current subtotal which is displayed on LCD.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	U	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"U/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'U' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.62. Set active clerk [1]

This command sets current active clerk.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	1	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"1/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '1' for this command.	
			FIELD 2	Clerk number	INTEGER	Default	The number of new clerk.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.63. Print SD report [@]

This command will print SD reports.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	@	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		@/1/2/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '@' for this command.	
			FIELD 2	Start Receipt Number	INTEGER	0 - 5 digits	Receipt Number to start report	
			FIELD 3	End Receipt Number	INTEGER	0 - 5 digits	Receipt Number to end report	
			FIELD 4	Set Output	INTEGER	0 - 1 digits	0: Print Report 1: Send Report in serial port	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.64. Program Ticket [*]

This command is used to program a ticket into the ECR/POS.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	*	6 (Counting request code & checksum fields)	4 (Without request code & checksum fields)		"/1/TICKET_1/1.00/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '*' for this command.	
			FIELD 2	Ticket index	INTEGER	1-2 digits	The Ticket number (index) to program	
			FIELD 3	Ticket description	STRING	0-15 chars	The Ticket description printed in receipts	
			FIELD 4	Ticket amount	AMOUNT	Default	The Ticket amount.	
			FIELD 5	Ticket active	INTEGER	0-1 digit	0: Inactive Ticket 1: Active Ticket	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.65. Read information for daily sold PLU [k]

This command will return all information about a programmed PLU in which there are daily sales. When there are no more PLUs with daily sales the command return an Error.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	k	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"k/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'k' for this command.	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	16 (Counting reply code, status & checksum)	12 (Without reply code, status & checksum)		reply code)(status) "123456789012345/TEST_101 /001/101/40.00/30.00/100.00/0/999999.000/ 1.000/1.00/1001100/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	PLU search code (Barcode number)	STRING	Fixed, 15 chars	The search key for this PLU		
		FIELD 2	PLU description	STRING	Fixed, 20 chars	The description of this PLU		
		FIELD 3	PLU department	INTEGER	Default	The department number holding this PLU		
		FIELD 4	PLU index	INTEGER	Default	PLU index		

	FIELD 5	PLU price 1	AMOUNT	Default	The 1 st price for this PLU
	FIELD 6	PLU price 2	AMOUNT	Default	The 2 nd price for this PLU
	FIELD 7	PLU maximum price	AMOUNT	Default	The maximum valid price for this PLU
	FIELD 8	PLU points	INTEGER	Default	The points for this PLU
	FIELD 9	PLU current stock	QTY	Default	The current stock available for this PLU
	FIELD 10	PLU sold quantity	QTY	Default	The current sold quantity of this PLU
	FIELD 11	PLU total sales	AMOUNT	Default	The current PLU total sales
	FIELD 12	PLU settings	FLAGS	Fixed, 8 digits	The flag settings for PLU parameters are mapped as follows (left to right) (1:YES and 0:NO): 1st= Item is available for sales 2nd= Item will close receipt 3rd= Print double height 4th= Item has open price 5th= Fixed price (1:FIXED PRICE 2, 0:FIXED PRICE 1) 6th= Sale as a unit quantity 7th= Print PLU's department

8.2.66. General Read [,]

This command is used to:

- Read the programmable Ethernet settings*
- Read the programmable GSIS settings*
- Read the programmable retrieval of client information settings*
- Read the programmable EFTPOS settings*
- Read additional Vat Rates categories*
- Print Fee/Other Tax categories*
- Read Battery Power Save Mode*
- Cloud check for available FW upgrade*

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUESTS			
	,	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)	",/0/" (checksum) ",/3/" (checksum) ",/6/" (checksum) ",/11/1/" (checksum) ",/16/1/" (checksum) ",/17/0/" (checksum) ",/17/1/" (checksum) ",/20/" (checksum) ",/60/" (checksum)			
			DESCRIPTION	TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be ',' for this command.
			FIELD 2	Integer General Field	INTEGER	1-2 digits	Type: 0: Read Ethernet settings 3: Read GSIS settings

				6: Read settings of retrieval of client information 11: Read EFTPOS settings 16: Read additional Vat Rates categories 17: Print Fee/Other Tax categories 20: Read Battery Power Save Mode 60: Check if exists services activation from Cloud
FIELD 3	Index	INTEGER	1 digit	Type: 11: Index of EFTPOS to read the settings. 16: Index of additional Vat Rate category 17: 0 = Print Fee categories 1 = Print Other Tax categories

TYPE 0 (Read Ethernet settings)

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY			
	17 (Counting reply code, status & checksum)	13 (Without reply code, status & checksum)	(reply code) (status) "0/0/99.100.100.103 /0.0.0.0 /9101/99.100.100.5 /99.100.100.5 /192.168.0.1 /255.255.255.0 /0/30/0/5/" (checksum)			
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	DHCP state	INTEGER	1 digit	0: Disabled 1: Enabled
		FIELD 2	UDP or TCP	INTEGER	1 digit	0: UDP 1: TCP

	FIELD 3	IP address	STRING	up to 15 chars	Ethernet static IP address
	FIELD 4	Remote IP address	STRING	up to 15 chars	Ethernet remote IP address
	FIELD 5	Port Number	INTEGER	1-5 digits	Port Number
	FIELD 6	Gateway	STRING	up to 15 chars	Ethernet Gateway
	FIELD 7	DNS 1	STRING	up to 15 chars	Ethernet DNS 1
	FIELD 8	DNS 2	STRING	up to 15 chars	Ethernet DNS 2
	FIELD 9	MASK	STRING	up to 15 chars	Ethernet MASK
	FIELD 10	Watchdog Timer	INTEGER	Default	1 = Enabled, 0: Disabled Ethernet Inactivity Watchdog Timer
	FIELD 11	Watchdog Time	INTEGER	Default	Inactivity Watchdog Time
	FIELD 12	Watchdog Timer action	INTEGER	Default	1 = Close Open Receipt, 0: Cancel Open Receipt when watchdog is enabled and timeout
	FIELD 13	Delay Time	INTEGER	Default	Delay Time after each Ethernet receipt (only for different IPs)

TYPE 3 (Read GSIS settings)

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	11 (Counting reply code,	7 (Without reply code, status & checksum)	(reply code) (status)

		FIELD 3	AADE Service Password	STRING	up to 20 chars	AADE Service Password
TYPE 11 (Read EFTPOS settings)						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	23 (Counting reply code, status & checksum)	19 (Without reply code, status & checksum)		(reply code)(status) "0/0.0.0 /4000/EFTPOS- 1//180/0/0110000000000000000/0///1111110000////////0/0/" (checksum)		
			DESCRIPTION	TYPE	LENGTH	NOTES
			FIELD 1 EFTPOS Enable	INTEGER	1 digit	0: Disabled 1: Enabled
			FIELD 2 Ip address	STRING	up to 15 chars	IP address
			FIELD 3 TCP Port Number	INTEGER	1-5 digits	Communication TCP Port number
			FIELD 4 Description	STRING	up to 10 chars	Description of EFTPOS
			FIELD 5 Protocol Variant	INTEGER	1 digit	1:VAR-1, 2:VAR-2
			FIELD 6 Transaction Timeout	INTEGER	1-3 digits	Transaction Timeout
			FIELD 7 Main Bitmap Index	INTEGER	1 digit	Index of Main Bitmap printed in case of Protocol Variant 2
			FIELD 8 Payment types assignment	STRING	20 chars	20 flags (0 or 1) indicating the usage of each payment with current EFTPOS
			FIELD 9 Enable Middleware	INTEGER	1 digit	0: Disabled 1: Enabled
			FIELD 10 Middleware Acquire ID	STRING	0-3 chars	Acquire ID to connect via middleware
			FIELD 11 Middleware EFTPOS TID	STRING	1-8 chars	EFTPOS TID to connect via middleware

	FIELD 12	Active Transactions	STRING	10 chars	10 flags (0 or 1) indicating if the transaction type is active Transaction Types: 1 = Purchase 2 = Instalments Purchase 3 = Preauth-completion 4 = Mail Order 5 = Void 6 = Return 7-10 = Reserved
	FIELD 13	2 nd Bitmap Index	INTEGER	1 digit	Index of 2 nd Bitmap printed in case of Protocol Variant 2
	FIELD 14	3 rd Bitmap Index	INTEGER	1 digit	Index of 3 rd Bitmap printed in case of Protocol Variant 2
	FIELD 15	4 th Bitmap Index	INTEGER	1 digit	Index of 4 th Bitmap printed in case of Protocol Variant 2
	FIELD 16	5 th Bitmap Index	INTEGER	1 digit	Index of 5 th Bitmap printed in case of Protocol Variant 2
	FIELD 17	6 th Bitmap Index	INTEGER	1 digit	Index of 6 th Bitmap printed in case of Protocol Variant 2
	FIELD 18	EFTPOS 11 DIGITS ECR-ID	INTEGER	1 digit	11 DIGITS ECR-ID 0: EFTPOS reply in RESEND-ALL with 1 '0' in ECR-ID ('R') field when receive POSTXN record 1: EFTPOS reply in RESEND-ALL with 11 '0' in ECR-ID ('R') field when receive POSTXN record
	FIELD 19	Custom Data	INTEGER	1 digit	Custom Data in Amount command

					0 = send always M0 1 = send MCARD or MIRIS	
TYPE 16 (Read additional Vat Rates categories)						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	7 (Counting reply code, status & checksum)	3 (Without reply code, status & checksum)		(reply code) (status) "1/17.00/MEIQMEN0 ΦΠΑ17%/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Vat Rate Enable	INTEGER	1 digit	0: Disabled 1: Enabled
		FIELD 2	Vat Rate	STRING	Default	Vat Rate
		FIELD 3	Description	STRING	1-15 chars	Description
TYPE 20 (Read Battery Power Save Mode)						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)		(reply code) (status) "1/10/0/5/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Power Save Mode	INTEGER	1 digit	0 = Power Down 1 = Sleep 2 = Always On
		FIELD 2	Power Down Seconds (From Power Down Mode)	INTEGER	1-2 digits	In case of Power Down mode, this is the seconds to power down the ECR

	FIELD 3	Power Down Seconds (From Sleep Mode)	INTEGER	1 digit	In case of Sleep mode 0=30min, 1=1hour to power down the ECR
	FIELD 4	LCD backlight off seconds	INTEGER	1-2 digits	LCD backlight off seconds (1-10)

CONFIDENTIAL

8.2.67. General Programming [\]

This command is used to:

- Program Ethernet settings*
- Init Plus database*
- Program the retrieval of client information settings*
- Program EFTPOS settings*
- Delete EFTPOS settings*
- Check connection with EFTPOS*
- Get ECR AES Key from GSIS*
- Send RESEND-ALL command to EFTPOS*
- Program Additional Vat Rates Categories*
- Program Battery Power Save mode*
- Insert services activation code*

	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST
REQUEST PACKET		20-22 (Counting request code & checksum fields)	18-20 (Without request code & checksum fields)	"\0/9100///192.168.0.10/0.0.0.0/192.168.0.1/192.168.0.1/8.8.8.8/255.255.255.0///1012212222/////" (checksum) "\3//////////300112/120000/0000000000/////////" (checksum) "\6/1///Username/Password/////////" (checksum) "\11/1/1/4000/180/192.168.0.100/EFTPOS-1/1/0/01100000000000000000///1111110000/0/0/0/0/0/0/0/" (checksum) "\12/1/////////" (checksum) "\13/1/////////" (checksum) "\14/2/3/////////" (checksum) "\15/1/////////" (checksum) "\16/1/1/1/17.00/MEIQMENO ΦΠΑ17%/////////" (checksum) "\20/1//0/5/////////" (checksum)

DESCRIPTION		TYPE	LENGTH	NOTES
FIELD 1	Request code	STRING	Fixed, 1 character	Must be '\\' for this command.
FIELD 2	Command Type	INTEGER	1-2 digits	Type: 0: Program Ethernet 3: Init Plus Database 6: Program the retrieval of client information 11: Program EFTPOS 12: Delete EFTPOS 13: Check EFTPOS connection 14: Get ECR AES Key from GSIS 15: Send RESEND-ALL command to EFTPOS 16: Program Additional VAT Rates categories 20: Program Battery Poer Save mode 21: Insert services activation code
FIELD 3	Integer General Field	INTEGER	Default	Type: 0: Set Port Number 3: Not Used 6: 1=Enable, 0=Disable 11,12,13,15: Index of EFTPOS 14: Number of first already issued Z to send just after get AES Key 16: Index of Additional Vat Rate Category 20: 0=Power Down, 1= Sleep, 2= Always On 21: Activation code
FIELD 4	Integer General Field	INTEGER	Default	Type:

				0: Inactivity Watchdog Time 11: 0=Disable, 1=Enable Local, 2=Enable Middleware EFTPOS 3,6,12,13,15: Not Used 14: Number of last already issued Z to send just after get AES Key 16: 1=Enable, 0=Disable Additional Vat Rate Category 20: In case of Power Down mode, this is the seconds to power down the ECR, in case of Sleep mode 0=30min, 1=1hour to power down the ECR 21: Not Used
FIELD 5	Integer General Field	INTEGER	Default	Type: 0: Delay Time after each Ethernet receipt (only for different IPs) 11: EFTPOS TCP Port 3,6,12,13,14,15: Not Used 16: Print All Additional Vat Rates Categories 20: LCD backlight off seconds (1-10) 21: Not Used
FIELD 6	String General Field	STRING	0-32 chars	Type: 0: Set IP address 6: Username (0-20 chars) of AADE service 11: EFTPOS Transaction Timeout (10-240 seconds) 3,12,13,14,15,20: Not Used 16: Additional Vat Rate 21: Not Used

FIELD 7	String General Field	STRING	0-32 chars	Type: 0: Set Remote IP address 6: Password (0-20 chars) of AADE service 11: EFTPOS IP Address 3,12,13,14,15,20: Not Used 16: Additional Vat Rate description 21: Not Used
FIELD 8	String General Field	STRING	0-32 chars	Type: 0: Set Gateway 11: EFTPOS Description (0-15 chars) 3,6,12,13,14,15,16,20,21: Not Used
FIELD 9	String General Field	STRING	0-32 chars	Type: 0: Set DNS 1 11: EFTPOS Protocol Variant 1=VAR-1, 2=VAR-2 3,6,12,13,14,15,16,20,21: Not Used
FIELD 10	String General Field	STRING	0-32 chars	Type: 0: Set DNS 2 11: EFTPOS Main Bitmap Index (used in case of Protocol VAR- 2) 3,6,12,13,14,15,16,20,21: Not Used
FIELD 11	String General Field	STRING	0-32 chars	Type: 0: Set MASK 11: 20 flags (0 or 1) indicating the usage of each payment with current EFTPOS 3,6,12,13,14,15,16,20,21: Not Used

FIELD 12	String General Field	STRING	0-6 chars	11: Middleware Acquire ID 0,3,6,12,13,14,15,16,20,21: Not Used
FIELD 13	String General Field	STRING	0-8 chars	11: Middleware EFTPOS TID 0,3,6,12,13,14,15,16,20,21: Not Used
FIELD 14	Flags Field	FLAGS	Fixed, 10 digits	Type: 0: 1 st ▶ 1 =Enable, 0: Disable Ethernet 2 nd ▶ 1 =Enable, 0: Disable DHCP 3 rd ▶ 1 = TCP, 0= UDP 4 th ▶ 1 = Enable, 0: Disable Ethernet Inactivity Watchdog Timer 5 th ▶ 1 = Close Open Receipt, 0: Cancel Open Receipt when watchdog is enabled and timeout 6 th ▶ 0 = N.A. 7 th ▶ 0 = N.A. 8 th ▶ 0 = N.A. 9 th ▶ 0 = N.A. 10 th ▶ 0 = N.A. 11: 1 st ▶ 1 =Enable, 0= Disable Purchase 2 nd ▶ 1 =Enable, 0= Disable Instalments Purchase 3 rd ▶ 1 =Enable, 0= Disable Preauth-completion 4 th ▶ 1 = Enable, 0= Disable Mail Order 5 th ▶ 1 = Enable, 0= Disable Void

				6 th ▶ 1 = Enable, 0= Disable Return 7 th ▶ 0 = N.A. 8 th ▶ 0 = N.A. 9 th ▶ 0 = N.A. 9 th ▶ 0 = N.A. 10 th ▶ 0 = N.A. 3, 6, 12, 13, 14, 15, 16, 20, 21: Not Used
FIELD 15	2 nd Bitmap Index	INTEGER	0-1 digit	Type: 11: Index of 2 nd Bitmap printed in case of Protocol Variant 2 0, 3, 6, 12, 13, 14, 15, 16, 20, 21: Not Used
FIELD 16	3 rd Bitmap Index	INTEGER	0-1 digit	Type: 11: Index of 3 rd Bitmap printed in case of Protocol Variant 2 0, 3, 6, 12, 13, 14, 15, 16, 20, 21: Not Used
FIELD 17	4 th Bitmap Index	INTEGER	0-1 digit	Type: 11: Index of 4 th Bitmap printed in case of Protocol Variant 2 0, 3, 6, 12, 13, 14, 15, 16, 20, 21: Not Used
FIELD 18	5 th Bitmap Index	INTEGER	0-1 digit	Type: 11: Index of 5 th Bitmap printed in case of Protocol Variant 2 0, 3, 6, 12, 13, 14, 15, 16, 20, 21: Not Used
FIELD 19	6 th Bitmap Index	INTEGER	0-1 digit	Type:

				11: Index of 6 th Bitmap printed in case of Protocol Variant 2 0,3,6,12,13,14,15,16,20,21: Not Used
FIELD 20	EFTPOS 11 DIGITS ECR-ID	INTEGER	0-1 digit	Type: 11: 11 DIGITS ECR-ID 0: EFTPOS reply in RESEND-ALL with 1 '0' in ECR-ID ('R') field when receive POSTXN record 1: EFTPOS reply in RESEND-ALL with 11 '0' in ECR-ID ('R') field when receive POSTXN record 0,3,6,12,13,14,15,16,20,21: Not Used
FIELD 21	Custom Data	INTEGER	0-1 digit	Type: 11: Custom Data in Amount command 0 = send always M0 1 = send MCARD or MIRIS 0,3,6,12,13,14,15,16,20,21: Not Used
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY	
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.	

8.2.68. Programming GSIS settings []]

Programming GSIS settings.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	]	9 (Counting request code & checksum fields)	7 (Without request code & checksum fields)		"]/1///http:~tam.gsis.gr~eafds~myweb~websend.php/80//http s:~wwwl.gsis.gr~tameiakes~myweb~ql.php/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be ']' for this command.	
			FIELD 2	GSIS Send active	INTEGER	0-1 digit	0: Enable GSIS send 1: Disable GSIS send	
			FIELD 3	Reserved	INTEGER	Default	Not Used	
			FIELD 4	Reserved	INTEGER	Default	Not Used	
			FIELD 5	GSIS Server	STRING	1-80 chars	Server to send to GSIS (If send URL, must replace every '/' character with '~' character)	
			FIELD 6	GSIS Port	INTEGER	Default	Port to send data to GSIS	
			FIELD 7	AES Key	STRING	0-64 chars	The AES key for send to GSIS	
			FIELD 8	AADE QRCODE Server	STRING	1-80 chars	AADE Server to print in receipts QRCODE (If send URL, must replace every '/' character with '~' character)	

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

8.2.69. Program Bmp Position [~]

This command programs the position of Bmp.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	~	5 (Counting request code & checksum fields)	3 (Without request code & checksum fields)		"~/1/2/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '~' for this command.	
			FIELD 2	Bitmap Index	INTEGER	0 - 1 digits	The index of bitmap to setup	
			FIELD 3	Bitmap position	INTEGER	0 - 1 digits	0: top 1: bottom 2: disable bitmap	
			FIELD 4	Bitmap quality	INTEGER	0 - 1 digits	0: normal 1: double height	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.70. Read Bmp information [I]

This command reads all information about a programmed Bmp.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	I	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"I/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'I' for this command	
			FIELD 2	Bitmap Index	INTEGER	0 - 1 digits	The index of bitmap to read	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	7 (Counting reply code, status & checksum)	3 (Without reply code, status & checksum)		(reply code) (status) "1/0/1/" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Bitmap Index	INTEGER	0 - 1 digits	The index of bitmap to read		
		FIELD 2	Bitmap position	INTEGER	0 - 1 digits	0: top 1: bottom 2: disable bitmap		
		FIELD 3	Bitmap quality	INTEGER	0 - 1 digits	0: normal 1: double height		

8.2.71. Program start/end/in receipt/cash in-out comments [1]

This command programs the start/end/in receipt/cash in-out comments lines.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	1	22 (Counting request code & checksum fields)	20 (Without request code & checksum fields)		"1/0/2/text line 1/text line 2/////0/0/////1/0/////" (checksum) "1/1/1/text line 1/////0/////1///// " (checksum) "1/2/1/Room Number://///4/0/////////" (checksum) "1/3/1/CashIn-CashOut Descr./////4/////////" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '1' for this command	
			FIELD 2	Start/End Comments	INTEGER	1 digit	0: Program Start Comments 1: Program End Comments 2: Program In Receipt Comments 3: Program Cash In/Out Comments	
			FIELD 3	Active Comments Lines	INTEGER	1 digit	0: Active start comments lines (up to 6) 1: Active end comments lines (up to 3) 2: 0=Inactive, 1=Active in receipt comments lines 3: 0=Inactive, 1=Active cash in/out comments line	
			FIELD 4	Comments Line 1 (Type 0,1,2,3)	STRING	0-32 (0-16) chars	Text of comments line 1	

					Only 16 characters can be printed in case of double width characters
	FIELD 5	Comments Line 2 (Type 0,1,2)	STRING	0-32 (0-16) chars	Text of comments line 2 Only 16 characters can be printed in case of double width characters
	FIELD 6	Comments Line 3 (Type 0,1,2)	STRING	0-32 (0-16) chars	Text of comments line 3 Only 16 characters can be printed in case of double width characters
	FIELD 7	Comments Line 4 (Type 0,1)	STRING	0-32 (0-16) chars	Text of comments line 4 (only for start comments) Only 16 characters can be printed in case of double width characters
	FIELD 8	Comments Line 5 (Type 0,1)	STRING	0-32 (0-16) chars	Text of comments line 5 (only for start comments) Only 16 characters can be printed in case of double width characters
	FIELD 9	Comments Line 6 (Type 0,1)	STRING	0-32 (0-16) chars	Text of comments line 6 (only for start comments) Only 16 characters can be printed in case of double width characters
	FIELD 10	Printing type of 1 st Comment line (Type 0,1,2,3)	INTEGER	0-1 digits	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal

	FIELD 11	Printing type of 2 nd Comment line (Type 0,1,2)	INTEGER	0-1 digits	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 12	Printing type of 3 rd Comment line (Type 0,1,2)	INTEGER	0-1 digits	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 13	Printing type of 4 th Comment line (Type 0,1)	INTEGER	0-1 digits	(only for start comments) 1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 14	Printing type of 5 th Comment line (Type 0,1)	INTEGER	0-1 digits	(only for start comments) 1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 15	Printing type of 6 th Comment line (Type 0,1)	INTEGER	0-1 digits	(only for start comments) 1 = Normal printing 2 = Double height 3 = Double width

					4 = Double width and height 5 = Bold and normal
	FIELD 16	Predefined Line 1 (Type 0,1)	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 17	Predefined Line 2 (Type 0,1)	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 18	Predefined Line 3 (Type 0,1)	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 19	Predefined Line 4 (Type 0,1)	INTEGER	0-1 digit	(only for start comments) 1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 20	Predefined Line 5 (Type 0,1)	INTEGER	0-1 digit	(only for start comments) 1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 21	Predefined Line 6 (Type 0,1)	INTEGER	0-1 digit	(only for start comments) 1: Predefined comment line 0: Comment line can change at receipt time by user
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	4 (Counting reply code,	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		

	status & checksum)		
--	-----------------------	--	--

CONFIDENTIAL

8.2.72. Read start/end/in receipt/cash in-out comments [E]

This command reads the start/end/in receipt/cash in-out comments lines.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	E	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"E/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'E' for this command	
			FIELD 2	Comments Type	INTEGER	1 digit	0: Read Start Receipt Comments 1: Read End Receipt Comments 2: Read In Receipt Comments 3: Read Cash In/Out Comments	
TYPE 0-1								
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	23 (Counting reply code, status & checksum)	19 (Without reply code, status & checksum)		(reply code)(status) "0/Line 1/4/1/Line 2/4/1/Line 3/4/1/Line 4/0/0/Line 5/0/0/Line 6/0/0/"(checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Active Comments Lines	INTEGER	1 digit	0: Active start comments lines 1: Active end comments lines		
		FIELD 2	Comment Line 1	STRING	0-32	The text data for each line.		

				(0-16) chars	Only 16 characters can be printed in case of double width characters
	FIELD 3	Printing type of 1 st Comment line	INTEGER	0-1 digits	The printing type for each comment line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 4	Predefined Line 1	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 5	Comment Line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 6	Printing type of 2 nd Comment line	INTEGER	0-1 digits	0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 7	Predefined Line 2	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 8	Comment Line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters

	FIELD 9	Printing type of 3 rd Comment line	INTEGER	0-1 digits	0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 10	Predefined Line 3	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 11	Comment Line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 12	Printing type of 4 th Comment line	INTEGER	0-1 digits	0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 13	Predefined Line 4	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 14	Comment Line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 15	Printing type of 5 th Comment line	INTEGER	0-1 digits	0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height

					4 = Bold and normal
	FIELD 16	Predefined Line 5	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user
	FIELD 17	Comment Line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 18	Printing type of 6 th Comment line	INTEGER	0-1 digits	0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
	FIELD 19	Predefined Line 6	INTEGER	0-1 digit	1: Predefined comment line 0: Comment line can change at receipt time by user

TYPE 2-3

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY			
	7-11 (Counting reply code, status & checksum)	3-7 (Without reply code, status & checksum)	(reply code) (status) "1/Room: /0//0//0/" (checksum) "1/Cash In-Out Description/4/" (checksum)			
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Active Comments Lines	INTEGER	1 digit	0: Inactive comments 1: Active comments
		FIELD 2	Comment Line 1	STRING	0-32 (0-16) chars	The text data for each line.

					Only 16 characters can be printed in case of double width characters
FIELD 3	Printing type of 1 st Comment line	INTEGER	0-1 digits		The printing type for each comment line as: 0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
FIELD 4	Comment Line 2 (Type 2)	STRING	0-32 (0-16) chars		The text data for each line. Only 16 characters can be printed in case of double width characters
FIELD 5	Printing type of 2 nd Comment line (Type 2)	INTEGER	0-1 digits		0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal
FIELD 6	Comment Line 3 (Type 2)	STRING	0-32 (0-16) chars		The text data for each line. Only 16 characters can be printed in case of double width characters
FIELD 7	Printing type of 3 rd Comment line (Type 2)	INTEGER	0-1 digits		0 = Normal printing 1 = Double height 2 = Double width 3 = Double width and height 4 = Bold and normal

8.2.73. Set/Unset Online-protocol [n]

This command sets or unsets the Online protocol.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	n	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)		"n/0/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'n' for this command	
			FIELD 2	Active Online	INTEGER	1 digit	0: Disable Online protocol 1: Enable Online protocol	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.74. Read Fiscal Record [r]

This command reads the required record.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST			
	r	4 (Counting request code & checksum fields)	2 (Without request code & checksum fields)	"r/1/0001/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'r' for this command
			FIELD 2	Fiscal File Type	INTEGER	Fixed, 1 digit	Fiscal File Type: 0 - HEADER Changes 1 - CMOS ERROR 2 - TECHNICIAN INTERVENTION 3 - Flash Damage 4 - VAT Changes 5 - Z 6 - Signature 7 - Transfers 8 - ENABLE KEY 9 - TIN
			FIELD 3	Fiscal Record	INTEGER	4 digits	Record of Fiscal File to read

HEADER CHANGES						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	25 (Counting reply code, status & checksum)	21 (Without reply code, status & checksum)		(reply code) (status) "0/020114/165400/137/3/4/HEADER LINE 1 /2/AAAAAAAA /1/ BBBBBBBBB/////////" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of header change (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of header change (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z at change header time
		FIELD 5	Header Lines	INTEGER	1-2 digits	Number of active header lines
		FIELD 6	Printing Type of Header line 1	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
		FIELD 7	Header line 1	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
		FIELD 8	Printing Type of Header line 2	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height

					5 = Bold and normal
FIELD 9	Header line 2	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 10	Printing Type of Header line 3	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal	
FIELD 11	Header line 3	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 12	Printing Type of Header line 4	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal	
FIELD 13	Header line 4	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 14	Printing Type of Header line 5	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal	
FIELD 15	Header line 5	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters	
FIELD 16	Printing Type of Header line 6	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width	

					4 = Double width and height 5 = Bold and normal
	FIELD 17	Header line 6	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 18	Printing Type of Header line 7	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 19	Header line 7	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters
	FIELD 20	Printing Type of Header line 8	INTEGER	1 digit	1 = Normal printing 2 = Double height 3 = Double width 4 = Double width and height 5 = Bold and normal
	FIELD 21	Header line 8	STRING	0-32 (0-16) chars	The text data for each line. Only 16 characters can be printed in case of double width characters

CMOS ERROR						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)		(reply code) (status) "0/010112/100000/1/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of CMOS ERROR (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of CMOS ERROR (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z at CMOS ERROR time
TECHNICIAN INTERVENTION						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)		(reply code) (status) "0/010112/100000/1/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error

	FIELD 2	Date	DATE6	Fixed, 6 digits	Date of technician intervention (ddmmyy)
	FIELD 3	Time	TIME	Fixed, 6 digits	Time of technician intervention (hhmmss)
	FIELD 4	Z number	INTEGER	1-4 digits	The number of Z at technician intervention time
FLASH DAMAGE					
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)	(reply code) (status) "18" (checksum)		
	DESCRIPTION		TYPE	LENGTH	NOTES
	FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
	FIELD 2	Date	DATE6	Fixed, 6 digits	Date of flash damage (ddmmyy)
	FIELD 3	Time	TIME	Fixed, 6 digits	Time of flash damage (hhmmss)
	FIELD 4	Z number	INTEGER	1-4 digits	The number of Z at flash damage time

VAT CHANGES						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	13 (Counting reply code, status & checksum)	9 (Without reply code, status & checksum)		(reply code) (status) "0/231013/104900/8/1000/1300/2300/3600/0/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of vat change (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of vat change (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z at vat change time
		FIELD 5	VAT A	PERCENT	0-6 digits	The percentage of VAT A
		FIELD 6	VAT B	PERCENT	0-6 digits	The percentage of VAT B
		FIELD 7	VAT C	PERCENT	0-6 digits	The percentage of VAT C
		FIELD 8	VAT D	PERCENT	0-6 digits	The percentage of VAT D
		FIELD 9	VAT E	PERCENT	0-6 digits	The percentage of VAT E

Z						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	18 (Counting reply code, status & checksum)	14 (Without reply code, status & checksum)		(reply code) (status) "0/141013/174000/1/45/17.85/0.99/0.12/0.38/0.00/0.00/0/0/0/" (checksum)		
	DESCRIPTION		TYPE	LENGTH	NOTES	
	FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error	
	FIELD 2	Date	DATE6	Fixed, 6 digits	Date of Z (ddmmyy)	
	FIELD 3	Time	TIME	Fixed, 6 digits	Time of Z (hhmmss)	
	FIELD 4	Z number	INTEGER	1-4 digits	The number of Z	
	FIELD 5	Receipts Number	INTEGER	Default	Number of Receipts issued in Z	
	FIELD 6	ABCD total	AMOUNT	Default	Clear Total of ABCD Vats	
	FIELD 7	VAT A total	AMOUNT	Default	Total in VAT A	
	FIELD 8	VAT B total	AMOUNT	Default	Total in VAT B	
	FIELD 9	VAT C total	AMOUNT	Default	Total in VAT C	
	FIELD 10	VAT D total	AMOUNT	Default	Total in VAT D	
	FIELD 11	Sales E total	AMOUNT	Default	Total Sales in E	
	FIELD 12	FM disconnections	INTEGER	Default	Number of FM disconnections	
	FIELD 13	Printer disconnections	INTEGER	Default	Number of printer disconnections	
	FIELD 14	Not Used	INTEGER	Default	Not used	

SIGNATURES						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	10 (Counting reply code, status & checksum)	6 (Without reply code, status & checksum)		(reply code) (status) "0/141013/174000/1/C52C229065FECED203D4034477DCCB2351FF283A/86FD9FA2436B7DFFCA35ED8EB75BC8D4119EFBB6/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of signature (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of signature (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z for this signature
		FIELD 5	Signature _C	STRING	40 chars	Daily _c signature
		FIELD 6	Signature _d	STRING	40 chars	Daily _d signature

TRANSFERS						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	9 (Counting reply code, status & checksum)	5 (Without reply code, status & checksum)		(reply code) (status) "0/141013/174500/1/1/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of Z transfer (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of Z transfer (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z for this transfer
		FIELD 5	Successful Transfer	INTEGER	1 digit	0: Successful transfer 1: Unsuccessful transfer

ENABLE KEY						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)	4 (Without reply code, status & checksum)		(reply code) (status) "18/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of activation services with key (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of activation services with key (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z for activation services
		FIELD 5	AES Key	STRING	32 chars	AES Key for activate services

TIN						
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY		
	9 (Counting reply code, status & checksum)	5 (Without reply code, status & checksum)		(reply code) (status) "0/030114/142200/42/123456789/" (checksum)		
		DESCRIPTION		TYPE	LENGTH	NOTES
		FIELD 1	Read Error	INTEGER	Fixed, 1-2 digits range 0-21	0: Read ok 1-21: Read Record Error
		FIELD 2	Date	DATE6	Fixed, 6 digits	Date of TIN register (ddmmyy)
		FIELD 3	Time	TIME	Fixed, 6 digits	Time of TIN register (hhmmss)
		FIELD 4	Z number	INTEGER	1-4 digits	The number of Z for TIN register
		FIELD 5	Tax Identification Number	STRING	9 chars	Tax Identification Number of machine owner

8.2.75. Sale of a coupon [Z]

This command sells a coupon.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	Z	6 (Counting request code & checksum fields)	4 (Without request code & checksum fields)		"Z/1.00/2.00/coupon/123456789012345/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'Z' for this command	
			FIELD 2	Number of coupons	QTY	Default	Number of this coupon	
			FIELD 3	Coupon Amount	AMOUNT	Default	Discount Amount of coupon	
			FIELD 4	Coupon Description	STRING	0-15 chars	Description of coupon	
			FIELD 5	Coupon Barcode	STRING	0-15 chars	The barcode of coupon	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.				

8.2.76. Receipt Counter [X]

This command reply the daily receipts counters.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	X	2 (Counting request code & checksum fields)	0 (Without request code & checksum fields)		"X/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be 'X' for this command	
REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REPLY				
	10 (Counting reply code, status & checksum)	6 (Without reply code, status & checksum)		(reply code) (status) "0/5/5/1/1/3" (checksum)				
		DESCRIPTION		TYPE	LENGTH	NOTES		
		FIELD 1	Receipt Status	INTEGER	Default	0: Clos Receipt 1: Open Receipt		
		FIELD 2	Daily Legal Receipts	INTEGER	Default	The number of daily legal receipts.		
		FIELD 3	Daily Illegal Receipts	INTEGER	Default	The number of daily illegal receipts.		

FIELD 4	Daily Temporary Receipts (Restaurant ECRs)	INTEGER	Default	The number of daily temporary receipts. (Only in Restaurant ECRs)
FIELD 5	Last temporary receipt table number (Restaurant ECRs)	INTEGER	Default	The number of table of last temporary receipt
FIELD 6	Last temporary receipt table order number (Restaurant ECRs)	INTEGER	Default	The number of order of table of last temporary receipt

8.2.77. Services Activation [>]

This command programs key in order to activate extra services.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST			
	>	3 (Counting request code & checksum fields)	1 (Without request code & checksum fields)	>/0123456789ABCDEF0123456789ABCDEF" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '>' for this command.
			FIELD 2	Key	STRING	Fixed, 32 chars	The activation key.
REPLY PACKET	TOTAL FIELD COUNT		DATA FIELD COUNT	EXAMPLE REPLY			
	4 (Counting reply code, status & checksum)		0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.			

8.2.78. Set/Get Invoice's Parameters [;]

This command set/get invoices parameters.

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	;	7 (Counting request code & checksum fields)	5 (Without request code & checksum fields)		";/0/A/0/0/1/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be ';' for this command	
			FIELD 2	Set or Get	INTEGER	0-1 digit	0: Set Invoice's Parameters 1: Get Invoice's Parameters	
			FIELD 3	Invoice Row	STRING	0-10 chars	Invoice Row *** When new row is different than saved and there are issued invoices, the command first call returns warning error 0x98 and must be resend the same command for confirmation.	
			FIELD 4	Type of invoice's amount	INTEGER	0-1 digit	0: inserted amounts included vat amount 1: inserted amounts without vat amount	
			FIELD 5	Keyboard type in quick insert new client	INTEGER	0-1 digit	0: Default 1: Invoices keyboard	

	FIELD 6	Invoice Type	INTEGER	0-1 digit	Type of myDATA Invoice to be programmed: 1 = Products Sales Invoice 2 = Merchandises Sales Invoice 3 = Services Provision Invoice 4 = Products Credit Invoice 5 = Merchandises Credit Invoice 6 = Services Provision Credit Invoice 7 = Accommodation Tax Invoice 8 = Accommodation Services Receipt
--	----------------	--------------	---------	-----------	--

Set Invoice's parameters:

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.

Get invoice's parameters:						
REPLY PACKET	__TOTAL FIELD COUNT	__DATA FIELD COUNT		__EXAMPLE REPLY		
	7 (Counting reply code, status & checksum)	3 (Without reply code, status & checksum)		(reply code) (status) "A/1/1" (checksum)		
		__DESCRIPTION		__TYPE	__LENGTH	__NOTES
		__FIELD 1	INVOICE ROW	STRING	Up to 10 chars	INVOICE ROW
		__FIELD 2	Type of invoice's amount	INTEGER	1 DIGIT	0: inserted amounts included vat amount 1: inserted amounts without vat amount
		__FIELD 3	Keyboard type in quick insert new client	INTEGER	1 DIGIT	0: Default 1: Invoices keyboard

8.2.79. Set/Get Tables ["]

2317B This command set/get tables parameters (only for restaurant ECRs).

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT		EXAMPLE REQUEST			
	"	7 (Counting request code & checksum fields)	5 (Without request code & checksum fields)		"/0/10/1/TABLE-10/" (checksum)			
			DESCRIPTION		TYPE	LENGTH	NOTES	
			FIELD 1	Request code	STRING	Fixed, 1 character	Must be '"' for this command	
			FIELD 2	Set or Get	INTEGER	1 digit	0: Set Table Parameters 1: Get Table Parameters	
			FIELD 3	Table Index	INTEGER	0-3 digits	Index of Table	
			FIELD 4	Active	INTEGER	0-1 digit	0: inactive 1: active	
			FIELD 5	Description	STRING	0-20 chars	Table description	
			FIELD 6	Comments	STRING	0-32 chars	Comments line to print in receipt	

Set Table parameters:							
_REPLY PACKET	_TOTAL FIELD COUNT		_DATA FIELD COUNT		_EXAMPLE REPLY		
	4 (Counting reply code, status & checksum)		0 (Without reply code, status & checksum)		This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.		
Get Table parameters:							
_REPLY PACKET	_TOTAL FIELD COUNT		_DATA FIELD COUNT		_EXAMPLE REPLY		
	8 (Counting reply code, status & checksum)		4 (Without reply code, status & checksum)		(reply code)(status) "10/1/TABLE-10 //" (checksum)		
			_DESCRIPTION		_TYPE	_LENGTH	_NOTES
			_FIELD 1	Table Index	INTEGER	1-3 DIGITS	Index of Table
			_FIELD 2	Active	INTEGER	1 DIGIT	0: inactive 1: active
			_FIELD 3	Description	STRING	Up to 20 chars	Table description
			_FIELD 4	Comments	STRING	Up to 32 chars	Comments line to print in receipt

8.2.80. Table Open/Close/Return/Transfer/Report [&]

2318B This command allows to open or re-open a table for transactions, close a table with receipt or invoice, start a return transaction in a table, transfer transactions (whole or partial) from one table to another and print report of open tables. (only for restaurant ECRs).

REQUEST PACKET	REQUEST CODE	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REQUEST
	&	17 (Counting request code & checksum fields)	15 (Without request code & checksum fields)	"&/0/1/////////" (checksum) "&/1/1/0/////////" (checksum) "&/1/1/1/////////" (checksum) "&/3/1/0/1/////////" (checksum) "&/3/1/1/1/026883248/2/////////" (checksum) "&/4/1/2/0/////////" (checksum) "&/4/1/2/0/1/////////" (checksum) "&/4/1/2/1/////////" (checksum) "&/5/1/////////" (checksum) "&/5/1/1/0/65538/////////" (checksum) "&/8/1/2/////////" (checksum) "&/9/1/2/65537/////////" (checksum) "&/9/1/2/0/////////" (checksum) "&/10/1/2/////////" (checksum) "&/11/1/0/0/////////" (checksum) "&/11/1/0/1/1/1/////////" (checksum) "&/12/1/////////" (checksum) "&/13/1/////////" (checksum) "&/14/0/////////" (checksum) "&/15/0/////////" (checksum)

DESCRIPTION		TYPE	LENGTH	NOTES
FIELD 1	Request code	STRING	Fixed, 1 character	Must be '&' for this command
FIELD 2	Type	INTEGER	1-2 digits	0: Open table 1: Start closure procedure for an open table 3: Final close of an open table 4: Start Transfer (Whole or Partial) transactions between tables 5: Start (check if allowed) a return transaction in an open table 8: When in partial transfer between tables, read available lines for selection. 9: When in partial transfer between tables, select already read available lines for transfer. 10: Report of open tables 11: Read open table orders/transaction lines 12: Check if table closure completed 13: Read open table status, orders number and total 14: Close all open tables with cash 15: Unselect open table (No sales yet)

	FIELD 3	Table number	INTEGER	1-3 digits	0: Number of table to open 1: Number of table to close 3: Number of table to close 4: Number of source table 5: Number of open table 8: Number of source table 9: Number of source table 10: Report start table number 11: Number of table 12: Number of table 13: Number of table 14: Fixed '0' 15: Fixed '0'
	FIELD 4	Integer General Field	INTEGER	0-3 digits	0,1,3,8,11,12,14,15: Not used 4: Number of destination table 5: Order number for return an item or whole order 9: Number of destination table 10: Report end table number 13: Last number of table to read, if this field is equal to 999, then return information only for all open tables (optional field) 14: 1=Print 0=Do not print report of open tables, before close tables
	FIELD 5	Integer General Field	INTEGER	0-8 digits	0,8,10,12,13,14,15: Not used

					1: Type of document 0=Receipt, 1=Invoice 3: Type of document 0=Receipt, 1=Invoice 4: Type of transfer, 0=Whole, 1=Partial 5: Type of Return, 0=Item, 1=Order, 2=Table 9: Id of transaction line to transfer (already read it with previous command) 10: Type of report, 0=Short, 1=Analytical 11: Read Type, 0=Start read a table, 1=Read next lines of table
	FIELD 6	Integer General Field	INTEGER	0-2 digits	0,1,8,9,10,12,13,14,15: Not used 3: Payment Index (1-20) 4: 1=Reply IDs and order numbers related to transferred lines (Reply this information at the end of transfer) 5: ID of line to be returned (optional field to do return only with line ID without send 3/C command) 11: Type of report, 0=Short (only orders totals), 1=Analytical (all transaction lines and orders totals)
	FIELD 7	String General Field	STRING	0-9 chars	0,1,4,5,8,9,10,11,12,13,14,15: Not used 3: Client TIN for Invoice

FIELD 8	Integer General Field	INTEGER	0-1 digit	0,4,5,8,9,10,12,13,14,15: Not used 1: Index of Discount on table total (Index 1-10, 1=Discount Amount, 2=Discount Percentage) 3: Invoice Type. Must be 2 (Allowed only Merchandises) 11: 1=Reply also ID of each line
FIELD 9	Integer General Field	INTEGER	0-1 digit	Reserved
FIELD 10	Integer General Field	INTEGER	0-3 digits	Reserved
FIELD 11	Integer General Field	INTEGER	0-1 digit	Reserved
FIELD 12	String General Field	STRING	0-40 chars	Reserved
FIELD 13	Amount General Field	AMOUNT	Default	0,4,5,8,9,10,11,12,13,14,15: Not used 1: Discount Amount/Percentage on table total 3: Payment amount
FIELD 14	String General Field	STRING	0-15 chars	0,1,4,5,8,9,10,11,12,13,14,15: Not used 3: Payment description
FIELD 15	Integer General Field	INTEGER	0-2 digits	0,1,4,5,8,9,10,11,12,13,14,15: Not used 3: EFTPOS Index
FIELD 16	Integer General Field	INTEGER	0-1 digit	0,1,4,5,8,9,10,11,12,13,14,15: Not used

					3: EFTPOS transaction type 1=Sale 2=Sale with instalments 3=Pre-approval registration 4=Mail order 5=Pending (REGRECEIPT)	
Open table, Start closure of a table, Final close of a table, Start transfer, Start return, Select line for transfer, Report of open tables:						
REPLY PACKET	__TOTAL FIELD COUNT	__DATA FIELD COUNT	__EXAMPLE REPLY			
	4 (Counting reply code, status & checksum)	0 (Without reply code, status & checksum)	This command's reply packet does not contain additional information; only 1 field of reply code and 2 fields of status and checksum.			
Read available transaction lines for transfer:						
REPLY PACKET	__TOTAL FIELD COUNT	__DATA FIELD COUNT	__EXAMPLE REPLY			
	6 (Counting reply code, status & checksum)	2 (Without reply code, status & checksum)	(reply code) (status) "65537/ITEM1 10.00/" (checksum)			
		__DESCRIPTION		__TYPE	__LENGTH	__NOTES
		__FIELD 1	Transaction line ID	INTEGER	1-3 DIGITS	ID of available for transfer transaction line. Use this ID to select this line for transfer.
		__FIELD 2	Transaction line Description	STRING	1-15 chars	Description of available for transfer transaction line.
Read open table orders/transaction lines:						

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY			
	5+n (Counting reply code, status & checksum) Where n=number of reply records (transaction lines/orders totals)	1+n (Without reply code, status & checksum)	(reply code)(status) Example of reply when short type requested: "0/1 1 9 2 11.00 /2 2 9 1 1.00 /3 3 9 2 1.00 /" (checksum) Example of reply when analytical type requested: "0/1 1 0 1 1.00 TMHMA-01/1 1 0 1 10.00 TMHMA-02/1 1 9 2 11.00 /2 2 0 1 1.00 TMHMA-03/2 2 9 1 1.00 /3 3 0 1 0.02 TMHMA-04/3 3 0 1 0.98 TMHMA-05/3 3 9 2 1.00 /" (checksum) Example of reply when analytical type requested and need 2 reads: 1 ST REPLY 1/1 1 0 1 1.00 TMHMA-01/1 1 0 1 10.00 TMHMA-01/1 1 9 2 11.00 /2 2 0 1 1.00 TMHMA-01/2 2 9 1 1.00 /3 3 0 1 0.02 TMHMA-01/3 3 0 1 0.98 TMHMA-01/3 3 9 2 1.00 /4 4 0 1 1.00 TMHMA-01/4 4 0 1 2.00 TMHMA-02/4 4 0 1 3.00 TMHMA-03/4 4 0 1 4.00 TMHMA-04/4 4 0 1 5.00 TMHMA-05/4 4 9 5 15.00 /5 5 0 1 10.00 TMHMA-01/5 5 0 1 20.00 TMHMA-02/5 5 0 1 30.00 TMHMA-03/5 5 0 1 40.00 TMHMA-04/5 5 0 1 50.00 TMHMA-05/5 5 9 5 150.00 /6 6 0 1 0.01 TMHMA-01/6 6 0 1 0.02 TMHMA-01/6 6 0 1 0.03 TMHMA-01/6 6 0 1 0.04 TMHMA-01/6 6 0 1 0.05 TMHMA-01/6 6 0 1 0.06 TMHMA-01/6 6 0 1 0.07 TMHMA-01/6 6 0 1 0.08 TMHMA-01/6 6 0 1 0.09 T/ 2 ND REPLY 0/MHMA-01/6 6 0 1 0.10 TMHMA-05/6 6 0 1 0.11 TMHMA-01/6 6 0 1 0.12 TMHMA-01/6 6 0 1 0.13 TMHMA-01/6 6 0 1 0.14 TMHMA-01/6 6 0 1 0.15 TMHMA-01/6 6 0 1 0.16 TMHMA-01/6 6 0 1 0.17 TMHMA-01/6 6 0 1 0.18 TMHMA-01/6 6 0 1 0.19 TMHMA-01/6 6 0 1 0.20 TMHMA-01/6 6 9 20 2.10 / Example of reply when analytical type with IDS requested: 0/1 10 0 1 1.00 TMHMA-01 655361/1 10 0 1 2.00 TMHMA-02 655362/1 10 9 2 3.00			
			DESCRIPTION	TYPE	LENGTH	NOTES

	FIELD 1	Status	INTEGER	1 DIGIT	Status: 0=Read records in one packet or this is the last packet 1=Read records but exists more to read (call CMD again with Read Type = 1) 2=No more packets
	FIELD 2-n	Records	STRING	1-600 chars	Records of orders/transaction lines Record Format: Order Number Temporary Receipt Number Record Type Quantity Amount Description Where Record Type: 0=Sale Transaction 1=Return Transaction 9=Order Totals Note: When you need to read more than one packet to get all records of requested table, you must wait to complete the read of all packets before to parse records.

Read open table status, orders number and total:

REPLY PACKET	TOTAL FIELD COUNT	DATA FIELD COUNT	EXAMPLE REPLY
	7 (Counting reply code,	3 (Without reply code, status & checksum)	(reply code) (status) "1/2/150.00/" (checksum)

	status & checksum)					
		_DESCRIPTION		_TYPE	_LENGTH	_NOTES
		_FIELD 1	Table status	INTEGER	1 digit	Status of table: 0=Close 1=Open
		_FIELD 2	Table orders	INTEGER	1-3 digits	Number of orders in table.
		_FIELD 2	Table total	AMOUNT	Default	Total amount of table.
Check if table closure completed:						
_REPLY PACKET	_TOTAL FIELD COUNT	_DATA FIELD COUNT	_EXAMPLE REPLY			
	5 (Counting reply code, status & checksum)	1 (Without reply code, status & checksum)	(reply code) (status) "50.00/" (checksum)			
		_DESCRIPTION		_TYPE	_LENGTH	_NOTES
		_FIELD 1	Table remaining payment total	AMOUNT	Default	Total amount of table, remaining for payment.
Start transfer (whole table transfer), Select line for transfer (end of partial table transfer):						
_REPLY PACKET	_TOTAL FIELD COUNT	_DATA FIELD COUNT	_EXAMPLE REPLY			
	5+n (Counting reply code, status & checksum) Where n=number of reply records (transaction lines)	1+n (Without reply code, status & checksum)	(reply code) (status) "0/1572866-1 1703937-1/" (checksum)			
		_DESCRIPTION		_TYPE	_LENGTH	_NOTES

_FIELD 1	Status	INTEGER	1 digit	Status: 0=Read records of transferred lines
_FIELD 2	Data of transferred lines	STRING	1-1000 BYTES	Record Format: Source table line ID-Source table Order Number Destination table new line ID-Destination table new Order Number

8.3. Command Protocol ERRORS

ERR - 1	The protocol command expects more fields
ERR - 2	A protocol command field is longer than expected
ERR - 3	A protocol command field is smaller than expected
ERR - 4	Check the protocol command fields
ERR - 5	Check the protocol command fields
ERR - 6	The protocol command is not supported
ERR - 7	The PLU code doesn't exist
ERR - 8	The DPT Code doesn't exist
ERR - 9	Wrong VAT code
ERR - 10	The Clerk's index number doesn't exist
ERR - 11	Wrong Clerk's password
ERR - 12	The payment code doesn't exist
ERR - 13	The requested Fiscal record doesn't exist
ERR - 14	The requested Fiscal record type doesn't exist
ERR - 15	Printing type Error
ERR - 16	The day is open, issue a Z- Report first
ERR - 17	Disconnect Jumpers first
ERR - 18	Wrong TIME, not allowed operation
ERR - 19	CAN NOT PERFORM SALES
ERR - 20	A transaction is open, close the transaction first
ERR - 21	Receipt in Payment
ERR - 22	CASH IN/OUT transaction in progress
ERR - 23	Wrong VAT rate

ERR - 24	Price Error
ERR - 25	The online communication of the ECR is ON
ERR - 26	The ECR is busy, try again later
ERR - 27	Invalid sales operation
ERR - 28	Invalid Discount/Markup type
ERR - 29	No more headers can be programmed
ERR - 30	A user's report is open
ERR - 31	A user's report is open
ERR - 32	The Fiscal Memory has no transactions
ERR - 33	Discount/Markup index number Error
ERR - 34	You can't program any more PLUs
ERR - 35	Error in BMP Data
ERR - 36	The BMP index number doesn't exist
ERR - 37	The category index number doesn't exist
ERR - 38	Printer ID index Error
ERR - 39	Error printing type
ERR - 40	Unit ID index Error
ERR - 41	No more sales can be performed
ERR - 42	Keyboard Error-or keyboard disconnected
ERR - 43	Battery Error.
ERR - 44	Paper end.
ERR - 45	Error with the cutter.
ERR - 46	The printer is disconnected.

ERR - 47	Printer overheated.
ERR - 48	The fiscal memory is offline.
ERR - 49	Fatal Error.
ERR - 50	Jumpers are still ON.
ERR - 51	The printer's cover is open.
ERR - 52	No more VATs can be programmed
ERR - 53	No more lines.
ERR - 54	Into Menu.
ERR - 55	No Ticket Discount.
ERR - 56	Not supported.
ERR - 57	Access not allowed for current clerk.
ERR - 58	Wrong Baud Rate.
ERR - 60	Inactive PLU.
ERR - 61	Fiscal Memory is full.
ERR - 62	Wrong Coupon Index
ERR - 63	Larger Quantity Value than the one allowed.
ERR - 64	Inactive payment type.
ERR - 65	Inactive DPT.
ERR - 66	No more Stock
ERR - 67	Serial port error
ERR - 68	Cannot open Drawer.
ERR - 69	Open ticket
ERR - 70	There is not an open receipt.

ERR - 71	Error in SD reports.
ERR - 72	Inactive ticket
ERR - 73	Wrong coupon
ERR - 74	Discount/Markup limit is exceeded.
ERR - 75	Zero Discount/Markup.
ERR - 76	Description is blank.
ERR - 77	Wrong barcode
ERR - 78	Wrong Key code.
ERR - 79	EJ Transfer
ERR - 81	The SD is full.
ERR - 82	The SD is old.
ERR - 83	Negative Receipt total.
ERR - 84	Clientindex Error
ERR - 85	Wrong Client code.
ERR - 86	Out of limits bonus.
ERR - 87	Wrong Promotion link index.
ERR - 88	WORD NOT ALLOWED
ERR - 89	Error in barcode data.
ERR - 90	Change is not allowed for this Payment type.
ERR - 91	Must insert the payment amount.
ERR - 92	Same Header lines.
ERR - 93	In Error Message.
ERR - 94	Not found SD data.

ERR - 95	There is no more data to read from SD.
ERR - 96	Set the limit to read SD data.
ERR - 97	Receipt sales amount exceeded.
ERR - 98	Daily sales amount exceeded.
ERR - 99	The SD is full.
ERR - 100	Wrong ticket index
ERR - 101	Fiscal Communication problem.
ERR - 102	Cannot transfer payment amount
ERR - 104	LCD disconnection
ERR - 105	SD disconnection
ERR - 106	Battery Error
ERR - 107	NAND Memory full
ERR - 108	Wrong TIN
ERR - 109	Empty EJ
ERR - 110	Invalid IP
ERR - 111	Invalid refund
ERR - 112	Invalid void
ERR - 113	Exceed amount limit
ERR - 114	Null header
ERR - 115	Inactive clerk
ERR - 116	Barcode error
ERR - 117	Need program TIN
ERR - 118	SD memory need format

ERR - 119	Wrong Date
ERR - 120	Wrong Time
ERR - 121	Call technician
ERR - 122	Cannot open EJ file
ERR - 123	Cannot write EJ file
ERR - 124	Cannot read EJ file
ERR - 125	Wrong GSIS AES Key
ERR - 126	Cannot change
ERR - 127	Ethernet communication error
ERR - 128	Send GSIS error
ERR - 129	Fiscal Blank
ERR - 130	Web Services file error
ERR - 132	Active GPRS
ERR - 133	Wrong Activate Services Key
ERR - 134	Cannot open file in SD
ERR - 135	Cannot write file in SD
ERR - 136	Need quantity
ERR - 137	Receipt closed
ERR - 138	Unauthorized function
ERR - 139	Already used coupon
ERR - 140	Invalid key for services' activation or already activated
ERR - 141	Invalid client coupon
ERR - 142	Inactive client

ERR - 143	Barcode error (not valid EAN)
ERR - 144	Same client code
ERR - 145	Reserved
ERR - 146	Error in header FM write
ERR - 147	No more clients
ERR - 148	Reserved
ERR - 149	Reserved
ERR - 150	Reserved
ERR - 151	Inactive Ethernet
ERR - 152	Client not found
ERR - 153	Reserved
ERR - 154	Reserved
ERR - 155	Reserved
ERR - 156	Reserved
ERR - 157	Reserved
ERR - 158	Reserved
ERR - 159	Reserved
ERR - 160	Reserved
ERR - 161	Reserved
ERR - 162	Read SD File
ERR - 163	Need to confirm new invoice row
ERR - 164	Open EJ
ERR - 165	Write EJ

ERR - 166	Wait to synchronize with date/time received from GSIS
ERR - 167	Unregister User (Link4All)
ERR - 168	Zero receipt total
ERR - 169	Wrong or does not exist activation code
ERR - 170	BUSY in send to GSIS
ERR - 171	Wrong Code
ERR - 172	Reserved
ERR - 173	Programming Memory Index Error
ERR - 174	Reserved
ERR - 175	Inactive Table
ERR - 176	Need subtotal first
ERR - 177	Same GSIS AES Key
ERR - 178	Reserved
ERR - 179	Reserved
ERR - 180	Expired Licence (Link4All)
ERR - 181	Inactive Invoice Type
ERR - 182	Reserved
ERR - 183	Wrong/Missing Invoice Issuer Information
ERR - 184	SD Disconnection
ERR - 185	Not valid SD
ERR - 186	EFTPOS Payment Failed
ERR - 187	EFTPOS Fail to read transactions
ERR - 188	Inactive EFTPOS

ERR - 189	Reserved IP Address
ERR - 190	FM in pause
ERR - 191	Inactive GSIS send
ERR - 192	Wrong company category
ERR - 193	EFTPOS payment in progress
ERR - 194	Wrong EFTPOS transaction type
ERR - 195	Open Table
ERR - 196	Close Table
ERR - 197	Abort by user
ERR - 198	Close Table failure
ERR - 199	Info of transaction lines available for transfer between tables
ERR - 200	Not Used
ERR - 201	Closure of a Table is in progress
ERR - 202	No more lines available for transfer between tables
ERR - 203	Not open day
ERR - 204	Fee category is inactive
ERR - 205	There is new Firmware, confirm or reject the upgrade
ERR - 206	Table is in wrong state
ERR - 207	Inactive Additional Vat Rate
ERR - 208	Clerk Locked
ERR - 209	Digital Clients: Inactive Functionality
ERR - 210	Digital Clients: Validation error
ERR - 211	Digital Clients: Abort by user

ERR - 212	Digital Clients: Check the plate number
ERR - 213	Digital Clients: Wrong PIN
ERR - 214	Wait to insert activation services code

CONFIDENTIAL

9. Updates

DATE	Version	WHATs NEW
14/11/2024	1.1.9	8.2.3. Read DPT info [d], replies one more field about VAT exemption category. 8.2.5. Read Payment info [y], replies one more field about maximum amount allowed for this payment. 8.2.8. Program DPT (Department) [D], added one more field about VAT exemption category. 8.2.10. Program payment type [Y], added one more field about maximum amount allowed for this payment. 8.2.67. General Programming [\], added new option \15 to send RESEND-ALL command to EFTPOS 8.2.80. Table Open/Close/Return/Transfer/Report [&], added more options for cases &4, &5, &11 and added new option &15.
01/04/2025	1.1.10	8.2.3. Read DPT info [d], update fields and add more optional fields at the end. 8.2.4. Read Clerk info [c], return one more field with flags 8.2.8. Program DPT (Department) [D], update fields and add more optional fields at the end. 8.2.9. Program Clerk [C], add one more field with flags 8.2.59. Set Pressed Key [)], update fields 8.2.66. General Read [,], add case 16 for read additional Vat rates categories, case 17 for print Fee/Other Tax categories and case 20 for read battery power save mode settings. 8.2.67. General Programming [\], add case 16 for programming additional Vat rates categories and 20 for programming battery power save mode. 8.3. Command Protocol ERRORS, update table.
24/11/2025	1.1.11	8.2.5. Read Payment info [y], replies one more field about timeout of IRIS payment type. 8.2.10. Program payment type [Y], added one more field about IRIS payment type timeout. 8.2.66. General Read [,], replies two more fields in case of read EFPOS settings and added type 60 about cloud check for available FW upgrade. 8.2.67. General Programming [\], added two more optional fields in case of program EFTPOS and added type 21 about Insert services activation code. 8.3. Command Protocol ERRORS, update table.
04/05/2026	1.1.12	8.2.71. Program start/end/in receipt/cash in-out comments [l], add cases of in receipt comments and cash in/out comments.

		• 8.2.72. Read start/end/in receipt/cash in-out comments [E], add cases of in receipt comments and cash in/out comments.
--	--	--

CONFIDENTIAL