

POWER & USB


USB RECEPTACLE

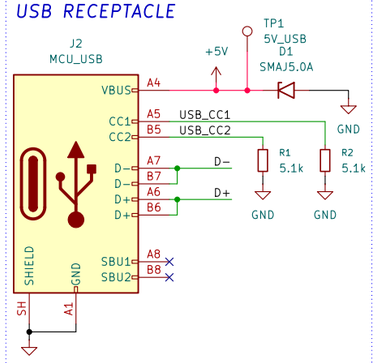


3.3V @ 600mA LDO

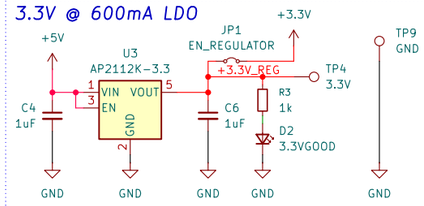


CH340G USB TO SERIAL

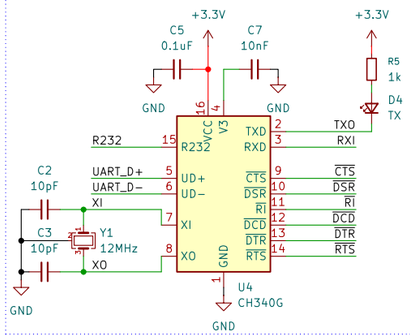

USB MUX

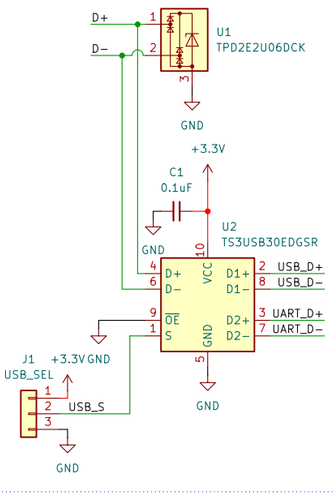

RXI LED BUFFER

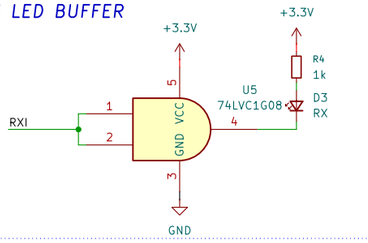


UART TEST POINTS




NOTE

1. Use the USB_SEL header to determine which system the USB interfaces with:
   - Connect pins 1&2 for UART
   - Connect pins 2&3 for direct connection to the MCU
2. If powering the breakout via external 3.3V, you MUST open the EN_REGULATOR jumper.


MCU

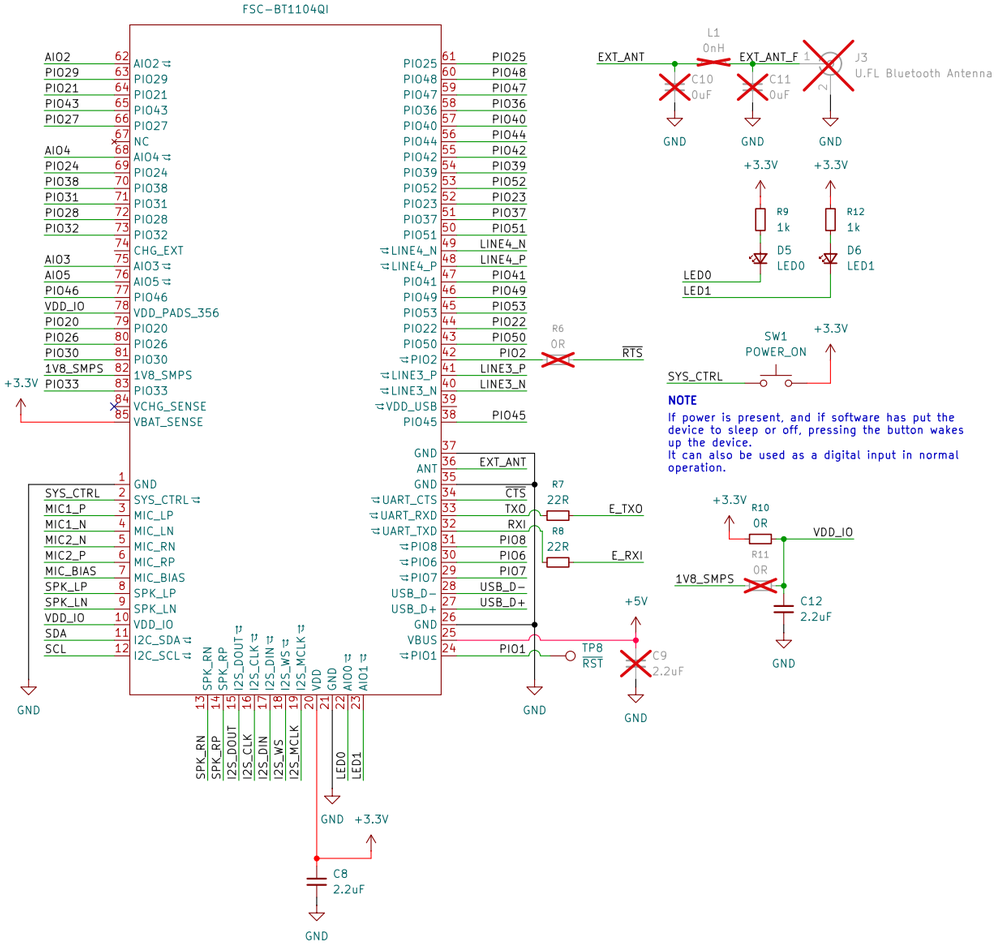

IOs

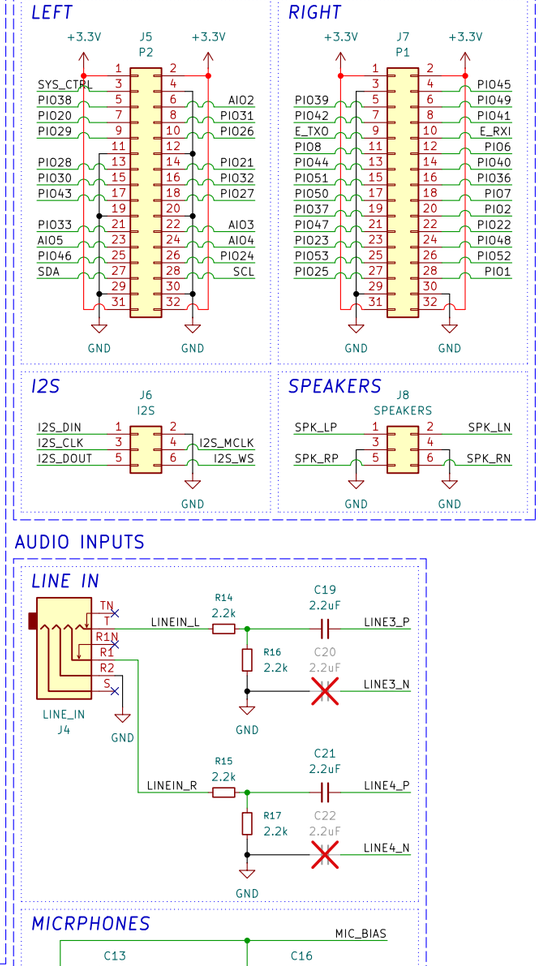

AUDIO INPUTS

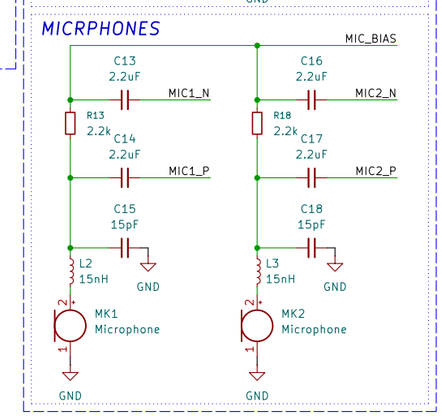

Sheet: /		
File: FSC-BT1104QI-Breakout.kicad_sch		
Title: FSC-BT1104QI Breakout		
Size: A3	Date: 2026-09-28	**Rev: 0.1**
KiCad E.D.A. 10.0.5		Id: 1/1