

DynoSure LoggerV1

Model: LoggerV1 (Standalone CAN Data Logger)

The DynoSure LoggerV1 is a standalone CAN bus data logger designed specifically to capture CAN 2.0 traffic to onboard storage without requiring a connected PC during operations. It logs data in industry-standard Vector ASC and MDF4 (.mf4) file formats, avoiding restrictive closed ecosystems and vendor lock-in.

Specifications

Parameter	Details
Microcontroller	Raspberry Pi RP2350
CAN Protocols	CAN 2.0A (11-bit ID), CAN 2.0B (29-bit extended ID)
Storage	Onboard microSD card (FAT32 filesystem)
Log Format	Vector ASC (.asc) & MDF4 (.mf4)
USB Interface	USB 2.0 (Mass Storage Device / Card Reader mode)
Power Modes	• Logging Mode: Requires +12V DC (DB9 Pin 9 & 3) • USB Mode: USB-powered (acts as SD card reader)
Firmware Update	Drag-and-drop .uf2 into RP2350 USB drive


microSD Configuration (configuration.txt)

Create or edit configuration.txt in the root of the microSD card:


Key	Options / Values
Bitrate	1 = 500 kbps (default) 2 = 1 Mbps 3 = 250 kbps
FileFormat	0 = Vector ASC (.asc) 1 = MDF4 (.mf4)
ProgramMode	0 = Normal Logging (default) 1 = Program Mode (firmware update)

Firmware Update Procedure

Set ProgramMode=1 in configuration.txt and connect via USB. Device enumerates as an **RP2350** drive. Copy & paste the .uf2 file to flash automatically.

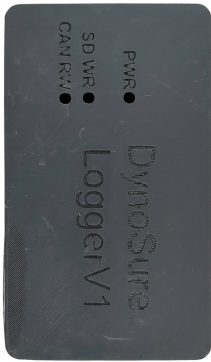

DB9 CAN & Power Pinout



DB9 Pin	Assignment
Pin 2	CAN-L (CAN Low)
Pin 3	GND (Power Ground)
Pin 7	CAN-H (CAN High)
Pin 9	+12V DC (Power Input)
Others	Not Connected

Operation Modes Summary:

- **Logging Mode:** Insert card, connect +12V power supply via Pin 9 and Pin 3 on DB9. Device starts logging automatically.
- **USB Mode:** Plug into PC via USB cable. Behaves as an external card reader to copy logs.

Inquiries & Technical Support:

Support: **+91 9422556559**
Sales: **+91 9898204057 (Mukesh Patel)**
Email: **dynosure.india@gmail.com**