


M-SoM datasheet	3
Overview	4
MCU	4
BLOCK DIAGRAM	4
DEVICE FAMILIES	4
MIGRATION GUIDES	5
POWER	5
VCC	5
3V3	5
RF	6
Approved Antennas	7
CERTIFIED CELLULAR ANTENNAS	7
CERTIFIED WI-FI/BLE ANTENNAS	7
CERTIFIED GNSS ANTENNAS	7
GENERAL ANTENNA GUIDANCE	8
PERIPHERALS AND GPIO	8
JTAG AND SWD	8
Pin information	10
PINOUT DIAGRAM	10
COMMON SOM PINS	10
PIN FUNCTION BY PIN NAME	10
PIN FUNCTION BY M.2 PIN	11
GPIO (DIGITAL I/O)	12
ADC (ANALOG TO DIGITAL CONVERTER)	13
UART SERIAL	14
SPI	14
I2C	15
PWM	15
PDM	16
USB	16
RGB LED	16
BOOT MODE PINS	17
BLE (BLUETOOTH LE)	17
SLEEP	17
SETUP AND RESET BUTTON	18
SUPERVISORY RESET	18
PMIC NOTES	19
CELLULAR MODEM USB PINS	20
SIM PINS	20
Technical specification	21
I/O CHARACTERISTICS	21
POWER CONSUMPTION (M524)	21
POWER CONSUMPTION (M404)	21
RADIO SPECIFICATIONS	22
Realtek RTL872x for Wi-Fi 2.4 GHz	22

Realtek RTL872x for Wi-Fi 5 GHz	23
Realtek RTL872x for BLE	23
Cellular characteristics for BG95-M5 (M404)	23
Cellular characteristics for EG91-EX (M524)	24
Mechanical specifications	25
MECHANICAL DRAWING	25
MATING CONNECTOR AND LAND PATTERN	26
SCREW ASSEMBLY	27
DESIGN CONSIDERATIONS	27
REFERENCE DESIGN	28
Product Handling	29
ESD PRECAUTIONS	29
CONNECTORS	29
Default settings	30
FCC Warnings and End Product Labeling Requirements	31
FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT	31
IMPORTANT NOTICE TO OEM INTEGRATORS - FCC	31
END PRODUCT LABELING - FCC	32
ANTENNA INSTALLATION - FCC	32
MANUAL INFORMATION TO THE END USER - FCC	33
OUTDOOR USE - FCC	33
ISED Warnings and End Product Labeling Requirements	34
RADIATION EXPOSURE STATEMENT - ISED	34
END PRODUCT LABELING - ISED	35
MANUAL INFORMATION TO THE END USER - ISED	35
OUTDOOR USE - ISED	36
European Union (CE) Warnings and End Product Labeling Requirements	37
M524 - EUROPEAN UNION (CE)	37
UNITED KINGDOM	37
OUTDOOR USE (WORLD)	37
Certification documents	38
FCC (UNITED STATES) - M404 M-SOM M-SERIES LTE-M/2G	38
ISED (CANADA) - M404 M-SOM M-SERIES LTE-M/2G	38
ROHS - M404 M-SOM M-SERIES LTE-M/2G	38
CE (EUROPEAN UNION) - M524 M-SOM M-SERIES LTE CAT 1	38
ROHS - M524 M-SOM M-SERIES LTE CAT 1	38
Country compatibility	39
M404 - COUNTRY COMPATIBILITY	39
M404 - CERTIFIED BANDS	39
M524 - COUNTRY COMPATIBILITY	39
M524 - CERTIFIED BANDS	42
Ordering information	43
Revision history	44

M-SoM datasheet

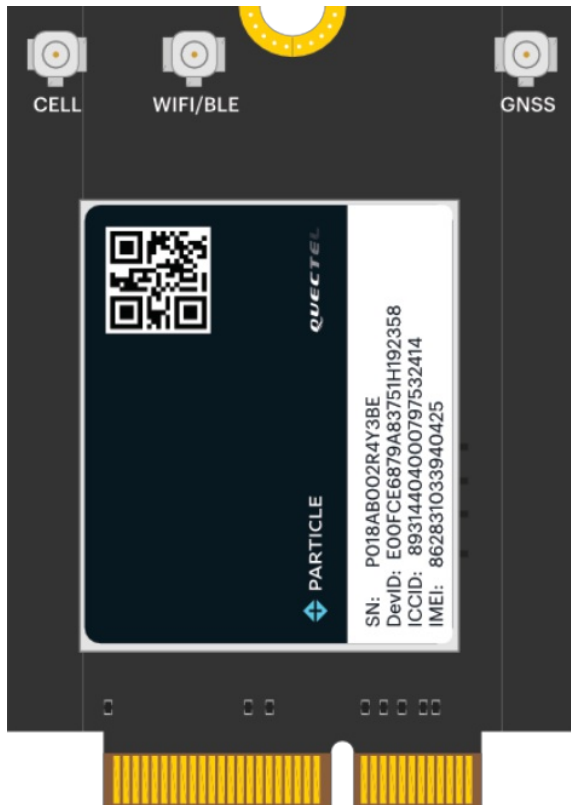

This datasheet is for the M404 and M524 M-SoM. For the M635e, see [M635e datasheet](#).

Overview

The Particle M-SoM contains the following functional units:


- M.2 SoM form-factor, like the B-Series SoM
- Can use cellular or Wi-Fi (2.4 GHz or 5 GHz) for the cloud connection
- Realtek RTL8722DM MCU (BLE and Wi-Fi)
- Cellular modem
 - M404: Quectel BG95-M5 LTE Cat M1 (NorAm)
 - M524: Quectel EG91-EX LTE Cat 1 with 2G/3G fallback (EMEA)
 - M635e: Quectel BG95-S5 LTE Cat M1/2G (Global with NTN satellite)

MCU

The Realtek RTL8722DM is in the same family as the P2 and Photon 2 modules (RTL8721DM), but has additional GPIO.

- 802.11a/b/g/n Wi-Fi, 2.4 GHz and 5 GHz
 - U.FL connector for external antenna
- BLE 5 using same antenna as Wi-Fi
- Realtek RTL8722DM MCU
 - ARM Cortex M33 CPU, 200 MHz
- 2048 KB (2 MB) user application maximum size
- 3072 KB (3 MB) of RAM available to user applications
- 8 MB flash file system
- FCC (United States), ISED (Canada), and CE (European Union) certified

BLOCK DIAGRAM

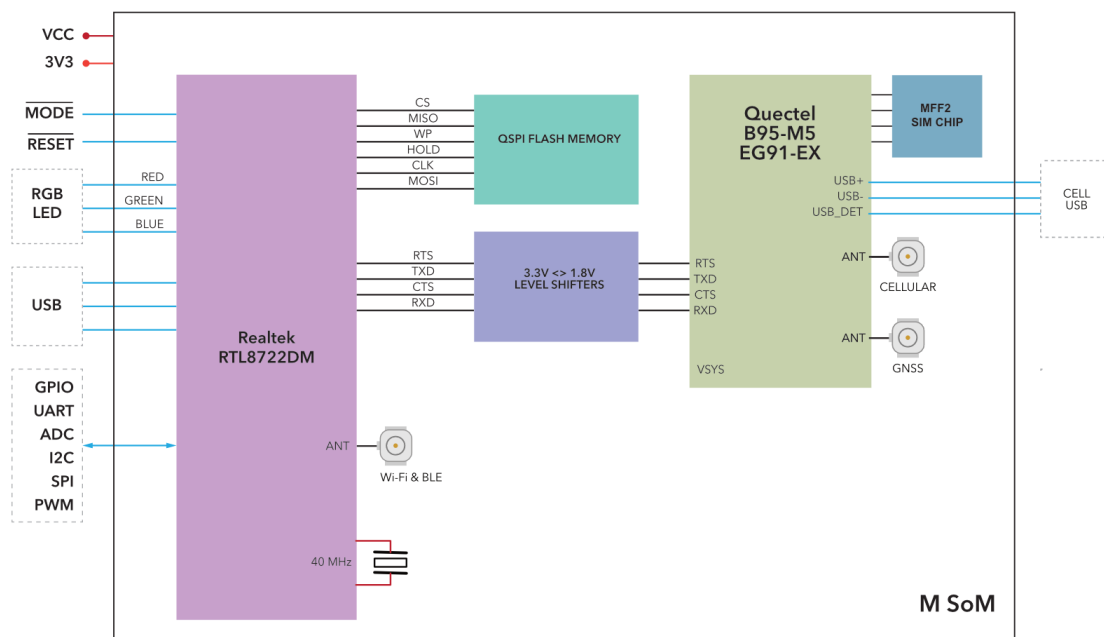

DEVICE FAMILIES

	Cellular Only	Cellular & Wi-Fi	Wi-Fi Only
Developer devices			
Boron			
Photon 2			

MIGRATION GUIDES

If you are migrating to the M-SoM from another Particle device, see also the following migration guides:

- [M-SoM from B-SoM](#)
- [M-SoM from Boron or Argon](#)
- [M-SoM from E-Series](#)
- [M-SoM from P2](#)

POWER

VCC

VCC (sometimes referred to as 3V7) is used to supply power to the cellular module. The recommended input voltage range on this pin is between 3.6V to 4.2V DC. This can be connected directly to a 3.7V LiPo battery. Make sure that the supply can handle currents of at least 2 A.

If you are not using a battery, or using a battery of a different voltage, you should use a regulator to supply 3.7V to 4.2V at 2A. You may want to add additional bulk capacitors to handle the short, high current peak usage when the cellular modem is transmitting.

Note:

It is highly recommended that you design your power supply to the full 2A maximum current even though the M404 (LTE Cat M1) does not use the full amount.

Other models, including the M524 and M635e, support 2G cellular, which uses significantly more current than LTE Cat M1 or Cat 1, and also takes much longer to connect, which may affect battery life.

3V3

3V3 is used to supply power to RTL8722 MCU, logic ICs, memory, etc.. Make sure that the supply can handle a minimum of 500 mA.

These limits do not include any 3.3V peripherals on your base board, so that may increase the current requirements.

Power supply requirements:

- 3.3V output
- Maximum 5% voltage drop
- 100 mV peak-to-peak ripple maximum
- 500 mA minimum output current at 3.3V recommended for future compatibility
- Maintain these values at no-load as well as maximum load

In some cases, it may be necessary to add a supervisory/reset IC, such as the Richtek RT9818C or SG Micro SGM809-RXN3L/TR:

- If your power supply has a slew rate from 1.5V to 3.0V slower than 15 ms, a reset IC is required.
- If your power supply at power off cannot be guaranteed to drop below 0.3V before powering back up, a reset IC required.

See [supervisory reset](#), below, for additional information.

RF

- The M-SoM includes three U.FL connectors for external antennas:
 - Cellular
 - Wi-Fi (2.4 GHz and 5 GHz) and BLE
 - GNSS (GPS)
- Wi-Fi operation in the 5150-5250 MHz band is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Approved Antennas

CERTIFIED CELLULAR ANTENNAS

The M-SoM is certified with the following cellular antenna:

Antenna	SKU	Details	Links
Wide band LTE cell antenna [x1]	PARANTCW1EA	B504e and M-SoM	Datasheet
Wide band LTE cell antenna [x50]	PARANTCW1TY	B504e and M-SoM	Datasheet

Single quantity units and developer kits include a PARANTCW1EA antenna. Tray quantities of the do not include antennas.

Dimension	Value	Unit
Length	116.0	mm
Width	27.0	mm
Thickness	0.2	mm
Cable Length	189.5	mm

Parameter	617-960	1156 - 1496	1520 - 1660.5	1710 - 2700	3330 - 4200	4200 - 5925
V.S.W.R.	≤ 3.5	≤ 3.0	≤ 2.0	≤ 2.0	≤ 1.5	≤ 2.0
Peak Gain	2.8 dBi	2.4 dBi	3.9 dBi	5.3 dBi	5.6 dBi	7.9 dBi
Eff % (max/avg)	71/62	55/53	68/62	85/70	76/71	69/62

CERTIFIED WI-FI/BLE ANTENNAS

The M-SoM is certified for use with the same antennas as the P2/Photon 2. The same antenna is shared for Wi-Fi and BLE. Unlike the P2/Photon 2, the external antenna is required for Wi-Fi and BLE and the M-SoM does not include a built-in trace antenna on the module.

Antenna	SKU	Links
Particle P2/Photon2 Wi-Fi Antenna 2.4/5GHz, [x1]	PARANTWM1EA	Datasheet Retail Store
Particle P2/Photon2 Wi-Fi Antenna 2.4/5GHz, [x50]	PARANTWM1TY	Datasheet

Single quantity M-SoM units and developer kits include a PARANTWM1EA antenna. Tray quantities of the M-SoM do not include antennas.

Do not use the Argon Wi-Fi/BLE antenna (ANT-FLXV2) on the P2, Photon 2, or M-SoM. The Argon antenna does not work with 5 GHz and this will result in poor Wi-Fi performance on the P2, Photon 2, and M-SoM.

CERTIFIED GNSS ANTENNAS

SKU	Description	
PARANTGN1EA	Particle GNSS FPC Antenna, [x1]	Datasheet
PARANTGN1TY	Particle GNSS FPC Antenna, [x50]	Datasheet

Single quantity M-SoM units and developer kits include a PARANTGN1EA antenna. Tray quantities of the M-SoM do not include antennas. If not using the GNSS feature, the antenna can be omitted from your design.

- A [firmware library](#) is available now for the M404. A future update will add support for the M524.
- Another option is the [QuectelGnssRK](#) library that can be used with [LocationFusionRK](#) to provide Tracker-like location services on the M-SoM.
- Features such of high-precision, dead-reckoning, and high updates rates will require an external GNSS chip.
- On the M404 (BG95 cellular modem), radio hardware is shared between the cellular modem and built-in GNSS which limits concurrent use.

GENERAL ANTENNA GUIDANCE

- The antenna placement needs to follow some basic rules, as any antenna is sensitive to its environment. Mount the antenna at least 10mm from metal components or surfaces, ideally 20mm for best radiation efficiency, and try to maintain a minimum of three directions free from obstructions to be able to operate effectively.
- Needs tuning with actual product enclosure and all components.


PERIPHERALS AND GPIO

Peripheral Type	Qty	Input(I) / Output(O)
Digital	30 (max)	I/O
Analog (ADC)	8 (max)	I
UART	2	I/O
SPI	2	I/O
I2C	1	I/O
USB	1	I/O
PWM	11 (max)	O

Note: All GPIOs are only rated at 3.3VDC max.

JTAG AND SWD

The M-SoM has 4 pads at the bottom exposing the SWD interface of the MCU. This interface can be used to debug your code or reprogram your SoM bootloader, device OS, or the user firmware. We use 4 pogo-pins connecting to these pads during production for firmware flashing.

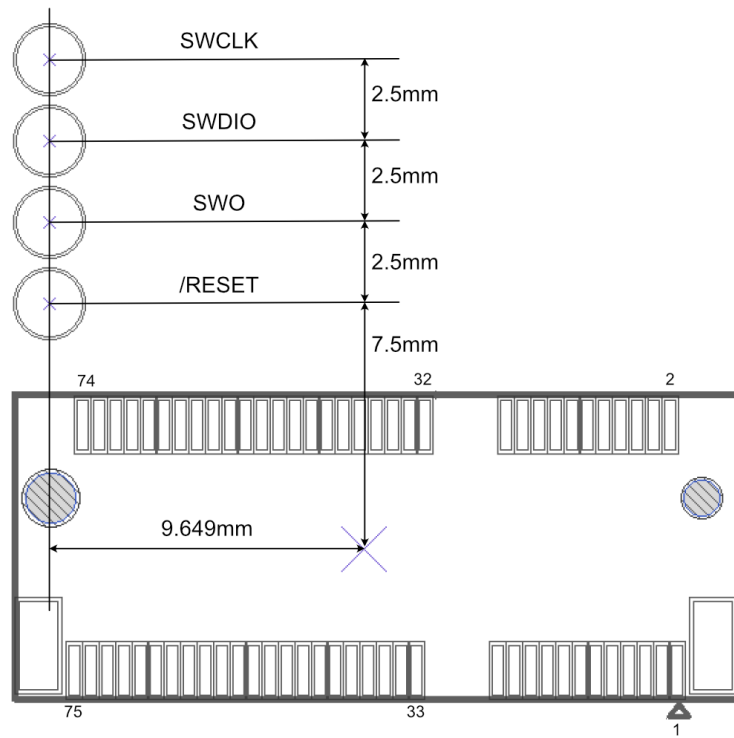

Additionally, SWD is supported on pins on the M.2 connector:

Pin	Pin Name	Description	Interface	MCU
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	SWCLK	PB[3]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	SWCLK	PB[3]
55	D27	D27 GPIO, SWDIO (SWD_DATA), do not pull down at boot	SWDIO	PA[27]

- SWD is on the same pins as GPIO, so by default once user firmware boots, SWD is no longer available unless SWD is enabled at compile time. This is the same as Gen 2 (STM32) but different than Gen 3 (nRF52840).
- SWO (Serial Wire Output) is not supported on the RTL8722DM.
- Pins 43 and 53 are shared

D1	20	Wire (SCL)			PA[31]
D2	42	SPI1 (SCK)	Serial1 (RTS)		PA[14]
D3	40	SPI1 (SS)	Serial1 (CTS)		PA[15]
D4	66			✓	PB[18]
D5	68			✓	PB[19]
D6	70			✓	PB[20]
D7	72			✓	PB[21]
D8	48	SPI (SS)			PA[19]
D20	19				PA[1]
D21	17				PA[0]
D22	62				PA[9]
D23	64				PA[10]
D24	58		Serial2 (TX)		PA[7]
D25	60		Serial2 (RX)		PA[8]
D26	59				PA[4]
D27	55	SWDIO			PA[27]
GNSS_TX	18				
MISO / D11	50	SPI (MISO)		✓	PA[17]
MOSI / D12	52	SPI (MOSI)		✓	PA[16]
NC	14				
RGBB	65				PB[22]
RGBG	63				PB[23]
RGBR	61				PA[30]
RX / D10	38	SPI1 (MISO)	Serial1 (RX)	✓	PA[13]
SCK / D13	54	SPI (SCK)			PA[18]
SIM_CLK	71				
SIM_DATA	73				
SIM_RST	69				
SIM_VCC	67				
TX / D9	36	SPI1 (MOSI)	Serial1 (TX)	✓	PA[12]
USBDATA-	13				PA[25]
USBDATA+	11				PA[26]

PIN FUNCTION BY M.2 PIN

Module Pin	Pin Name		PWM	MCU
11	USBDATA+			PA[26]
13	USBDATA-			PA[25]
14	NC			
17	D21			PA[0]
18	GNSS_TX			
19	D20			PA[1]
20	D1	Wire (SCL)		PA[31]
22	D0	Wire (SDA)		PB[0]
23	A0 / D19	ADC_0	✓	PB[4]
33	A1 / D18	ADC_1	✓	PB[5]

35	A2 / D17	ADC_2				PB[6]
36	TX / D9		SPI1 (MOSI)	Serial1 (TX)	✓	PA[12]
37	A3 / D16	ADC_4				PB[1]
38	RX / D10		SPI1 (MISO)	Serial1 (RX)	✓	PA[13]
40	D3		SPI1 (SS)	Serial1 (CTS)		PA[15]
41	A4 / D15	ADC_5				PB[2]
42	D2		SPI1 (SCK)	Serial1 (RTS)		PA[14]
43	A5 / D14	ADC_6	SWCLK		✓	PB[3]
44	CELL USBD+					
45	A6 / D29	ADC_3			✓	PB[7]
46	CELL USBD-					
47	A7 / WKP	ADC_7				PA[20]
48	D8		SPI (SS)			PA[19]
50	MISO / D11		SPI (MISO)		✓	PA[17]
52	MOSI / D12		SPI (MOSI)		✓	PA[16]
53	A5 / D14	ADC_6	SWCLK		✓	PB[3]
54	SCK / D13		SPI (SCK)			PA[18]
55	D27	SWDIO				PA[27]
58	D24			Serial2 (TX)		PA[7]
59	D26					PA[4]
60	D25			Serial2 (RX)		PA[8]
61	RGBR					PA[30]
62	D22					PA[9]
63	RGBG					PB[23]
64	D23					PA[10]
65	RGBB					PB[22]
66	D4				✓	PB[18]
67	SIM_VCC					
68	D5				✓	PB[19]
69	SIM_RST					
70	D6				✓	PB[20]
71	SIM_CLK					
72	D7				✓	PB[21]
73	SIM_DATA					
74	CELL VBUS					
75	CELL_RI					

GPIO (DIGITAL I/O)

Pin	M-SoM Pin Name	M-SoM GPIO	MCU	Special boot function
17	D21	✓	PA[0]	
19	D20	✓	PA[1]	
20	D1	✓	PA[31]	
22	D0	✓	PB[0]	
23	A0 / D19	✓	PB[4]	
33	A1 / D18	✓	PB[5]	

35	A2 / D17	✓	PB[6]	
36	TX / D9	✓	PA[12]	
37	A3 / D16	✓	PB[1]	
38	RX / D10	✓	PA[13]	
40	D3	✓	PA[15]	
41	A4 / D15	✓	PB[2]	
42	D2	✓	PA[14]	
43	A5 / D14	✓	PB[3]	SWCLK. 40K pull-down at boot.
45	A6 / D29	✓	PB[7]	
47	A7 / WKP	✓	PA[20]	
48	D8	✓	PA[19]	
50	MISO / D11	✓	PA[17]	
52	MOSI / D12	✓	PA[16]	
53	A5 / D14	✓	PB[3]	SWCLK. 40K pull-down at boot.
54	SCK / D13	✓	PA[18]	
55	D27	✓	PA[27]	SWDIO. 40K pull-up at boot. Low at boot triggers MCU test mode.
58	D24	✓	PA[7]	Low at boot triggers ISP flash download
59	D26	✓	PA[4]	
60	D25	✓	PA[8]	Goes high at boot
62	D22	✓	PA[9]	
64	D23	✓	PA[10]	
66	D4	✓	PB[18]	
68	D5	✓	PB[19]	
70	D6	✓	PB[20]	
72	D7	✓	PB[21]	

- All GPIO are 3.3V only and are not 5V tolerant
- The drive strength is 4 mA per pin in normal drive and 12 mA per pin in high drive mode on the M-SoM.
- There is a maximum of 200 mA across all pins. The total maximum could be further limited by your 3.3V regulator.
- Drive strength selection using [pinSetDriveStrength](#) is only available in Device OS 5.5.0 and later on the M-SoM.

Certain GPIO will change state at boot, or cause the MCU to enter a special mode. See the [boot mode pins](#) section, below, for more information.

ADC (ANALOG TO DIGITAL CONVERTER)

Pin	Pin Name	Description	Interface	MCU
23	A0 / D19	A0 Analog in, GPIO, PWM	ADC_0	PB[4]
33	A1 / D18	A1 Analog in, GPIO, PWM	ADC_1	PB[5]
35	A2 / D17	A2 Analog in, GPIO	ADC_2	PB[6]
37	A3 / D16	A3 Analog in, PDM CLK, GPIO	ADC_4	PB[1]
41	A4 / D15	A4 Analog in, PDM DAT, GPIO	ADC_5	PB[2]
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	ADC_6	PB[3]
45	A6 / D29	A6 Analog in, GPIO, PWM, M.2 eval PMIC INT	ADC_3	PB[7]

47	A7 / WKP	A7 Analog In, WKP, GPIO D28	ADC_7	PA[20]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	ADC_6	PB[3]

- ADC inputs are single-ended and limited to 0 to 3.3V
- Resolution is 12 bits
- SoM pin 43 (A5) on the M-SoM is shared with SoM pin 53 (SWD_CLK). You cannot use A5 and SWD at the same time. If you implement SWD on your base board, driving pin A6 will prevent SWD from functioning. The SWD_CLK will be driven at boot by the MCU.

The ADCs on the M-SoM (RTL872x) have a lower impedance than other Particle device MCUs (nRF52, STM32F2xx). They require a stronger drive and this may cause issues when used with a voltage divider. This is particularly true for A7, which has an even lower impedance than other ADC inputs.

For signals that change slowly, such as NTC thermocouple resistance, you can add a 2.2 uF capacitor to the signal. For rapidly changing signals, a voltage follower IC can be used.

UART SERIAL

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	Serial1 (TX)	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	Serial1 (RX)	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	Serial1 (CTS)	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	Serial1 (RTS)	PA[14]
58	D24	D24 GPIO, Serial2 TX, do not pull down at boot	Serial2 (TX)	PA[7]
60	D25	GPIO25, Serial2 RX	Serial2 (RX)	PA[8]

- The UART pins are 3.3V and must not be connected directly to a RS-232C port or to a 5V TTL serial port
- Hardware flow control is optional; if not used then the RTS and CTS pins can be used as regular GPIO
- Serial1 uses the RTL872x UART_LOG peripheral
- Serial2 uses the RTL872x HS_UART0 peripheral
- Supported baud rates: 110, 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 76800, 115200, 128000, 153600, 230400, 380400, 460800, 500000, 921600, 1000000, 1382400, 1444400, 1500000, 1843200, 2000000, 2100000, 2764800, 3000000, 3250000, 3692300, 3750000, 4000000, 6000000

SPI

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	SPI1 (MOSI)	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	SPI1 (MISO)	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	SPI1 (SS)	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	SPI1 (SCK)	PA[14]
48	D8	D8 GPIO, SPI SS	SPI (SS)	PA[19]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	SPI (MISO)	PA[17]
52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	SPI (MOSI)	PA[16]
54	SCK / D13	D13 GPIO, SPI SCK	SPI (SCK)	PA[18]

- The SPI port is 3.3V and must not be connected directly to devices that drive MISO at 5V

- If not using a SPI port, its pins can be used as GPIO
- Any pins can be used as the SPI chip select
- Multiple devices can generally share a single SPI port
- SPI uses the RTL872x SPI0 peripheral (50 MHz maximum speed)
- SPI1 uses the RTL872x SPI1 peripheral (25 MHz maximum speed)
- Note: The P2/Photon 2 maximum speeds for SPI and SPI1 are reversed from the M-SoM

Even though the B-SoM and M-SoM both have two SPI interfaces, note that the M-SoM SPI1 is on different pins.

Pin	B-SoM Pin Name	B-SoM SPI	M-SoM Pin Name	M-SoM SPI
36	TX / D9		TX / D9	SPI1 (MOSI)
38	RX / D10		RX / D10	SPI1 (MISO)
40	D3	SPI1 (MOSI)	D3	SPI1 (SS)
42	D2	SPI1 (SCK)	D2	SPI1 (SCK)
48	D8	SPI (SS)	D8	SPI (SS)
50	MISO / D11	SPI (MISO)	MISO / D11	SPI (MISO)
52	MOSI / D12	SPI (MOSI)	MOSI / D12	SPI (MOSI)
54	SCK / D13	SPI (SCK)	SCK / D13	SPI (SCK)
66	D4	SPI1 (MISO)	D4	

I2C

Pin	Pin Name	Description	Interface	MCU
20	D1	D1 GPIO, I2C SCL	Wire (SCL)	PA[31]
22	D0	D0 GPIO, I2C SDA	Wire (SDA)	PB[0]

- The I2C port is 3.3V and must not be connected directly a 5V I2C bus
- Maximum bus speed is 400 kHz
- External pull-up resistors are required for I2C

PWM

Pin	Pin Name	Description	MCU
23	A0 / D19	A0 Analog in, GPIO, PWM	PB[4]
33	A1 / D18	A1 Analog in, GPIO, PWM	PB[5]
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	PA[13]
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	PB[3]
45	A6 / D29	A6 Analog in, GPIO, PWM, M.2 eval PMIC INT	PB[7]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	PA[17]
52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	PA[16]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	PB[3]
66	D4	D4 GPIO, PWM	PB[18]
68	D5	D5 GPIO, PWM, I2S TX	PB[19]
70	D6	D6 GPIO, PWM, I2S CLK	PB[20]
72	D7	D7 GPIO, PWM, I2S WS	PB[21]

- All available PWM pins on the M-SoM share a single timer. This means that they must all share a single frequency, but can have different duty cycles.

PDM

Pulse density modulation digital microphones can be used with the [Microphone_PDM](#) library and the M-SoM, but only on specific pins:

Pin	Pin Name	Description	MCU
37	A3 / D16	A3 Analog in, PDM CLK, GPIO	PB[1]
41	A4 / D15	A4 Analog in, PDM DAT, GPIO	PB[2]

USB

The M-SoM supports a USB interface for programming the device and for USB serial (CDC) communications. The module itself does not contain a USB connector; you typically add a micro USB or USB C connector on your base board. It is optional but recommended.

Pin	Pin Name	Description	MCU
11	USBDATA+	USB Data+	PA[26]
13	USBDATA-	USB Data-	PA[25]
44	CELL USBD+	Cellular Modem USB Data+	
46	CELL USBD-	Cellular Modem USB Data-	

- The CELL USB connector does not need to be populated on your board. It is used for reprogramming the cellular modem firmware, which is rarely done as it often requires recertification of the device.

RGB LED

The M-SoM supports an external common anode RGB LED.

One common LED that meets the requirements is the [Cree CLMVC-FKA-CL1D1L71BB7C3C3](#) which is inexpensive and easily procured. You need to add three current limiting resistors. With this LED, we typically use 1K ohm current limiting resistors. These are much larger than necessary. They make the LED less blinding but still provide sufficient current to light the LEDs. If you want maximum brightness you should use the calculated values - 33 ohm on red, and 66 ohm on green and blue.

A detailed explanation of different color codes of the RGB system LED can be found [here](#).

The use of the RGB LED is optional, however it is highly recommended as troubleshooting the device without the LED is very difficult.

Pin	Pin Name	Description	MCU
61	RGBR	RGB LED Red	PA[30]
63	RGBG	RGB LED Green	PB[23]
65	RGBB	RGB LED Blue	PB[22]

- On the M-SoM, Pin RGBR (PA[30]) has a 10K hardware pull-up in the module because it's a trap pin that controls the behavior of the internal 1.1V regulator. This does not affect the RGB LED but could affect your design if you are repurposing this pin as GPIO. You must not hold this pin low at boot.

BOOT MODE PINS

These pins have a special function at boot. Beware when using these pins as input as they can trigger special modes in the MCU.

Pin	Pin Name	Description	MCU
43	A5 / D14	SWCLK. 40K pull-down at boot.	PB[3]
53	A5 / D14	SWCLK. 40K pull-down at boot.	PB[3]
55	D27	SWDIO. 40K pull-up at boot. Low at boot triggers MCU test mode.	PA[27]
58	D24	Low at boot triggers ISP flash download	PA[7]
60	D25	Goes high at boot	PA[8]
61	RGBR	Low at boot triggers trap mode	PA[30]

BLE (BLUETOOTH LE)

If you wish to use Wi-Fi on the M-SoM you will need to provide a way to configure it. Wi-Fi setup works the same as the P2, Photon 2, and Argon, and uses BLE. See [Wi-Fi setup options](#) for more information.

BLE 5.3 BLE Central Mode and BLE Peripheral Mode are supported.

Full-speed BLE modes such as A2DP used for BLE audio are not supported.

Wi-Fi and BLE share the same antenna so you do not need to include a separate antenna to use both.

SLEEP

The M-SoM can wake from `STOP` or `ULTRA_LOW_POWER` sleep mode on any GPIO, `RISING`, `FALLING`, or `CHANGE`.

The M-SoM can only wake from `HIBERNATE` sleep mode on certain pins, `RISING`, `FALLING`, or `CHANGE`.

The M-SoM preserves the state of outputs during `STOP` or `ULTRA_LOW_POWER` sleep mode. In `HIBERNATE`, outputs are high-impedance.

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	Pin can wake from HIBERNATE sleep	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	Pin can wake from HIBERNATE sleep	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	Pin can wake from HIBERNATE sleep	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	Pin can wake from HIBERNATE sleep	PA[14]
47	A7 / WKP	A7 Analog In, WKP, GPIO D28	Pin can wake from HIBERNATE sleep	PA[20]
48	D8	D8 GPIO, SPI SS	Pin can wake from HIBERNATE sleep	PA[19]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	Pin can wake from HIBERNATE sleep	PA[17]

52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	Pin can wake from HIBERNATE sleep	PA[16]
54	SCK / D13	D13 GPIO, SPI SCK	Pin can wake from HIBERNATE sleep	PA[18]

Most pins can use `INPUT_PULLUP` or `INPUT_PULLDOWN` in sleep modes. The exception is `HIBERNATE` sleep mode where pin D21 can only use an external hardware pull-up or pull down. It also cannot be used to wake from hibernate sleep mode.

Pin	Pin Name	Description	Interface	MCU
17	D21	D21 GPIO, I2S RX	No internal pull up or pull down in HIBERNATE sleep mode.	PA[0]

SETUP AND RESET BUTTON

It is highly recommended that you add MODE (SETUP) and RESET buttons to your base board using momentary switches that connect to GND. These are necessary to change the operating mode of the device, for example to enter listening or DFU mode.


Pin	Pin Name	Description	MCU
32	MODE	MODE button. Pin number constant is BTN. External pull-up required!	PA[11]
34	RST	Hardware reset, active low. External pull-up required.	CHIP_EN

The MODE button does not have a hardware pull-up on it, so you must add an external pull-up (2.2K to 10K) to 3V3, or connect it to 3V3 if not using a button.

The RST pin does have an internal weak pull-up, but you may want to add external pull-up on that as well, especially if you use an off-board reset button connected by long wires.

SUPERVISORY RESET

In many cases, it may be desirable to include a supervisory reset IC in your design. The design below is from the Photon 2 and uses the small and inexpensive Richtec RT9818C. This chip will hold the MCU in reset until there is sufficient voltage to successfully boot. This can be helpful if your power supply cannot guarantee a sufficient slew rate.

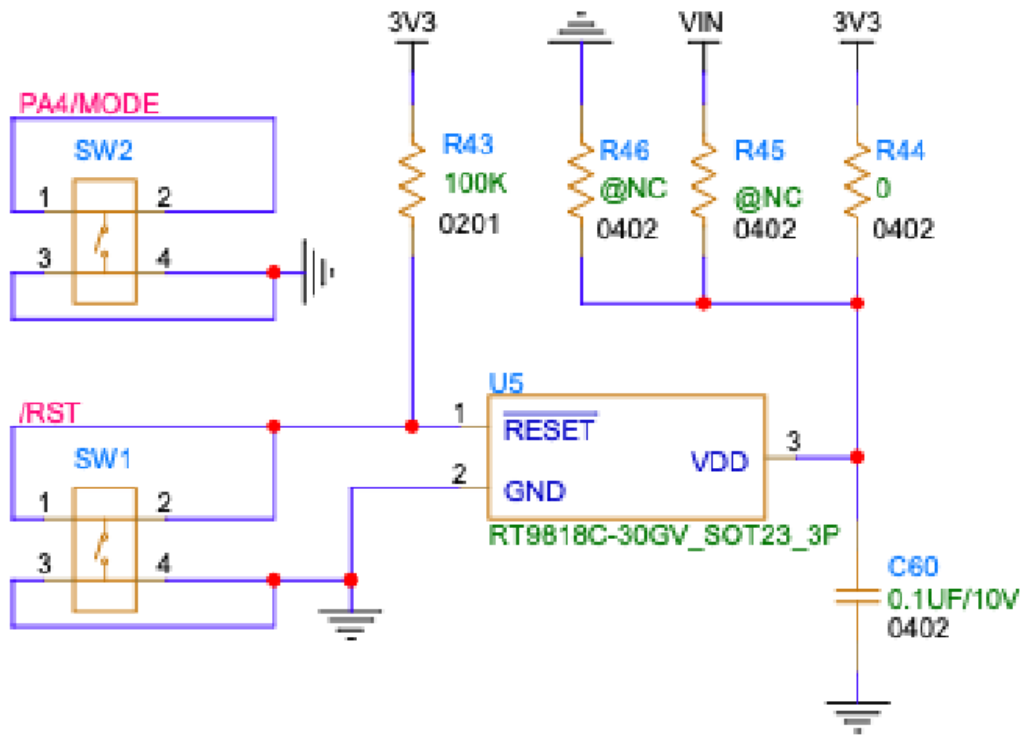

Of note in this design, the VDD pin of the RT9818C is connected to 3V3. The design is configurable by moving a zero-ohm resistor to disable supervisory reset (by connecting to GND) or to use VIN. Note that the RT9818C has a maximum input voltage of 6V which is compatible with the Photon 2. Keep this in mind if using VIN on designs that have larger VIN voltages.

Of course you can simply wire VDD to 3V3 instead of including the configurable resistors.

PMIC NOTES

When using the M-SoM with a bq24195 PMIC, note the following:

By default, the bq24195 sets the input current limit, which affects powering by VIN and VUSB, to 100 mA. This affects the VSYS output of the PMIC, which powers both the cellular modem and 3V3 supply, and is not enough to power the M-SoM in normal operation.

If your device has the default firmware (Tinker), it will attempt to connect to the cloud, brown out due to insufficient current, then the device will reset. This may result in what appears to be the status LED blinking white, but is actually rolling reboot caused by brownout.

A factory new M-SoM does not enable the PMIC setup. To enable the use of the bq24195, you must enable the system power feature [PMIC_DETECTION](#) in your code. This defaults to off because the M-SoM can be used without a PMIC, or with a different PMIC, and also requires I2C on D0/D1, and some base boards may use those pins as GPIO.

Because the input current limit does not affect the battery input (Li+), for troubleshooting purposes it can be helpful to attach a battery to help rule out input current limit issues. It's also possible to supply 3.7V via a bench power supply to the battery input, instead of VIN.

The input current limit can result in a situation where you can't bring up a M-SoM because it browns out continuously, but also cannot flash code to it to stop it from browning out. There are two general solutions:

- Attach a battery or supply by Li+ when bringing up a board.
- Use SWD/JTAG and reset halt the MCU. This will prevent it from connecting to the cloud, so you can flash Device OS and firmware to it by SWD.

The input current limit is actually controlled by three factors:

- The [power source max current setting](#) in the PMIC. The default is 900 mA. It can be set to 100, 150, 500, 900, 1200, 1500, 2000, or 3000 mA.
- It is also limited by the hardware ILIM resistor. On Particle devices with a built-in PMIC, this is set to 1590 mA, but if you are implementing your own PMIC hardware, you can adjust this higher.
- When connected by USB, it will use DPDM, current negotiation via the USB DP (D+) and DM (D-) lines.

Note that some 2A tablet chargers and multi-port USB power supplies supply 2A but do not implement DPDM; these will be treated as if VIN was used, and you must set the power source current, otherwise the input current will be limited to 900 mA, which is not enough to power a 2G/3G cellular modem without an attached battery.

CELLULAR MODEM USB PINS

The cellular modem USB pins are optional on custom base boards. These pins are used for low-level diagnostics and reprogramming the cellular modem firmware.

Note, however, the Particle has never done a cellular modem firmware upgrade in the field because doing so generally requires recertification, and is there is a high likelihood that the upgrade will fail, rendering the modem unusable.

Cellular modem could be reprogrammed by removing the SoM from your board and putting it in the M.2 SoM breakout board, which has the cellular modem USB connector.

#	Pin	Common	Function	nRF52	Description
44	Quectel USB D+	SOM0	IO		Data+ pin of the cellular modem USB port.
46	Quectel USB D-	SOM1	IO		Data- pin of the cellular modem USB port.
74	Quectel VBUS	SOM2 ³	IO		USB detect pin for cellular modem. 5V on this pin enables the Quectel USB interface.
75	Quectel RI	SOM9 ⁴	IO		Ring indicator

SIM PINS

- The SIM pins should be left unconnected
- You cannot use these pins for an external SIM card, despite their names

Pin	Pin Name	Description
69	SIM_RST	Leave unconnected, 1.8V/3V SIM Reset Output from cellular modem.
71	SIM_CLK	Leave unconnected, 1.8V/3V SIM Clock Output from cellular modem.
73	SIM_DATA	Leave unconnected, 1.8V/3V SIM Data I/O of cellular modem with internal 4.7 k pull-up.

Technical specification

I/O CHARACTERISTICS

Parameter	Symbol	Min	Typ	Peak	Unit
Input-High Voltage	V _{IH}	2.0			V
Input-Low Voltage	V _{IL}			0.8	V
Output drive strength (normal drive)				4	mA
Output drive strength (high drive)				12	mA
Total output drive (all pins)				200	mA

POWER CONSUMPTION (M524)

Parameter	Symbol	Min	Typ	Peak	Unit
Operating current (uC on, peripherals and radio disabled)	I _{idle}	26.4	26.6	26.9	mA
Operating current (uC on, BLE advertising)	I _{ble_adv}	62.9	66.1	84.2	mA
Operating current (uC on, BLE connected but idle)	I _{ble_conn_idle}	62.4	66.7	74	mA
Operating current (uC on, BLE scanning)	I _{ble_scan}	50.5	57.2	87.7	mA
Operating current (uC on, cellular on but not connected)	I _{cell_idle}	36.7	44.4	907	mA
Operating current (uC on, cellular connecting to cloud)	I _{cell_conn_cloud}	40.2	97.4	840	mA
Operating current (uC on, cellular connected but idle)	I _{cell_cloud_idle}	37	43.1	132	mA
Operating current (uC on, cellular connected and transmitting)	I _{cell_cloud_tx}	39.9	164	851	mA
Operating current (uC on, Wi-Fi on but not connected)	I _{wifi_idle}	26.1	26.3	26.6	mA
Operating current (uC on, Wi-Fi connecting to access point)	I _{wifi_conn_ap}	44.3	67.3	298	mA
Operating current (uC on, Wi-Fi connecting to cloud)	I _{wifi_conn_cloud}	61	68.2	357	mA
Operating current (uC on, Wi-Fi connected but idle)	I _{wifi_cloud_idle}	61.9	64.1	68.4	mA
Operating current (uC on, Wi-Fi connected and transmitting)	I _{wifi_cloud_tx}	60.1	64.8	309	mA
STOP mode sleep, GPIO wake-up	I _{stop_gpio}	419	421	425	uA
STOP mode sleep, RTC wake-up	I _{stop_inrtc}	412	415	418	uA
ULP mode sleep, GPIO wake-up	I _{ulp_gpio}	419	421	425	uA
ULP mode sleep, RTC wake-up	I _{ulp_inrtc}	412	415	418	uA
HIBERNATE mode sleep, GPIO wake-up	I _{hib_gpio}	23.9	26.1	28.6	uA
HIBERNATE mode sleep, RTC wake-up	I _{hib_inrtc}	24.5	26.5	28.1	uA

¹The min, and particularly peak, values may consist of very short transients. The typical (typ) values are the best indicator of overall power consumption over time. The peak values indicate the absolute minimum capacity of the power supply necessary, not overall consumption.

Current measurements taken at 3.6V via the battery input. For more information about measuring power usage, see [power measurement](#).

POWER CONSUMPTION (M404)

Parameter	Symbol	Min	Typ	Peak	Unit
Operating current (uC on, peripherals and radio disabled)	I _{idle}	27.7	27.9	28.1	mA
Operating current (uC on, BLE advertising)	I _{ble_adv}	65.5	69.5	85.9	mA
Operating current (uC on, BLE connected but idle)	I _{ble_conn_idle}	65.5	70.1	77	mA

Operating current (uC on, BLE scanning)	I _{ble_scan}	52.6	60.5	91.1	mA
Operating current (uC on, cellular connected and transmitting)	I _{cell_cloud_tx}	36.2	159	816	mA
Operating current (uC on, cellular on but not connected using LTE Cat M1)	I _{cell_idle_catm1}	41.5	46.7	217	mA
Operating current (uC on, cellular connecting to tower using LTE Cat M1)	I _{cell_conn_twr_catm1}	39.8	43.9	131	mA
Operating current (uC on, cellular connecting to cloud using LTE Cat M1)	I _{cell_conn_cloud_catm1}	39.7	83.5	181	mA
Operating current (uC on, cellular connected but idle using LTE Cat M1)	I _{cell_cloud_idle_catm1}	41.8	44.5	155	mA
Operating current (uC on, cellular connected and transmitting using LTE Cat M1)	I _{cell_cloud_tx_catm1}	40.1	83.6	177	mA
Operating current (uC on, cellular on but not connected using 2G)	I _{cell_idle_2g}	38.9	44.7	1700	mA
Operating current (uC on, cellular connecting to tower using 2G)	I _{cell_conn_twr_2g}	36.9	128	1700	mA
Operating current (uC on, cellular connecting to cloud using 2G)	I _{cell_conn_cloud_2g}	35.9	98.3	1740	mA
Operating current (uC on, cellular connected but idle using 2G)	I _{cell_cloud_idle_2g}	35.8	40.3	114	mA
Operating current (uC on, cellular connected and transmitting using 2G)	I _{cell_cloud_tx_2g}	32	152	1720	mA
Operating current (uC on, Wi-Fi on but not connected)	I _{wifi_idle}	27.3	30.4	101	mA
Operating current (uC on, Wi-Fi connecting to access point)	I _{wifi_conn_ap}	25.4	68.9	353	mA
Operating current (uC on, Wi-Fi connecting to cloud)	I _{wifi_conn_cloud}	59.8	109	469	mA
Operating current (uC on, Wi-Fi connected but idle)	I _{wifi_cloud_idle}	61.6	64.5	184	mA
Operating current (uC on, Wi-Fi connected and transmitting)	I _{wifi_cloud_tx}	60.7	64.9	349	mA
STOP mode sleep, GPIO wake-up	I _{stop_gpio}	542	547	551	uA
STOP mode sleep, RTC wake-up	I _{stop_intrtc}	512	515	518	uA
ULP mode sleep, GPIO wake-up	I _{ulp_gpio}	542	547	551	uA
ULP mode sleep, RTC wake-up	I _{ulp_intrtc}	512	515	518	uA
HIBERNATE mode sleep, GPIO wake-up	I _{hib_gpio}	41.9	44	45.8	uA
HIBERNATE mode sleep, RTC wake-up	I _{hib_intrtc}	41.1	43.4	45.3	uA

¹The min, and particularly peak, values may consist of very short transients. The typical (typ) values are the best indicator of overall power consumption over time. The peak values indicate the absolute minimum capacity of the power supply necessary, not overall consumption.

Current measurements taken at 3.6V via the battery input. For more information about measuring power usage, see [power measurement](#).

RADIO SPECIFICATIONS

Realtek RTL872x for Wi-Fi 2.4 GHz

Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range	Center channel	2412	-	2484	MHz
Output power	1 Mbps CCK	-	20	21	dBm
	11 Mbps CCK	-	18	21	dBm
	BPSK rate 1/2, 6Mbps OFDM	-	20	21	dBm
	64QAM rate 3/4, 54Mbps OFDM	-	17	18	dBm
	HT20-MCS 0, BPSK rate 1/2	-	19	20	dBm
	HT20-MCS 7, 64QAM rate 5/6	-	16	17	dBm

	HT40-MCS 0, BPSK rate 1/2	-	19	20	dBm
	HT40-MCS 7, 64QAM rate 5/6	-	16	17	dBm
Tx EVM	BPSK rate 1/2, 6Mbps OFDM	-	-	-5	dB
	64QAM rate 3/4, 54Mbps OFDM	-	-	-25	dB
	HT20-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT20-MCS 7, 64QAM rate 5/6	-	-	-28	dB
	HT40-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT40-MCS 7, 64QAM rate 5/6	-	-	-28	dB
Output power variation		-1.5	-	1.5	dBm
Carrier suppression		-	-	-30	dBm

Realtek RTL872x for Wi-Fi 5 GHz

Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range	Center channel	5180	-	5825	MHz
Output power	BPSK rate 1/2, 6Mbps OFDM	-	19	19	dBm
	64QAM rate 3/4, 54Mbps OFDM	-	14	15	dBm
	HT20-MCS 0, BPSK rate 1/2	-	17	18	dBm
	HT20-MCS 7, 64QAM rate 5/6	-	13	14	dBm
	HT40-MCS 0, BPSK rate 1/2	-	17	18	dBm
	HT40-MCS 7, 64QAM rate 5/6	-	13	14	dBm
Tx EVM	BPSK rate 1/2, 6Mbps OFDM	-	-	-5	dB
	64QAM rate 3/4, 54Mbps OFDM	-	-	-25	dB
	HT20-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT20-MCS 7, 64QAM rate 5/6	-	-	-28	dB
	HT40-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT40-MCS 7, 64QAM rate 5/6	-	-	-28	dB
Output power variation		-1.5	-	1.5	dBm
Carrier suppression		-	-	-30	dBm

Realtek RTL872x for BLE

Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range		2402	-	2480	MHz
Tx Output power		-10	4.5		dBm

Cellular characteristics for BG95-M5 (M404)

Parameter	Value
Protocol stack	3GPP Release 14
RAT	LTE Cat M1
LTE FDD Bands	Band 12 (700 MHz)
	Band 13 (700 MHz)
	Band 28 (700 MHz)
	Band 20 (800 MHz)
	Band 5 (850 MHz)
	Band 26 (850 MHz)
	Band 8 (900 MHz)


	Band 4 (1700 MHz)
	Band 3 (1800 MHz)
	Band 2 (1900 MHz)
	Band 25 (1900 MHz)
	Band 1 (2100 MHz)
	Band 66 (2100 MHz)
GSM Bands	GSM850 (850 MHz)
	EGSM900 (900 MHz)
	DCS1800 (1800 MHz)
	PCS1900 (1900 MHz)
Power class	Class 4 (33dBm $\pm$ 2dB) for GSM850
	Class 4 (33dBm $\pm$ 2dB) for EGSM900
	Class 1 (30dBm $\pm$ 2dB) for DCS1800
	Class 1 (30dBm $\pm$ 2dB) for PCS1900
	Class E2 (27dBm $\pm$ 3dB) for GSM850 8-PSK
	Class E2 (27dBm $\pm$ 3dB) for EGSM900 8-PSK
	Class E2 (26dBm $\pm$ 3dB) for DCS1800 8-PSK
	Class E2 (26dBm $\pm$ 3dB) for PCS1900 8-PSK
	Class 3 (23dBm $\pm$ 2dB) for LTE FDD bands

Cellular characteristics for EC91-EX (M524)

Parameter	Value
Protocol stack	3GPP Release 13
RAT	LTE Cat 1
LTE FDD Bands	Band 28A (700 MHz)
	Band 20 (800 MHz)
	Band 8 (900 MHz)
	Band 3 (1800 MHz)
	Band 1 (2100 MHz)
	Band 7 (2600 MHz)
WCDMA Bands	Band 8 (900 MHz)
	Band 1 (2100)
GSM Bands	EGSM900 (900 MHz)
	DCS1800 (1800 MHz)
Power class	Class 4 (33dBm $\pm$ 2dB) for EGSM900
	Class 1 (30dBm $\pm$ 2dB) for DCS1800
	Class E2 (27dBm $\pm$ 3dB) for EGSM900 8-PSK
	Class E2 (26dBm $\pm$ 3dB) for DCS1800 8-PSK
	Class 3 (24dBm $\pm$ 3dB) for WCDMA bands
	Class 3 (23dBm $\pm$ 2dB) for LTE FDD bands

Mechanical specifications

MECHANICAL DRAWING

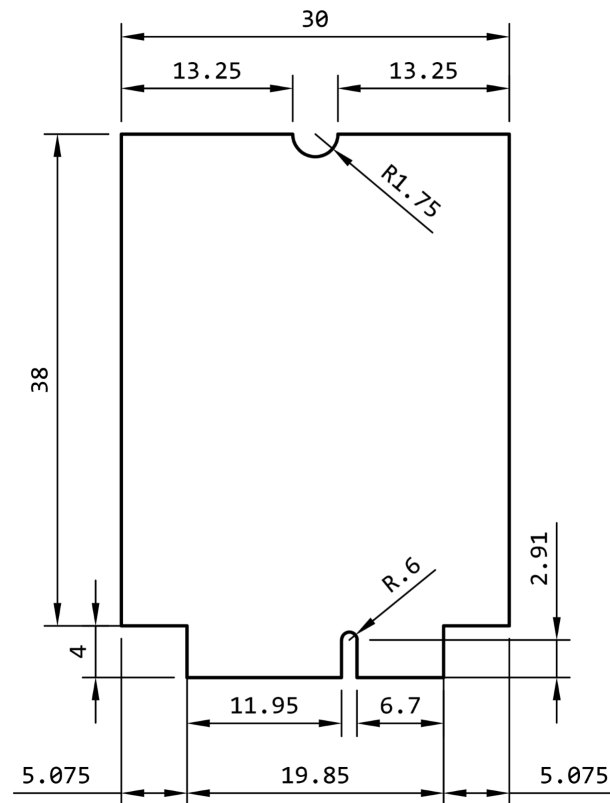


Dimensions are in millimeters.

MATING CONNECTOR AND LAND PATTERN

The mating connector is a an M.2 (NGFF) type 4. Note that there are several different key configurations for the M.2, and type 4 is different than is commonly used on SSDs.

One compatible connector is the [TE 2199230-4](#). It is widely available including at suppliers such as [DigiKey](#).

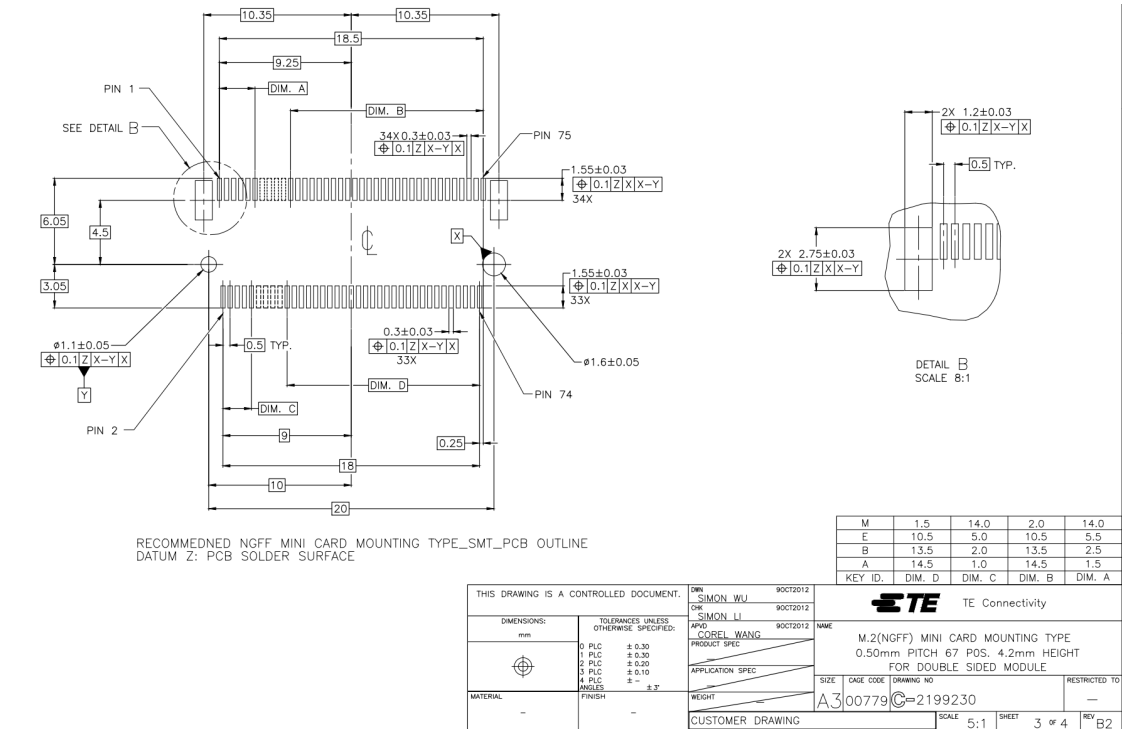

A device, footprint, and symbol for EagleCAD are available in the [hardware-libraries Github](#).

SCREW ASSEMBLY

The M.2 SoM requires a screw to hold the SoM in place because the M.2 connector does not have integrated locks and the SoM will pop up if not attached to the base board. The screw also provides better vibration resistance than locking clips.


- This is one style of standoff.

宝贝实拍 PRODUCT PHOTOS



图纸参数 Drawing parameter

NGFF M. 2 4. 2H高配套铜柱

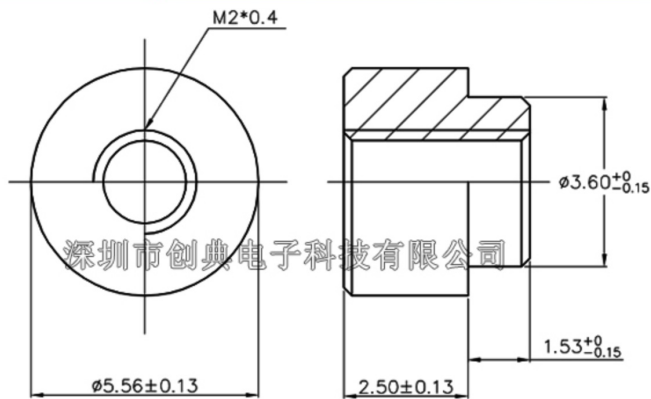


- An [alternative design](#) uses a [JAE SM3ZS067U410-NUT1-R1200](#) standoff. It's reflow soldered to your base board and has a threaded hole for a M2*3 screw to hold down the SoM. This may be easier to obtain.

The screw should be connected to the ground plane on your base board.

DESIGN CONSIDERATIONS

We strongly recommend against placing components under the SOM board because there is not enough height.

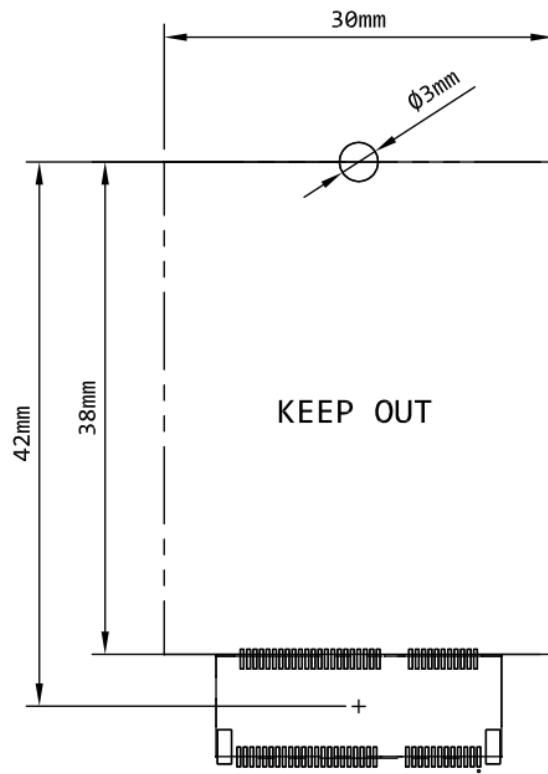

REFERENCE DESIGN

The [M.2 breakout board design](#) design files for EagleCAD are available as a reference design.

Product Handling

ESD PRECAUTIONS

The M-SoM contains highly sensitive electronic circuitry and is an Electrostatic Sensitive Device (ESD). Handling an M-SoM without proper ESD protection may destroy or damage it permanently. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the Particle M-SoM. ESD precautions should be implemented on the application board where the M-SoM is mounted. Failure to observe these precautions can result in severe damage to the M-SoM!

CONNECTORS

The U.FL antenna connector is not designed to be constantly plugged and unplugged. The antenna pin is static sensitive and you can destroy the radio with improper handling. A tiny dab of glue (epoxy, rubber cement, liquid tape or hot glue) on the connector can be used securely hold the plug in place.

The M.2 edge connector is static sensitive and should be handled carefully. The M.2 connector is not designed for repeated removal and insertion of the module.

Default settings

The M-SoM comes pre-programmed with a bootloader and a user application called Tinker. This application works with an iOS and Android app also named Tinker that allows you to very easily toggle digital pins, take analog and digital readings and drive variable PWM outputs.

The bootloader allows you to easily update the user application via several different methods, USB, OTA, Serial Y-Modem, and also internally via the Factory Reset procedure. All of these methods have multiple tools associated with them as well.

FCC Warnings and End Product Labeling Requirements

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device is intended only for OEM integrators under the following conditions: (For module device use)

- (1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- (2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

IMPORTANT NOTICE TO OEM INTEGRATORS - FCC

1. This module is limited to OEM installation ONLY.
2. This module is limited to installation in mobile applications, according to Part 2.1091(b).
3. The separate approval is required for all other operating configurations, including portable configurations with respect to Part 2.1093 and different antenna configurations
4. For FCC Part 15.31 (h) and (k): The host manufacturer is responsible for additional testing to verify compliance as a composite system. When testing the host device for compliance with Part 15 Subpart B, the host manufacturer is required to show compliance with Part 15 Subpart B while the transmitter module(s) are installed and operating. The modules should be transmitting and the evaluation should confirm that the Module's intentional emissions are compliant (i.e. fundamental and out of band emissions). The host manufacturer must verify that there are no

additional unintentional emissions other than what is permitted in Part 15 Subpart B or emissions are compliant with the transmitter(s) rule(s). The Grantee will provide guidance to the host manufacturer for Part 15 B requirements if needed. Important Note notice that any deviation(s) from the defined parameters of the antenna trace, as described by the instructions, require that the host product manufacturer must notify to Particle that they wish to change the antenna trace design. In this case, a Class II permissive change application is required to be filed by the Particle, or the host manufacturer can take responsibility through the change in FCC ID (new application) procedure followed by a Class II permissive change application.

5. This device is certified as a limited module due to lack of shielding. As this device doesn't not have a shield over the radio chip over the radio chip, additional testing and a Class II filing is required for installation in all host devices.

END PRODUCT LABELING - FCC

When the module is installed in the host device, the FCC label must be visible through a window on the final device or it must be visible when an access panel, door or cover is easily re-moved. If not, a second label must be placed on the outside of the final device that contains the following text:

Contains FCC ID: 2AEMI-M404

The FCC ID can be used only when all FCC compliance requirements are met.

ANTENNA INSTALLATION - FCC

- (1) The antenna must be installed such that 20 cm is maintained between the antenna and users.
- (2) The transmitter module may not be co-located with any other transmitter or antenna.
- (3) Only antennas of the same type and with equal or less gains as shown below may be used with this module. Other types of antennas and/or higher gain antennas may require additional authorization for operation.

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

To comply with FCC regulations limiting both maximum RF output power and human exposure to RF radiation, Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device:

- 814–849 MHz : 2.01 dBi
- 698–716 MHz: 2.17 dBi
- 703–748 MHz : 2.5 dBi
- 777–787 MHz: 5.3 dBi
- 824–849 MHz: 2.01 dBi
- 1710–1755 MHz: 3.74 dBi
- 1755–1780 MHz : 4 dBi
- 1850–1915 MHz: 5.3 dBi
- 1626.5–1660.5: 3.91 dBi
- 1980–2010 MHz: 4.61dBi
- 2000–2020 MHz: 4.37dBi
- BLE: 2400 MHz-2483.5 MHz: 3dBi
- WiFi: 2400MHz-2483.5MHz: 3dBi

- WiFi:5150MHz-5850MHz:6.8dBi

MANUAL INFORMATION TO THE END USER - FCC

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the users manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual. Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

OUTDOOR USE - FCC

To be compliant to FCC §15.407(a) the EIRP is not allowed to exceed 125 mW (21 dBm) at any elevation angle above 30° (measured from the horizon) when operated as an outdoor access point in U-NII-1 band, 5.150-5.250 GHz.

ISED Warnings and End Product Labeling Requirements

Innovation, Science and Economic Development

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference;
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RADIATION EXPOSURE STATEMENT - ISED

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device is intended only for OEM integrators under the following conditions: 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes: 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les utilisateurs, et 2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 2 conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

To comply with ISED regulations limiting both maximum RF output power and human exposure to RF radiation, Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device:

- 824–849 MHz (GSM 850): 2.01 dBi
- 1850–1910 MHz (GSM 1900): 5.3 dBi
- 699–716 MHz (LTE B12): 2.17 dBi
- 703–748 MHz (LTE B28): 2.5 dBi
- 777–787 MHz (LTE B13): 5.3 dBi
- 824–849 MHz (LTE B5): 1.94 dBi
- 1710–1755 MHz (LTE B4): 2.74 dBi
- 1710–1780 MHz (LTE B66): 3.74 dBi
- 1850–1910 MHz (LTE B2): 5.3 dBi
- BLE:2400 MHz-2483.5 MHz: 3dBi
- WiFi:2400MHz-2483.5MHz: 3dBi
- WiFi:5150MHz-5850MHz: 6.8dBi

IMPORTANT NOTE:

In the event that these conditions can not be met (for example certain laptop configurations or colocation with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

NOTE IMPORTANTE:

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

END PRODUCT LABELING - ISED

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users.

Contains IC: 20127-M524

Plaque signalétique du produit final

Ce module émetteur est autorisé uniquement pour une utilisation dans un dispositif où l'antenne peut être installée de telle sorte qu'une distance de 20cm peut être maintenue entre l'antenne et les utilisateurs. Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante:

Contient des IC: 20127-M524

MANUAL INFORMATION TO THE END USER - ISED

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à

la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module. Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.

OUTDOOR USE - ISED

- Operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; Operation in the 5600-5650 MHz band is not allowed in Canada. High-power radars are allocated as primary users (i.e., priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.
- Le dispositif de fonctionnement dans la bande 5150-5250 MHz est réservé à une utilisation en intérieur pour réduire le risque d'interférences nuisibles à la co-canal systèmes mobiles par satellite
- Opération dans la bande 5600-5650 MHz n'est pas autorisée au Canada. Haute puissance radars sont désignés comme utilisateurs principaux (c.-à-utilisateurs prioritaires) des bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer des interférences et / ou des dommages à dispositifs LAN-EL.

European Union (CE) Warnings and End Product Labeling Requirements

M524 - EUROPEAN UNION (CE)

We, Particle Industries, Inc, declare under our sole responsibility that the product, M524, to which this declaration relates, is in conformity with RED Directive 2014/53/EU and (EU) 2015/863 RoHS Directive 2011/65/EU (Recast).

The full text of the EU declaration of conformity is available at the following Internet address:
<https://www.particle.io/>

Radiation Exposure Statement: This equipment complies with radiation exposure limits set forth for an uncontrolled environment.

The operating frequency bands and the maximum transmitted power limit are listed below:

- BLE 2402-2480MHz 10dBm
- Wi-Fi 2.4GHz band 2412-2484MHz 20dBm
- Wi-Fi 5GHz band 5180-5825MHz 23dBm
- LTE B1 B3 B7 B8 B20 B28 704.5-959.3MHz 1710.7-2687.5 MHz, 25dBm
- WCDMA 882.4-957.6 MHz 1922.6-2167.4 MHz, 25dBm
- EGSM900 880-915 MHz, 33 dBm
- DCS1800 1710-1785 MHz, 30 dBm

UNITED KINGDOM

UKCA Conformity:

Radio Equipment Regulations 2017 (S.I. 2017/1206)

OUTDOOR USE (WORLD)

This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range. This restriction applies in: AT, BE, BG, CH, CY, CZ, DE, DK, EE, EL, ES, FI, FR, HR, HU, IE, IS, IT, LI, LT, LU, LV, MT, NL, NO, PL, PT, RO, SE, SI, SK, TR, UA, UK(NI).

Certification documents

FCC (UNITED STATES) - M404 M-SOM M-SERIES LTE-M/2G

- FCC ID: 2AEMI-M404
- [Part 15B](#)
- [Part 15C, Digital Transmission System 2.4 GHz](#)
- [Part 15E, Unlicensed national information infrastructure TX, 5 GHz](#)
- [Part 15B, Part 15 Class B Computing Device Peripheral](#)
- [Part 22H, 24E, 27, PCS Licensed Transmitter](#)

ISED (CANADA) - M404 M-SOM M-SERIES LTE-M/2G

- ISED: 20127-M504
- [Certificate](#)
- [Test Report RS-130](#)
- [Test Report RS-132](#)
- [Test Report RS-133](#)
- [Test Report RS-139](#)
- [ICES-003 Issue 7:2020](#)
- [Test Report RS-102](#) (RF Exposure)

ROHS - M404 M-SOM M-SERIES LTE-M/2G

- [RoHS 3.0 Test Reports](#)

CE (EUROPEAN UNION) - M524 M-SOM M-SERIES LTE CAT 1

- [EU Declaration of Conformity](#) (updated 2026-05-18)
- [Summary](#)
- [EN-62368-1 Test Report](#)
- [EN 300 328 Test Report BLE](#) (Bluetooth LE 2.4 GHz ISM band)
- [EN 300 328 Test Report Wi-Fi](#) (Wi-Fi 2.4 GHz ISM band)
- [EN 301 893 Test Report Wi-Fi](#) (Wi-Fi 5 GHz)
- [EN 300 440 Test Report Wi-Fi](#) (Wi-Fi 5 GHz)
- [EN 301 893 Test Report DFS](#) (Dynamic frequency selection clause 4.2.6)
- [EN 303 413 Test Report](#) (GNSS)
- [EN 301 489 Test Report](#)
- [EN 301 511 Test Report](#) (GSM)
- [EN 301 908 Test Report](#)
- [EN-62311 Test Report](#)
- [Test Report Photos](#)

ROHS - M524 M-SOM M-SERIES LTE CAT 1

- [RoHS 3.0 Test Reports](#)

Country compatibility

M404 - COUNTRY COMPATIBILITY

Country	Model	Technologies	Carriers
Canada	M404	M1	Bell Mobility, Rogers Wireless, Telus
Mexico	M404	M1	AT&T, Telcel
United States	M404	M1	AT&T, T-Mobile (USA), Verizon ⁷

The M404 is fully supported in the United States, Canada, and Mexico. It is in beta testing in other locations. See the [carrier list](#) for country compatibility information.

M404 - CERTIFIED BANDS

Technology	Band	FCC	CE
2G	850 MHz	✓	
2G	900 MHz		
2G	1800 MHz		
2G	1900 MHz	✓	
LTE Cat M1	B1 (2100 MHz)		✓
LTE Cat M1	B2 (1900 MHz)	✓	
LTE Cat M1	B3 (1800 MHz)		✓
LTE Cat M1	B4 (1700 MHz)	✓	
LTE Cat M1	B5 (850 MHz)	✓	
LTE Cat M1	B8 (900 MHz)		✓
LTE Cat M1	B12 (700 MHz)	✓	
LTE Cat M1	B13 (700 MHz)	✓	
LTE Cat M1	B20 (800 MHz)		✓
LTE Cat M1	B25 (1900 MHz)	✓	
LTE Cat M1	B26 (850 MHz)	✓	
LTE Cat M1	B28 (700 MHz)		✓
LTE Cat M1	B66 (2100 MHz)	✓	

M524 - COUNTRY COMPATIBILITY

Country	Model	Technologies	Carriers
Albania	M524	2G, 3G, 4G	Eagle, Telekom, Vodafone
Algeria	M524	2G, 3G, 4G	Mobilis, Ooredoo
Aruba	M524	2G, 3G, 4G	Setar
Australia	M524	4G	Optus, Telstra, Vodafone
Austria	M524	2G, 4G	3 (Drei), A1, T-Mobile
Bahrain	M524	2G, 4G	Zain
Bangladesh	M524	2G, 3G, 4G	Bangalink, GrameenPhone
Belarus	M524	2G, 3G, 4G	A1
Belgium	M524	2G, 4G	Base, Orange, Proximus
Bosnia and Herzegovina	M524	2G, 3G	HT Eronet
Botswana	M524	2G, 3G, 4G	BeMobile
Brunei	M524	3G, 4G	DST

Bulgaria	M524	2G, 3G	A1, Telenor, Vivacom
Burkina Faso	M524	2G, 3G, 4G	Orange
Cabo Verde	M524	2G, 3G, 4G	CVMóvel, Unitel T+
Cambodia	M524	2G, 3G	Metfone
Chad	M524	2G, 3G, 4G	Airtel
Chile	M524	3G, 4G	Claro, Entel, Movistar
Congo (Brazzaville)	M524	2G, 3G, 4G	Airtel
Congo (Kinshasa)	M524	2G, 3G, 4G	Airtel
Côte d'Ivoire	M524	2G, 3G	MTN
Croatia	M524	2G, 3G, 4G	Hrvatski Telekom, Tele2
Cyprus	M524	2G, 3G, 4G	MTN, PrimeTel
Czechia	M524	2G, 4G	O2, T-Mobile, Vodafone
Denmark	M524	2G, 4G	3 (Tre), TDC, Telenor, Telia
Egypt	M524	2G, 3G, 4G	Etisalat, Orange
Estonia	M524	2G, 3G, 4G	Elisa, Tele2, Telia
eSwatini	M524	2G, 3G, 4G	MTN
Ethiopia	M524	2G, 3G, 4G	Ethio Telecom
Faroe Islands	M524	2G, 3G	Faroese Telecom, Vodafone
Finland	M524	2G, 4G	DNA, Elisa, Telia
France	M524	2G, 3G, 4G	Bouygues, Free Mobile, Orange, SFR
French Guiana	M524	2G, 3G	Digicel
Gabon	M524	2G, 3G, 4G	Airtel
Germany	M524	2G, 4G	O2, Telekom, Vodafone
Ghana	M524	2G, 3G, 4G	AirtelTigo, MTN, Vodafone
Gibraltar	M524	2G, 3G, 4G	Gibtel
Greece	M524	2G, 4G	Cosmote, Vodafone, Wind
Guinea	M524	2G, 3G, 4G	MTN
Guinea-Bissau	M524	2G, 3G, 4G	MTN
Guyana	M524	2G	Digicel
Hong Kong	M524	3G, 4G	CMHK, CSL, SmarTone
Hungary	M524	2G, 3G, 4G	Magyar Telekom, Telenor, Vodafone
Iceland	M524	4G	Nova, Siminn, Vodafone
Indonesia	M524	2G, 4G	Indosat, Telkomsel, XL Axiata
Ireland	M524	2G, 3G, 4G	3 (Tre), Meteor, O2, Vodafone
Israel	M524	4G	Hot Mobile, Orange, Pelephone
Italy	M524	2G, 4G	TIM, Vodafone, Wind
Jordan	M524	2G, 3G, 4G	Zain
Kazakhstan	M524	2G, 3G, 4G	Beeline, K-Cell
Kenya	M524	2G, 3G, 4G	Airtel
Kuwait	M524	2G, 3G, 4G	Viva, Zain
Latvia	M524	2G, 4G	Bite, LMT, Tele2
Liechtenstein	M524	2G, 3G, 4G	Mobilkom, Orange
Lithuania	M524	2G, 4G	Bite, Omnitel, Tele2
Luxembourg	M524	2G, 4G	Orange, POST, Tango
Macao	M524	3G, 4G	CTM

Madagascar	M524	2G, 3G, 4G	Airtel
Malawi	M524	2G, 3G, 4G	Airtel
Malaysia	M524	2G, 4G	Celcom, DiGi, Maxis
Malta	M524	2G, 3G, 4G	Go Mobile, Vodafone
Moldova	M524	2G, 3G, 4G	Moldcell, Orange
Mongolia	M524	2G, 3G	Mobicom, Unitel
Montenegro	M524	2G, 3G, 4G	Mtel, T-Mobile, Telenor
Morocco	M524	2G, 3G, 4G	Inwi, Medi Telecom
Mozambique	M524	2G, 3G, 4G	Vodacom
Myanmar	M524	2G, 3G, 4G	MPT, Telenor
Namibia	M524	2G, 3G, 4G	Telecom Namibia
Netherlands	M524	2G, 4G	KPN, T-Mobile, Vodafone
New Zealand	M524	4G	2degrees, Spark, Vodafone
Nigeria	M524	2G, 3G, 4G	9mobile, Airtel, Glo, MTN
Norway	M524	2G, 3G, 4G	TDC, Telenor, Telia
Pakistan	M524	2G, 3G, 4G	Mobilink, Telenor, Ufone, Warid
Palestine	M524	2G, 3G	Jawwal
Papua New Guinea	M524	2G, 3G	bmobile
Poland	M524	2G, 3G, 4G	Orange, Play, Plus, T-Mobile
Portugal	M524	2G, 3G, 4G	NOS, TMN, Vodafone
Qatar	M524	2G, 4G	Ooredoo, Vodafone
Romania	M524	2G, 4G	Orange, Telekom Romania, Vodafone
Rwanda	M524	2G, 3G	Airtel, MTN
Serbia	M524	2G, 3G, 4G	Telenor, VIP
Seychelles	M524	2G, 3G, 4G	Airtel
Sint Maarten	M524	2G, 3G	TelCell
Slovakia	M524	2G, 4G	O2, Orange, Telekom
Slovenia	M524	2G, 3G, 4G	A1, Mobitel
South Africa	M524	2G, 3G, 4G	Cell C, MTN, Vodacom
South Korea	M524	3G, 4G	KT, LG U+, SK Telecom
South Sudan	M524	2G, 3G	MTN
Spain	M524	2G, 3G, 4G	Orange, Telefonica, Vodafone, Yoigo
Sri Lanka	M524	2G, 4G	Dialog, Mobitel
Suriname	M524	2G, 3G	Telesur
Sweden	M524	2G, 4G	3 (Tre), Tele2, Telenor, Telia
Switzerland	M524	3G, 4G	Salt, Sunrise, Swisscom
Taiwan	M524	4G	Chunghwa, FarEasTone, T Star, Taiwan Mobile
Tanzania	M524	2G, 3G, 4G	Airtel
Thailand	M524	2G, 3G, 4G	AIS, DTAC, True Move
Tunisia	M524	2G, 3G, 4G	Orange Tunisie, Tunisie Telecom
Uganda	M524	2G, 3G, 4G	Africell, Airtel, MTN
United Kingdom	M524	2G, 4G	3, EE, O2, Vodafone
Vietnam	M524	3G, 4G	MobiFone, Viettel, Vinaphone
Zambia	M524	2G, 3G, 4G	Airtel

Technology	Band	CE
2G	900 MHz	✓
2G	1800 MHz	✓
3G	B1 (2100 MHz)	✓
3G	B8 (900 MHz)	✓
LTE Cat 1	B1 (2100 MHz)	✓
LTE Cat 1	B3 (1800 MHz)	✓
LTE Cat 1	B7 (2600 MHz)	✓
LTE Cat 1	B8 (900 MHz)	✓
LTE Cat 1	B20 (800 MHz)	✓
LTE Cat 1	B28 (700 MHz)	✓

Ordering information

SKU	Description	Region	Modem	EtherSIM	Lifecycle	Replacement
M404MEA	M-Series LTE-M/2G (Global, EtherSIM), [x1]	Global	BG95-M5	✓	GA	
M404MTY	M-Series LTE-M/2G (Global, EtherSIM), Tray [x50]	Global	BG95-M5	✓	GA	
M524MEA	M-Series LTE CAT1/3G/2G (Europe, EtherSIM), [x1]	EMEAA	EG91-EX	✓	GA	
M524MTY	M-Series LTE CAT1/3G/2G (Europe, EtherSIM), Tray [x50]	EMEAA	EG91-EX	✓	GA	
M635EMEA	M-Series LTE M1/2G/Satellite Kit (Global, EtherSIM), [x1]	Global	BG95-S5	✓	In development	

- EMEAA: Selected countries in Europe, Middle East, Africa, and Asia, including Australia and New Zealand. See the [cellular carrier list](#) for more information.

Revision history

Revision	Date	Author	Comments
pre	2023-10-03	RK	Initial version
	2023-12-20	RK	Added FCC and IC IDs. Additional notes for ADCs, D24, and D25
	2024-02-08	RK	Added power consumption information
	2024-02-20	RK	M.2 screw assembly should be connected to ground
	2024-02-20	RK	Added pin drive strength
	2024-03-14	RK	M SoM pin 45 is not shared. Pins 43 and 53 are both connected to PB[2], but not pin 45.
	2024-03-15	RK	The UART baud rate 2400, 4800, 380400, 460800 are supported but were not listed
	2024-03-26	RK	Listed certified bands for FCC and CE
001	2024-04-02	RK	General availability
002	2024-04-03	RK	Additional transmitter information
003	2024-04-18	RK	Add PDM microphone
004	2024-04-23	RK	Added links to certification documents
005	2024-04-25	RK	Added I/O characteristics
006	2024-04-30	RK	Corrected SPI interface speeds
007	2024-07-09	RK	Updated cellular modem on M635 to BG95-S5
008	2024-08-21	RK	Added supervisory reset information
009	2024-09-03	RK	Added clarification of cellular modem USB pins
010	2024-09-24	RK	Removed concurrent GNSS warning, added link to library
011	2024-10-02	RK	Added warning to not use Argon (ANT-FLXV2) antenna
012	2025-01-06	RK	Added note explaining reserved SoM pins
013	2025-01-21	RK	Incorrect RTL pin listed in SETUP and RESET button section. It was listed as PA[4] but is PA[11]. It was correct in the pin diagram.
014	2025-04-10	RK	Added links to hardware-libraries and M.2 breakout board designs
015	2025-06-25	RK	Clarifications for GNSS use
016	2026-05-18	RK	Updated EU Declaration of Conformity
017	2026-06-09	RK	Updated bands and country list for M635e
018	2026-06-15	RK	Added NTN antenna information

019	2026-06-17	RK	Updates for M635e certification
020	2026-07-09	RK	Updates for M635e certification
021	2026-07-27	RK	FCC, ISED, and EU certification document links
022	2026-07-28	RK	Separated the M635e datasheet