M715e datasheet (preliminary) 3
Overview 4
WHAT IS LTE CAT 1 BIS 4
COVERAGE COMPARISON 4
DEVICE COMPARISON (M-SERIES) 4
DEVICE COMPARISON (B-SERIES) 5
MCU 5
BLOCK DIAGRAM 5
DEVICE FAMILIES 6
MIGRATION GUIDES 6
POWER 6
VCC 6
3V3 6
RF 7
Approved Antennas 8
CERTIFIED CELLULAR ANTENNAS 8
CERTIFIED WI-FI/BLE ANTENNAS 8
GENERAL ANTENNA GUIDANCE 8
PERIPHERALS AND GPIO 8
JTAG AND SWD 9
Pin information 10
PINOUT DIAGRAM 10
COMMON SOM PINS 10
PIN FUNCTION BY PIN NAME 10
PIN FUNCTION BY M.2 PIN 11
GPIO (DIGITAL I/O) 12
ADC (ANALOG TO DIGITAL CONVERTER) 13
UART SERIAL 14
SPI 14
I2C 15
PWM 15
PDM 16
USB 16
RGB LED 16
BOOT MODE PINS 17
BLE (BLUETOOTH LE) 17
SLEEP 17
SETUP AND RESET BUTTON 18
SUPERVISORY RESET 18
PMIC NOTES 19
CELLULAR MODEM USB PINS 20
SIM PINS 20
Technical specification 21
RECOMMENDED OPERATING CONDITIONS 21
I/O CHARACTERISTICS 21

POWER CONSUMPTION 21
RADIO SPECIFICATIONS 21
Realtek RTL872x for Wi-Fi 2.4 GHz 21
Realtek RTL872x for Wi-Fi 5 GHz 21
Realtek RTL872x for BLE 22
Cellular characteristics for EG800Q-GL (M715e) 22
Mechanical specifications 23
MECHANICAL DRAWING 23
MATING CONNECTOR AND LAND PATTERN 24
SCREW ASSEMBLY 25
DESIGN CONSIDERATIONS 25
REFERENCE DESIGN 26
Product Handling 27
ESD PRECAUTIONS 27
CONNECTORS 27
Default settings 28
FCC Warnings and End Product Labeling Requirements 29
FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT 29
IMPORTANT NOTICE TO OEM INTEGRATORS - FCC 29
END PRODUCT LABELING - FCC 30
ANTENNA INSTALLATION - FCC 30
MANUAL INFORMATION TO THE END USER - FCC 30
OUTDOOR USE - FCC 31
ISED Warnings and End Product Labeling Requirements 32
RADIATION EXPOSURE STATEMENT - ISED 32
UNITED KINGDOM 33
OUTDOOR USE (WORLD) 33
Certification documents 34
Country compatibility 35
Ordering information 39
Revision history 40

M715e datasheet (preliminary)

This is a preliminary datasheet and is subject to change.

This datasheet is for the M715e. See also:

- M404 and M524.
- M635e.

Overview

The Particle M-SoM contains the following functional units:

- M.2 SoM form-factor, like the B-Series SoM
- Can use cellular or Wi-Fi (2.4 GHz or 5 GHz) for the cloud connection
- Realtek RTL8722DM MCU (BLE and Wi-Fi)
- Cellular modem
  - M404: Quectel BG95-M5 LTE Cat M1 (NorAm)
  - M524: Quectel EG91-EX LTE Cat 1 with 2G/3G fallback (EMEAA)
  - M635e: Quectel BG95-S5 LTE Cat M1/2G (Global with NTN satellite)
  - M715e Quectel EG800Q-GL LTE Cat 1 bis (Global)

WHAT IS LTE CAT 1 BIS

LTE CAT 1 bis provides cellular connectivity using a compact and lower-cost cellular module and a single antenna.


LTE CAT 1 (regular) modules require two antennas for receive antenna diversity, and generally require higher power, especially for 2G or 3G fallback.

LTE Cat M1 is also a compact, low-cost, single antenna standard, however it requires additional equipment at the cellular tower side and is not universally implemented worldwide.

LTE CAT 1 and LTE CAT 1 bis use the same 4G LTE towers used by 4G cell phones. Since all 5G cell phones also can connect to 4G, there is widespread support and no carriers have announced plans to sunset 4G.

COVERAGE COMPARISON

Since the M715e supports LTE Cat 1 bis, it can be used world-wide with a single SKU, replacing both the M404 and M524 in many applications, and also with improved coverage for South America.

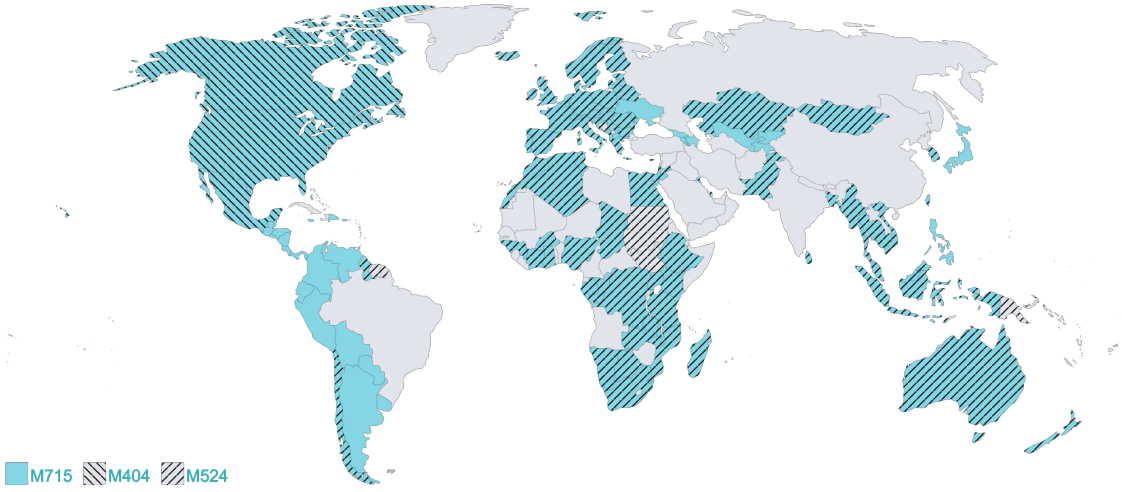

DEVICE COMPARISON (M-SERIES)

	M715e	M404	M524
Lifecycle	In development	GA	GA
Cellular modem	Quectel EG800Q-GL	Quectel BG95-M5	Quectel EG91-EX
Cellular region	Global	NorAm	EMEAA

Cellular technology	LTE CAT 1 bis	LTE Cat M1	LTE Cat 1 with 2G/3G fallback
GNSS support	No	Yes	Yes
SIM	e-sim	MFF2	MFF2
Platform	N/A	M-SoM (35)	M-SoM (35)

DEVICE COMPARISON (B-SERIES)


	M715e	B404X	B524	B504e
Lifecycle	In development	GA	GA	GA
Cellular modem	Quectel EG800Q-GL	u-blox SARA-R510S	Quectel EG91-E	Quectel EG91-NAX
Cellular region	Global	NorAm	EMEAA	Americas
Cellular technology	LTE CAT 1 bis	LTE Cat M1	LTE Cat 1 with 2G/3G fallback	LTE Cat 1 with 3G fallback
Wi-Fi supported	Yes (2.4 GHz and 5 GHz)	No	No	No
Generation	Gen 4	Gen 3	Gen 3	Gen 3
MCU	RTL8722DM	nRF52840	nRF52840	nRF52840
MCU processor speed	200 MHz Cortex-M33	64 MHz Cortex-M4F	64 MHz Cortex-M4F	64 MHz Cortex-M4F
User RAM available	3072 KB	~80 KB	~80 KB	~80 KB
Maximum user application size	2048 KB	256 KB	256 KB	256 KB
BLE support	Yes	Yes	Yes	Yes
NFC tag support	No	Yes	Yes	Yes
GNSS support	No	No	No	Yes
SIM	e-sim	MFF2	MFF2	e-sim
Platform	N/A	B-SoM (23)	B5-SoM (25)	B5-SoM (25)

MCU

The Realtek RTL8722DM is in the same family as the P2 and Photon 2 modules (RTL8721DM), but has additional GPIO.

- 802.11a/b/g/n Wi-Fi, 2.4 GHz and 5 GHz
  - U.FL connector for external antenna
- BLE 5 using same antenna as Wi-Fi
- Realtek RTL8722DM MCU
  - ARM Cortex M33 CPU, 200 MHz
- 2048 KB (2 MB) user application maximum size
- 3072 KB (3 MB) of RAM available to user applications
- 2 MB flash file system for user data storage
- FCC (United States), ISED (Canada), and CE (European Union) certified

BLOCK DIAGRAM

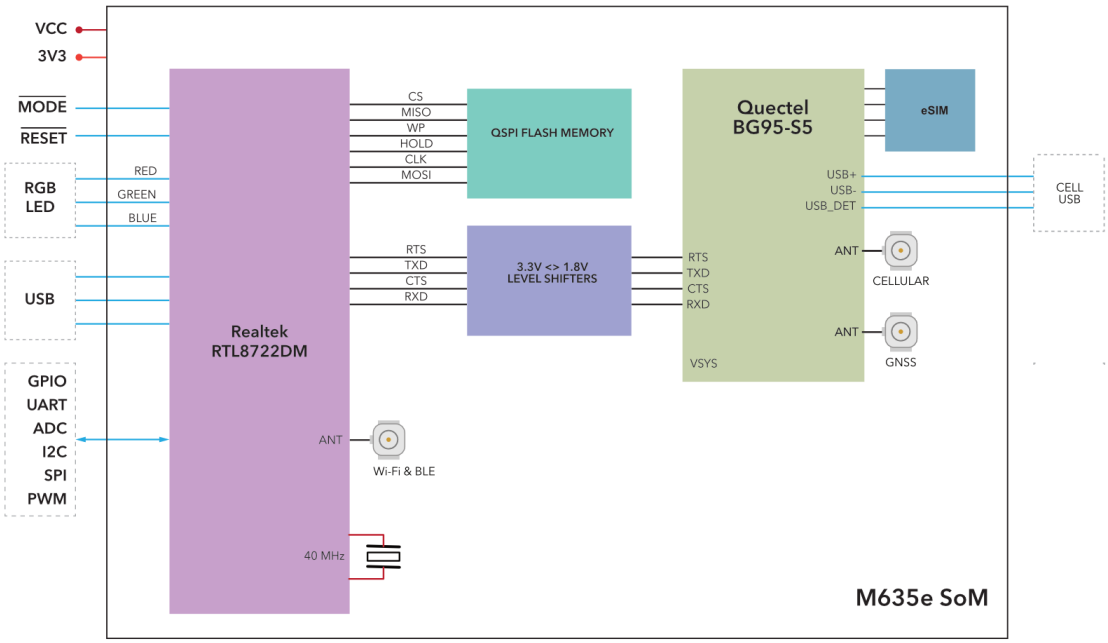

DEVICE FAMILIES

	Cellular Only	Cellular & Wi-Fi	Wi-Fi Only
Developer devices	Boron	Axion	Photon 2
Production module	B-SoM	M-SoM	P2

MIGRATION GUIDES

If you are migrating to the M-SoM from another Particle device, see also the following migration guides:

- M-SoM from B-SoM
- M-SoM from Boron or Argon
- M-SoM from E-Series
- M-SoM from P2

POWER

VCC

VCC (sometimes referred to as 3V7) is used to supply power to the cellular module. The recommended input voltage range on this pin is between 3.6V to 4.2V DC. This can be connected directly to a 3.7V LiPo battery. Make sure that the supply can handle currents of at least 2 A.

If you are not using a battery, or using a battery of a different voltage, you should use a regulator to supply 3.7V to 4.2V at 2A. You may want to add additional bulk capacitors to handle the short, high current peak usage when the cellular modem is transmitting.

3V3

3V3 is used to supply power to RTL8722 MCU, logic ICs, memory, etc.. Make sure that the supply can handle a minimum of 500 mA.

These limits do not include any 3.3V peripherals on your base board, so that may increase the current requirements.

Power supply requirements:

- 3.3V output
- Maximum 5% voltage drop
- 100 mV peak-to-peak ripple maximum
- 500 mA minimum output current at 3.3V recommended for future compatibility
- Maintain these values at no-load as well as maximum load

In some cases, it may be necessary to add a supervisory/reset IC, such as the Richtek RT9818C or SG Micro SGM809-RXN3L/TR:

- If your power supply has a slew rate from 1.5V to 3.0V slower than 15 ms, a reset IC is required.
- If your power supply at power off cannot be guaranteed to drop below 0.3V before powering back up, a reset IC required.

See supervisory reset, below, for additional information.

RF

- The M-SoM includes three U.FL connectors for external antennas:
  - Cellular
  - Wi-Fi (2.4 GHz and 5 GHz) and BLE
- Wi-Fi operation in the 5150-5250 MHz band is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Approved Antennas

CERTIFIED CELLULAR ANTENNAS

The M-SoM is certified with the following cellular antenna:

Antenna	SKU	Details	Links
Wide band LTE cell antenna [x1]	PARANTCW1EA	B504e and M-SoM	Datasheet
Wide band LTE cell antenna [x50]	PARANTCW1TY	B504e and M-SoM	Datasheet

Single quantity units and developer kits include a PARANTCW1EA antenna. Tray quantities do not include antennas.

Dimension	Value	Unit
Length	116.0	mm
Width	27.0	mm
Thickness	0.2	mm
Cable Length	189.5	mm

Parameter	617-960	1156 - 1496	1520 - 1660.5	1710 - 2700	3330 - 4200	4200 - 5925
V.S.W.R.	≤ 3.5	≤ 3.0	≤ 2.0	≤ 2.0	≤ 1.5	≤ 2.0
Peak Gain	2.8 dBi	2.4 dBi	3.9 dBi	5.3 dBi	5.6 dBi	7.9 dBi
Eff % (max/avg)	71/62	55/53	68/62	85/70	76/71	69/62

CERTIFIED WI-FI/BLE ANTENNAS

The M-SoM is certified for use with the same antennas as the P2/Photon 2. The same antenna is shared for Wi-Fi and BLE. Unlike the P2/Photon 2, the external antenna is required for Wi-Fi and BLE and the M-SoM does not include a built-in trace antenna on the module.

Antenna	SKU	Links
Particle P2/Photon2 Wi-Fi Antenna 2.4/5GHz, [x1]	PARANTWM1EA	Datasheet | Retail Store
Particle P2/Photon2 Wi-Fi Antenna 2.4/5GHz, [x50]	PARANTWM1TY	Datasheet

Single quantity M-SoM units and developer kits include a PARANTWM1EA antenna. Tray quantities of the M-SoM do not include antennas.

Do not use the Argon Wi-Fi/BLE antenna (ANT-FLXV2) on the P2, Photon 2, or M-SoM. The Argon antenna does not work with 5 GHz and this will result in poor Wi-Fi performance on the P2, Photon 2, and M-SoM.

GENERAL ANTENNA GUIDANCE

- The antenna placement needs to follow some basic rules, as any antenna is sensitive to its environment. Mount the antenna at least 10mm from metal components or surfaces, ideally 20mm for best radiation efficiency, and try to maintain a minimum of three directions free from obstructions to be able to operate effectively.
- Needs tuning with actual product enclosure and all components.


PERIPHERALS AND GPIO

Peripheral Type	Qty	Input(I) / Output(O)
Digital	30 (max)	I/O
Analog (ADC)	8 (max)	I
UART	2	I/O
SPI	2	I/O
I2C	1	I/O
USB	1	I/O
PWM	11 (max)	O

Note: All GPIOs are only rated at 3.3VDC max.

JTAG AND SWD

The M-SoM has 4 pads at the bottom exposing the SWD interface of the MCU. This interface can be used to debug your code or reprogram your SoM bootloader, device OS, or the user firmware. We use 4 pogo-pins connecting to these pads during production for firmware flashing.

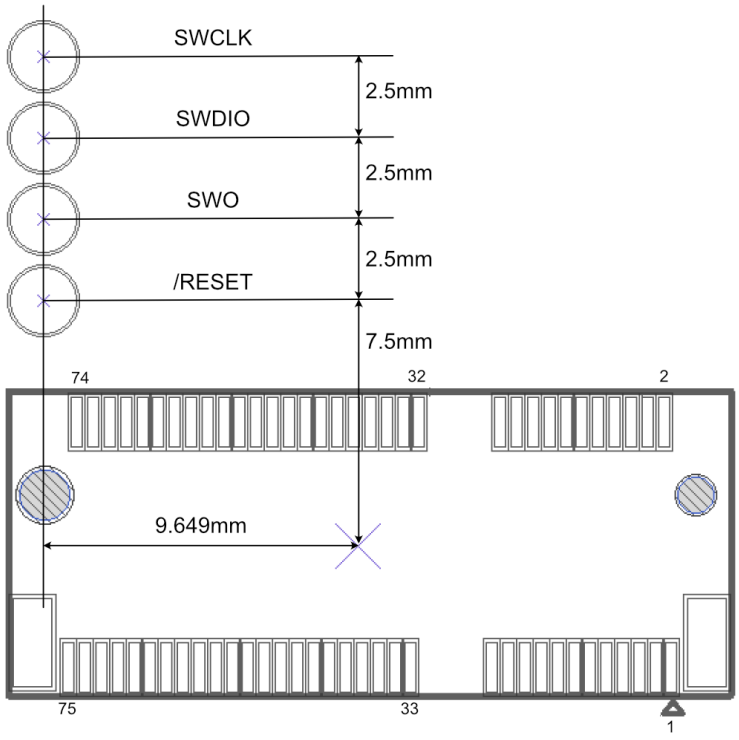


Additionally, SWD is supported on pins on the M.2 connector:

Pin	Pin Name	Description	Interface	MCU
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	SWCLK	PB[3]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	SWCLK	PB[3]
55	D27	D27 GPIO, SWDIO (SWD_DATA), do not pull down at boot	SWDIO	PA[27]

- SWD is on the same pins as GPIO, so by default once user firmware boots, SWD is no longer available unless SWD is enabled at compile time. This is the same as Gen 2 (STM32) but different than Gen 3 (nRF52840).
- SWO (Serial Wire Output) is not supported on the RTL8722DM.
- Pins 43 and 53 are shared

Pin information

PINOUT DIAGRAM

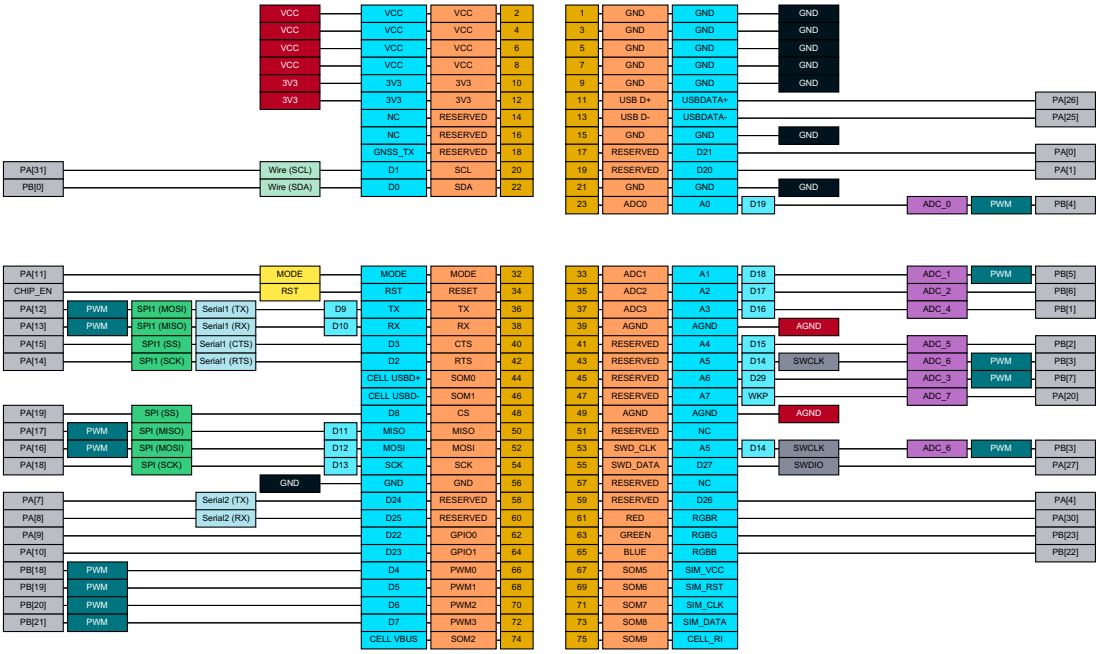

COMMON SOM PINS

RESERVED and SOM pins may vary across different SoM models. If you are designing for this specific module, or similar modules, you can use the indicated functions even if the pin is marked RESERVED.

The nRF52840 B-SoM has some differences from the RTL8722 M-SoM. Future modules with a different MCU may have different pin functions. An effort will be made to assign all of the listed functions for ADC, PWM, SPI, etc. from the set of common SoM pin functions in future modules, but the functions on RESERVED and SOM pins will likely vary.

PIN FUNCTION BY PIN NAME

Pin Name	Module Pin			PWM	MCU
A0 / D19	23	ADC_0		✓	PB[4]
A1 / D18	33	ADC_1		✓	PB[5]
A2 / D17	35	ADC_2			PB[6]
A3 / D16	37	ADC_4			PB[1]
A4 / D15	41	ADC_5			PB[2]
A5 / D14	43	ADC_6	SWCLK	✓	PB[3]
A5 / D14	53	ADC_6	SWCLK	✓	PB[3]
A6 / D29	45	ADC_3		✓	PB[7]
A7 / WKP	47	ADC_7			PA[20]
CELL USBD-	46				
CELL USBD+	44				
CELL VBUS	74				
CELL_RI	75				
D0	22		Wire (SDA)		PB[0]

D1	20		Wire (SCL)			PA[31]
D2	42			SPI1 (SCK)	Serial1 (RTS)	PA[14]
D3	40			SPI1 (SS)	Serial1 (CTS)	PA[15]
D4	66				✓	PB[18]
D5	68				✓	PB[19]
D6	70				✓	PB[20]
D7	72				✓	PB[21]
D8	48			SPI (SS)		PA[19]
D20	19					PA[1]
D21	17					PA[0]
D22	62					PA[9]
D23	64					PA[10]
D24	58				Serial2 (TX)	PA[7]
D25	60				Serial2 (RX)	PA[8]
D26	59					PA[4]
D27	55		SWDIO			PA[27]
GNSS_TX	18					
MISO / D11	50			SPI (MISO)	✓	PA[17]
MOSI / D12	52			SPI (MOSI)	✓	PA[16]
NC	14					
RGBB	65					PB[22]
RGBG	63					PB[23]
RGBR	61					PA[30]
RX / D10	38			SPI1 (MISO)	Serial1 (RX) ✓	PA[13]
SCK / D13	54			SPI (SCK)		PA[18]
SIM_CLK	71					
SIM_DATA	73					
SIM_RST	69					
SIM_VCC	67					
TX / D9	36			SPI1 (MOSI)	Serial1 (TX) ✓	PA[12]
USBDATA-	13					PA[25]
USBDATA+	11					PA[26]

PIN FUNCTION BY M.2 PIN

Module Pin	Pin Name				PWM	MCU
11	USBDATA+					PA[26]
13	USBDATA-					PA[25]
14	NC					
17	D21					PA[0]
18	GNSS_TX					
19	D20					PA[1]
20	D1		Wire (SCL)			PA[31]
22	D0		Wire (SDA)			PB[0]
23	A0 / D19	ADC_0			✓	PB[4]
33	A1 / D18	ADC_1			✓	PB[5]

35	A2 / D17	ADC_2					PB[6]
36	TX / D9			SPI1 (MOSI)	Serial1 (TX)	✓	PA[12]
37	A3 / D16	ADC_4					PB[1]
38	RX / D10			SPI1 (MISO)	Serial1 (RX)	✓	PA[13]
40	D3			SPI1 (SS)	Serial1 (CTS)		PA[15]
41	A4 / D15	ADC_5					PB[2]
42	D2			SPI1 (SCK)	Serial1 (RTS)		PA[14]
43	A5 / D14	ADC_6	SWCLK			✓	PB[3]
44	CELL USBD+						
45	A6 / D29	ADC_3				✓	PB[7]
46	CELL USBD-						
47	A7 / WKP	ADC_7					PA[20]
48	D8			SPI (SS)			PA[19]
50	MISO / D11			SPI (MISO)		✓	PA[17]
52	MOSI / D12			SPI (MOSI)		✓	PA[16]
53	A5 / D14	ADC_6	SWCLK			✓	PB[3]
54	SCK / D13			SPI (SCK)			PA[18]
55	D27		SWDIO				PA[27]
58	D24				Serial2 (TX)		PA[7]
59	D26						PA[4]
60	D25				Serial2 (RX)		PA[8]
61	RGBR						PA[30]
62	D22						PA[9]
63	RGBG						PB[23]
64	D23						PA[10]
65	RGBB						PB[22]
66	D4					✓	PB[18]
67	SIM_VCC						
68	D5					✓	PB[19]
69	SIM_RST						
70	D6					✓	PB[20]
71	SIM_CLK						
72	D7					✓	PB[21]
73	SIM_DATA						
74	CELL VBUS						
75	CELL_RI						

GPIO (DIGITAL I/O)

Pin	M-SoM Pin Name	M-SoM GPIO	MCU	Special boot function
17	D21	✓	PA[0]	
19	D20	✓	PA[1]	
20	D1	✓	PA[31]	
22	D0	✓	PB[0]	
23	A0 / D19	✓	PB[4]	
33	A1 / D18	✓	PB[5]	

35	A2 / D17	✓	PB[6]	
36	TX / D9	✓	PA[12]	
37	A3 / D16	✓	PB[1]	
38	RX / D10	✓	PA[13]	
40	D3	✓	PA[15]	
41	A4 / D15	✓	PB[2]	
42	D2	✓	PA[14]	
43	A5 / D14	✓	PB[3]	SWCLK. 40K pull-down at boot.
45	A6 / D29	✓	PB[7]	
47	A7 / WKP	✓	PA[20]	
48	D8	✓	PA[19]	
50	MISO / D11	✓	PA[17]	
52	MOSI / D12	✓	PA[16]	
53	A5 / D14	✓	PB[3]	SWCLK. 40K pull-down at boot.
54	SCK / D13	✓	PA[18]	
55	D27	✓	PA[27]	SWDIO. 40K pull-up at boot. Low at boot triggers MCU test mode.
58	D24	✓	PA[7]	Low at boot triggers ISP flash download
59	D26	✓	PA[4]	
60	D25	✓	PA[8]	Goes high at boot
62	D22	✓	PA[9]	
64	D23	✓	PA[10]	
66	D4	✓	PB[18]	
68	D5	✓	PB[19]	
70	D6	✓	PB[20]	
72	D7	✓	PB[21]	

- All GPIO are 3.3V only and are not 5V tolerant
- The drive strength is 4 mA per pin in normal drive and 12 mA per pin in high drive mode on the M-SoM.
- There is a maximum of 200 mA across all pins. The total maximum could be further limited by your 3.3V regulator.
- Drive strength selection using pinSetDriveStrength is only available in Device OS 5.5.0 and later on the M-SoM.

Certain GPIO will change state at boot, or cause the MCU to enter a special mode. See the boot mode pins section, below, for more information.

ADC (ANALOG TO DIGITAL CONVERTER)

Pin	Pin Name	Description	Interface	MCU
23	A0 / D19	A0 Analog in, GPIO, PWM	ADC_0	PB[4]
33	A1 / D18	A1 Analog in, GPIO, PWM	ADC_1	PB[5]
35	A2 / D17	A2 Analog in, GPIO	ADC_2	PB[6]
37	A3 / D16	A3 Analog in, PDM CLK, GPIO	ADC_4	PB[1]
41	A4 / D15	A4 Analog in, PDM DAT, GPIO	ADC_5	PB[2]
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	ADC_6	PB[3]
45	A6 / D29	A6 Analog in, GPIO, PWM, M.2 eval PMIC INT	ADC_3	PB[7]

47	A7 / WKP	A7 Analog In, WKP, GPIO D28	ADC_7	PA[20]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	ADC_6	PB[3]

- ADC inputs are single-ended and limited to 0 to 3.3V
- Resolution is 12 bits
- SoM pin 43 (A5) on the M-SoM is shared with SoM pin 53 (SWD_CLK). You cannot use A5 and SWD at the same time. If you implement SWD on your base board, driving pin A6 will prevent SWD from functioning. The SWD_CLK will be driven at boot by the MCU.

The ADCs on the M-SoM (RTL872x) have a lower impedance than other Particle device MCUs (nRF52, STM32F2xx). They require a stronger drive and this may cause issues when used with a voltage divider. This is particularly true for A7, which has an even lower impedance than other ADC inputs.

For signals that change slowly, such as NTC thermocouple resistance, you can add a 2.2 uF capacitor to the signal. For rapidly changing signals, a voltage follower IC can be used.

UART SERIAL

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	Serial1 (TX)	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	Serial1 (RX)	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	Serial1 (CTS)	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	Serial1 (RTS)	PA[14]
58	D24	D24 GPIO, Serial2 TX, do not pull down at boot	Serial2 (TX)	PA[7]
60	D25	GPIO25, Serial2 RX	Serial2 (RX)	PA[8]

- The UART pins are 3.3V and must not be connected directly to a RS-232C port or to a 5V TTL serial port
- Hardware flow control is optional; if not used then the RTS and CTS pins can be used as regular GPIO
- Serial1 uses the RTL872x UART_LOG peripheral
- Serial2 uses the RTL872x HS_UART0 peripheral
- Supported baud rates: 110, 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 76800, 115200, 128000, 153600, 230400, 380400, 460800, 500000, 921600, 1000000, 1382400, 1444400, 1500000, 1843200, 2000000, 2100000, 2764800, 3000000, 3250000, 3692300, 3750000, 4000000, 6000000

SPI

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	SPI1 (MOSI)	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	SPI1 (MISO)	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	SPI1 (SS)	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	SPI1 (SCK)	PA[14]
48	D8	D8 GPIO, SPI SS	SPI (SS)	PA[19]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	SPI (MISO)	PA[17]
52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	SPI (MOSI)	PA[16]
54	SCK / D13	D13 GPIO, SPI SCK	SPI (SCK)	PA[18]

- The SPI port is 3.3V and must not be connected directly to devices that drive MISO at 5V

- If not using a SPI port, its pins can be used as GPIO
- Any pins can be used as the SPI chip select
- Multiple devices can generally share a single SPI port
- SPI uses the RTL872x SPI0 peripheral (50 MHz maximum speed)
- SPI1 uses the RTL872x SPI1 peripheral (25 MHz maximum speed)
- Note: The P2/Photon 2 maximum speeds for SPI and SPI1 are reversed from the M-SoM

Even though the B-SoM and M-SoM both have two SPI interfaces, note that the M-SoM SPI1 is on different pins.

Pin	B-SoM Pin Name	B-SoM SPI	M-SoM Pin Name	M-SoM SPI
36	TX / D9		TX / D9	SPI1 (MOSI)
38	RX / D10		RX / D10	SPI1 (MISO)
40	D3	SPI1 (MOSI)	D3	SPI1 (SS)
42	D2	SPI1 (SCK)	D2	SPI1 (SCK)
48	D8	SPI (SS)	D8	SPI (SS)
50	MISO / D11	SPI (MISO)	MISO / D11	SPI (MISO)
52	MOSI / D12	SPI (MOSI)	MOSI / D12	SPI (MOSI)
54	SCK / D13	SPI (SCK)	SCK / D13	SPI (SCK)
66	D4	SPI1 (MISO)	D4	

I2C

Pin	Pin Name	Description	Interface	MCU
20	D1	D1 GPIO, I2C SCL	Wire (SCL)	PA[31]
22	D0	D0 GPIO, I2C SDA	Wire (SDA)	PB[0]

- The I2C port is 3.3V and must not be connected directly a 5V I2C bus
- Maximum bus speed is 400 kHz
- External pull-up resistors are required for I2C

PWM

Pin	Pin Name	Description	MCU
23	A0 / D19	A0 Analog in, GPIO, PWM	PB[4]
33	A1 / D18	A1 Analog in, GPIO, PWM	PB[5]
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	PA[13]
43	A5 / D14	A5 Analog in, PWM, GPIO, shared with pin 53	PB[3]
45	A6 / D29	A6 Analog in, GPIO, PWM, M.2 eval PMIC INT	PB[7]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	PA[17]
52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	PA[16]
53	A5 / D14	A5 Analog in, PWM, GPIO, SWCLK, shared with pin 43	PB[3]
66	D4	D4 GPIO, PWM	PB[18]
68	D5	D5 GPIO, PWM, I2S TX	PB[19]
70	D6	D6 GPIO, PWM, I2S CLK	PB[20]
72	D7	D7 GPIO, PWM, I2S WS	PB[21]

- All available PWM pins on the M-SoM share a single timer. This means that they must all share a single frequency, but can have different duty cycles.

PDM

Pulse density modulation digital microphones can be used with the Microphone_PDM library and the M-SoM, but only on specific pins:

Pin	Pin Name	Description	MCU
37	A3 / D16	A3 Analog in, PDM CLK, GPIO	PB[1]
41	A4 / D15	A4 Analog in, PDM DAT, GPIO	PB[2]

USB

The M-SoM supports a USB interface for programming the device and for USB serial (CDC) communications. The module itself does not contain a USB connector; you typically add a micro USB or USB C connector on your base board. It is optional but recommended.

Pin	Pin Name	Description	MCU
11	USBDATA+	USB Data+	PA[26]
13	USBDATA-	USB Data-	PA[25]
44	CELL USBD+	Cellular Modem USB Data+	
46	CELL USBD-	Cellular Modem USB Data-	

- The CELL USB connector does not need to be populated on your board. It is used for reprogramming the cellular modem firmware, which is rarely done as it often requires recertification of the device.

RGB LED

The M-SoM supports an external common anode RGB LED.

One common LED that meets the requirements is the Cree CLMVC-FKA-CL1D1L71BB7C3C3 which is inexpensive and easily procured. You need to add three current limiting resistors. With this LED, we typically use 1K ohm current limiting resistors. These are much larger than necessary. They make the LED less blinding but still provide sufficient current to light the LEDs. If you want maximum brightness you should use the calculated values - 33 ohm on red, and 66 ohm on green and blue.

A detailed explanation of different color codes of the RGB system LED can be found here.

The use of the RGB LED is optional, however it is highly recommended as troubleshooting the device without the LED is very difficult.

Pin	Pin Name	Description	MCU
61	RGBR	RGB LED Red	PA[30]
63	RGBG	RGB LED Green	PB[23]
65	RGBB	RGB LED Blue	PB[22]

- On the M-SoM, Pin RGBR (PA[30]) has a 10K hardware pull-up in the module because it's a trap pin that controls the behavior of the internal 1.1V regulator. This does not affect the RGB LED but could affect your design if you are repurposing this pin as GPIO. You must not hold this pin low at boot.

BOOT MODE PINS

These pins have a special function at boot. Beware when using these pins as input as they can trigger special modes in the MCU.

Pin	Pin Name	Description	MCU
43	A5 / D14	SWCLK. 40K pull-down at boot.	PB[3]
53	A5 / D14	SWCLK. 40K pull-down at boot.	PB[3]
55	D27	SWDIO. 40K pull-up at boot. Low at boot triggers MCU test mode.	PA[27]
58	D24	Low at boot triggers ISP flash download	PA[7]
60	D25	Goes high at boot	PA[8]
61	RGBR	Low at boot triggers trap mode	PA[30]

BLE (BLUETOOTH LE)

If you wish to use Wi-Fi on the M-SoM you will need to provide a way to configure it. Wi-Fi setup works the same as the P2, Photon 2, and Argon, and uses BLE. See Wi-Fi setup options for more information.

BLE 5.3 BLE Central Mode and BLE Peripheral Mode are supported.

Full-speed BLE modes such as A2DP used for BLE audio are not supported.

Wi-Fi and BLE share the same antenna so you do not need to include a separate antenna to use both.

SLEEP

The M-SoM can wake from `STOP` or `ULTRA_LOW_POWER` sleep mode on any GPIO, `RISING`, `FALLING`, or `CHANGE`.

The M-SoM can only wake from `HIBERNATE` sleep mode on certain pins, `RISING`, `FALLING`, or `CHANGE`.

The M-SoM preserves the state of outputs during `STOP` or `ULTRA_LOW_POWER` sleep mode. In `HIBERNATE`, outputs are high-impedance.

Pin	Pin Name	Description	Interface	MCU
36	TX / D9	Serial TX, PWM, GPIO, SPI1 MOSI, I2S MCLK	Pin can wake from HIBERNATE sleep	PA[12]
38	RX / D10	Serial RX, PWM, GPIO, SPI1 MISO	Pin can wake from HIBERNATE sleep	PA[13]
40	D3	D3 GPIO, Serial1 CTS flow control (optional), SPI1 SS	Pin can wake from HIBERNATE sleep	PA[15]
42	D2	D2 GPIO, Serial RTS flow control (optional), SPI1 SCK	Pin can wake from HIBERNATE sleep	PA[14]
47	A7 / WKP	A7 Analog In, WKP, GPIO D28	Pin can wake from HIBERNATE sleep	PA[20]
48	D8	D8 GPIO, SPI SS	Pin can wake from HIBERNATE sleep	PA[19]
50	MISO / D11	D11 GPIO, PWM, SPI MISO	Pin can wake from HIBERNATE sleep	PA[17]

52	MOSI / D12	D12 GPIO, PWM, SPI MOSI	Pin can wake from HIBERNATE sleep	PA[16]
54	SCK / D13	D13 GPIO, SPI SCK	Pin can wake from HIBERNATE sleep	PA[18]

Most pins can use `INPUT_PULLUP` or `INPUT_PULLDOWN` in sleep modes. The exception is `HIBERNATE` sleep mode where pin D21 can only use an external hardware pull-up or pull down. It also cannot be used to wake from hibernate sleep mode.

Pin	Pin Name	Description	Interface	MCU
17	D21	D21 GPIO, I2S RX	No internal pull up or pull down in HIBERNATE sleep mode.	PA[0]

SETUP AND RESET BUTTON

It is highly recommended that you add MODE (SETUP) and RESET buttons to your base board using momentary switches that connect to GND. These are necessary to change the operating mode of the device, for example to enter listening or DFU mode.


Pin	Pin Name	Description	MCU
32	MODE	MODE button. Pin number constant is BTN. External pull-up required!	PA[11]
34	RST	Hardware reset, active low. External pull-up required.	CHIP_EN

The MODE button does not have a hardware pull-up on it, so you must add an external pull-up (2.2K to 10K) to 3V3, or connect it to 3V3 if not using a button.

The RST pin does have an internal weak pull-up, but you may want to add external pull-up on that as well, especially if you use an off-board reset button connected by long wires.

SUPERVISORY RESET

In many cases, it may be desirable to include a supervisory reset IC in your design. The design below is from the Photon 2 and uses the small and inexpensive Richtec RT9818C. This chip will hold the MCU in reset until there is sufficient voltage to successfully boot. This can be helpful if your power supply cannot guarantee a sufficient slew rate.

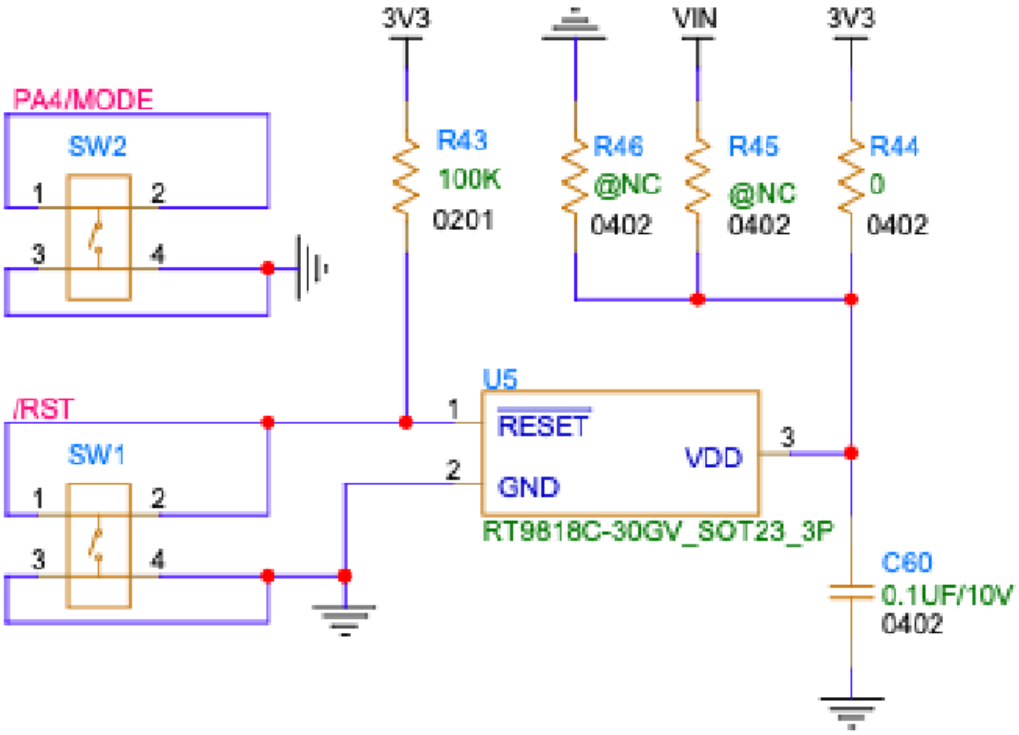

Of note in this design, the VDD pin of the RT9818C is connected to 3V3. The design is configurable by moving a zero-ohm resistor to disable supervisory reset (by connecting to GND) or to use VIN. Note that the RT9818C has a maximum input voltage of 6V which is compatible with the Photon 2. Keep this in mind if using VIN on designs that have larger VIN voltages.

Of course you can simply wire VDD to 3V3 instead of including the configurable resistors.

PMIC NOTES

When using the M-SoM with a bq24195 PMIC, note the following:

By default, the bq24195 sets the input current limit, which affects powering by VIN and VUSB, to 100 mA. This affects the VSYS output of the PMIC, which powers both the cellular modem and 3V3 supply, and is not enough to power the M-SoM in normal operation.

If your device has the default firmware (Tinker), it will attempt to connect to the cloud, brown out due to insufficient current, then the device will reset. This may result in what appears to be the status LED blinking white, but is actually rolling reboot caused by brownout.

A factory new M-SoM does not enable the PMIC setup. To enable the use of the bq21415, you must enable the system power feature PMIC_DETECTION in your code. This defaults to off because the M-SoM can be used without a PMIC, or with a different PMIC, and also requires I2C on D0/D1, and some base boards may use those pins as GPIO.

Because the input current limit does not affect the battery input (Li+), for troubleshooting purposes it can be helpful to attach a battery to help rule out input current limit issues. It's also possible to supply 3.7V via a bench power supply to the battery input, instead of VIN.

The input current limit can result in a situation where you can't bring up a M-SoM because it browns out continuously, but also cannot flash code to it to stop if from browning out. There are two general solutions:

- Attach a battery or supply by Li+ when bringing up a board.
- Use SWD/JTAG and reset halt the MCU. This will prevent it from connecting to the cloud, so you can flash Device OS and firmware to it by SWD.

The input current limit is actually controlled by three factors:

- The power source max current setting in the PMIC. The default is 900 mA. It can be set to 100, 150, 500, 900, 1200, 1500, 2000, or 3000 mA.
- It is also limited by the hardware ILIM resistor. On Particle devices with a built-in PMIC, this is set to 1590 mA, but if you are implementing your own PMIC hardware, you can adjust this higher.
- When connected by USB, it will use DPDM, current negotiation via the USB DP (D+) and DM (D-) lines.

Note that some 2A tablet chargers and multi-port USB power supplies supply 2A but do not implement DPDM; these will be treated as if VIN was used, and you must set the power source current, otherwise the input current will be limited to 900 mA, which is not enough to power a 2G/3G cellular modem without an attached battery.

CELLULAR MODEM USB PINS

The cellular modem USB pins are optional on custom base boards. These pins are used for low-level diagnostics and reprogramming the cellular modem firmware.

Note, however, the Particle has never done a cellular modem firmware upgrade in the field because doing so generally requires recertification, and is there is a high likelihood that the upgrade will fail, rendering the modem unusable.

Cellular modem could be reprogrammed by removing the SoM from your board and putting it in the M.2 SoM breakout board, which has the cellular modem USB connector.

#	Pin	Common	Function	nRF52	Description
44	Quectel USB D+	SOM0	IO		Data+ pin of the cellular modem USB port.
46	Quectel USB D-	SOM1	IO		Data- pin of the cellular modem USB port.
74	Quectel VBUS	SOM2[3]	IO		USB detect pin for cellular modem. 5V on this pin enables the Quectel USB interface.
75	Quectel RI	SOM9[4]	IO		Ring indicator

SIM PINS

- The SIM pins should be left unconnected
- You cannot use these pins for an external SIM card, despite their names

Pin	Pin Name	Description
69	SIM_RST	Leave unconnected, 1.8V/3V SIM Reset Output from cellular modem.
71	SIM_CLK	Leave unconnected, 1.8V/3V SIM Clock Output from cellular modem.
73	SIM_DATA	Leave unconnected, 1.8V/3V SIM Data I/O of cellular modem with internal 4.7 k pull-up.

Technical specification

RECOMMENDED OPERATING CONDITIONS

Parameter	Symbol	Min	Typ	Max	Unit
Operating Temperature	T_{op}	-20		+70	°C
Humidity Range Non condensing, relative humidity				95	%

I/O CHARACTERISTICS

Parameter	Symbol	Min	Typ	Peak	Unit
Input-High Voltage	V_{IH}	2.0			V
Input-Low Voltage	V_{IL}			0.8	V
Output drive strength (normal drive)				4	mA
Output drive strength (high drive)				12	mA
Total output drive (all pins)				200	mA

POWER CONSUMPTION

To be provided at a later date

RADIO SPECIFICATIONS

Realtek RTL872x for Wi-Fi 2.4 GHz

Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range	Center channel	2412	-	2484	MHz
Output power	1 Mbps CCK	-	20	21	dBM
	11 Mbps CCK	-	18	21	dBM
	BPSK rate 1/2, 6Mbps OFDM	-	20	21	dBM
	64QAM rate 3/4, 54Mbps OFDM	-	17	18	dBM
	HT20-MCS 0, BPSK rate 1/2	-	19	20	dBM
	HT20-MCS 7, 64QAM rate 5/6	-	16	17	dBM
	HT40-MCS 0, BPSK rate 1/2	-	19	20	dBM
	HT40-MCS 7, 64QAM rate 5/6	-	16	17	dBM
Tx EVM	BPSK rate 1/2, 6Mbps OFDM	-	-	-5	dB
	64QAM rate 3/4, 54Mbps OFDM	-	-	-25	dB
	HT20-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT20-MCS 7, 64QAM rate 5/6	-	-	-28	dB
	HT40-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT40-MCS 7, 64QAM rate 5/6	-	-	-28	dB
Output power variation		-1.5	-	1.5	dBm
Carrier suppression		-	-	-30	dBm

Realtek RTL872x for Wi-Fi 5 GHz

Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range	Center channel	5180	-	5825	MHz
Output power	BPSK rate 1/2, 6Mbps OFDM	-	19	19	dBM

	64QAM rate 3/4, 54Mbps OFDM	-	14	15	dBM
	HT20-MCS 0, BPSK rate 1/2	-	17	18	dBM
	HT20-MCS 7, 64QAM rate 5/6	-	13	14	dBM
	HT40-MCS 0, BPSK rate 1/2	-	17	18	dBM
	HT40-MCS 7, 64QAM rate 5/6	-	13	14	dBM
Tx EVM	BPSK rate 1/2, 6Mbps OFDM	-	-	-5	dB
	64QAM rate 3/4, 54Mbps OFDM	-	-	-25	dB
	HT20-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT20-MCS 7, 64QAM rate 5/6	-	-	-28	dB
	HT40-MCS 0, BPSK rate 1/2	-	-	-5	dB
	HT40-MCS 7, 64QAM rate 5/6	-	-	-28	dB
Output power variation		-1.5	-	1.5	dBm
Carrier suppression		-	-	-30	dBm

Realtek RTL872x for BLE


Feature	Description	Minimum	Typical	Maximum	Unit
Frequency Range		2402	-	2480	MHz
Tx Output power		-10	4.5		dBM

Cellular characteristics for EG800Q-GL (M715e)

To be provided at a later date

Mechanical specifications


MECHANICAL DRAWING

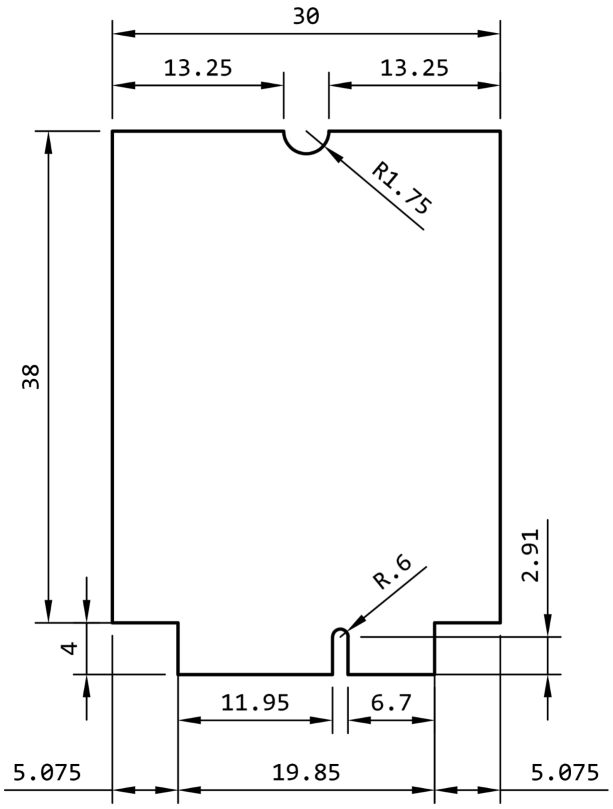

Dimensions are in millimeters.

The mating connector is a an M.2 (NGFF) type 4. Note that there are several different key configurations for the M.2, and type 4 is different than is commonly used on SSDs.

One compatible connector is the TE 2199230-4. It is widely available including at suppliers such as DigiKey.

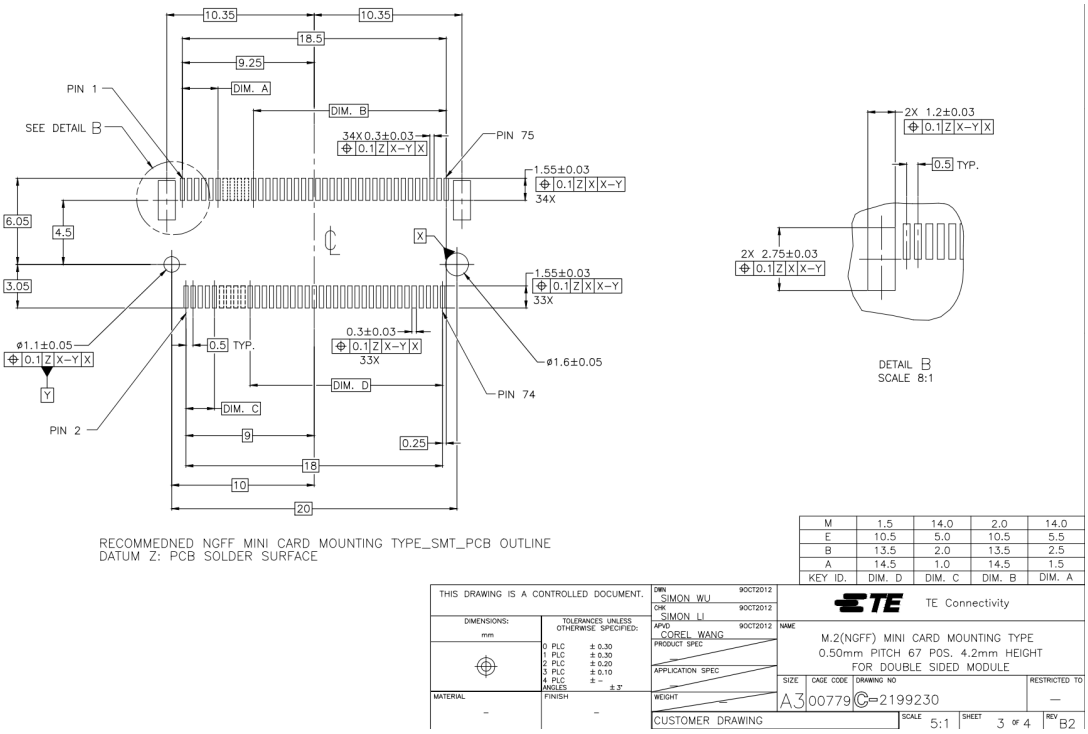


A device, footprint, and symbol for EagleCAD are available in the hardware-libraries Github.

SCREW ASSEMBLY

The M.2 SoM requires a screw to hold the SoM in place because the M.2 connector does not have integrated locks and the SoM will pop up if not attached to the base board. The screw also provides better vibration resistance than locking clips.

- This is one style of standoff.

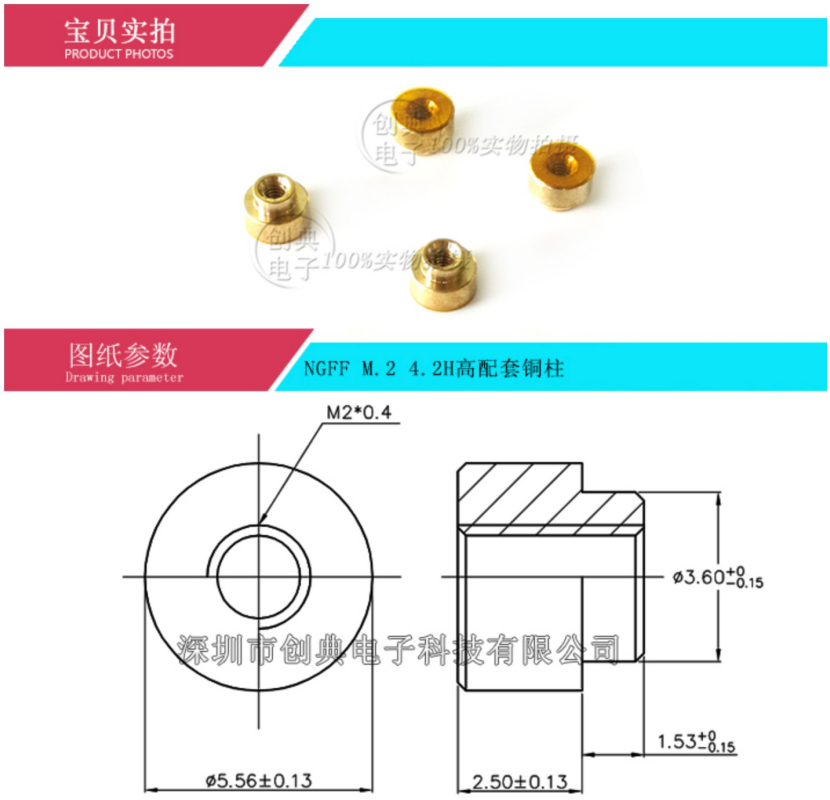


- An alternative design uses a JAE SM3ZS067U410-NUT1-R1200 standoff. It's reflow soldered to your base board and has a threaded hole for a M2*3 screw to hold down the SoM. This may be easier to obtain.

The screw should be connected to the ground plane on your base board.

DESIGN CONSIDERATIONS

We strongly recommend against placing components under the SOM board because there is not enough height.

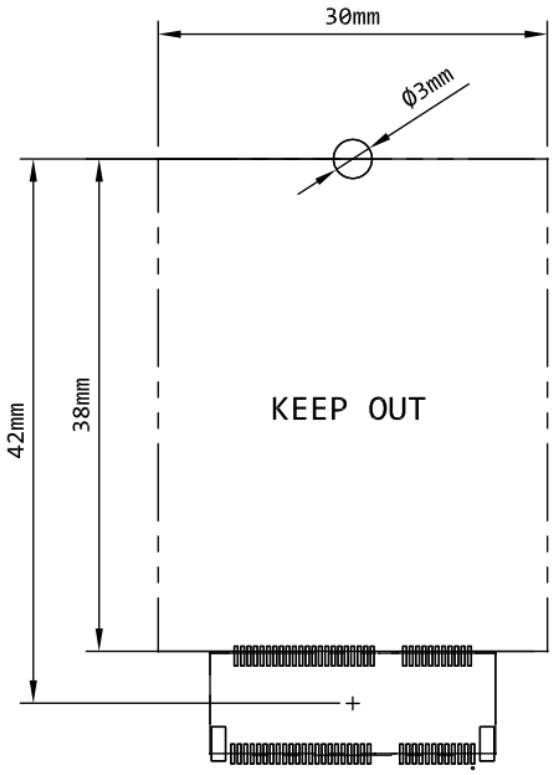

REFERENCE DESIGN

The M.2 breakout board design design files for EagleCAD are available as a reference design.

Product Handling

ESD PRECAUTIONS

The M-SoM contains highly sensitive electronic circuitry and is an Electrostatic Sensitive Device (ESD). Handling an M-SoM without proper ESD protection may destroy or damage it permanently. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the Particle M-SoM. ESD precautions should be implemented on the application board where the M-SoM is mounted. Failure to observe these precautions can result in severe damage to the M-SoM!

CONNECTORS

The U.FL antenna connector is not designed to be constantly plugged and unplugged. The antenna pin is static sensitive and you can destroy the radio with improper handling. A tiny dab of glue (epoxy, rubber cement, liquid tape or hot glue) on the connector can be used securely hold the plug in place.

The M.2 edge connector is static sensitive and should be handled carefully. The M.2 connector is not designed for repeated removal and insertion of the module.

Default settings

The M-SoM comes pre-programmed with a bootloader and a user application called Tinker. This application works with an iOS and Android app also named Tinker that allows you to very easily toggle digital pins, take analog and digital readings and drive variable PWM outputs.

The bootloader allows you to easily update the user application via several different methods, USB, OTA, Serial Y-Modem, and also internally via the Factory Reset procedure. All of these methods have multiple tools associated with them as well.

FCC Warnings and End Product Labeling Requirements

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device is intended only for OEM integrators under the following conditions: (For module device use)

(1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
(2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

IMPORTANT NOTICE TO OEM INTEGRATORS - FCC

1. This module is limited to OEM installation ONLY.
2. This module is limited to installation in mobile applications, according to Part 2.1091(b).
3. The separate approval is required for all other operating configurations, including portable configurations with respect to Part 2.1093 and different antenna configurations
4. For FCC Part 15.31 (h) and (k): The host manufacturer is responsible for additional testing to verify compliance as a composite system. When testing the host device for compliance with Part 15 Subpart B, the host manufacturer is required to show compliance with Part 15 Subpart B while the transmitter module(s) are installed and operating. The modules should be transmitting and the evaluation should confirm that the Module's intentional emissions are compliant (i.e. fundamental and out of band emissions). The host manufacturer must verify that there are no

additional unintentional emissions other than what is permitted in Part 15 Subpart B or emissions are complaint with the transmitter(s) rule(s). The Grantee will provide guidance to the host manufacturer for Part 15 B requirements if needed. Important Note notice that any deviation(s)from the defined parameters of the antenna trace, as described by the instructions, require that the host product manufacturer must notify to Particle that they wish to change the antenna trace design. In this case, a Class II permissive change application is required to be filed by the Particle, or the host manufacturer can take responsibility through the change in FCC ID (new application)procedure followed by a Class II permissive change application.

5. This device is certified as a limited module due to lack of shielding. As this device doesn't not have a shield over the radio chip over the radio chip, additional testing and a Class II filing is required for installation in all host devices.

END PRODUCT LABELING - FCC

When the module is installed in the host device, the FCC label must be visible through a window on the final device or it must be visible when an access panel, door or cover is easily re-moved. If not, a second label must be placed on the outside of the final device that contains the following text:

M635 for End Product Labeling: The final end product must be labeled in a visible area with the following

Contains FCC ID: 2AEMI-M635

The FCC ID can be used only when all FCC compliance requirements are met.

ANTENNA INSTALLATION - FCC

(1) The antenna must be installed such that 20 cm is maintained between the antenna and users. (2) The transmitter module may not be co-located with any other transmitter or antenna. (3) Only antennas of the same type and with equal or less gains as shown below may be used with this module. Other types of antennas and/or higher gain antennas may require additional authorization for operation.

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

To comply with FCC regulations limiting both maximum RF output power and human exposure to RF radiation, Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device:

MANUAL INFORMATION TO THE END USER - FCC

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the users manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual. Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

OUTDOOR USE - FCC

To be compliant to FCC §15.407(a) the EIRP is not allowed to exceed 125 mW (21 dBm) at any elevation angle above 30° (measured from the horizon) when operated as an outdoor access pointin U-NII-1 band, 5.150-5.250 GHz.

ISED Warnings and End Product Labeling Requirements

Innovation, Science and Economic Development

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference;
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fon-ctionnement.

RADIATION EXPOSURE STATEMENT - ISED

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device is intended only for OEM integrators under the following conditions: 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes: 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les utilisateurs, et
2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 2 conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

To comply with ISED regulations limiting both maximum RF output power and human exposure to RF radiation, Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device:

This radio transmitter [20127-M635] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.
PMN: M-Series LTE M1/2G/Satellite

Cet émetteur radio [20127-M635] a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antennes énumérés ci-dessous, avec le gain maximal permis indiqué. L'utilisation avec cet appareil de types d'antennes non inclus dans cette liste et présentant un gain supérieur au gain maximal indiqué pour l'un des types énumérés est strictement interdite.
PMN: M-Series LTE M1/2G/Satellite

Antenna description	Antenna Model	Antenna Type
Wi-Fi Antenna	PARANTWM1EA	PCB Antenna
M-SoM Wide band LTE Cell Antenna	PARANTCW1EA	FPC Antenna

UNITED KINGDOM

UKCA Conformity:

Radio Equipment Regulations 2017 (S.I. 2017/1206)

OUTDOOR USE (WORLD)

This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range. This restriction applies in: AT, BE, BG, CH, CY, CZ, DE, DK, EE, EL, ES, FI, FR, HR, HU, IE, IS, IT, LI, LT, LU, LV, MT, NL, NO, PL, PT, RO, SE, SI, SK, TR, UA, UK(NI).

Certification documents

To be provided at a later date

Country compatibility

Country	Technologies	Carriers
Albania	4G	Eagle, Telekom, Vodafone
Algeria	4G	Mobilis, Ooredoo
Anguilla	4G	Flow
Antigua and Barbuda	4G	Flow
Argentina	4G	Claro, Movistar, Personal
Armenia	4G	Ucom
Aruba	4G	Setar
Australia	4G	Optus, Telstra, Vodafone
Austria	4G	3 (Drei), A1, T-Mobile
Azerbaijan	4G	Azercell, Bakcell, NAR Mobile
Bahamas	4G	Aliv, BTC Bahamas
Bahrain	4G	Zain
Bangladesh	4G	Bangalink, GrameenPhone
Barbados	4G	Flow
Belarus	4G	A1
Belgium	4G	Base, Orange, Proximus
Bolivia	4G	Viva
Botswana	4G	BeMobile
Brunei	4G	DST
Bulgaria	4G	A1, Telenor, Vivacom
Burkina Faso	4G	Orange
Cabo Verde	4G	CVMóvel, Unitel T+
Cambodia	4G	Metfone
Canada	4G	Bell Mobility, Rogers Wireless, Telus, Videotron
Cayman Islands	4G	Flow
Chad	4G	Airtel
Chile	4G	Claro, Entel, Movistar
Colombia	4G	Movistar, Tigo
Congo (Brazzaville)	4G	Airtel
Congo (Kinshasa)	4G	Airtel
Costa Rica	4G	Movistar
Côte d'Ivoire	4G	MTN
Croatia	4G	Hrvatski Telekom, Tele2
Cyprus	4G	Cytamobile-Vodafone, MTN, PrimeTel
Czechia	4G	O2, T-Mobile, Vodafone
Denmark	4G	3 (Tre), TDC, Telenor, Telia
Dominica	4G	Flow
Dominican Republic	4G	Altice Dominicana, Claro, Viva
Ecuador	4G	Claro, Movistar
Egypt	4G	Etisalat, Orange
El Salvador	4G	Claro, Telefonica
Estonia	4G	Elisa, Tele2, Telia

eSwatini	4G	MTN
Faroe Islands	4G	Faroese Telecom, Vodafone
Finland	4G	DNA, Elisa, Telia
France	4G	Bouygues, Free Mobile, Orange, SFR
Gabon	4G	Airtel
Georgia	4G	Beeline, Geocell
Germany	4G	O2, Telekom, Vodafone
Ghana	4G	MTN, Vodafone
Gibraltar	4G	Gibtel
Greece	4G	Cosmote, Vodafone, Wind
Guadeloupe	4G	Orange
Guatemala	4G	Claro, Movistar
Guernsey	4G	Sure
Guinea	4G	MTN
Guinea-Bissau	4G	MTN
Guyana	4G	Digicel
Honduras	4G	Claro, Tigo
Hong Kong	4G	CMHK, CSL, SmarTone
Hungary	4G	Magyar Telekom, Telenor, Vodafone
Iceland	4G	Nova, Siminn, Vodafone
Indonesia	4G	Indosat, Telkomsel, XL Axiata
Ireland	4G	3 (Tre), Meteor, O2, Vodafone
Isle of Man	4G	Manx Telecom, Sure
Israel	4G	Hot Mobile, Orange, Pelephone
Italy	4G	TIM, Vodafone, Wind
Jamaica	4G	Digicel, Flow
Japan	4G	KDDI, NTT DoCoMo, Softbank
Jersey	4G	Jersey Telecom, Sure
Jordan	4G	Zain
Kazakhstan	4G	Beeline, K-Cell
Kenya	4G	Airtel
Kuwait	4G	Viva, Zain
Kyrgyzstan	4G	Beeline
Latvia	4G	Bite, LMT, Tele2
Liechtenstein	4G	Mobilkom, Orange
Lithuania	4G	Bite, Omnitel, Tele2
Luxembourg	4G	Orange, POST, Tango
Madagascar	4G	Airtel
Malawi	4G	Airtel
Malaysia	4G	Celcom, DiGi, Maxis
Malta	4G	Go Mobile, Vodafone
Mexico	4G	AT&T, Telcel
Moldova	4G	Moldcell, Orange
Mongolia	4G	Mobicom, Unitel
Montenegro	4G	Mtel, T-Mobile, Telenor

Morocco	4G	Inwi, Medi Telecom
Mozambique	4G	Vodacom
Myanmar	4G	MPT, Telenor
Namibia	4G	Telecom Namibia
Netherlands	4G	KPN, T-Mobile, Vodafone
New Zealand	4G	2degrees, Spark, Vodafone
Nicaragua	4G	Movistar
Nigeria	4G	Airtel, MTN
North Macedonia	4G	Vip operator
Norway	4G	TDC, Telenor, Telia
Pakistan	4G	Jazz, Telenor, Ufone
Panama	4G	Movistar
Paraguay	4G	Claro, Personal, Tigo, Vox
Peru	4G	Claro, Entel, Movistar
Philippines	4G	Globe, Smart
Poland	4G	Orange, Play, Plus, T-Mobile
Portugal	4G	NOS, TMN, Vodafone
Puerto Rico	4G	Claro
Qatar	4G	Ooredoo, Vodafone
Romania	4G	Orange, Telekom Romania, Vodafone
Saint Kitts and Nevis	4G	Flow
Saint Lucia	4G	Flow
Saint Vincent and the Grenadines	4G	Flow
Serbia	4G	Telenor, VIP
Seychelles	4G	Airtel
Slovakia	4G	O2, Orange, Telekom
Slovenia	4G	A1, Mobitel
South Africa	4G	MTN, Vodacom
South Korea	4G	KT, LG U+, SK Telecom
Spain	4G	Orange, Telefonica, Vodafone, Yoigo
Sri Lanka	4G	Dialog, Mobitel
Sweden	4G	3 (Tre), Tele2, Telenor, Telia
Switzerland	4G	Salt, Sunrise
Taiwan	4G	Chunghwa, FarEasTone, T Star, Taiwan Mobile
Tajikistan	4G	Beeline, Tcell
Tanzania	4G	Airtel
Thailand	4G	AIS, DTAC, True Move
Trinidad and Tobago	4G	Digicel, TSTT
Tunisia	4G	Orange Tunisie, Tunisie Telecom
Turks and Caicos Islands	4G	Flow
Uganda	4G	Africell, Airtel, MTN
Ukraine	4G	Kyivstar, Life, MTS
United Kingdom	4G	3, EE, O2, Vodafone
United States	4G	Alaska Wireless, AT&T, T-Mobile (USA), Verizon[7]
Uruguay	4G	Antel, Claro, Movistar

Uzbekistan	4G	Beeline
Venezuela	4G	Movistar
Vietnam	4G	MobiFone, Viettel, Vinaphone
Virgin Islands (British)	4G	CCT, Flow
Virgin Islands (U.S.)	4G	T-Mobile (USA)
Zambia	4G	Airtel

Ordering information

SKU	Description	Region	Modem	EtherSIM	Lifecycle	Replacement
M715EMEA	M-Series LTE CAT 1 bis (Global, EtherSIM+), [x1]	Global	EG800Q-GL	✓	In development	
M715EMTY	M-Series LTE CAT 1 bis (Global, EtherSIM+), Tray [x50]	Global	EG800Q-GL	✓	In development	

Revision history

Revision	Date	Author	Comments
pre 001	2026-10-19	RK	Preview release