

Connection type Ethernet (LAN):


At the Leibinger-Jet 3 you must adjust:

1. Settings / Basic settings / IP_Address
IP-Adress: 172.16.23.66 (or an other)
Subnetmask: 255.255.0.0
2. Extra / Interface settings / Connection Typ
Ethernet
Port: 3000

Connect the Leibinger-Jet3 with the LAN of your computer with a RJ45-Patchcable from where you want to start Hyperterminal. If you use a direct connection between computer and Leibinger-Jet 3 please use a crossed cable. If you have a connection over a Switch or a Hub, please use a not crossed cable.


Test the connection:

At the PC you must open a DOS-Box: Start / Execute / cmd

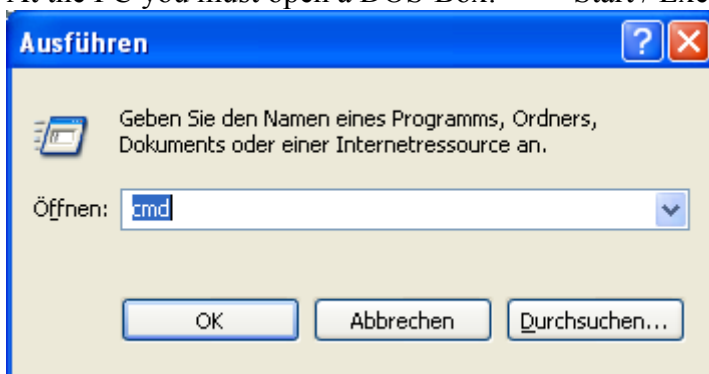


Click on the OK button.

Enter the command ping 172.16.23.66

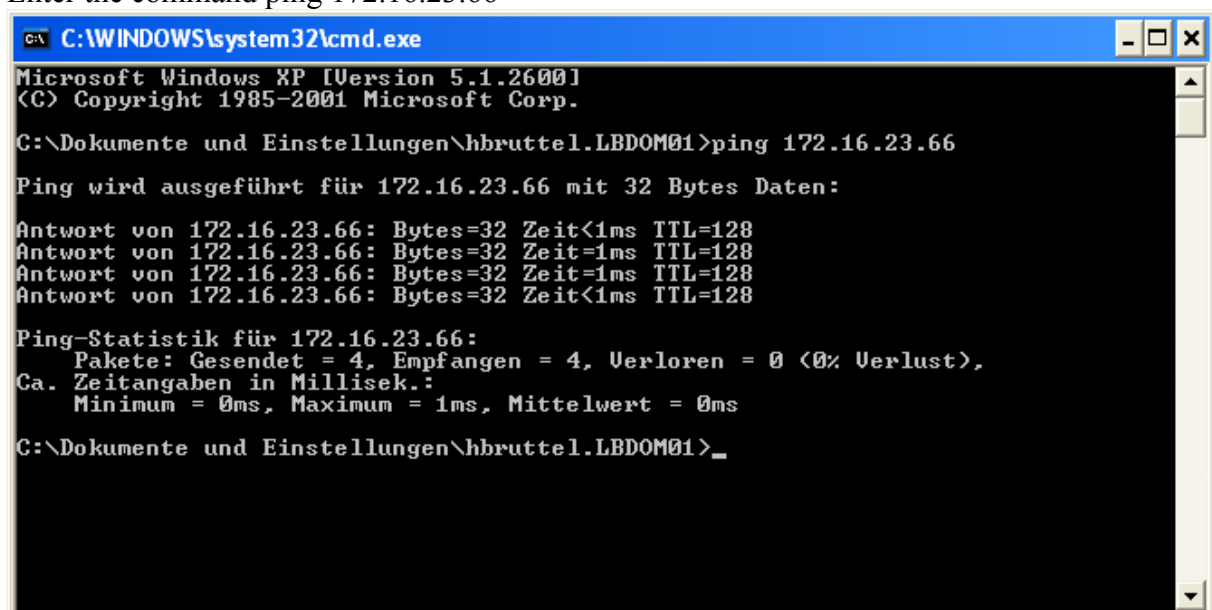

When you get an answer you have a connection to the Leibinger-jet 3.

To be sure that you have the connection to your Leibinger-jet3 and not to an other device, switch the Leibinger-Jet3 off and enter the command ping 172.16.23.66 once more. Now you must get timeout messages:

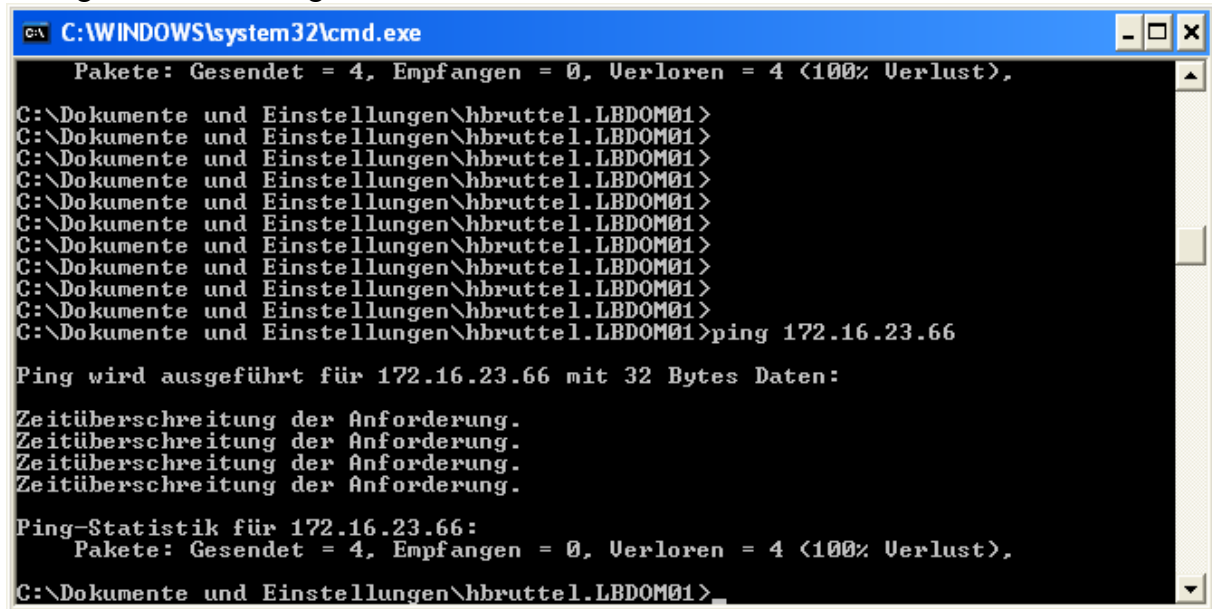

```
C:\WINDOWS\system32\cmd.exe
Pakete: Gesendet = 4, Empfangen = 0, Verloren = 4 (100% Verlust),
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>ping 172.16.23.66

Ping wird ausgeführt für 172.16.23.66 mit 32 Bytes Daten:
Zeitüberschreitung der Anforderung.
Zeitüberschreitung der Anforderung.
Zeitüberschreitung der Anforderung.
Zeitüberschreitung der Anforderung.

Ping-Statistik für 172.16.23.66:
    Pakete: Gesendet = 4, Empfangen = 0, Verloren = 4 (100% Verlust),
C:\Dokumente und Einstellungen\hbruttel.LBDOM01>
```

Connectiontyp RS232 (seriell):

At the Leibinger-Jet 3 you must adjust:

1. Extra / Interface settings / Connection Typ
Serial Interface
2. Baudrate: f.e. 9600
Parity: f.e. None

Connect the Leibinger-Jet3 with a RS232 cable with the COM-Port of your computer from where you want to start Hyperterminal.

Pin assignment at a Sub-D Connection with 9 pins (DB9):

Connect the ground line with each other: Connect pin 5 with pin 5.

Cross the Rx and the Tx line. Connect pin 2 with pin 3 and pin 3 with pin 2.

Using hardware handshake: Connect pin 7 with pin 8 and pin 8 with pin 7 (crossed RTS/CTS).

Without Hardware handshake: Make a bridge between 7 and 8 at the socket of the Leibinger-Jet 3.

Hyperterminal Version 5.1:

The Hyperterminal you will find under Start / All Programs / Accessories / Communication



With Ethernet (LAN):



With RS232:

Eigenschaften von t1

Verbinden mit | Einstellungen

 t1 Anderes Symbol...

Land/Region: Deutschland (49)

Ortskennzahl: 0271

Rufnummer:

Verbindung herstellen über: COM1

Konfigurieren...

☒ Landes- und Ortskennzahl verwenden
☐ Erneut wählen, falls besetzt ist


OK Abbrechen

After clicking Konfigurieren:



Here you must adjust the same as at the Leibinger-Jet3. (Look ahead)

Click on the mouse pad „Eigenschaften“, then on the registry card „Einstellungen“:

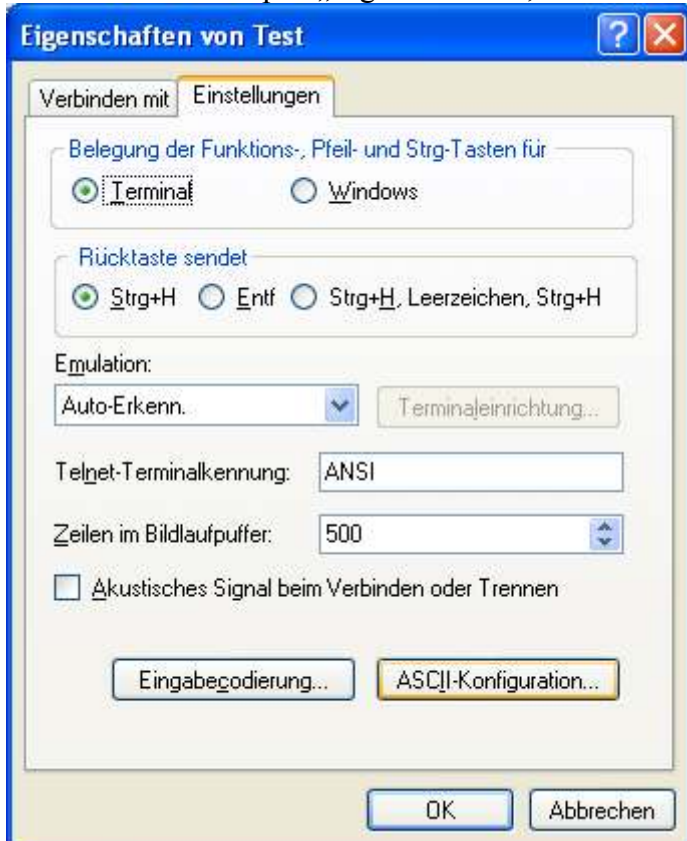

After Clicking on ASCII-Konfiguratin you get this dialgue. Switch on the first 3 switches:

ASCII-Konfiguration

Einstellungen für den ASCII-Versand

- ☒ Gesendete Zeilen enden mit Zeilenvorschub
- ☒ Eingegebene Zeichen lokal ausgeben (lokales Echo)
- Zeilenverzögerung: Millisekunden
- Zeichenverzögerung: Millisekunden

Einstellungen für den ASCII-Empfang

- ☒ Beim Empfang Zeilenvorschub am Zeilenende anhängen
- ☐ Eingangsdaten im 7-Bit-ASCII-Format empfangen
- ☒ Zu lange Zeilen im Terminalfenster umbrechen

OK Abbrechen

Here you see 6 examples of communication:

```

a1 - HyperTerminal
Datei Bearbeiten Ansicht Anrufen Übertragung ?
^0?RS
^0=RS2 6 0 0 0
^0=JLFFSDISK\JOBS\test.job
^0?SM
^0=SM256 0 0 0 0
^0=MR0 11111 AAAAA
^0=MR0 22222 BBBBB
^0=MR0 33333 CCCCC
^0?SM
^0=SM256 3 0 0 0
^0!GO
-
Verbunden 00:09:34 Auto-Erkenn. TCP/IP RF GROSS NUM Aufzeichnen Druckerecho

```

- | | |
|-------------------------------|---|
| 1. ^0?RS | Status request. The Ljet answers with ^0=RS 6 ... |
| 2. ^0=JLFFSDISK\JOBS\test.job | The Ljet loads the job test.job |
| 3. ^0?SM | Get Mail Status. The Ljet answers with ^0=SM256 ... |
| | The mail buffer has 0 entries |
| 4. ^0=MR0 11111 AAAAA | Send a mail record to the Ljet |
| 5. ^0?SM | Get Mail Status. The Ljet answers with ^0=SM256 ... |
| | The mail buffer has 3 entries |
| 6. ^0!GO | send the print start command to the LJet |

The Job test.job should contain two objects with extern text – mailing. The field numbers should be 1 and 2.

The command ^0?SM should be sent twice, because the first answer is not always actual.

Field 1 prints:

```

Print Go 1: 11111
Print Go 2: 22222
Print Go 3: 33333
Print Go 4: 33333

```

...

Field 1 prints:

```

Print Go 1: AAAAA
Print Go 2: BBBBB
Print Go 3: CCCCC
Print Go 4: CCCCC

```

...

End of document
Bruttel, June. 2.2009