

Table of Contents

- PatternControlDisplayDefTopic
 - UsingPCD.2.01
 - UsingPCD.2.02
 - UsingPCD.2.03
 - UsingPCD.2.04
 - UsingPCD.2.05
 - UsingPCD.2.06
 - UsingPCD.2.07
 - UsingPCD.2.08
 - UsingPCD.2.09
 - UsingPCD.2.10
 - UsingPCD.2.11
 - UsingPCD.2.12
 - UsingPCD.2.13
 - UsingPCD.2.14
 - UsingPCD.2.15
 - UsingPCD.2.16
 - UsingPCD.2.17
 - UsingPCD.2.18
 - UsingPCD.2.19

PatternControlDisplayDefTopic

Pattern Control Display

Pattern Control Display

The Pattern Control Display (PCD) shows information about the patterns and download data that are present in tester memory and can be used to help in visualizing memory allocation and pattern hierarchy, thereby assisting in debugging pattern memory problems. The Pattern Control Display also lets you load and unload patterns, execute them, and loop over them. You can also invoke PatternTool from PCD to examine a specific pattern in detail.

The following topics are covered:

- [Invoking the Pattern Control Display](#)
- [The Pattern Control Display Window](#)
- [Display Controls](#)
- [PCD Pattern Explorer](#)
- [Memory Consumption](#)
- [Pattern Execution](#)
- [Other PCD Functions](#)

IG-XL includes additional digital tools:

- [PatternTool:](#)
 - [Create, edit, and debug pattern files](#)
 - [Overlay failures on programmed vectors](#)
- [HRAM Display:](#)

- Provides a tabular view of captured HRAM data
- Includes fail overlay and actuals
- Waveform Display:
 - Graphically view waveforms over time and across pins of interest
 - Supports Protocol Aware (PA) frames and standard digital
 - Performs actual mode

For more information, see:

- About PatternTool
- About HRAM Display
- About Waveform Display

<

>

UsingPCD.2.01

<

>

Using Pattern Control Display

Using Pattern Control Display

This section covers the following topics on using Pattern Control Display:

- [Invoking the Pattern Control Display](#)
- [The Pattern Control Display Window](#)
- [Display Controls](#)
- [PCD Pattern Explorer](#)
- [Memory Consumption](#)
- [Pattern Execution](#)
- [Other PCD Functions](#)

<

>

UsingPCD.2.02

<	>
-----------------	-----------------

Using Pattern Control Display : Invoking the Pattern Control Display

Invoking the Pattern Control Display

To invoke the Pattern Control Display, do either of the following:

- | | |
|--|---|
| | <ul style="list-style-type: none">• Select Tools>Pattern Control Display in the Launch group on the IG-XL Tools tab. |
| | <ul style="list-style-type: none">• From TDE, select the command TDE>Tools>Pattern Control Display. |

Only a single instance of the Pattern Control Display can be running at a time.
The Pattern Control Display requires a validated test program. Patterns are loaded on validation, meaning that pattern information can then be displayed. If you also want to execute a pattern from PCD, the test program must be stopped at a breakpoint.

<	>	
	2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.03


<

>

Using Pattern Control Display : The Pattern Control Display Window

The Pattern Control Display Window

The PCD window looks like this:

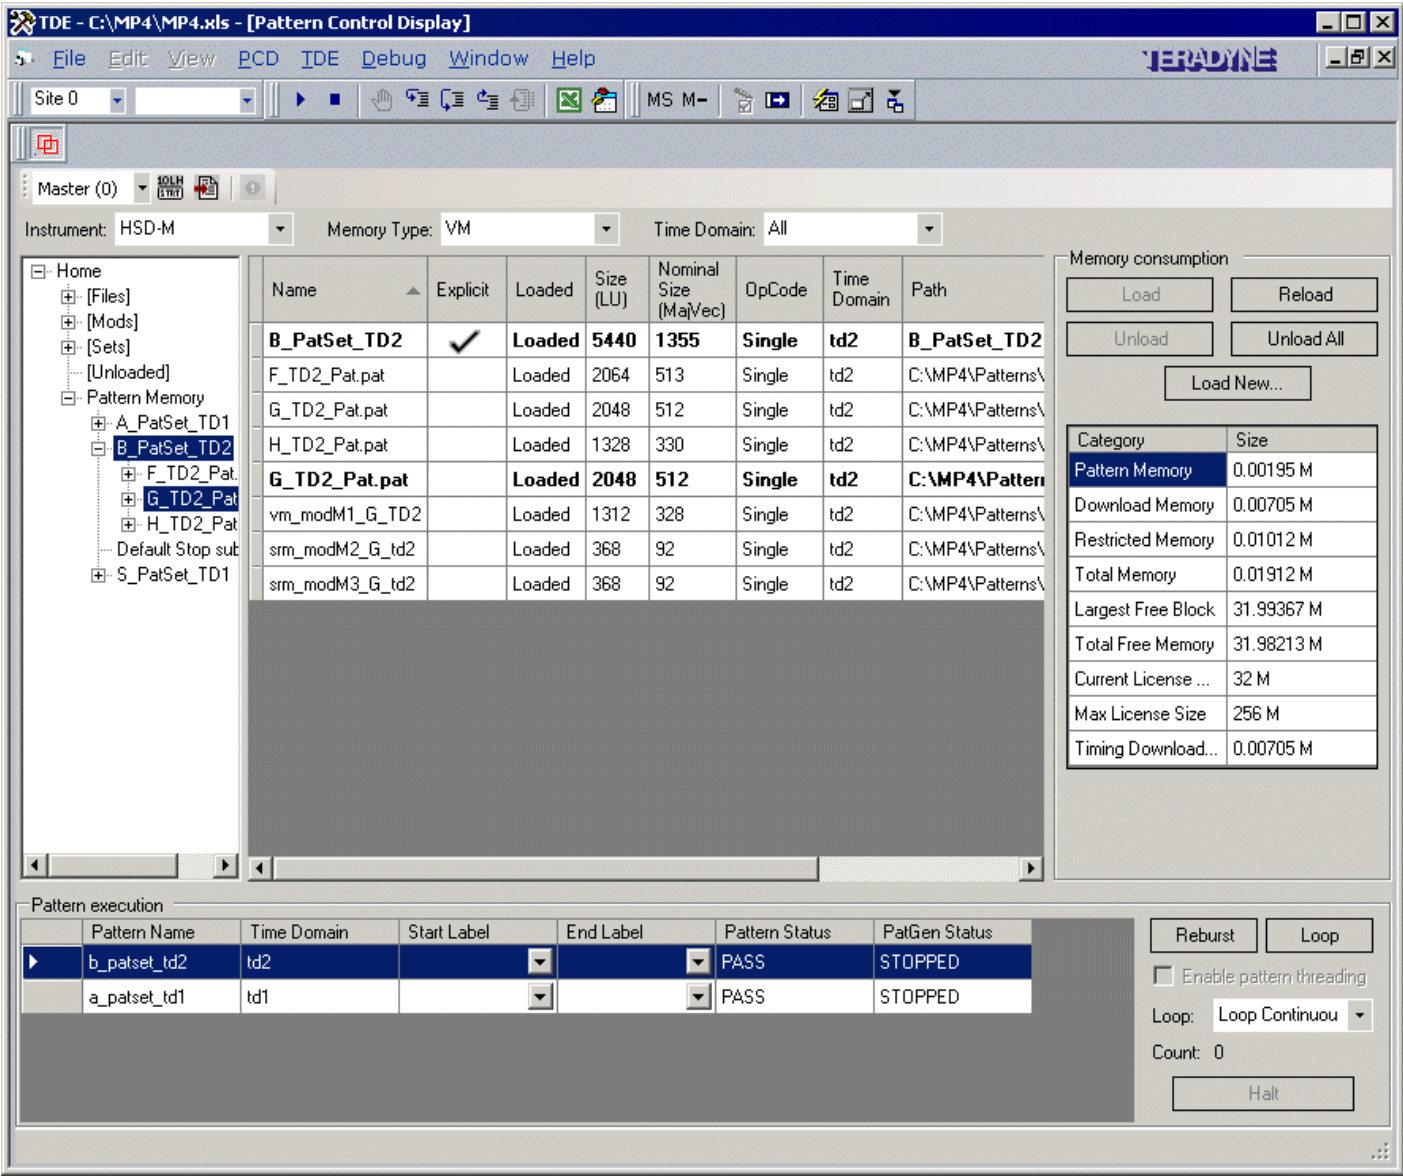

Pattern Control Display

The Pattern Control Display consists of these parts:

Display controls	These drop-down lists across the top of the display determine what pattern information is displayed. See Display Controls.
PCD Pattern Explorer	This read-only grid displays information about the loaded pattern. The tree view on the left lists the currently loaded patterns and lets you select the pattern sets, files, or modules for display. The grid in the center then displays information about the selected items. You can also select specific pattern modules in the grid to load, unload, or execute. See PCD Pattern Explorer.
Memory consumption	This read-only section at the right displays information about pattern memory. Buttons in this section let you load and unload patterns, thereby changing the amount of memory consumed. See Memory Consumption.
Pattern execution	This section at the bottom of the window displays the pattern sets, files, and modules that you have selected for execution. You can set start and stop labels. After the pattern burst, this section displays the pattern and PatGen status. See Pattern Execution.

In addition to the buttons on the display, the [PCD toolbar](#) and the [TDE menus](#) File and PCD contain commands that perform the same functions as the buttons, as well as some functions that do not have equivalent buttons. You can also perform many PCD functions on the currently selected pattern item using commands from a right-click menu. For more information, see [Other PCD Functions](#).

< >		
	2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.04

<

>

Using Pattern Control Display : Display Controls

Display Controls

The Pattern Control Display has drop-down lists across the top of the display that determine what patterns are to be shown in the PCD Pattern Explorer:

Instrument: HSD-M

Memory Type: VM

Time Domain: td1

Pattern Control Display Controls

Instrument	Specifies the digital instrument. Currently, only the HSD-M instrument (HSD1000 and UltraPin800) is supported.
Memory Type	Specifies the type of memory to be displayed. The drop-down list contains the memory types available for the currently selected instrument. The HSD-M instrument has memory types VM and SRM. See SRM Modules Loaded Into VM.
Time Domain	Specifies the time domain to be displayed. The drop-down list contains all time domains used by the tester defined in the workbook, plus the default All, which displays all time domains.

SRM Modules Loaded Into VM

SRM modules are preloaded into VM at validation time and then loaded into SRM at pattern start time. The VM selection shows all contents of VM, including the images of SRM modules. The SRM selection, on the other hand, shows only the SRM modules that are currently loaded in SRM. SRM is actively managed on a per-burst basis. At the start of a burst, the SRM modules from the previous burst are cleared and the new modules for the upcoming burst are loaded. For this reason, if you trap immediately after a burst, the PCD display for SRM will show only the SRM modules that were loaded for that burst.

Because the SRM modules are preloaded into VM as download images, you can use the VM display to see how much memory the SRM modules consume.

< >		
	2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.05



Using Pattern Control Display : PCD Pattern Explorer

PCD Pattern Explorer

The PCD Pattern Explorer provides information about specific pattern modules, arranged in a grid. The following figure uses scrolling to display all of the columns:

Home

[Files]

[Mods]

[Sets]

[Unloaded]

Pattern Memory

A_PatSet_TD1

B_PatSet_TD2

F_TD2_Pat.pat

srm_modL2_F_TD2

srm_modL3_F_TD2

vm_modL1_F_TD2

G_TD2_Pat.pat

H_TD2_Pat.pat

vm_modN1_H_TD2

Default Stop subroutine

S_PatSet_TD1

Name	Explicit	Loaded	Size (LU)	Nominal Size (Ma Vec)	OpCode	Time Domain	Path
G_TD2_Pat.pat		Loaded	2048	512	Single	td2	C:\MP4\Patterns\G_TD2_I
vm_modM1_G_TD2		Loaded	1312	328	Single	td2	C:\MP4\Patterns\G_TD2_Pat.p
srm_modM2_G_td2		Loaded	368	92	Single	td2	C:\MP4\Patterns\G_TD2_Pat.p
srm_modM3_G_td2		Loaded	368	92	Single	td2	C:\MP4\Patterns\G_TD2_Pat.p
A_PatSet_TD1	✓	Loaded	7392	1838	Single	td1	A_PatSet_TD1
C_TD1_Pat.pat		Loaded	3040	756	Single	td1	C:\MP4\Patterns\C_TD1_Pat.p
D_TD1_Pat.pat		Loaded	3024	752	Single	td1	C:\MP4\Patterns\D_TD1_Pat.p
E_TD1_Pat.pat		Loaded	1328	330	Single	td1	C:\MP4\Patterns\E_TD1_Pat.p
srm_modL2_F_TD2		Loaded	368	92	Single	td2	C:\MP4\Patterns\F_TD2_F

PCD Pattern Explorer

The PCD Pattern Explorer consists of two parts: the tree view on the left, and the display area on the right. In this example, a pattern set, pattern file, and pattern module are selected in the tree view. The display area shows information about the selected items and the elements in each item: the pattern set and its pattern files, and the pattern file and its modules.

The following topics are available:

- PCD Pattern Explorer Tree View

- PCD Pattern Explorer Display Area

file:///C:/Users/cpatle2/AppData/Local/Temp/chm_extract_5jq7winw/combined.html

10/34

<		>	
	2015 Teradyne, Inc. All rights reserved.		


UsingPCD.2.06



Using Pattern Control Display : PCD Pattern Explorer : PCD Pattern Explorer Tree View

PCD Pattern Explorer Tree View

The PCD tree view provides a convenient way to select pattern sets, files, and modules, to see their structure, to display information about them, or to burst them.

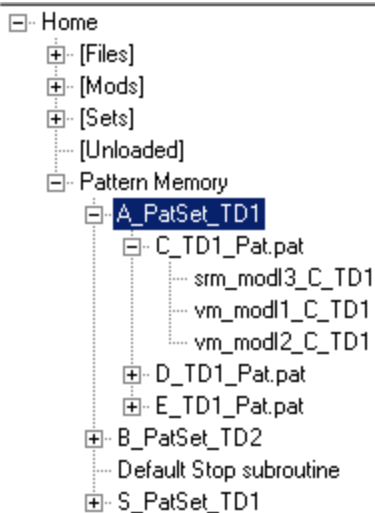

Tree View

The tree view initially shows all patterns that were loaded at validation time or through VBT language calls. You can use the display controls to specify the instrument, memory type, and time domain whose patterns you want included in the tree view. See [Display Controls](#).

The +/- controls let you expand or collapse the individual elements in the tree to show or hide the elements they contain.

The Pattern Memory node of the tree shows everything that has been loaded into pattern memory in a way that indicates the hierarchy of pattern sets, files, and modules. If you expand a pattern set, you see the pattern files and modules it contains. If you expand a pattern file, you see the modules it contains.

The tree view also indicates which items have been loaded explicitly and implicitly. Any item that was explicitly loaded is at the root or first level of the Pattern Memory node. Anything at a lower level was implicitly loaded as part of the item that was explicitly loaded.

The Pattern Memory node always includes a Default Stop subroutine, which is displayed as part of this node for both VM and SRM.

In addition to the hierarchical Pattern Memory node, the tree view provides other nodes that list all pattern [Files], [Mods] (modules), and [Sets]. These filters simply list all items of that type that are currently loaded. All items under these filter nodes are also available under the Pattern Memory node.

<

>

2015 Teradyne, Inc. All rights reserved.

UsingPCD.2.07

<

>

Using Pattern Control Display : PCD Pattern Explorer : PCD Pattern Explorer Display Area

PCD Pattern Explorer Display Area

The PCD Pattern Explorer display area shows size and additional information about the selected pattern items:

Name	Explicit	Loaded	Size (LU)	Nominal Size (MaVec)	OpCode	Time Domain	Path
A_PatSet_TD1	✓	Loaded	7392	1838	Single	td1	A_PatSet_TD1
C_TD1_Pat.pat		Loaded	3040	756	Single	td1	C:\MP4\Patterns\C_TD1_Pat.pat
D_TD1_Pat.pat		Loaded	3024	752	Single	td1	C:\MP4\Patterns\D_TD1_Pat.pat
E_TD1_Pat.pat		Loaded	1328	330	Single	td1	C:\MP4\Patterns\E_TD1_Pat.pat
C_TD1_Pat.pat		Loaded	3040	756	Single	td1	C:\MP4\Patterns\C_TD1_Pat.pat
vm_mod1_C_TD1		Loaded	1328	330	Single	td1	C:\MP4\Patterns\C_TD1_Pat.pat:vm_mod1_C_TD1
vm_mod2_C_TD1		Loaded	1328	330	Single	td1	C:\MP4\Patterns\C_TD1_Pat.pat:vm_mod2_C_TD1
srm_mod13_C_TD1		Loaded	384	96	Single	td1	C:\MP4\Patterns\C_TD1_Pat.pat:srm_mod13_C_TD1

PCD Pattern Explorer Display Area

In this example, a pattern set and a pattern file from that set are individually selected in the tree view. The pattern set displays the pattern files it contains, and the pattern file displays the modules it contains. The pattern set is explicitly loaded. The pattern file is implicitly loaded as part of the pattern set.

Items in bold are those that are selected in the tree view. Items not in bold are those that are contained by the bolded item above it.

For each entry, the PCD Pattern Explorer displays:

Name	The name of the pattern set, file, or module.
Explicit	Whether the item is explicitly loaded. If this cell is not checked, the item is implicitly loaded as part of the item that contains it.

Loaded	Whether the item is Loaded or Unloaded. If you explicitly unload the item, its name appears in blue.
Size (LU)	Size in license units. See Size Units.
Nominal Size (MajVec)	Size in number of major vectors. See Size Units.
Opcode Mode	Single or Dual.
Time Domain	The time domain with which the pattern is associated. A blank means that the pattern is not associated with a time domain.
Path	The location of the item: - For a pattern set, the name of the pattern set - For a pattern file, the complete pathname to the pattern file - For a pattern module, the pattern file pathname with the module name appended after a colon: <code>pathname\file.pat:module</code>

Size Units

The PCD Pattern Explorer displays a pattern's size in terms of two units:

LU	License units
MajVec	Major vectors

The MajVec unit refers to the number of vectors in a pattern. Specifically, it refers to the number of major vectors in the pattern. A vector cycle has one major vector and, depending on its mode, no (Single), one (Dual), or three minor vectors (Dual 2X). Therefore, one major vector in single mode means one actual vector, whereas one major vector in dual mode means two actual vectors.

The LU unit refers to license units. A license unit is the smallest amount of memory that can be licensed and managed by the test system. To provide a meaningful unit of measure, a license unit is normalized to the amount of vector memory that would be used if the pattern had been loaded into memory using the highest vector packing mode, which is dual 2X. Therefore a single-mode pattern with a certain number of major vectors will require the same number of license units as a dual-2X mode pattern with the same number of major vectors, even though the single-mode pattern is smaller in size.

On digital licensing, see

- [HSD1000 Software Licensing Requirements](#)
- [UltraPin800 Software Licensing Requirements](#)

<

>

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingPCD.2.08



Using Pattern Control Display : [PCD Pattern Explorer](#) : Selecting and Operating on Items in the PCD Pattern Explorer

Selecting and Operating on Items in the PCD Pattern Explorer

In either the tree view or the display area, you can select a pattern set, file, or module by clicking it. You can select multiple items using the standard mouse techniques:

- [Click](#) followed by Shift+click selects a range of items.

- [Ctrl+click](#) selects noncontiguous items.

When you select an item in the tree view, it appears in the display area, followed by the next level items it contains: if you select a pattern set, its patterns are also displayed; if you select a pattern, its modules are also displayed.

In the tree view, you can select items in both the Pattern Memory nodes and the filter nodes. If you select the same object twice, it appears in the display area only once. If you select an item and also select another item that it contains (for example, both a pattern and a module in that pattern) the contained item appears twice in the display area: for example, once as a module in the selected pattern file and the second time as an individually selected module.

When you select one or more items, you can perform actions on the selected items:

- You can use the [buttons under](#) Memory consumption or commands on the right-click menu to unload or reload them. See [Memory Consumption](#).

- You can use the [Add to Burst Panel](#) command on the right-click menu to move the items to the Pattern execution pane. You can also use commands on the right-click menu to burst or

loop the selected items. Only commands that are valid for the selected items are enabled on the menu. See [Pattern Execution](#).

-  You can use the Launch PatternTool command on the right-click menu or the button on the toolbar to use PatternTool to view the selected items.
- You can use the Launch Explorer command on the right-click menu to view the currently selected .pat pattern file in Windows Explorer.

<

>

2015 Teradyne, Inc. All rights reserved.

UsingPCD.2.09

<	>
-----------------	-----------------

Using Pattern Control Display : Memory Consumption

Memory Consumption

The Memory consumption section of the PCD provides information about current memory usage, plus buttons for loading and unloading pattern modules.

The following topics are available:

- | | |
|---|---|
| • | Load and Unload Buttons |
| • | Memory Display |

<	>
-----------------	-----------------

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingPCD.2.10



Using Pattern Control Display : Memory Consumption : Load and Unload Buttons

Load and Unload Buttons

You can load and unload patterns into and out of memory. You specify the pattern item to be loaded or unloaded by selecting it in the PCD Pattern Explorer, either in the tree view or the display area.

The load and unload functions are also available as commands from the PCD menu in TDE, except for Load New, which is on the File menu. If you right-click a pattern item in the PCD Pattern Explorer, the menu displays the load and unload operations that are valid for that item.

The buttons under the Memory consumption heading perform the following functions:

Load	Load the selected item into memory. You use Load for modules that have been unloaded: these items appear in blue in the view tree. You can also load an item that has been modified in memory, usually by a concurrent session of PatternTool. If you load an item that is already implicitly loaded, it is then explicitly loaded.
Reload	Reload the selected item into memory. Reload uses the information on disk, that is, the .pat file. This is most useful when the pattern has been modified in memory through the PatternTool Update Tester command. If you want to back out those changes, you can use the PCD Reload button to reload the pattern to the tester from the compiled pattern file on disk.
Load New ...	Load pattern file into memory. The button brings up a browser that lets you specify the pattern file. Once the pattern file is loaded, the new modules appear in the PCD Pattern Explorer.

Unload

This function is also available from the File menu of TDE.

Unload the currently selected item.
You can unload only items that have been explicitly loaded, either at validation, through a VBT statement, or through PCD. If a selected item has been implicitly loaded, the Unload button is not enabled.
Unloaded modules are indicated in blue in the tree view. The display area has the value Unloaded in the Loaded column.

Unload All

Unload all pattern items. This is the same as the action performed by the VBT statement TheHdw.Patterns.UnloadAll.

< >		
	2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.11

<

>

Using Pattern Control Display : [Memory Consumption](#) : Memory Display

Memory Display

The Memory consumption section displays information about current memory usage:

Memory consumption

Load

Reload

Unload

Unload All

Load New...

Category	Size
Pattern Memory	0.00598 M
Download Memory	0.00366 M
Restricted Memory	0.50891 M
Total Memory	0.51855 M
Largest Free Block	127.48145 M
Total Free Memory	127.48145 M
Max License Size	128 M
Timing Download...	0.0033 M

Memory Consumption

The categories of information displayed depends on the current selection of the Memory Type control. For example, some categories apply only to VM and are therefore hidden if the memory type is SRM.

The values displayed are for the currently selected Time Domain.

The values are given in megavectors (M). A megavector is 1024^2 license units (LU), rounded up for display purposes.

The following information is provided:

Pattern Memory	The amount of pattern memory consumed by VM modules or SRM modules.
Download Memory	The amount of memory consumed in VM memory by downloaded images of SRM modules and timing download images. This section is always 0 for SRM memory.
Restricted Memory	Any memory that is restricted by overlapping time domains.
Total Memory	The sum of the pattern memory consumption, the download memory consumption, and the restricted space.
Largest Free Block	The maximum amount of consecutive memory that is available. This information indicates that a pattern that is smaller than this size can be loaded in memory.
Total Free Memory	The sum of all free blocks of data in memory.
Max License Size	The maximum amount of memory that can be licensed. When the selected memory type is not licensable, this label appears as Maximum Memory Size and shows the maximum memory available for the instrument.
Timing Download Images	The amount of memory consumed by all timing download images. This category is displayed only when the memory type is VM.


UsingPCD.2.12



Using Pattern Control Display : Pattern Execution

Pattern Execution

You can execute loaded pattern sets, files, and modules using PCD. The Pattern Execution Panel shows the pattern items currently selected for execution, and the buttons and other controls at the right of the panel let you burst or loop over the selected patterns:

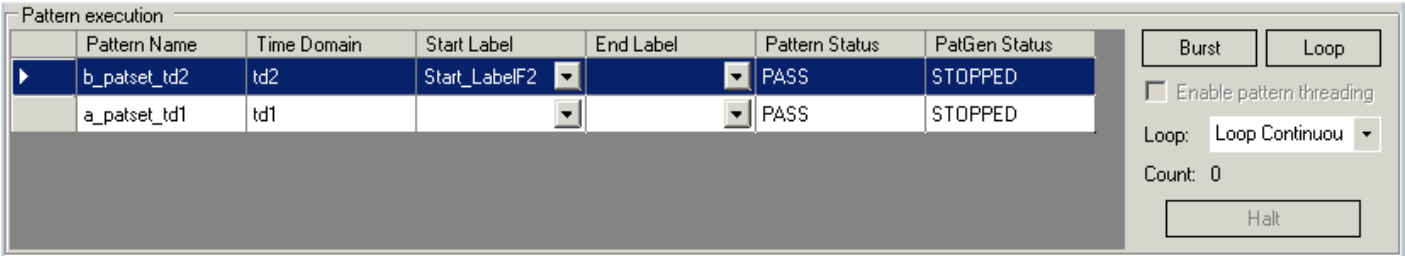

Pattern Execution Panel

The following topics are available:

- Bursting from the Pattern Execution Panel or the PCD Pattern Explorer
- Time Domains
- Site Selection
- Pattern Execution Panel Display
- Pattern Execution Functions
- PCD Menu Burst and Load Commands

< >		
	2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.13



[Using Pattern Control Display : Pattern Execution](#) : Bursting from the Pattern Execution Panel or the PCD Pattern Explorer

[Bursting from the Pattern Execution Panel or the PCD Pattern Explorer](#)

[You can burst pattern items from either the Pattern Execution Panel or the PCD Pattern Explorer.](#) The buttons at the right of the Pattern Execution Panel operate on all pattern items currently in the Pattern Execution Panel. To add pattern items to the panel, first select them in the PCD Pattern Explorer, in either the tree view or the display area. Then right-click and, from the menu, select [Add to Burst Panel](#). The panel lets you select a start and end label for pattern execution. Because it bursts all items in the panel, it also lets you burst multiple items concurrently, as long as they are in different time domains. The button functions are available as commands from the PCD menu in TDE. These menu commands operate on all pattern items currently in the Pattern Execution Panel. [You can also burst pattern items from the PCD Pattern Explorer.](#) If you select items, either in the tree view or in the display area, the right-click menu has commands enabled for all burst operations valid for the selected pattern items. For example, if you select two pattern items from different time domains, the burst commands are enabled; if they are from the same time domain, only [Add to Burst Panel](#) is enabled, because any concurrent burst operation would be invalid. [When you execute from the PCD Pattern Explorer, the selected and executed items replace whatever was in the Pattern Execution Panel, so that the pattern and PatGen status for the executed items can be displayed.](#)

[If you want to specify a start or end label, you must use the Pattern Execution Panel. Otherwise, there is no difference between executing from the Pattern Execution Panel and from the PCD Pattern Explorer.](#)

[Note that the burst commands on the PCD menu in TDE operate differently. See \[PCD Menu Burst and Load Commands\]\(#\).](#)

<	>
-----------------	-----------------

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingPCD.2.14

<

>

Using Pattern Control Display : Pattern Execution : Time Domains

Time Domains

You can burst multiple pattern items concurrently if they belong to different time domains. If you use Add to Burst Panel to add two pattern items from the same time domain to the Pattern Execution Panel, red exclamation points indicate the error:

Pattern Name	Time Domain	Start Label	End Label	Pattern Status	PatGen Status
A_PatSet_TD1	td1			N/A	
S_PatSet_TD1	td1			N/A	

Invalid Time Domains

If you use the PCD Pattern Explorer to select two pattern items from the same time domain, all burst commands on the right-click menu are disabled, because the patterns cannot be executed concurrently.

<

>

UsingPCD.2.15

<	>
-----------------	-----------------

Using Pattern Control Display : Pattern Execution : Site Selection

Site Selection

Pattern items are burst only at the currently selected site. The PCD toolbar contains a Site Selection control, with a drop-down list containing the available sites plus the keyword Master (n). The master site is the only site currently selected on the TDE toolbar and is indicated by the number in parentheses.

<	>
-----------------	-----------------

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingPCD.2.16



Using Pattern Control Display : Pattern Execution : Pattern Execution Panel Display

Pattern Execution Panel Display


The Pattern Execution Panel displays the most recently executed pattern item. If you bring up PCD while stopped at a breakpoint, the panel displays whatever pattern was most recently executed. (The PCD Menu Burst and Load Commands have a different effect.)

To add a pattern item to the display, right-click it in the PCD Pattern Explorer and select Add to Burst Panel from the right-click menu. To remove a pattern item from the display, right-click it and select Remove from Burst Panel; you can also use the Delete key.

The Start Label and End Label columns have drop-down lists containing all global labels in the pattern item. You can select labels to use or leave the columns blank.

The Pattern Status column reveals the result of the pattern item execution at the currently selected site. The possible values are PASS, FAIL, and ERROR. Any error message is displayed in the PCD toolbar.

The PatGen Status column displays the current status of the PatGen. The possible values are RUNNING, STOPPED, and KEEP-ALIVE.

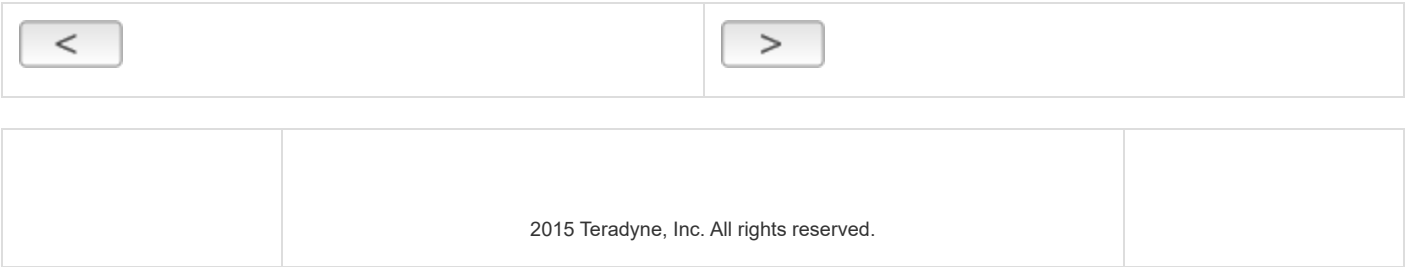

UsingPCD.2.17



Using Pattern Control Display : Pattern Execution : Pattern Execution Functions

Pattern Execution Functions

To execute a pattern item from PCD, you must be stopped at a breakpoint.

The execution functions are available from the buttons in the Pattern Execution Panel and from the right-click context menu when items are selected in the Pattern Explorer and the Pattern Execution Panel. Note that the same functions are available on the PCD menu in TDE, but have some different effects. See [PCD Menu Burst and Load Commands](#).

Only those commands or buttons that are valid for the selected pattern items are enabled.

Pattern execution functions are as follows:

Burst	Executes the currently selected pattern items. Burst performs a patgen Start, which begins pattern execution and returns immediately.
Reburst	Re-executes the most recently executed pattern item or items. By default, the Pattern Execution Panel displays the most recently burst item and its status. Because the buttons operate on the currently displayed items, after a burst the button is labeled Rebust instead of Burst. (Because the right-click menu applies only to the currently selected items in the PCD Pattern Explorer, it always displays Burst, not Rebust.) If you explicitly remove the burst items from the panel and add different items, the item displayed is no longer the most recently burst item, so the relevant button text and command are Burst, not Rebust.
Loop	Repeatedly executes the currently selected pattern module. The drop-down list lets you select the manner of looping:

- [Loop Continuous](#): Loop until pattern execution is explicitly halted.
- [Loop to Pass](#): Loop until the pattern passes.
- [Loop to Fail](#): Loop until the pattern fails.

The [read-only Count](#): field displays the number of times the pattern has been burst in the loop.

Once [looping starts](#), the [Halt](#) button is enabled to let you stop looping.

Enable pattern
threading

Enables [pattern threading](#), which lets you maintain an independent pattern flow on a per-site and per-time domain basis. If the selected pattern items support pattern threading, this check box is enabled. If you check the box, pattern threading is enabled. This is the same action as the [VBT statement](#) `TheHdw.Patterns.Threading.Enable`.

Halt

[Stops the pattern item that is currently executing or looping](#). Note that you can halt a pattern that was started by [PatternTool](#).

<

>

2015 Teradyne, Inc. All rights reserved.

UsingPCD.2.18

	
---	---

[Using Pattern Control Display : Pattern Execution](#) : PCD Menu Burst and Load Commands

PCD Menu Burst and Load Commands

The PCD menu in TDE has the burst commands available on the right-click context menus in the Pattern Explorer and the Pattern Execution Panel, but they behave differently.

The PCD menu burst commands act on the most recently burst pattern item, not the currently selected item in the tree or in the Pattern Execution Panel. Bursting a pattern item from the PCD menu does not update the pattern information in the Pattern Execution Panel.

For example, suppose PatA is in the Pattern Execution Panel, and you burst it. You then remove PatA from the panel and add PatB. You then select PCD>Burst. PatA is reburst. PatB still appears in the Pattern Execution Panel. The status of the PatA reburst is not displayed.

In addition, the load commands on the PCD menu are not always synchronized with the Pattern Explorer and Pattern Execution Panel. If a pattern item is unloaded and reloaded using the Pattern Explorer or Pattern Execution Panel, the loaded item is not always available for bursting from the PCD menu.

<	>
2015 Teradyne, Inc. All rights reserved.	

UsingPCD.2.19



Using Pattern Control Display : Other PCD Functions

Other PCD Functions

In addition to the load and burst functions, PCD offers these additional functions.

 Export to File

This function is available as a button on the PCD toolbar and as a command on the File menu in TDE.

This function brings up a browser that lets you specify an ASCII text file to which the contents of the PCD display will be written. The default filename is PCDMemoryOutput.txt. The ASCII file will contain all possible information in PCD, not just for currently selected pattern items or filters.

 Launch PatternTool

This function is available as a button on the PCD toolbar, as a command on the PCD menu in TDE, and as an item on the right-click menu in the PCD Pattern Explorer.

This brings up PatternTool for the currently selected pattern item that is currently selected in the PCD Pattern Explorer. If multiple items are selected, they are all displayed in PatternTool.

Launch Explorer

This function is available as a command on the right-click context menu in the Pattern Explorer. It launches Windows Explorer, highlighting the selected pattern item in its folder.

