

Table of Contents

[SpecToolDefTopic](#)[UsingSpecTool.2.1](#)[UsingSpecTool.2.2](#)[UsingSpecTool.2.3](#)[UsingSpecTool.2.4](#)[UsingSpecTool.2.5](#)[UsingSpecTool.2.6](#)[UsingSpecTool.2.7](#)[UsingSpecTool.2.8](#)[UsingSpecTool.2.9](#)

SpecToolDefTopic



SpecTool

SpecTool

SpecTool is an interface that lets you experiment with the values of AC, DC, and Global Specs in the context of the currently executing test instance. You can use SpecTool to modify spec values and rerun the test or reburst a pattern to see the effect of the modified values. You can also run a Measure on a spec to determine its just-passing value.

SpecTool allows you to experiment with different spec values without requiring workbook revalidation. It is designed for use at a breakpoint and confines itself to changes in data values within the context of a single test instance. It uses IG-XL's ability to maintain "transient" sets of data values and to apply them directly to the tester without requiring workbook validation. No SpecTool

command will cause a revalidation. You can, however, save whatever values you want, which will require revalidation when you step past the current test. Any changes that you save will also affect anything else in the program that uses the specs you have changed.

SpecTool is intended as a “what-if” tool. It is not designed as a specs sheet editor and is not a substitute for direct editing of the sheets.

The following sections are available:

- [Using SpecTool](#)

For more information, see:

- [Using Specs Sheets](#)

- [Specs](#) (VBT commands)

- [Device Characterization](#)

<

>

2015 Teradyne, Inc. All rights reserved.

UsingSpecTool.2.1

<	>
-----------------	-----------------

Using SpecTool

Using SpecTool

SpecTool complements Characterization Studio and provides a quick way to find pass/fail (or fail/pass) transition points for a given range of spec values.

SpecTool allows you to:

- View all specs in a single display filtered by various criteria
- Modify specs in hardware at a breakpoint without requiring revalidation
- Do “what-ifs” with spec values and characterization
- “Measure” a device given the “current” spec values

The features of SpecTool include:

- Must be at a breakpoint to use SpecTool because context is required
- Display AC, DC, and Global Specs
- Filter displayed specs
- Display the Category and Selector of displayed specs

- [Apply values to hardware](#)
- [Reburst/Retest instance](#)
- [Restore original values](#)
- [Perform "Measure" and display results](#)

This section includes the following topics:

- [SpecTool Window Overview](#)
- [Table Display of Specs](#)
- [Running a Measure](#)

VBT programming language is also available that allows you to manipulate specs from within an IG-XL program. For information, see [Specs](#) in the VBT Syntax Reference. For more information, see [Characterization Studio](#).

UsingSpecTool.2.2




Using SpecTool : SpecTool Window Overview

SpecTool Window Overview

Before invoking SpecTool, you should be stopped in the Flow Table, having just executed the test of interest. This allows you to have the correct spec context.



Bring up SpecTool by clicking SpecTool in the One-Click Launch group on the IG-XL Tools tab. When SpecTool first comes up, the default window looks like this:

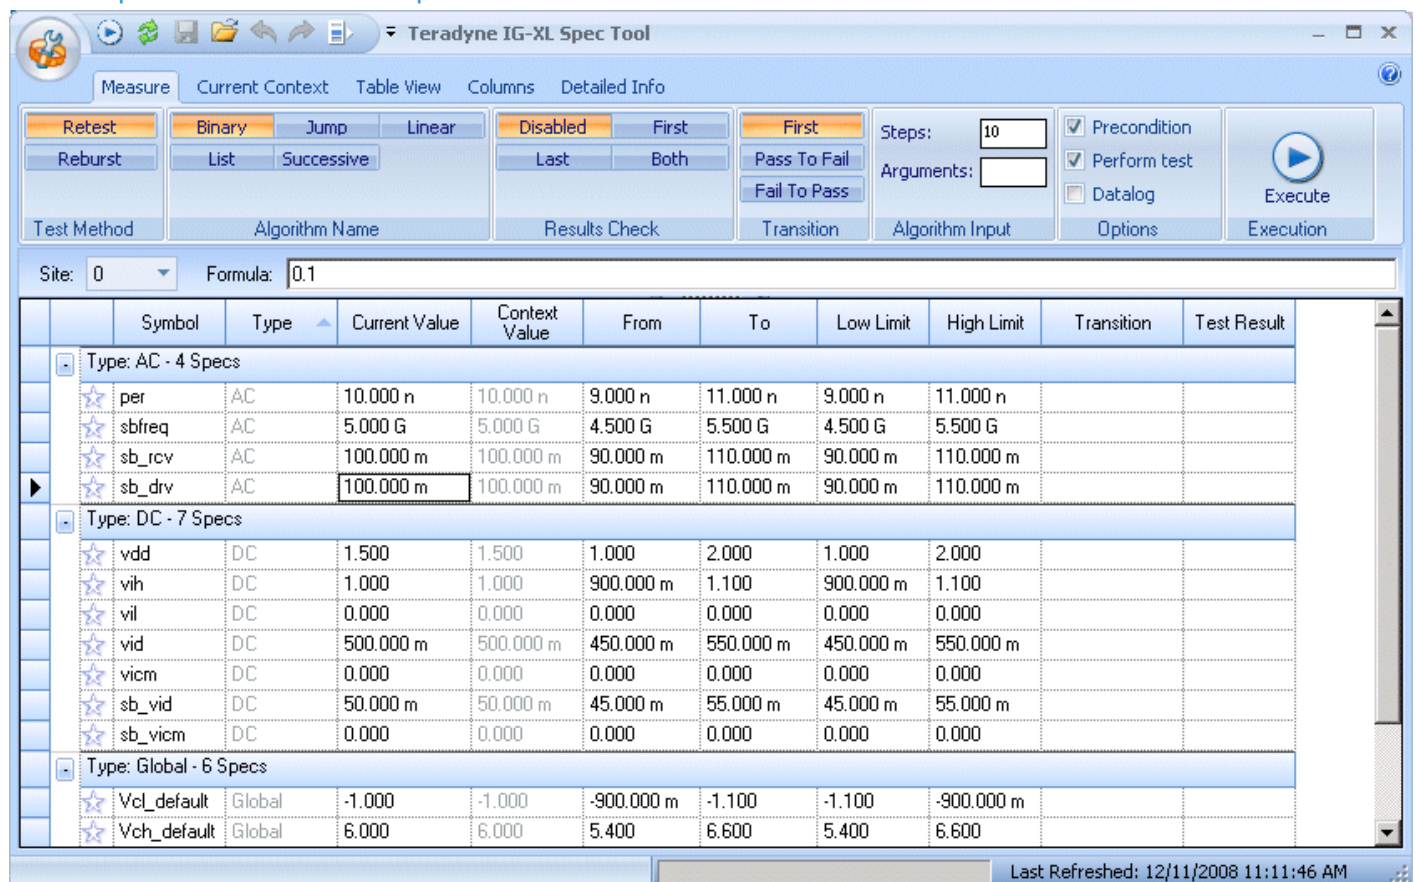

SpecTool Window

You can customize many aspects of the SpecTool window so that it does not look like the default window. This section is an overview of the default window.

The default window includes the following parts:

- The Quick Access toolbar at the top of the window provides one-click access to frequently performed SpecTool functions. You can customize the toolbar.
- Beneath this toolbar, the tabs let you select which group of functions you want to perform. The tabs are as follows:
 - **Measure:** Perform a Measure on the currently selected specs. See [Running a Measure](#).
 - **Current Context:** Display the currently selected category and selector for AC and DC specs. See [Displaying the Current Context and Detailed Info](#).
 - **Table View:** Specify how to group rows of the spec display. See [Changing the Table View of Spec Grouping](#). Also perform certain table edit functions on the displayed specs. See [Editing Spec Values](#).
 - **Columns:** Specify which columns to display in the table of specs. See [Changing the Columns Displayed](#).
 - **Detailed Info:** Display detailed information about the currently selected cell of the spec display tab. See [Displaying the Current Context and Detailed Info](#).
- Beneath the tabs and above the table display is a bar that has the Site selector and a box labelled Formula that displays the spec value as a formula.
- The largest part of the window is the table display of the specs and their values in the current spec context. See [Table Display of Specs](#). The table also lets you enter parameters for executing a Measure on each spec. See [Running a Measure](#).

<

>

--	--	--

UsingSpecTool.2.3

<	>
-----------------	-----------------

Using SpecTool : Table Display of Specs

Table Display of Specs

The following topics are covered:

- [Directly and Indirectly Modified Specs](#)
- [Changing the Table View of Spec Grouping](#)
- [Changing the Columns Displayed](#)
- [Displaying the Current Context and Detailed Info](#)
- [Editing Spec Values](#)

<	>
-----------------	-----------------

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingSpecTool.2.4

<

>

Using SpecTool : Table Display of Specs : Directly and Indirectly Modified Specs

Directly and Indirectly Modified Specs

SpecTool uses the concepts of directly or indirectly modified specs. This section defines these terms.

IG-XL uses the term directly modified to mean that a spec’s value has been directly modified by an overlay. For example, if an overlay is applied to spec A, then spec A is directly modified. In addition, when you manually edit the Current Value of a spec, the spec is directly modified using an overlay. The overlay for a manual edit is automatically called TER_SYSTEM_OVERLAY_n, with the number incremented for each manual edit.

If spec A is used in the definition of spec B, then directly modifying spec A with an overlay causes spec B to be indirectly modified.

SpecTool displays both directly and indirectly modified specs:

	Symbol ⁰	Type ▲	Current Value	Context Value
Type: AC - 3 Specs				
☆	t0per	AC	95.000	100.000 n
☆	timevalue	AC	100.000 n	100.000 n
☆	tsstroke	AC	142.500	150.000 n

Directly and Indirectly Modified Specs

In this example, t0per has been directly modified. SpecTool indicates this with the dark blue triangle in the corner of the Current Value cell. The spec tsstroke is defined as =1.5*_t0per. When t0per is directly modified, tsstroke is indirectly modified. SpecTool indicates this with a light blue triangle in the corner of the cell.

<

>

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingSpecTool.2.5

<

>

Using SpecTool : Table Display of Specs : Changing the Table View of Spec Grouping

Changing the Table View of Spec Grouping

By default, SpecTool displays the specs grouped by spec type: AC, DC, and Global:

	Symbol	Type	Current Value	Context Value	From	To	Low Limit	High Limit	Transition	Test Result
-	Type: AC - 4 Specs									
☆	per	AC	10.000 n	10.000 n	9.000 n	11.000 n	9.000 n	11.000 n		
☆	sbfreq	AC	5.000 G	5.000 G	4.500 G	5.500 G	4.500 G	5.500 G		
☆	sb_rcv	AC	100.000 m	100.000 m	90.000 m	110.000 m	90.000 m	110.000 m		
☆	sb_drv	AC	100.000 m	100.000 m	90.000 m	110.000 m	90.000 m	110.000 m		
-	Type: DC - 7 Specs									
☆	vdd	DC	1.500	1.500	1.000	2.000	1.000	2.000		
☆	vih	DC	1.000	1.000	900.000 m	1.100	900.000 m	1.100		
☆	vil	DC	0.000	0.000	0.000	0.000	0.000	0.000		
☆	vid	DC	500.000 m	500.000 m	450.000 m	550.000 m	450.000 m	550.000 m		
☆	vicm	DC	0.000	0.000	0.000	0.000	0.000	0.000		
☆	sb_vid	DC	50.000 m	50.000 m	45.000 m	55.000 m	45.000 m	55.000 m		
☆	sb_vicm	DC	0.000	0.000	0.000	0.000	0.000	0.000		
-	Type: Global - 6 Specs									
☆	Vcl_default	Global	-1.000	-1.000	-900.000 m	-1.100	-1.100	-900.000 m		
☆	Vch_default	Global	6.000	6.000	5.400	6.600	5.400	6.600		
☆	num	Global	1.000	1.000	900.000 m	1.100	900.000 m	1.100		
☆	Vph_defaul	Global	5.000	5.000	4.500	5.500	4.500	5.500		
☆	glob_time	Global	10.000 n	10.000 n	9.000 n	11.000 n	9.000 n	11.000 n		

Spec Types in SpecTool

You can choose to group specs by addition or other criteria. To change the grouping, use the Table View tab, where the Row Grouping group has these options:

Spec type	Groups specs by type: AC, DC, and Global. Default.
Directly modified	Group specs by whether they have been directly modified. See Grouping by Modification Status.
Modifying overlay	Group specs by overlays. See Grouping by Modification Status.

Starred	Group specs that have been starred. See Grouping by Starred Status .
Modified	Group specs by whether they have been directly or indirectly modified. See Grouping by Modification Status .

Grouping by Modification Status

The options on the SpecTool Table View tab related to modification status are:

Directly modified	Groups specs into those that have been directly modified by an overlay, including a manual edit, and those that have either not been modified or have been indirectly modified (through modification of another spec).
Modifying overlay	Groups specs by the names of the overlays that modified the specs (including the automatically generated overlay name created for each manual edit), with one additional group of the specs that have not been modified by an overlay.
Modified	Groups specs by whether they have been modified, either directly or indirectly.

For example, in the following display, one spec has been modified by applying an overlay and two specs have been directly edited. The Overlay column has been enabled. The first display is grouped by Directly modified:

	Symbol	Type	Current Value	Context Value	Overlay Name
- Directly: False - 14 Specs					
☆	vih	DC	1.000	1.000	
☆	vil	DC	0.000	0.000	
☆	vid	DC	500.000 m	500.000 m	
☆	vicm	DC	0.000	0.000	
☆	sb_vid	DC	50.000 m	50.000 m	
☆	sb_vicm	DC	0.000	0.000	
☆	per	AC	10.000 n	10.000 n	
☆	sbfreq	AC	5.000 G	5.000 G	
☆	sb_rcv	AC	100.000 m	100.000 m	
☆	sb_drv	AC	100.000 m	100.000 m	
☆	Vch_default	Global	6.000	6.000	
☆	Vph_default	Global	5.000	5.000	
☆	glob_time	Global	10.000 n	10.000 n	
☆	gl_sb_vod	Global	0.000	0.000	
- Directly: True - 3 Specs					
☆	vdd	DC	900.000 m	500.000 m	vdd_adj
☆	Vcl_default	Global	0.000	-1.000	TER_SYSTEM_O
☆	num	Global	1.000	1.000	TER_SYSTEM_O

Specs Grouped Using Directly modified

The second display is grouped by Modifying overlay:

	Symbol	Type	Current Value	Context Value	Overlay Name
Overlay Name: - 14 Specs					
☆	vih	DC	1.000	1.000	
☆	vil	DC	0.000	0.000	
☆	vid	DC	500.000 m	500.000 m	
☆	vicm	DC	0.000	0.000	
☆	sb_vid	DC	50.000 m	50.000 m	
☆	sb_vicm	DC	0.000	0.000	
☆	per	AC	10.000 n	10.000 n	
☆	sbfreq	AC	5.000 G	5.000 G	
☆	sb_rcv	AC	100.000 m	100.000 m	
☆	sb_drv	AC	100.000 m	100.000 m	
☆	Vch_default	Global	6.000	6.000	
☆	Vph_default	Global	5.000	5.000	
☆	glob_time	Global	10.000 n	10.000 n	
☆	gl_sb_vod	Global	0.000	0.000	
Overlay Name: TER_SYSTEM_OVERLAY_0 - 1 Specs					
☆	Vcl_default	Global	0.000	-1.000	TER_SYSTEM_O
Overlay Name: TER_SYSTEM_OVERLAY_1 - 1 Specs					
☆	num	Global	1.000	1.000	TER_SYSTEM_O
Overlay Name: vdd_adj - 1 Specs					
☆	vdd	DC	900.000 m	500.000 m	vdd_adj

Specs Grouped Using Modifying overlay

Grouping by Starred Status

Each spec row has a star in its first column. You can use the star to manually select specs that you want to group together. By default, stars are empty. When you click a star, it is filled with yellow:

	Symbol	Type	Current Value	Context Value
☆	sbfreq	AC	5.000 G	5.000 G
★	sb_rcv	AC	100.000 m	100.000 m
★	sb_drv	AC	100.000 m	100.000 m
Type: DC - 7 Specs				
☆	vdd	DC	900.000 m	500.000 m
☆	vih	DC	1.000	1.000
☆	vil	DC	0.000	0.000
☆	vid	DC	500.000 m	500.000 m
☆	vicm	DC	0.000	0.000
★	sb_vid	DC	50.000 m	50.000 m
★	sb_vicm	DC	0.000	0.000

Starred Specs Selected in the Display

On the Table View tab, you can then check the Starred option to group the starred items:

	Symbol	Type	Current Value	Context Value
[-]	Starred: False - 13 Specs			
☆	vdd	DC	900.000 m	500.000 m
☆	vih	DC	1.000	1.000
☆	vil	DC	0.000	0.000
☆	vid	DC	500.000 m	500.000 m
☆	vicm	DC	0.000	0.000
☆	per	AC	10.000 n	10.000 n
☆	sbfreq	AC	5.000 G	5.000 G
☆	Vcl_default	Global	-1.000	-1.000
☆	Vch_default	Global	6.000	6.000
☆	num	Global	1.000	1.000
☆	Vph_default	Global	5.000	5.000
☆	glob_time	Global	10.000 n	10.000 n
☆	gl_sb_vod	Global	0.000	0.000
[-]	Starred: True - 4 Specs			
★	sb_vid	DC	50.000 m	50.000 m
★	sb_vicm	DC	0.000	0.000
★	sb_rcv	AC	100.000 m	100.000 m
★	sb_drv	AC	100.000 m	100.000 m

Starred Specs Grouped in Table View

In addition to manually selected stars, SpecTool can also automatically star some specs. When you click Open Measure Setup (on the Quick Access toolbar or the Table View tab) the dialog box has a check box labelled Star Loaded Specs. If this box is checked, specs used by the setup are starred.

Multiple Grouping Criteria

If you select more than one grouping criterion, specs are grouped first by the first option you select and then, within those groups, by the second option you select. For example, if you select Spec Type first and then Starred, the grouping looks like this:

	Symbol	Type	Current Value	Context Value
Type: AC - 4 Specs				
Starred: False - 2 Specs				
☆	per	AC	10.000 n	10.000 n
☆	sbfreq	AC	5.000 G	5.000 G
Starred: True - 2 Specs				
★	sb_rcv	AC	100.000 m	100.000 m
★	sb_drv	AC	100.000 m	100.000 m
Type: DC - 7 Specs				
Starred: False - 5 Specs				
☆	vdd	DC	900.000 m	500.000 m
☆	vih	DC	1.000	1.000
☆	vil	DC	0.000	0.000
☆	vid	DC	500.000 m	500.000 m
☆	vicm	DC	0.000	0.000
Starred: True - 2 Specs				
★	sb_vid	DC	50.000 m	50.000 m
★	sb_vicm	DC	0.000	0.000
Type: Global - 6 Specs				

Specs Grouped First by Spec Type and Then by Starred

If you select Starred first and then Spec Type, the grouping looks like this:

	Symbol	Type	Current Value	Context Value
Starred: False - 13 Specs				
Type: AC - 2 Specs				
☆	per	AC	10.000 n	10.000 n
☆	sbfreq	AC	5.000 G	5.000 G
Type: DC - 5 Specs				
☆	vdd	DC	900.000 m	500.000 m
☆	vih	DC	1.000	1.000
☆	vil	DC	0.000	0.000
☆	vid	DC	500.000 m	500.000 m
☆	vicm	DC	0.000	0.000
Type: Global - 6 Specs				
☆	Vcl_default	Global	-1.000	-1.000
☆	Vch_default	Global	6.000	6.000
☆	num	Global	1.000	1.000
☆	Vph_default	Global	5.000	5.000
☆	glob_time	Global	10.000 n	10.000 n
☆	gl_sb_vod	Global	0.000	0.000
Starred: True - 4 Specs				
Type: AC - 2 Specs				
★	sb_rcv	AC	100.000 m	100.000 m
★	sb_drv	AC	100.000 m	100.000 m
Type: DC - 2 Specs				
★	sb_vid	DC	50.000 m	50.000 m
★	sb_vicm	DC	0.000	0.000

Specs Grouped First by Starred and Then by Spec Type

<		>	
		2015 Teradyne, Inc. All rights reserved.	

UsingSpecTool.2.6

<

>

Using SpecTool : Table Display of Specs : Changing the Columns Displayed

Changing the Columns Displayed

You can also specify the columns that are displayed. The Columns tab lists all possible columns to display.

At the top of the Columns tab, after the Select: label are these options:

All	Selects all columns.
Default	Resets the column selections to their original default setting.

The following check boxes control columns to the left of the display area. These columns provide information about each spec and its value. The list notes which boxes are checked by default:

Spec Value Columns			
Check Box	Column Name	Checked By Default?	Meaning
Symbol	Symbol	Yes	The name of the spec
Spec type	Type	Yes	AC, DC, or Global
Current	Current Value	Yes	The current value of the spec
Modified	Modified	No	Whether the value has been modified: True or False
Directly	Directly	No	Whether the value has been directly modified by the application of an overlay

			(including the overlay generated for a manual edit): True or False
Overlay	Overlay Name	No	The name of the overlay that modified the spec value
Context	Context Value	Yes	The value of the spec as determined by the current context (category and selector)
Selection	Selection	No	The name of the selection (Typ, Min, Max) specified by the current selector
Typ/Min/Max	Three columns: Typ, Min, Max	No	The value of the Typ, Min, and Max selection. The highlighted column is the selection of the current selector (as shown by the Selection column).

The following check boxes control columns to the left of the display area. These columns contain the numeric values from the Measure setup. By default, all these boxes are checked, so all these columns appear in the display:

Measure Setup Columns		
Check Box	Column Name	Meaning
From/To	Two columns: From, To	The From and To range parameters for the Measure. These must be valid Double numbers.
Low/High	Two columns: Low Limit, High Limit	The low and high limits used to test the transition point, if Perform Test is enabled on the Measure tab.
Test result	Test Result	The result of the limits test on the transition point: Pass or Fail. The value is N/A if Perform Test is not enabled on the Measure tab.
Transition	Transition	The transition located by the Measure. If a transition is not found, the value is either Stuck at Pass or Stuck at Fail.

<

>

	2015 Teradyne, Inc. All rights reserved.	
--	--	--

UsingSpecTool.2.7

<	>
-----------------	-----------------

Using SpecTool : Table Display of Specs : Displaying the Current Context and Detailed Info

Displaying the Current Context and Detailed Info

The Current Context tab displays the current context, that is, the AC and DC category and selector. This display is read-only.

Initially, the tab displays the context of the test instance at which execution was paused when you brought up SpecTool.

 As you step through the flow, use the Refresh Context to display the current context. Refresh Context is available on the Table View tab, the Quick Access toolbar, and the right-click context menu.

The Detailed Info column gives the following information on the currently selected column:

Symbol	The name of the spec described in the current row.
Field name	The name of the column.
Description	A description of the column. For Current Value, the description also indicates whether the spec value has been modified.
VBТ	If applicable, the VBТ .Specs statement that retrieves the value for the column.

<	>
-----------------	-----------------

UsingSpecTool.2.8

<

>

Using SpecTool : Table Display of Specs : Editing Spec Values

Editing Spec Values

You can change a spec in the Current Value column by typing in a new value. The new value is automatically applied to the hardware as soon as you exit from the edited cell.

SpecTool uses an overlay to apply the new spec value. The overlay for a manual edit is automatically called TER_SYSTEM_n, with the number incremented for each manual edit. Because an overlay is used, the spec is considered to be directly modified.

If the value you enter is out of range or otherwise invalid, a message is written to the Test Program Output window.

Table Edit Commands

The Table View tab has the following commands in the Table Edit group to edit the table values:

Save Last Measure	Save the last executed measure to a Characterization setup. See Saving and Loading Measure Setups.
Open Measure Setup	Load the search parameters from a Characterization setup. See Saving and Loading Measure Setups.
Refresh	Refresh the current and context spec values.
Undo	Undo the last table edit.
Redo	Redo the last table edit.
Restore All	Restore all specs to their context values, not just the currently selected spec. This calls Apply Levels Timing to restore the context. Note that, if you have modified and then saved values and then modified them again, Restore All restores them to the most recently saved values, not to the original values.

Saving and Loading Measure Setups

For convenience, you can save the most recently executed Measure setup for later reuse. The Table View command Save Last Measure in the Table Edit group brings up a window asking for a name for the setup. It saves the most recently executed Measure setup. Note that this may be different from the currently selected row of the grid. The setup is saved to the Characterization sheet. You can also open and load a Measure setup from the Characterization sheet. The Table View command Open Measure Setup in the Table Edit group displays the available Measure setups. Values from the selected setup overwrite the current values for the spec.

Note on Modified Spec Value Format (tl_dt_specdelta) In Previous Versions

In previous versions of SpecTool, when you modified a value, the modified value was immediately written to the appropriate specs sheet. The modified value was written to the sheet as a formula in this format:

=original + tl_dt_specdelta(deltavalue)

For example, assume that the value 10 ms was modified to 12 ms. The original value could be written in several formats. The original and modified values would look like this:

Examples of Original and Modified Spec Values	
Original	Modified
=0.01	=0.01 + tl_dt_specdelta(0.002)
0.01	=0.01 + tl_dt_specdelta(0.002)
=10*ms	=10*ms + tl_dt_specdelta(0.002)
=_aSpec	=_aSpec + tl_dt_specdelta(0.002)

Use of this format indicated that the value was modified by SpecTool. This note is provided in case this notation occurs in programs that migrate to the current version of SpecTool.

UsingSpecTool.2.9



Using SpecTool : Running a Measure

Running a Measure

SpecTool lets you run a measure on one or more specs. SpecTool can find the pass/fail or fail/pass transition point and return the measured value for each spec selected. You can also save the Measure setup to memory and optionally to the Characterization sheet. You select specs by clicking them in the space to the left of the display area. You can use Shift+Click to select adjacent specs or Ctrl+Click to select nonadjacent specs.

Measure Parameters

Parameters for Measure setup are on the Measure tab and in the columns on the right side of the display area:

- Parameters in the columns are numeric values, such as the From and To points. These are specific to each spec. Initially, SpecTool calculates default values for numeric parameters in the display columns. You can edit these values or load values from a Measure setup.
- Parameters on the Measure tab are related to nonnumeric options such as test method and algorithm. Parameters on the tab apply to all specs that have been selected.

Parameters on the Measure tab are as follows:

Test Method	Whether to rerun the entire current test (Retest) or to reburst the most recently burst pattern (Reburst).
Algorithm Name	Which type of measure algorithm to use: Binary, Jump, Linear, List, or Successive.
Results Check	Whether to test the endpoints of the range before a measure.

- **Disabled:** Does not test the endpoints of the range before executing the algorithm.
- **First:** Verifies that the first point of the search range matches the expected result for the specified transition. This setting is invalid if you specify a Transition setting of First.
- **Last:** Verifies that the last point of the search range matches the expected result for the specified transition. This setting is invalid if you specify a Transition setting of First.
- **Both:** Verifies that the first and last points of the search range match the expected result for the specified transition.

Transition

What type of transition to use in a measure:

- **First:** Locates the first transition in the range. Starts by testing the first point to determine the transition type.
- **Pass To Fail:** Locates the first pass-to-fail transition in the range.
- **Fail To Pass:** Locates the first fail-to-pass transition in the range.

Algorithm Input

The Measure algorithm for a spec.

- **Steps:** The desired step size for the spec sweep. If StepSize is left at 0, the default is to use 10 for the number of steps.
- **Arguments:** The default is Auto.

Options

Specifies several measurement options: Check the box for each option you want:

- **Precondition:** Whether to run the PreBody before running the Measure. If Test Method is Retest, Precondition must be checked.

- **Perform test:** Whether to perform the limits test on the transition result returned by the Measure.
- **Datalog:** Whether to write verbose output from the Measure to the datalog window.

Execution This button performs the measurement.

The parameters in the columns of the display area are as follows:

From and To columns	These columns display the starting and final values for the spec range. For AC and DC specs, the default From is the Min value and the default To is the Max value. Global specs do not have Min and Max values, so their default is 0.
Transition column	The read-only transition value for the currently selected site. If the Measure fails, a brief error message is given here.
Test Result column	The read-only pass/fail transition value for the currently selected site.

Loading and Edit Parameters

Initially, SpecTool calculates default values for the numeric parameters in the display columns. You can open a Measure setup to load its numeric parameters into the columns.

 Use this button, which is on the Table View tab and the default Quick Access Toolbar.

Running a Measure

 Once you select the specs and specify the parameters, run a Measure using this button, which is on the Table View tab and the Quick Access toolbar.

Saving the Executed Setup

 Use this button to save the setup for the most recently executed Measure. The button is on the Table View tab and the Quick Access toolbar. The dialog box prompts you to provide a name for the new setup.

The setup for the most recently executed setup is saved, regardless of which spec is currently selected in the display area.

If the Measure was run on several selected specs, a multistep setup is saved.

The setup is always saved to memory. The dialog box contains the check box Update to sheet. If checked, the setup is saved to Characterization sheet as well.

<		>	
	2015 Teradyne, Inc. All rights reserved.		