

SENYALERT USER MANUAL

Scenario B: Small Team (5-20 Users)

1. PURPOSE

SenyAlert helps a small safety or response team monitor camera feeds for the Signal for Help. When the system recognizes the required hand sequence, it creates an incident, saves available evidence, and places the incident in the team's dispatch queue. SenyAlert does not automatically contact police, medical services, or other emergency responders. Team members must follow their organization's emergency response procedure after reviewing an alert.

This manual is intended for administrators and authorized operators using one shared SenyAlert installation. The current version supports up to four enabled camera sources. It is not a centralized system for many simultaneous workstations. At this point in time, SenyAlert is meant to be installed and used on only one device.

2. GETTING STARTED

2.1 Accessing SenyAlert

The current version is run from the project source and does not include a finished installer. A system administrator or technician starts it from the SenyAlert project folder with:

```
python senyalert.py run
```

If an easier launch is needed, coordinate with your system administrator or technician to create a desktop shortcut to a .bat script to automatically open SenyAlert.

The SenyAlert sign-in window appears before the camera engine starts. On the first launch, SenyAlert asks for the first local administrator account. There are no default usernames or passwords. The administrator creates the other accounts needed by the team.

2.2 Signing in

1. Enter the username assigned by your administrator.
2. Enter your password.
3. Select Sign in.
4. Wait for the main dashboard to open.
5. Check the upper-right status area. It should show that the vision engine is connected and the expected camera is online.

After several failed sign-in attempts, SenyAlert may temporarily delay another attempt. Wait 60 seconds before trying again. Passwords cannot be displayed or recovered. An administrator must set a replacement password when one is forgotten.

2.3 User roles

- **Administrator:**
 - Has full local access, including account management, camera configuration, engine settings, and audit history.
- **User:**
 - Can use only the features individually assigned by an administrator. For example, one user may review and acknowledge incidents but may not delete records or change cameras.
- **Developer Superadmin:**
 - A separate developer-support account. It is not intended for everyday dispatch work.

3. MAIN WORK AREAS

- **Live Dispatch:**
 - Shows pending incidents that still need attention. Select a row to inspect the saved snapshot and available actions.
- **Cameras:**
 - Contains the configured camera inputs. SenyAlert supports a maximum of four. Changing cameras requires the Configure Cameras permission.
- **Evidence Archive:**
 - Contains recorded incidents, including incidents that have already been acknowledged or resolved.
- **Settings:**
 - Contains engine controls, account settings, user management, audit history, export settings, and Remote Support when those features are permitted for the signed-in account.

4. HOW THE EVENT-ACTION PROCESS WORKS

SenyAlert follows an event-action process:

- **Event:** A camera sees the complete Signal for Help sequence.
 - **Action:** SenyAlert creates a pending incident and saves a snapshot.
- **Event:** The incident is saved successfully.
 - **Action:** It appears in Live Dispatch and may produce an audible alert.
- **Event:** Post-event recording finishes.
 - **Action:** The incident's video status changes from recording or pending to ready.
- **Event:** An operator selects Acknowledge.
 - **Action:** The incident records that a team member has started handling it.
- **Event:** An operator selects Resolve.
 - **Action:** The incident is marked complete and turns available in the Evidence Archive.
- **Event:** An operator saves a note.
 - **Action:** The note and responsible username are preserved with the incident and recorded in the audit history.

The initial incident appears before the video finishes. Operators therefore do not need to wait for the complete recording before responding.

5. EVERYDAY INCIDENT WORKFLOW

1. Confirm that the header reports a connected engine and online camera.
2. Keep Live Dispatch visible during monitoring.
3. When an alert appears, select its row.
4. Review the camera ID, location, time, confidence, alert mode, snapshot, and evidence status.
5. Follow the team's real-world safety and escalation procedure.
6. Select Acknowledge when someone begins handling the incident.
7. Enter a short factual operator note when useful.
8. Select Save operator update.
9. Select Resolve only after the required response has been completed.
10. Use Evidence Archive when the incident is no longer in the pending queue.

Do not place guesses, unrelated personal information, or account credentials in an operator note.

6. EVENT CHANNELS AND ALERT SOUND

6.1 Event channels

In this SenyAlert installation, each configured camera and location acts like an operational event channel. Examples are:

- CAM-01 - Public Intake Counter
- CAM-02 - Reception Area
- CAM-03 - Hallway
- CAM-04 - Assistance Desk

The current version does not provide personal Subscribe or Unsubscribe buttons. Authorized users on the same installation see the incident queue allowed by their permissions. An administrator controls which camera channels are enabled.

6.2 Muting notifications

SenyAlert does not provide a personal mute setting for each user. An authorized administrator can change the installation-wide audible-alert policy under Settings > Engine settings. The setting named "Allow audible alarms below the quiet threshold" controls whether qualifying incidents may play a sound. Crowd-aware settings can also cause an incident to use quiet mode.

Quiet mode affects sound only. The incident still appears in Live Dispatch.

IMPORTANT: Do not use Pause Engine as a normal mute control. Pausing stops incident detection and can cause the team to miss a real signal.

7. REPORTING A PROBLEM

SenyAlert does not currently have an in-app bug-report form. Report problems through the communication method chosen by the team, such as a designated administrator, group chat, email, or remote support session. When reporting bugs be sure to include:

- Date and time:
- Username or role:
- Camera ID and location:
- Incident ID, if available:
- What you expected:
- What happened:
- Steps that led to the problem:
- Exact visible error message:
- Whether the engine and camera showed connected or offline:

Do not include passwords, camera credentials, the Remote Support key, or the complete support link. Share screenshots or incident evidence only through an approved channel.


7.1 Remote Support

In the event that SenyAlert Tech Support are unable to go onsite, SenyAlert can be accessed remotely by Tech Support with your help. The instructions for enabling and using remote support are available on the dashboard, however this manual also provides instructions on how to access report support. In order to enable remote support for technical assistance and a remote session, follow these steps:

1. Contact SenyAlert Tech Support through agreed upon communication channels
2. Coordinate and agree on a time and duration of the remote support session
3. Open the "Settings" tab
4. Open the "Remote Support" tab
5. Set the duration of the support session (in minutes)
6. Click the "Start Support" button
7. Wait until the "Copy Link" button can be clicked
8. Click the "Copy Link" button
9. Send the link to SenyAlert Tech Support
10. Wait until SenyAlert Tech Support notifies you that the session is over
11. Click the "Stop Support" button to end the remote session and secure SenyAlert.

8. Visuals

Sign-in Page

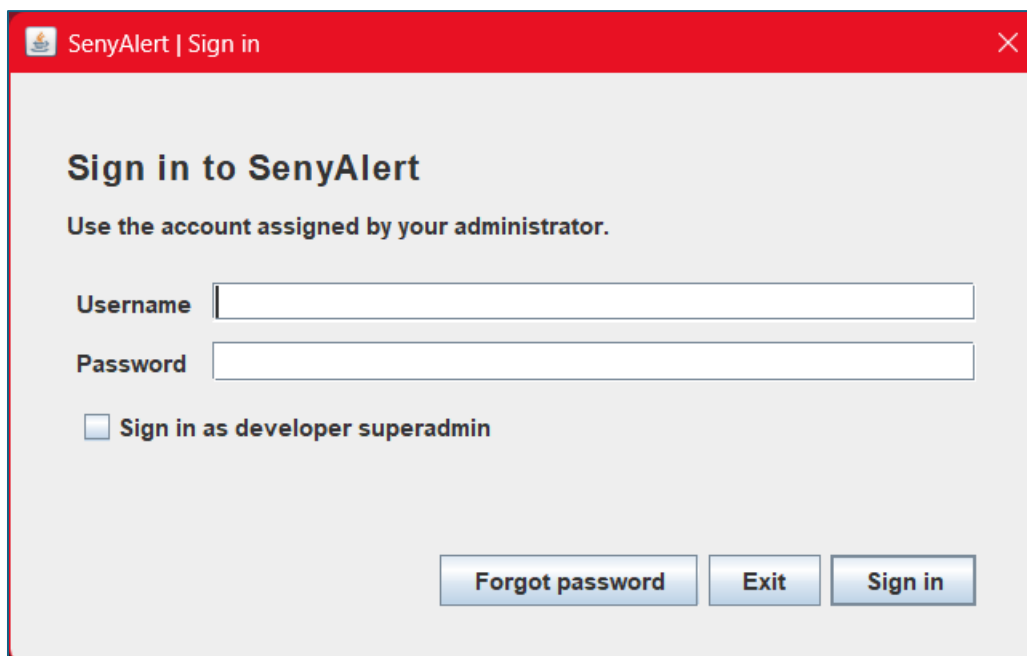

The image shows a screenshot of the SenyAlert Sign in window. The window has a red title bar with the text "SenyAlert | Sign in" and a close button (X). The main content area is light gray and contains the following elements:

- Sign in to SenyAlert**: A heading in bold black text.
- Use the account assigned by your administrator.**: A sub-heading in bold black text.
- Username**: A label next to a text input field.
- Password**: A label next to a text input field.
- ☐ **Sign in as developer superadmin**: A checkbox and a label.
- Forgot password**: A button.
- Exit**: A button.
- Sign in**: A button.

Live Dispatch

SenyAlert | admin (ADMIN)

SenyAlert
SILENT DISTRESS DISPATCH & TRIAGE

Engine connected
Camera CAM-01-CAMERA · CAMERA_ONLINE: Local webcam frame is 1280x720 (16:9) for Laptop webcam (demo).

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

UNACKNOWLEDGED
1

TRIAGE POLICY
Crowd-aware policy

EVIDENCE CAPTURE
Snapshot + video

AUDIBLE ALERT
#1 · 1 people · 1 SOS
Snapshot - CAM-01-LAPTOP · 23...

Live incident queue

Pending only · select a row to handle it

ID	Camera	Type	Alert	Confidence	People	Hands	Signaler	Status	Time
#1	CAM-01-CAMERA	SOS handsign	Audible alarm	100%	1	1	hand-1	PENDING	2026-09-28 2

Rows 10 1-1 of 1 · Page 1 of 1

PreviousNext

Select an incident

No incident selected

Choose an incident to review its direct snapshot preview, signaler metadata, and video evidence status.

Select an active incident to handle it

Operator note

✓ Acknowledge
✓ Reassign
✓ Solve task

Play Now...Export...Delete...

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%→95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

Cameras

SenyAlert | admin (ADMIN)

SenyAlert
SILENT DISTRESS DISPATCH & TRIAGE

Engine connected
Camera CAM-01-CAMERA · CAMERA_ONLINE: Local webcam frame is 1280x720 (16:9) for Laptop webcam (demo).

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

Cameras

Each tab is one camera worker. Disable a feed without losing its setup, then tune capture and processing per camera.

Primary · CAM-01-CAMERACamera 2 · CAM-02-CAMERA

☒ Enable ingestion for this camera

Camera profileLaptop webcam (demo)

Source0

Camera IDCAM-01-CAMERA

LocationUnassigned Zone

Custom aspect (W × H)16 × 9

Profile default: 16 × 9. The engine reports the actual opened frame dimensions and preserves them without stretching.

Capture & performance

Capture resolution1920 × 1080

+ Add camera- Remove selected


Save camera changes

Import camera settings...Export camera settings...

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%→95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

Incident Evidence

SenyaAlert | admin (ADMIN)

SenyaAlert
SILENT DISTRESS DISPATCH & TRIAGE

Camera CAM-01-CAMERA · CAMERA_ONLINE: Local webcam frame is 1280x720 (16:9) for Laptop webcam (demo).
Engine connected

Live dispatch

Cameras

Evidence archive

Benchmarking

Audit logs

Settings

Recorded evidence

Refresh

Select rows with checkboxes for safe workflow updates, complete evidence export, or removal of live recorded incidents. Right-click a row for incident actions.

Select	ID	Camera	Type	Alert	Confidence	People	Hands	Signaler	Status	Time	Evidence
☐	#1	CAM-01-CAMERA	SOS handsign	Audible alarm	100%	1	1	hand-1	PENDING	2026-09-28 23:07:5	Video ready

View / update

Select all

Clear

Update selected

Export complete bundle...

Delete all...

Reset next ID...

Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%–95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

Incident #1 evidence

Record data

Media

Saved incident facts · timestamps · confidence · evidence integrity

Copy record data

Incident #1 · PENDING

Camera CAM-01-CAMERA ·
100.00% confidence ·
Event token evt-20260928_230754_276840-e69bf162

Recorded timing

Detected (UTC)
2026-09-28T15:07:54Z
Detected (original)
2026-09-28 23:07:54
Epoch seconds
1790608074
Record prepared (UTC)
2026-09-28T15:08:24.296049500Z

Detection & triage

Operator workflow fields
Detection, counts, confidence, IDs, timestamps, and evidence are read-only.

Status
PENDING

Operator note (max 2,000 characters)


Acknowledge

Resolve

Save operator update

Export report + media...

Delete record...

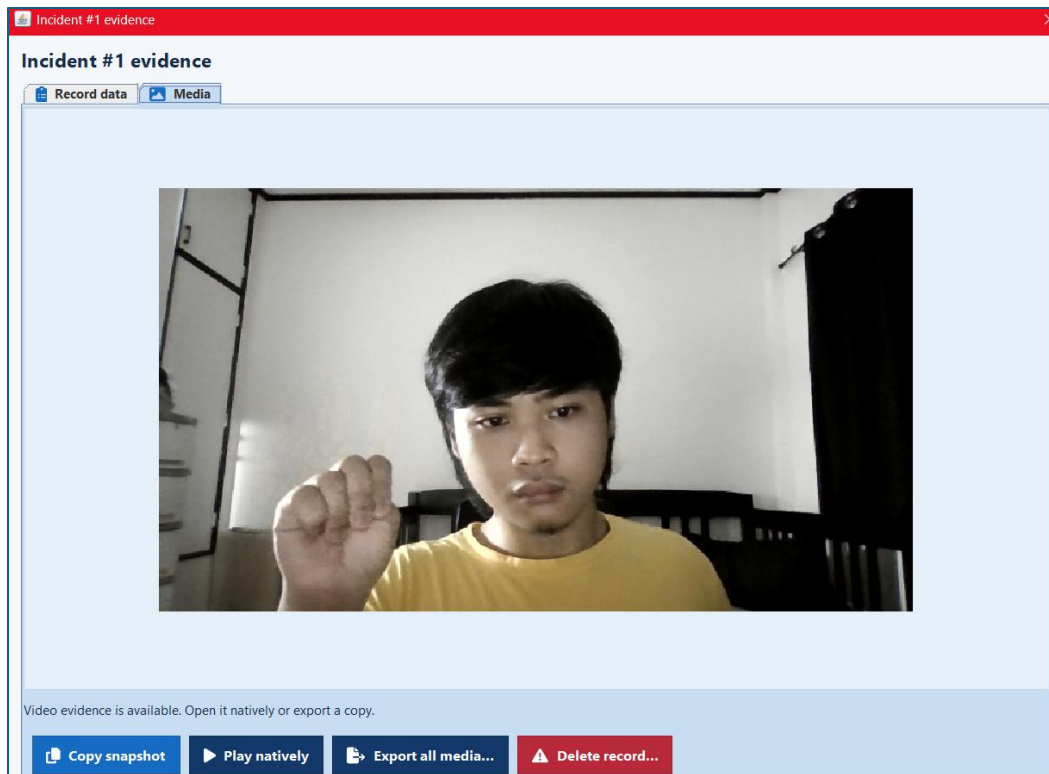

Audit Logs

SenyAlert | admin (ADMIN)

SenyAlert
SILENT DISTRESS DISPATCH & TRIAGE

Camera CAM-01-CAMERA · CAMERA_ONLINE: Local webcam frame is 1280x720 (16:9) for Laptop webcam (demo).
Engine connected

Live dispatch

Cameras

Evidence archive

Benchmarking

Audit logs

Settings

Audit logs

Compact activity history. Opening or searching this screen does not create an audit record.

Find

Refresh

Show details

Verify chain

Export CSV

Reset for demo

UTC time	Who	Action	Target
2026-09-28T15:07:47.798701700Z	admin	ENGINE_PROCESS_START_REQUESTED	ingestion-engine
2026-09-28T15:07:47.791434700Z	admin	ENGINE_PROCESS_STARTED	ingestion-engine
2026-09-28T15:07:47.774429100Z	admin	ENGINE_START_REQUESTED	ingestion-engine
2026-09-28T15:07:16.570019900Z	admin	LOGIN_SUCCEEDED	local-login
2026-09-28T03:08:58.185719700Z	admin	LOGOUT	local-session
2026-09-28T03:08:56.449175300Z	admin	AUDIT_LOG_RESET	security-audit

6 matching events displayed (latest 1,000 maximum). Times use UTC.

Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%→95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ people

Audit event details

Audit #290 | 2026-09-28T15:07:47.798701700Z

Actor: admin (ADMIN)

Action: ENGINE_PROCESS_START_REQUESTED

Target: ingestion-engine

Manual start request completed.

Previous hash: fd7fd1a2e2eac0513775d4fa041dcdb1e2d4de7ba42daa5ef61f059108113ec4

Entry hash: 8ab8264bd9f7500bbcd87b82c3278cc45ef115de2d18ffe3a1701e00227c8c74

Engine Settings

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

Engine settingsUser managementRemote supportExport settingsAccount

Engine & triage settings

Settings are saved locally, then sent to the connected vision engine.

Gesture detection

Confidence threshold55%

Gesture sensitivity50% — more strict

Tucked-thumb confidence bonus0%

Folded-index confidence bonus0%

Repeated handsign minimum95%

Repeated handsign target95%

Pre-event recording12

Post-event recording12

Maximum tracked hands2

Finger checks

Require tucked thumb

Require folded index

People-aware triage

Enable people detection

Detection interval (frames)2

Quiet at or above2 people

Allow audible alarms below the quiet threshold

Start engine on startup

Save & Apply

Start Engine

Pause Engine

Restart Engine

Import configuration...

Export configuration...

Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%—95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

User Management

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

Engine settingsUser managementRemote supportExport settingsAccount

User management

Admins have full local access. Configure each user's permissions below.
Use Reset password for the safe local forgot-password process. Deleting an account removes its local sign-in while preserving its audit history.

Username	Role	Enabled	Permissions	Last changed (UTC)
admin	admin	Yes	All local permissions	2026-09-27T15:48:27.646578400Z

Add account

Edit account

Reset password

Delete account

Refresh

1 accounts. Passwords cannot be recovered; set a new password if needed.

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%—95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ people

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

Engine settingsUser managementRemote supportExport settingsAccount

User management

Admins have full local access. Configure each user's permissions below.
Use Reset password for the safe local forgot-password process. Deleting an account removes its local sign-in while preserving its audit history.

Username	Role	Enabled
admin	admin	Yes

Add account

Edit account

Reset password

Delete account

Refresh

1 accounts. Passwords cannot be recovered; set a new password if needed.

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%—95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ people

Add account

Close

Username

Role

USER

Password

Confirm password

Access

☒ Account enabled

Permissions for the user role

☒ View and select incidents

☐ Acknowledge incidents

☐ Resolve incidents

☐ Edit incident notes

☐ Delete incident records / reset an empty archive ID

☐ Export media and copy evidence or record data

☐ Add, edit, remove, and control cameras

☐ Change engine settings

☐ Manage local admin/user accounts and permissions

☐ Run isolated benchmarks and export results

☐ Start, copy, and stop a remote support session

☐ Read and export audit history

☐ Reset the active audit log for a supervised demo after a protected CSV archive

Cancel

Save account

Remote Support

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettingsEngine settingsUser managementRemote supportExport settingsAccount

Remote Support

Invite your developer to help with SenyAlert settings, cameras, users and incident records.

1. Contact your developer and agree on a support session.
2. Choose the session length, then press Start support and Copy Link.
3. Send the link privately in your usual messaging app. The client ID and support key stay hidden unless their audited copy buttons are used.
4. Press Stop support when the work is finished.

The developer must also have this client's separate support key. Sessions may last from 1 to 120 minutes. Every support action is recorded in Audit Logs. Your files remain on this computer.

For security reasons you can only copy the link by pressing Copy Link. This records the copy in the audit log. The link cannot be selected or revealed here.

Session length30 minutes

Start supportCopy LinkStop support

Client ID

Support key

Copy Client IDCopy Support Key

Remote support is off.

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%→95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

Export Settings

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettingsEngine settingsUser managementRemote supportExport settingsAccount

Export settings

Choose default folders for files you explicitly export. These preferences never move or alter SenyAlert databases, source media, or camera settings.

Default folders

Evidence exports

C:\Development\School-Projects\SenyAlertDemo\Research-Data\Evidence

Browse...

Audit CSV exports

C:\Development\School-Projects\SenyAlertDemo\Research-Data\Audit

Browse...

Configuration exports

C:\Development\School-Projects\SenyAlertDemo\Research-Data\Configuration

Browse...

Benchmark results

C:\Development\School-Projects\SenyAlertDemo\Research-Data\Benchmark

Browse...

Choose folders, then save. New folders are created only when a matching export is performed.

ReloadSave export settings

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%→95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

Account

Live dispatchCamerasEvidence archiveBenchmarkingAudit logsSettings

Engine settingsUser managementRemote supportExport settingsAccount

Account

Change only your own username or password. Saving signs you out so you can verify the new credentials.

Username

admin

Current password

New password

Confirm new password

Save and sign out

✓ Engine configuration successfully reloaded (revision 1; quiet at 2+ people; gesture sensitivity 50% (phase margin 0.075); repeat ≥95%–95% within 7s; people detection on; audible alarms on). Active engine policy: people detection on, quiet at 2+ peop

9. TROUBLESHOOTING FAQ

1. Why did no incident appear?

Check that the engine is connected, the correct camera is online, and the engine is not paused. The complete hand sequence must be visible and meet the configured confidence rules. Ask an authorized administrator to check the camera and settings rather than changing them yourself.

2. Why did the incident appear without a sound?

The incident may have been assigned quiet mode because of the people-aware policy, a stale occupancy reading, or disabled audible alarms. Always monitor the visible queue even when no sound plays.

3. Why does the video say RECORDING or PENDING?

The incident is created before post-event recording finishes. Wait for the configured recording period, then refresh or reselect the incident.

4. Why does the video say UNAVAILABLE or FAILED?

The recording may not have completed, the source may have disconnected, or storage may be unavailable. Preserve the incident and report its ID to an administrator.

5. Why can I not see a button or settings page?

Your account may not have the required permission. This is expected behavior. Ask an administrator whether the action belongs to your role.

6. Where did an acknowledged or resolved incident go?

Live Dispatch shows pending work. Open Evidence Archive to find older, acknowledged, or resolved incidents.

7. What should I do if the camera is offline?

Report the camera ID and visible status. An authorized user can check the camera source or use the engine restart control. Do not repeatedly change the camera address or credentials.

8. What if two incidents appear to describe the same signal?

Do not delete either record. Note both incident IDs and timestamps and report them to the administrator or developer for review.

9. What if I forgot my password?

Select Forgot password and follow the displayed instructions. A signed-in administrator can set a replacement password. The old password cannot be retrieved.