

YOU WILL USE TWO INTERFACES

ZOOM

Join and run the meeting.


AMX ROOM CONTROLS

Set location, source, volume, and camera.

1 Join the scheduled meeting

ZOOM


On the Zoom Home screen, locate the scheduled meeting and tap Join. If the meeting is already open, continue to Step 2.

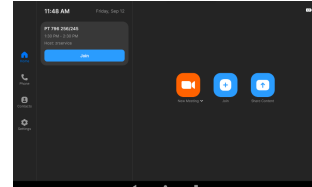

2 Open the AMX room setup

AMX


Tap the Android Back triangle. When the Shenandoah blue screen appears, tap Home.

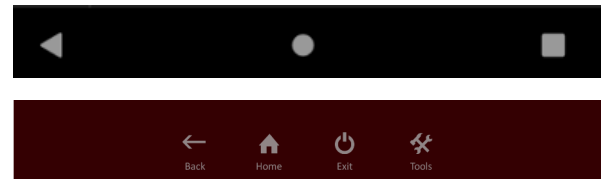

3 Choose Present with Zoom

AMX

Tap Present with Zoom to configure the room for this class.

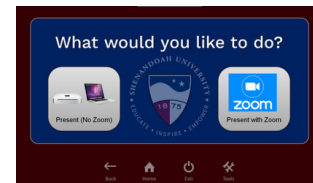


4 Choose the instructor location

AMX

Here - the instructor is presenting in this room. Continue to Step 5.

Other Location - the instructor is elsewhere. Skip Steps 5 and 6 and continue on Side 2.

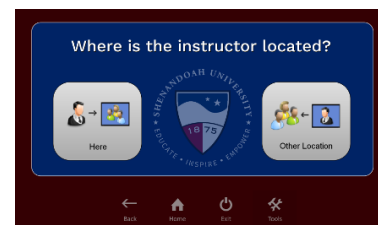


5 Select the presentation source

AMX

If you selected Here, choose the source you will present:


Room Computer, Apple TV, or HDMI.

The room will finish configuring and Zoom will open automatically.

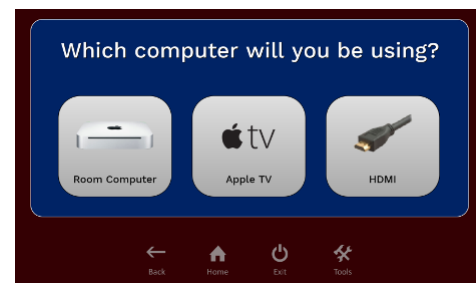

6 Share the selected source to the meeting ZOOM

In Zoom, tap Share Content, then tap Share to Meeting. This sends the selected AMX source to both the classroom display and remote participants.

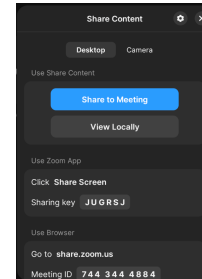

Tap Share to Meeting

Use View Locally only when you do not want to send the source to remote participants.


7 Adjust room volume or camera AMX

Tap the Android Back triangle to leave the Zoom screen and return to AMX Room Controls.

Speakers - room playback volume.

Lapel Mic - instructor microphone volume.

Camera Controls - move, zoom, or recall a view.

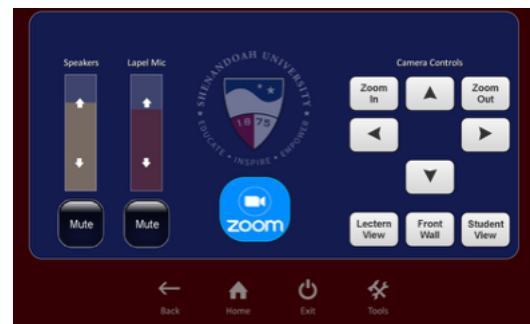

8 Return to the Zoom meeting AMX

Tap the blue Zoom button on the AMX screen whenever you need the Zoom meeting controls again.

BEFORE CLASS - QUICK CHECK

- ☐ **Meeting:** Scheduled meeting is open in Zoom.
- ☐ **Location:** Here or Other Location matches the instructor location.
- ☐ **Source:** Room Computer, Apple TV, or HDMI is selected when using Here.
- ☐ **Audio:** Room speakers and instructor microphone are unmuted.
- ☐ **Camera:** The intended instructor or presentation view is visible.
- ☐ **Sharing:** Share to Meeting is active when remote participants need the presentation.